

TECHNICAL MANUAL

**UNIT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS
LISTS**

**TRUCK, LIFT, FORK: DIESEL ENGINE,
PNEUMATIC-TIRED WHEELS, ROUGH
TERRAIN, 10,000 LB. CAPACITY,
24 IN. LOAD CENTER**

**ARMY MODEL MHE 199
NSN 3930-00-903-0899**

PETTIBONE-MULLIKEN MODEL RTL10

NSN 3930-01-052-8997

PETTIBONE-MULLIKEN MODEL RTL10
WITH ROLLOVER PROTECTIVE STRUCTURE

**ARMY MODEL MHE 215
NSN 3930-00-465-5869**

PETTIBONE-MULLIKEN MODEL RTL10-1

NSN 3930-01-053-4824

PETTIBONE-MULLIKEN MODEL RTL10-1
WITH ROLLOVER PROTECTIVE STRUCTURE

This manual supersedes TM 10-3930-243-20P dated 11 February 1985.

Approved for public release: distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

This copy is a reprint which includes current
pages from Change 1.

APRIL 1991

UNIT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS

TRUCK, LIFT, FORK: DIESEL ENGINE,
PNEUMATIC-TIRED WHEELS, ROUGH
TERRAIN, 10,000 LB. CAPACITY,
24 IN. LOAD CENTER

ARMY MODEL MHE 199
NSN 3930-00-903-0899

PETTIBONE-MULLIKEN MODEL RTL10

NSN-3930-01-052-8997

PETTIBONE-MULLIKEN MODEL RTL10 WITH
ROLLOVER PROTECTIVE STRUCTURE

ARMY MODEL MHE 215
NSN 3930-00-465-5869

PETTIBONE-MULLIKEN MODEL RTL10-1

NSN 3930-01-053-4824

PETTIBONE-MULLIKEN MODEL RTL10-1
WITH ROLLOVER PROTECTIVE STRUCTURE

Current as of 16 October 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publication and Blank forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48 97-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1	

* This manual supersedes TM 10-3930-243-20P dated 11 February 1985.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 01 ENGINE		
0101-CRANKCASE, BLOCK, CYLINDER HEAD	1-1	
CYLINDER BLOCK	1-1	1
0105-VALVES, CAMSHAFTS, AND TIMING SYSTEM	2-1	
ROCKER ARM COVER	2-1	2
0106-ENGINE LUBRICATION SYSTEM	3-1	
BREATHER	3-1	3
ENGINE OIL PRESSURE GAGE AND LINES	4-1	4
OIL FILTER	5-1	5
OIL PAN AND DIPSTICK	6-1	6
0108 -MANIFOLDS	7-1	
MANIFOLD	7-1	7
GROUP 03 FUEL SYSTEM		
0302 - FUEL PUMPS	6-1	
FUEL PUMP AND DRIVE	8-1	8
0304 - AIR CLEANER	9-1	
AIR CLEANER,	9-1	9
AIR INTAKE TUBES	10-1	10
0305-SUPERCHARGER, BLOWER, TURBOCHARGER OR ALTITUDE COMPENSATOR	11-1	
AIR INLET HOUSING	11-1	11
0306 -TANKS, LINES, FITTINGS, HEADERS	12-1	
FUEL LINES AND FITTINGS	12-1	12
FUEL TANK,	13-1	13
0309 - FUEL FILTERS	14-1	
FUEL FILTER	15-1	14
FUEL STRAINER.....	15-1	15
0311 -ENGINE STARTING AIDS	16-1	
STARTING AID	16-1	16
0312-ACCELERATOR, THROTTLE OR CHOKE CONTROLS	17-1	
THROTTLE CONTROLS	17-1	17
GROUP 04 EXHAUST SYSTEM		
0401 -MUFFLER AND PIPES.. . . .	18-1	
MUFFLERS AND PIPES	18-1	18
GROUP 05 COOLING SYSTEM		
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	19-1	
RADIATOR	19-1	19
0502-COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, ETC	20-1	
FAN GUARD AND SHROUD	20-1	20
0503 -WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET	21-1	
THERMOSTAT AND HOUSING	21-1	21
RADIATOR HOSES, LINES AND FITTINGS	22-1	22
0504 - WATER PUMP	23-1	
WATER PUMP	23-1	23

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0505 - FAN ASSEMBLY	24-1	
FAN AND PULLEY	24-1	24
FAN HUB	25-1	25
FAN BELT ADJUSTER	26-1	26
FAN DISCONNECT	27-1	27
IDLER PULLEY	28-1	28
 GROUP 06 ELECTRICAL SYSTEM		
0601 -GENERATOR, ALTERNATOR	29-1	
GENERATOR ASSEMBLY (MODEL RTL10)	29-1	29
GENERATOR ASSEMBLY (MODEL RTL10-1)	30-1	30
0602 - GENERATOR REGULATOR	31-1	
VOLTAGE REGULATOR	31-1	31
0603 - STARTING MOTOR.....	32-1	
STARTER AND RELAY	32-1	32
0607 -INSTRUMENT OR ENGINE CONTROL PANEL	33-1	
CONTROL PANEL, RIGHT.....	33-1	33
CONTROL PANEL, LEFT.....	34-1	34
CIRCUIT BREAKER	35-1	35
0609-LIGHTS	36-1	
FLOODLIGHT	36-1	36
HEADLIGHT	37-1	37
BLACKOUT LIGHT	38-1	38
STOP AND BLACKOUT LIGHT	39-1	39
0612 -BATTERIES, STORAGE	40-1	
BATTERIES, BATTERY BOX AND CABLE	40-1	40
0613 -HULL OR CHASSIS WIRING HARNESS	41-1	
WIRING HARNESS	41-1	41
 GROUP 07 TRANSMISSION		
0705 -TRANSMISSION SHIFTING COMPONENTS	42-1	
TRANSMISSION CONTROL LINKAGE	42-1	42
TRANSMISSION CUT OFF VALVE	43-1	43
TRANSMISSION AND STEERING	44-1	44
REAR AXLE DISCONNECT	45-1	45
0710 -TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	46-1	
TRANSMISSION	46-1	46
TORQUE CONVERTER HOUSING	47-1	47
0721 -COOLERS, PUMPS, MOTORS	48-1	
TRANSMISSION HANDBRAKE	48-1	46
TRANSMISSION OIL PRESSURE GAGE, LINES AND FITTINGS	49-1	49
CLUTCH CUT OFF PIPING (MODEL RTL10)	50-1	50
CLUTCH CUT OFF PIPING (MODEL RTL10-1)	51-1	51
TRANSMISSION OIL FILTER.....	52-1	52
 GROUP 08 TRANSFER, FINAL DRIVE, PLANETARY OR DROP GEARBOX ASSEMBLIES		
0801 - POWER TRANSFER, FINAL DRIVE ASSEMBLIES	53-1	
DRIVE COUPLING AND COVER	53-1	53
TRANSFER GEAR HOUSING	54-1	54

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
	0900 - PROPELLER SHAFT	55-1	
	ENGINE TO TRANSMISSION UNIVERSAL SHAFT	55-1	55
	REAR AXLE PROPELLER SHAFT	56-1	56
	FRONT AXLE PROPELLER SHAFT	57-1	57
GROUP 10	FRONT AXLE		
	1000-FRONT AXLE ASSEMBLY	58-1	
	FRONT AND REAR AXLE	58-1	58
	SHAFT SOCKET AND AXLE BALL	59-1	59
	1003-PLANETARY OR FINAL DRIVE	60-1	
	PLANETARY GEAR CARRIER	60-1	60
GROUP 12	BRAKES		
	1201 - HANDBRAKES	61-1	
	HANDBRAKE CONTROLS	61-1	61
	1204 -HYDRAULIC BRAKE SYSTEM	62-1	
	HYDRAULIC BRAKE RESERVOIR	62-1	62
	BRAKE VALVE PIPING (MODEL RTL10)	63-1	63
	BRAKE VALVE PIPING (MODEL RTL10-1)	64-1	84
	FRONT WHEEL BRAKE LINES AND FITTINGS	65-1	65
	BRAKE LINES AND PUMP PIPING	66-1	66
	BRAKE LINES AND FITTINGS, REAR	67-1	67
	1206 -MECHANICAL BRAKE SYSTEM	68-1	
	BRAKE ADJUSTER	68-1	68
	BRAKE CONTROLS	69-1	69
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	70-1	
	WHEELS ASSEMBLY	70-1	70
	BRAKE DRUMS	71-1	71
	1313 -TIRES, TUBES, TIRE CHAINS.	72-1	
	TIRES	72-1	72
GROUP 14	STEERING		
	1401 - MECHANICAL STEERING GEAR ASSEMBLY	73-1	
	DRAG LINK AND LEVER.	73-1	73
	STEERING WHEEL AND COLUMN	74-1	74
	FRONT AND REAR TIE RODS.	75-1	75
	1410-HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	76-1	
	STEERING PUMP DRIVE	76-1	76
	HYDRAULIC STEERING PUMP.	77-1	77
	LOCK STEERING AND Hydraulic BRAKE PUMP.	78-1	78
	1411 -HOSES, LINES, FITTINGS	79-1	
	LOCK CYLINDER LINES AND FITTINGS	79-1	79
	LOCK CYLINDER TUBING	80-1	80
	STEERING PUMP TO VALVE PIPING	81-1	81

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1411 -HOSES ,LINES, FITTINGS (CON'T)	82-1	
CENTER STEERING HYDRAULIC LINES AND FITTINGS	82-1	82
REAR STEERING HYDRAULIC LINES AND FITTINGS	83-1	83
FRONT HYDRAULIC LINES AND FITTINGS	84-1	84
STEERING PUMP LINES AND FITTINGS	85-1	85
STEERING MANIFOLD LINES AND FITTINGS	86-1	86
1412 -HYDRAULIC OR AIR CYLINDERS	87-1	
STEERING CYLINDER (MODEL RTL10)	87-1	87
HYDRAULIC LOCK CYLINDER	88-1	88
1414 -STEERING SYSTEM VALVES	89-1	
LOCK CYLINDER MANIFOLD AND VALVES	89-1	89
LOCK CYLINDER VALVES, LINES AND FITTINGS	90-1	90
 GROUP 15		
FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 - FRAME ASSEMBLY	91-1	
MAINFRAME	91-1	91
BOOM ASSEMBLY	92-1	92
1503 -PINTLES AND TOWING ATTACHMENTS	93-1	
PINTLE	93-1	93
 GROUP 18		
BODY, CAB. HOOD, AND HULL		
1801 -BODY, CAB, HOOD, AND HULL ASSEMBLIES	94-1	
ENGINE HOOD AND SIDE MOUNTING HARDWARE AND ABSORPTION	94-1	94
ENGINE HOOD AND SIDE PANELS	95-1	95
CONTROL PANEL	96-1	96
1802- FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC.	97-1	
FENDERS. LADDERS AND DRIVE SUPPORT	97-1	97
FENDERS	98-1	98
OPERATORS SHIELD	99-1	99
1806 -UPHOLSTERY, SEATS, AND CARPET	100-1	
OPERATORS SEAT (MODEL RTL10)	100-1	100
OPERATORS SEA? (MODEL RTL10-1)	101-1	101
1808- STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.	102-1	
TOOLBOX	102-1	102
 GROUP 22		
BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
2210-DATA PLATES AND INSTRUCTION HOLDERS	103-1	
IDENTIFICATION PLATES...	103-1	103
 GROUP 24		
HYDRAULIC AND FLUID SYSTEMS		
2401 -PUMP AND MOTOR...	104-1	
MAIN HYDRAULIC PUMP	104-1	104
2402 -MANIFOLD AND/OR CONTROL VALVES	105-1	
FAN DISCONNECT CYLINDER VALVE SELECTOR	105-1	105

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
2403- HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	106-1	
HOIST SHIFT CONTROLS,	106-1	106
FORK TILT AND REACH CONTROLS.	107-1	107
FORK TILT CONTROLS FRAME	108-1	108
2404 -TILT CYLINDERS AND TILT CRANK	109-1	
TILT CYLINDER (MODEL RTL10)	109-1	109
TILT CYLINDER (MODEL RTL10-1)	110-1	110
2405 - MAST COLUMN	110-1	
FORKS	111-1	111
CARRIAGE FRAME	112-1	112
LIFT CYLINDER (MODEL RTL10)	113-1	113
LIFT CYLINDER (MODEL RTL10-1)	114-1	114
2406-STRAINERS, FILTERS, LINES AND FITTINGS, ETC.	115-1	
OSCILLATING CYLINDER LINES AND FITTINGS	115-1	115
TILT AND SLAVE CYLINDER LINES AND FITTINGS	116-1	116
TILT AND SLAVE PIPING	117-1	117
SLAVE AND TILT CYLINDER PIPING	118-1	118
LIFT CYLINDER LINES AND FITTINGS	119-1	119
LIFT CYLINDER PIPING	120-1	120
LIFT CYLINDER LINES	121-1	121
EXTENSION CYLINDER LINES AND FITTINGS	122-1	122
SIDESHIFT AND TILT CYLINDER LINES AND FITTINGS	123-1	123
SIDESHIFT AND TILT CYLINDER PIPING	124-1	124
MAIN DUAL PUMP TO VALVE LINES	125-1	125
MAIN DUAL PUMP TO VALVE LINES	126-1	126
2407 - HYDRAULIC CYLINDERS	127-1	
FAN DISCONNECT CYLINDER AND HOSE	127-1	127
SLAVE CYLINDER [MODEL RTL10)	128-1	128
SLAVE CYLINDER (MODEL RTL10-1)	129-1	129
OSCILLATION CYLINDER (MODEL RTL10-1)	130-1	130
2408 -LIQUID TANKS OR RESERVOIRS	131-1	
MAIN HYDRAULIC RESERVOIR	131-1	131
GROUP 47	GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES	
	4702- GAGES, MOUNTINGS, LINES, AND FITTINGS	132-1
	CONTROL PANEL NONELECTRICAL GAGES, LEFT	132-1
GROUP 94	REPAIR KITS	
	REPAIR KITS	KITS-1
	REPAIR KITS	KITS-1
GROUP 95	GENERAL USE STANDARDIZED PARTS	
	9501 - BULK MATERIEL	BULK-1
	BULK MATERIEL	BULK-1

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
SECTION III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX.....	I - 1	
	PART NUMBER INDEX	I-14	
	FIGURE AND ITEM NUMBER INDEX.....	I-50	

UNIT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit Maintenance of the Truck, Lift, Fork. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section 1. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration (s) /figure (s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists

figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (7)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

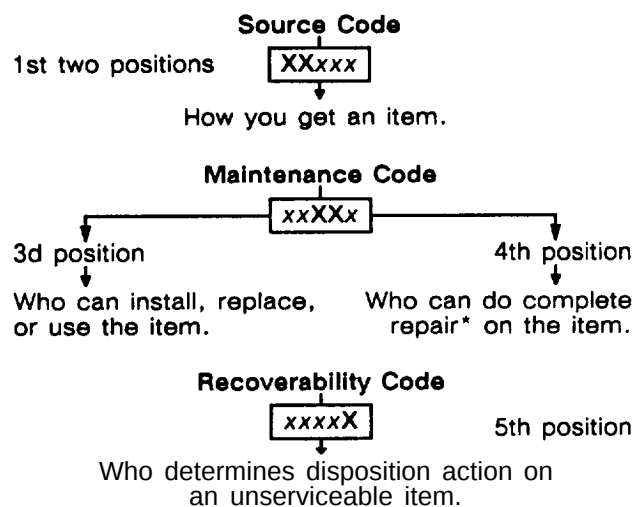

- *Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: