

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**TRUCK, FORK LIFT, ELECTRIC,
SOLID RUBBER TIRES,
2,000 LB. CAPACITY, 144 IN. LIFT
ARMY MODEL MHE 204
NSN 3930-00-935-7864**

BAKER MODEL FTD-020-EE-SS

**This manual supersedes TM 10-3930-609-20P, 5 July 1984 and
TM 10-3930-609-34P, 8 May 1984.**

Approved for public release: distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

SEPTEMBER 1990

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS
TRUCK, FORK LIFT, ELECTRIC,
SOLID RUBBER TIRES,
2,000 LB. CAPACITY, 144 IN. LIFT
ARMY MODEL MHE 204
NSN 3930-00-935-7864
BAKER MODEL FTD-020-EE-SS

Current as of 9 January 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION.....		1
SECTION II. REPAIR PARTS LIST		1
GROUP 03 FUEL SYSTEM		
0312 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS	1-1	
ACCELERATOR CONTROL LEVER AND PEDAL	1-1	1
GROUP 06 ELECTRICAL SYSTEM		
0606 - ENGINE SAFETY CONTROLS	2-1	
CONTROL VALVE AND SEAT SWITCH.....	2-1	2
0609 - LIGHTS	3-1	
STOPLIGHT AND TAILLIGHT	3-1	3
HEADLIGHT	4-1	4

* This manual supersedes TM 10-3930-609-20P, 5 July 1984 and TM 10-3930-609-34P, 8 May 1984.

TABLE OF CONTENTS - Continued

	Page	Illus Fig
0611 - HORN, SIREN.....	5-1	
ELECTRIC HORN	5-1	5
HORN BUTTON AND CONTACT	6-1	6
0612 - BATTERIES, STORAGE	7-1	
BATTERY RECEPTACLE.....	7-1	7
BATTERY AND HOLDER	8-1	8
 GROUP 10 FRONT AXLE		
1000 - FRONT AXLE ASSEMBLY	9-1	
POWER AXLE	9-1	9
1003 - PLANETARY OR FINAL DRIVE	10-1	
INPUT DRIVE ASSEMBLY	10-1	10
 GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY	11-1	
STEERING AXLE	11-1	11
1102 - DIFFERENTIAL	12-1	
DIFFERENTIAL HOUSING	12-1	12
 GROUP 12 BRAKES		
1201 - HANDBRAKES	13-1	
PARKING BRAKE	13-1	13
BRAKE ASSEMBLY	14-1	14
1202 - SERVICE BRAKES	15-1	
TRAVEL BRAKES	15-1	15
1204 - HYDRAULIC BRAKE SYSTEM	16-1	
BRAKE LINES AND FITTINGS	16-1	16
MASTER CYLINDER ASSEMBLY	17-1	17
WHEEL BRAKE CYLINDER ASSEMBLY	18-1	18
1206 - MECHANICAL BRAKE SYSTEM	19-1	
BRAKE PEDAL AND BRACKET	19-1	19
 GROUP 13 WHEELS AND TRACKS		
1311 - WHEEL ASSEMBLY	20-1	
DRIVE WHEEL	20-1	20
STEERING AXLE WHEEL	21-1	21
1313 - TIRES, TUBES, TIRE CHAINS	22-1	
TIRES	22-1	22
 GROUP 14 STEERING		
1401 - MECHANICAL STEERING GEAR ASSEMBLY	23-1	
STEERING CONTROL	23-1	23
STEERING GEAR, EXPLODED VIEW AND STEERING WHEEL	24-1	24
 GROUP 18 BODY, CAB, HOOD AND HULL		
1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	25-1	
DOORS AND COVERS	25-1	25
OVERHEAD GUARD	26-1	26

TABLE OF CONTENTS - Continued

	Page	Illus Fig
1806 - UPHOLSTERY, SEATS, AND CARPETS	27-1	
SEAT ASSEMBLY	27-1	27
GROUP 22 BODY AND CHASSIS ACCESSORY ITEMS		
2210 - DATA PLATES AND INSTRUCTION HOLDERS	28-1	
DATA PLATES AND INSTRUCTION HOLDERS	28-1	28
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401 - PUMP AND MOTOR	29-1	
HYDRAULIC PUMP DIRECT CURRENT MOTOR	29-1	29
HYDRAULIC PUMP MOTOR BREAKDOWN	30-1	30
ROTARY PUMP	31-1	31
2402 - MANIFOLD AND/OR CONTROL VALVES	32-1	
HYDRAULIC DIRECTIONAL CONTROL VALVE	32-1	32
2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	33-1	
HYDRAULIC CONTROLS	33-1	33
2404 - TILT CYLINDERS AND TILT CRANK	34-1	
TILT CYLINDER ASSEMBLY	34-1	34
2405 - MAST COLUMN	35-1	
UPRIGHT ASSEMBLY	35-1	35
CARRIAGE ROLLERS	36-1	36
CROSSHEAD AND LIFT CYLINDER	37-1	37
LIFT CYLINDER BREAKDOWN	38-1	38
UPRIGHT CHANNELS	39-1	39
CARRIAGE, FORK, AND BACKREST	40-1	40
2406 - STRAINERS, FILTERS, LINES AND FITTINGS, ETC.	41-1	
HYDRAULIC HOSE AND RETAINER	41-1	41
HYDRAULIC OIL FILTER	42-1	42
HYDRAULIC OIL TANK FILTER	43-1	43
HYDRAULIC DIRECTIONAL CONTROL VALVE FITTINGS	44-1	44
2408 - LIQUID TANKS OR RESERVOIRS	45-1	
HYDRAULIC OIL TANK	45-1	45
GROUP 40 ELECTRIC MOTORS AND GENERATORS		
4000 - MAJOR ASSEMBLAGE: MOTOR GENERATOR AND ROTATING EXCITER ASSEMBLIES	46-1	
DIRECT CURRENT TRAVEL MOTOR	46-1	46
TRAVEL MOTOR BREAKDOWN	47-1	47
TRAVEL MOTOR BREAKDOWN	48-1	48
4009 - CONTROL PANELS, HOUSING, CUBICLES	49-1	
ELECTRICAL WIRING	49-1	49
DASH PANEL	50-1	50
4010 - MASTER OR AUXILIARY CONTROL ASSEMBLY	51-1	
ACCELERATOR CONTROLLER	51-1	51
CONTROL PANEL AND MOUNTING	52-1	52
CONTROL PANEL AND MOUNTING	53-1	53
CONTROL	54-1	54

TABLE OF CONTENTS - Continued

	Page	Illus Fig
4011 - CIRCUIT BREAKERS, CUTOUTS, FUSE AND FUSEHOLDERS ..	55-1	
BATTERY DISCONNECT SWITCH	55-1	55
4012 - SWITCHES	56-1	
DIRECTIONAL SWITCH	56-1	56
SEAT SWITCH	57-1	57
4015 - RELAY OR ASSEMBLY	58-1	
FORWARD AND REVERSE RELAY	58-1	58
IMS AND IMP ARMATURE RELAYS	59-1	59
ACCELERATING RELAY	60-1	60
ARC BARRIER	61-1	61
THERMAL RELAY	62-1	62
4019 - RADIO INTERFERENCE SUPPRESSION	63-1	
RADIO INTERFERENCE SUPPRESSOR	63-1	63
GROUP 95	GENERAL USE STANDARDIZED PARTS	
9501 - BULK MATERIEL	BULK-1	
BULK MATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS LIST (NOT APPLICABLE)	
SECTION IV.	CROSS-REFERENCE INDEXES	
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-7	
FIGURE AND ITEM NUMBER INDEX	I-30	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Electric Fork Lift Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration (s) /figure (s).

b. Section III Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number

index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

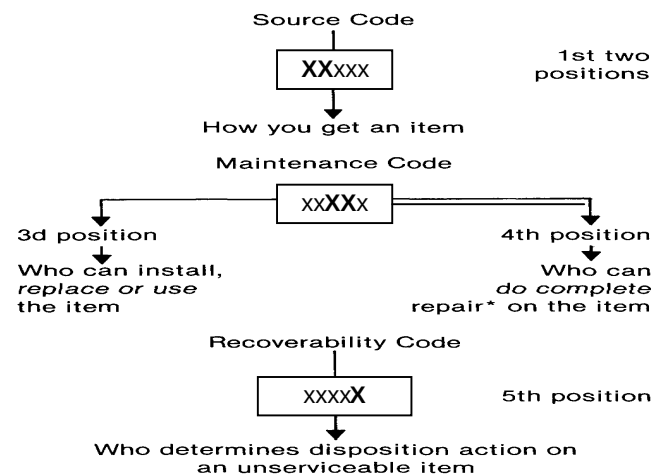

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: