

TECHNICAL MANUAL
UNIT MAINTENANCE,
DIRECT SUPPORT
AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS

TRUCK, FORK LIFT, ELECTRIC; SOLID
RUBBER TIRES; 4000 LB CAPACITY
100 IN LIFT
ARMY MODEL MHE 208
NSN 3930-00-494-8151

BAKER MODEL FTD-040-EE

AND
180 IN LIFT
NSN 3930-00-236-6253

This manual supersedes TM 10-3930-615-24P, 18 September 1988

Approved for Public Release; Distribution is Unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY JANUARY 1992

TECHNICAL MANUAL
*TM 10-3930-615-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington DC, 15 January 1992

**UNIT MAINTENANCE,
DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**TRUCK, FORK LIFT, ELECTRIC; SOLID
RUBBER TIRES; 4000 LB CAPACITY
100 IN LIFT
ARMY MODEL MHE 208
NSN 3930-00-494-8151**

BAKER MODEL FTD-040-EE

**AND
180 IN LIFT
NSN 3930-00-236-6253**

CURRENT AS OF 16 AUGUST 1991

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	PAGE	ILLUS FIG
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	

***This publication supersedes TM 10-3930-615-24P, dated 18 September 1988.**

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 03 FUEL SYSTEM		
0312-ACCELERATOR, THROTTLE OR CHOKE CONTROLS.....	1-1	
ACCELERATOR PEDAL AND ROD	1-1	1
GROUP 06 ELECTRICAL SYSTEM		
0607-INSTRUMENT OR ENGINE CONTROL PANEL	2-1	
HOURMETER, HEADLIGHT SWITCH AND STOP SWITCH	2-1	2
0609-LIGHTS.....	3-1	
HEADLIGHT ASSEMBLY	3-1	3
TAILLIGHT STOP LIGHT	4-1	4
0611-HORN, SIREN.....	5-1	
HORN AND SUPPRESSOR	5-1	5
0612-BATTERIES, STORAGE.....	6-1	
BATTERY	6-1	6
GROUP 10 FRONT AXLE		
1002-DIFFERENTIAL.....	7-1	
DIFFERENTIAL ASSEMBLY	7-1	7
1003-PLANETARY OR FINAL DRIVE.....	8-1	
AXLE SHAFT ASSEMBLY	8-1	8
DRIVE ADAPTER.....	9-1	9
GROUP 11 REAR AXLE		
1100-REAR AXLE ASSEMBLY	10-1	
REAR AXLE	10-1	10
1104-STEERING, SIDESHIFT AND WHEEL LEANING MECHANISM.....	11-1	
STEERING TIE ROD, KNUCKLE AND DRAG LINK ASSEMBLY	11-1	11
GROUP 12 BRAKES		
1201-HAND BRAKES	12-1	
HAND BRAKE MECHANICAL CONTROLS	12-1	12
1202-SERVICE BRAKES.....	13-1	
SERVICE BRAKE ASSEMBLY	13-1	13
1204-HYDRAULIC BRAKE SYSTEM.....	14-1	
HYDRAULIC MASTER BRAKE CYLINDER ASSEMBLY	14-1	14
BRAKE CYLINDER AND LINES AND FITTINGS.....	15-1	15
1206-MECHANICAL BRAKE SYSTEM	16-1	
BRAKE PEDAL AND BRACKETS	16-1	16
1207-ELECTRICAL BRAKE SYSTEM.....	17-1	
BRAKE LIGHT SWITCH.....	17-1	17

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 13 WHEELS AND TRACKS		
1311-WHEEL ASSEMBLY	18-1	
WHEEL ASSEMBLY	18-1	18
WHEEL END ASSEMBLY	19-1	19
1313-TIRES, TUBES, TIRE CHAINS	20-1	
TIRES.....	20-1	20
GROUP 14 STEERING		
1401-MECHANICAL STEERING GEAR ASSEMBLY	21-1	
STEERING WHEEL AND COLUMN AND STEERING GEAR.....	21-1	21
STEERING GEAR (EXPLODED VIEW).....	22-1	22
1410-HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	23-1	
HYDRAULIC STEERING PUMP MOTOR.....	23-1	23
HYDRAULIC STEERING PUMP.....	24-1	24
GROUP 15 FRAME, TOWING ATTACHMENTS, AND DRAWBARS		
1502-COUNTERWEIGHTS.....	25-1	
COUNTERWEIGHT	25-1	25
GROUP 18 BODY, CAB, HOOD AND HULL		
1801-BODY, CAB, HOOD AND HULL ASSEMBLIES.....	26-1	
COVERS, FLOOR PLATES AND OVERHEAD GUARD	26-1	26
1806-UPHOLSTERY SEATS.	27-1	
SEAT ASSEMBLY	27-1	27
GROUP 22 BODY CHASSIS OR HULL, AND ACCESSORY ITEMS		
2210-DATA PLATES AND INSTRUCTION HOLDERS.....	28-1	
IDENTIFICATION PLATES.....	28-1	28
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401- PUMP AND MOTOR.....	29-1	
HYDRAULIC PUMP.....	29-1	29
HYDRAULIC PUMP MOTOR.....	30-1	30
2402-MANIFOLD AND/OR CONTROL VALVE	31-1	
HYDRAULIC CONTROL VALVE	31-1	31
2403-HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	32-1	
HYDRAULIC CONTROL VALVE LEVERS AND RODS.....	32-1	32
2404-TILT CYLINDERS	33-1	
TILT CYLINDER ASSEMBLY	33-1	33
2405-MAST COLUMN.....	34-1	
HOIST CYLINDER ASSEMBLY (180 IN. LIFT).....	34-1	34
HOIST CYLINDER ASSEMBLY (100 IN. LIFT).....	35-1	35

TABLE OF CONTENTS

	PAGE	ILLUS FIG
MAST COLUMN (180 IN. LIFT)	36-1	36
MAST COLUMN (100 IN. LIFT)	37-1	37
FORK ASSEMBLY	38-1	38
2406-STRAINERS, FILTERS, LINES AND FITTINGS, ETC.....	39-1	
STEERING HYDRAULIC LINES AND FITTINGS	39-1	39
HYDRAULIC FLUID FILTER.....	40-1	40
HYDRAULIC LINES AND FITTINGS	41-1	41
PUMP INTAKE FLUID FILTER.....	42-1	42
PUMP INTAKE FLUID FILTER EXPLODED VIEW	43-1	43
HOIST CYLINDER LINES AND FITTINGS (180 IN. LIFT)	44-1	44
HOIST CYLINDER LINES AND FITTINGS (100 IN. LIFT)	45-1	45
2408-LIQUID TANKS OR RESERVOIRS.....	46-1	
HYDRAULIC RESERVOIR ASSEMBLY	46-1	46
 GROUP 40 ELECTRIC MOTORS AND GENERATORS		
4000-ELECTRIC MOTORS.....	47-1	47
4003-BRUSH HOLDERS	48-1	
MOTOR DRIVE BRUSHES	48-1	48
4008-BRAKE.....	49-1	
MOTOR DRIVE BRAKE ASSEMBLY	49-1	49
4009-CONTROL PANELS, HOUSING, CUBICLES.....	50-1	
CONTROL WIRING HARNESS AND ELECTRICAL LEADS	50-1	50
ELECTRIC CONTROL PANEL	51-1	51
4010-MASTER OR AUXILIARY CONTROL ASSEMBLY.....	52-1	
SCR POWER PANEL.....	52-1	52
4011-CIRCUIT BREAKERS, CUTOUPS, FUSE AND FUSEHOLDERS	53-1	
ELECTRIC CONTROL PANEL FUSES	53-1	53
4012-SWITCHES.....	54-1	
SENSITIVE SWITCH.....	54-1	54
4015-RELAY OR ASSEMBLY	55-1	
ARMATURE RELAY	55-1	55
FORWARD AND REVERSE ARMATURE RELAY.....	56-1	56
SC ARMATURE RELAY	57-1	57
1S ARMATURE RELAY.....	58-1	58
4017-TRANSFORMERS AND RECTIFIERS.....	59-1	
SPEED CONTROL	59-1	59
 GROUP 42 ELECTRICAL EQUIPMENT		
4205-CONTROL RESISTANCES.....	60-1	
ACCELERATOR CONTROL SWITCH ASSEMBLY.....	60-1	60
4206-THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES.....	61-1	
DIRECTIONAL CONTROL SWITCH ASSEMBLY	61-1	61

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 94		
REPAIR PARTS KITS		
9401-REPAIR PARTS KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
SECTION III.		
SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV.		
CROSS-REFERENCE INDEXES	I-1	
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-9	
FIGURE AND ITEM NUMBER INDEX	I-35	

v/(vi blank)

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Truck, Lift, Fork, Electric. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part

numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration, figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instructions, as shown in the following breakout:

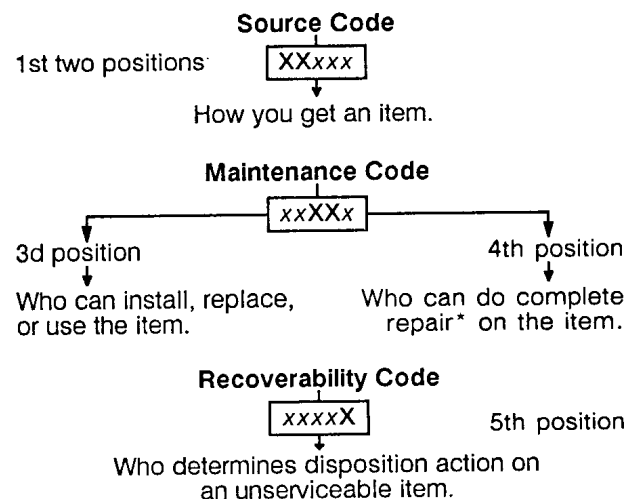

**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.