

TECHNICAL MANUAL
UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

TRUCK, FORKLIFT: GASOLINE ENGINE,
PNEUMATIC TIRES, 6000 LB
CAPACITY, 173 IN. LIFT

BAKER MODEL FJF-060

(NSN 3930-00-235-4674)

ARMY MODEL MHE210

This manual supersedes TM 10-3930-622-20P, dated 10 March 1971
and TM 10-3930-622-35P, 10 March 1971, and all changes.

Approved for public release, distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY

AUGUST 1992

TECHNICAL MANUAL
*TM 10-3930-622-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 26 August 1992

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

TRUCK, FORKLIFT. GASOLINE ENGINE,
PNEUMATIC TIRES, 6000 LB
CAPACITY, 173 IN. LIFT

BAKER MODEL FJF-O80

(NSN 3930-00-235-4674)

ARMY MODEL MHE210

Current u of 21 February 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help Improve this manual. If you find any mistakes or If you know of a way to Improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution Is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS UST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE MOUNTS	1-1	1
	0101 - CRANKCASE. BLOCK. CYLINDER HEAD	2-1	
	CYLINDER BLOCK AND CRANKCASE	2-1	2
	CYLINDER HEAD	3-1	3
	0102 - CRANKSHAFT	4-1	
	CRANKSHAFT AND BEARING	4-1	4
	0103 - FLYWHEEL ASSEMBLY	5-1	
	FLYWHEEL AND FLYWHEEL HOUSING	5-1	5
	0104 - PISTONS AND CONNECTING RODS.....	6-1	
	PISTONS, PISTON RINGS, AND CONNECTING RODS.....	6-1	6

*This manual supersedes TM 10-3930-622-20P, dated 10 March 1971 and TM 10-3930422-35P, dated 10 March 1971, and all changes

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
0105 -	VALVES, CAMSHAFTS, AND TIMING SYSTEM.....	7-1	
	TIMING GEAR FRONT COVER	7-1	7
	VALVES, CAMSHAFT, AND TIMING GEAR	8-1	8
0106 -	ENGINE LUBRICATION SYSTEM.....	9-1	
	LUBRICATING OIL LEVEL INDICATOR AND FILLER TUBE	9-1	9
	LUBRICATING OIL PUMP.....	10-1	10
	POSITIVE CRANKCASE VENTILATION VALVE AND TUBING	11-1	11
	LUBRICATION OIL FILTER.....	12-1	12
	OIL PAN AND OIL PUMP SCREEN	13-1	13
0108 -	MANIFOLDS	14-1	
	EXHAUST AND INTAKE MANIFOLDS.....	14-1	14
0125 -	ACCESSORY DRIVE ASSEMBLY	15-1	
	HYDRAULIC PUMP DRIVE.....	15-1	15
GROUP 02	CLUTCH		
0203 -	FLUID COUPULING, TORQUE CONVERTER.....	16-1	
	FLUID TORQUE CONVERTER CLUTCH.....	16-1	16
GROUP 03	FUEL SYSTEM		
0301 -	CARBURETOR, FUEL INJECTOR.....	17-1	
	CARBURETOR.....	17-1	17
0302 -	FUEL PUMPS.....	18-1	
	FUEL PUMP	18-1	18
0304 -	AIR CLEANER	19-1	
	AIRCLEANER.....	19-1	19
0306 -	TANKS, ULINES, FITTINGS, HEADERS.....	20-1	
	FUEL TANK AND LINES	20-1	20
0308 -	ENGINE SPEED GOVERNOR AND CONTROLS.....	21-1	
	ENGINE SPEED CONTROL GOVERNOR.....	21-1	21
0312 -	ACCELERATOR, THROTTLE, OR CHOKE CONTROLS.....	22-1	
	ACCELERATOR PEDAL AND LINKAGE, AND CHOKE CONTROL.....	22-1	22
GROUP 04	EXHAUST SYSTEM		
0401 -	MUFFLER AND PIPES.....	23-1	
	EXHAUST SYSTEM.....	23-1	23
GROUP 05	COOLING SYSTEM		
0501 -	RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER.....	24-1	
	RADIATOR	24-1	24
0503 -	WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING	25-1	
	GASKET		
	COOLANT THERMOSTAT AND HOUSING	25-1	25
0504 -	WATER PUMP.....	26-1	
	COOLANT PUMP	26-1	26
0505 -	FAN ASSEMBLY.....	27-1	
	COOLANT FAN.....	27-1	27
GROUP 06	ELECTRICAL SYSTEM		
0601 -	GENERATOR, ALTERNATOR	28-1	
	ENGINE GENERATOR.....	28-1	28

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0603 - STARTING MOTOR.....	29-1	
STARTER MOTOR	29-1	29
0605 - IGNITION COMPONENTS.....	30-1	
IGNITION DISTRIBUTOR AND SPARK PLUGS	30-1	30
0607 - INSTRUMENT OR ENGINE CONTROL PANEL.....	31-1	
INSTRUMENT CLUSTER AND CONTROL SWITCH.....	31-1	31
0609 - LIGHTS.....	32-1	
FLOODLIGHT AND COMBINATION STOPLIGHT-TAILLIGHT	32-1	32
0610 - SENDING UNITS AND WARNING SWITCHES	33-1	
INSTRUMENT SENDING UNITS.....	33-1	33
0612 - BATTERIES, STORAGE.....	34-1	
BATTERY.....	34-1	34
0613 - HULL OR CHASSIS WIRING HARNESS	35-1	
TRUCK CHASSIS WIRING HARNESS AND CLAMPS	35-1	35
 GROUP 07 TRANSMISSION		
0700 - TRANSMISSION ASSEMBLY.....	36-1	
TRANSMISSION.....	36-1	36
0701 - TRANSMISSION SHAFTS.....	37-1	
TRANSMISSION SHAFTS AND GEARS.....	37-1	37
0703 - TRANSMISSION CLUTCH AND CLUTCH CONTROLS.....	38-1	
TRANSMISSION DIRECTION CONTROL DRIVE CLUTCH.....	38-1	38
0705 - TRANSMISSION SHIFTING COMPONENTS.....	39-1	
TRANSMISSION DIRECTION CONTROL AND INCHING VALVE.....	39-1	39
TRANSMISSION SHIFT CONTROL AND INCHING VALVE.....	40-1	40
0721 - COOLERS, PUMPS, MOTORS	41-1	
TRANSMISSION OIL PUMP.....	41-1	41
TRANSMISSION AND CLUTCH OIL COOLER LINE	42-1	42
 GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
0900 - PROPELLER SHAFTS	43-1	
PROPELLER SHAFT COUPLER PARTS.....	43-1	43
 GROUP 10 FRONT AXLE		
1000 - FRONT AXLE ASSEMBLY	44-1	
FRONT AXLE ASSEMBLY	44-1	44
FRONT DRIVE AXLE.....	45-1	45
1002 - DIFFERENTIAL	46-1	
FRONT DRIVE AXLE DIFFERENTIAL	46-1	46
 GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY.....	47-1	
REAR AXLE ASSEMBLY.....	47-1	47
1104 - STEERING, SIDESHIFT, AND WHEEL LEANING MECHANISM	48-1	
REAR AXLE STEERING MECHANISM.....	48-1	48
 GROUP 12 BRAKES		
1201 - HANDBRAKES	49-1	
HAND PARKING BRAKE.....	49-1	49

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
1202 -	SERVICE BRAKES.....	50-1	
	FRONT AXLE HYDRAULIC BRAKE.....	50-1	50
1204 -	HYDRAUUC BRAKE SYSTEM.....	51-1	
	HYDRAUUC BRAKE SYSTEM.....	51-1	51
	MASTER CYLINDER.....	52-1	52
GROUP 13	WHEELS AND TRACKS		
1311 -	WHEEL ASSEMBLY.....	53-1	
	REAR AXLE, SINGLE WHEEL.....	53-1	53
	FRONT AXLE, DUAL WHEEL.....	54-1	54
1313 -	TIRES, TUBES, TIRE CHAINS.....	55-1	
	TIRE AND TUBE.....	55-1	55
GROUP 14	STEERING		
1401 -	MECHANICAL STEERING GEAR ASSEMBLY.....	56-1	
	STEERING ASSEMBLY.....	56-1	56
1407 -	POWER STEERING GEAR ASSEMBLY.....	57-1	
	STEERING GEAR ASSEMBLY.....	57-1	57
1411 -	HOSES, LINES, FITTINGS.....	58-1	
	POWER ASSIST STEERING BOOSTER HYDRAULIC LINES.....	58-1	58
1412 -	HYDRAULIC OR AIR CYLINDERS.....	59-1	
	POWER STEERING BOOSTER CYLINDER.....	59-1	59
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1502 -	COUNTERWEIGHTS.....	60-1	
	LIFT TRUCK COUNTERWEIGHT.....	60-1	60
GROUP 18	BODY, CAB, HOOD, AND HULL		
1801 -	BODY, CAB, HOOD, AND HULL ASSEMBLIES.....	61-1	
	ENGINE COMPARTMENT COVERS AND FLOOR PLATE.....	61-1	61
1806 -	UPHOLSTERY, SEATS, AND CARPETS.....	62-1	
	OPERATOR'S SEAT.....	62-1	62
GROUP 21	BUMPERS, GUARDS, AND MARINE FENDERS		
2101 -	BUMPERS, BRACKETS, GUARDS, AND PROTECTIVE DEVICES.....	63-1	
	OPERATOR'S OVERHEAD SAFETY GUARD.....	63-1	63
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
2401 -	PUMP AND MOTOR.....	64-1	
	HYDRAULIC PUMP.....	64-1	64
2402 -	MANIFOLD AND/OR CONTROL VALVES.....	65-1	
	HYDRAULIC LIFT AND TILT CONTROL VALVE.....	65-1	65
	HYDRAULIC LIFT AND POWER STEERING SUPPLY FLOW DMDER VALVE.....	66-1	66
	HYDRAULIC CONTROL VALVE AND CONTROL LEVER.....	67-1	67
2404 -	TILT CYLINDERS AND TILT CRANK.....	68-1	
	MAST TILT CYLINDER.....	68-1	68
2405 -	MAST COLUMN.....	69-1	
	HYDRAULIC LIFT CYLINDER AND MAST.....	69-1	69
	HYDRAULIC LIFT CYLINDER.....	70-1	70

TABLE OF CONTENTS (Con't)

		Page	Ilus Fig
2408 -	STRAINERS, FILTERS, UNES, AND FITTINGS, ETC	71-1	
	HYDRAUUC SYSTEM AND LINES	71-1	71
	HYDRAUUC FLUID FILTER	72-1	72
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS.....	KIT-1	
	REPAIR KITS.....	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL.....	BULK-1	
	BULK MATERIEL.....	BULK-1	BULK
SECTION III.	SPECIAL TOOLS (NOT APPUCABLE)		
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX.....	I-1	
	PART NUMBER INDEX	I-10	
	FIGURE AND ITEM NUMBER INDEX.....	I-36	

v/(vi Blank)

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Forklift Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The

figure and item number Index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

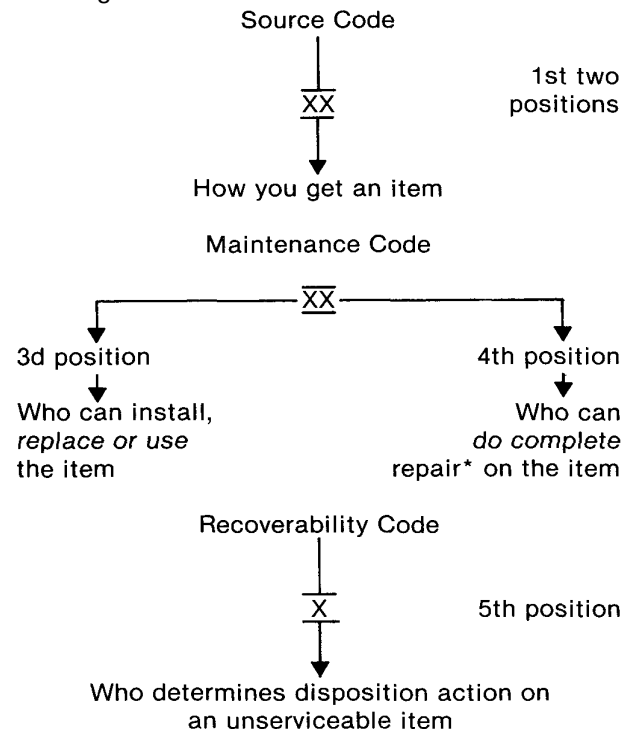

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the 'Repair' function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: