

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**TRUCK, FORKLIFT: ELECTRIC, SOLID RUBBER TIRES,
4000LB CAPACITY, 100 IN. LIFT
ARMY MODEL MHE-218
(NSN 3930-00-403-5661)**

DREXEL DYNAMICS MODEL FL40-EE-6550

**180 IN. LIFT
ARMY MODEL MHE-218
(NSN 3930-00-403-5662)
DREXEL DYNAMICS MODEL FL-40-EE-6250**

This manual supersedes TM10-3930-625-24P, dated 12 November 1988

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

OCTOBER 1992

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**TRUCK, FORKLIFT: ELECTRIC, SOLID RUBBER TIRES,
4000 LB CAPACITY, 100 IN. LIFT
ARMY MODEL MHE-218
(NSN 3930-00-403-5661)**

DREXEL DYNAMICS MODEL FL-40-EE-6550

**180 IN. LIFT
ARMY MODEL MHE-218
(NSN 3930-00-403-5662)**

DREXEL DYNAMICS MODEL FL-40-EE-6250

Current as of 2 June 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION	I.	INTRODUCTION.....	1
SECTION	II.	REPAIR PARTS LIST	1-1
GROUP 06		ELECTRICAL SYSTEM	
		0608 - MISCELLANEOUS ITEMS	1-1
		BRAKE MICROSWITCH	1-1 1
		DIRECTIONAL CONTROL MICROSWITCH	2-1 2
		THERMOSTAT	3-1 3

*** This manual supersedes TM 10-3930-625-24P, dated 12 November 1988.**

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0609 - LIGHTS	4-1	
HEADLIGHT ASSEMBLY	4-1	4
TAILLIGHT ASSEMBLY	5-1	5
0611 - HORN, SIREN	6-1	
HORN AND HORN BUTTON ASSEMBLY	6-1	6
0612 - BATTERIES, STORAGE	7-1	
BATTERY CONNECTOR BOX	7-1	7
GROUP 10 FRONT AXLE		
1002 - DIFFERENTIAL	8-1	
DIFFERENTIAL ASSEMBLY	8-1	
1003 - PLANETARY OR FINAL DRIVE	9-1	
DRIVE AXLE	9-1	9-1
GROUP 11 REAR AXLE		
1104 - STEERING, SIDESHIFT, AND WHEEL LEANING MECHANISM	10-1	
STEERING AXLE	10-1	10
GROUP 12 BRAKES		
1201 - HANDBRAKES	11-1	
SEATBRAKE AND RETURN-TO-NEUTRAL ASSEMBLY	11-1	11
SEATBRAKE	12-1	12
1202 - SERVICE BRAKES	13-1	
SERVICE BRAKES	13-1	13
1204 - HYDRAULIC BRAKE SYSTEM	14-1	
HYDRAULIC BRAKE CYLINDER LINES	14-1	14
HYDRAULIC BRAKE MASTER CYLINDER	15-1	15
WHEEL CYLINDER ASSEMBLY AND RELATED PARTS	16-1	16
1206 - MECHANICAL BRAKE SYSTEM	17-1	
BRAKE PEDAL AND LINKAGE	17-1	17
GROUP 13 WHEELS AND TRACKS		
1311 - WHEEL ASSEMBLY	18-1	
REAR WHEEL ASSEMBLY	18-1	18
FRONT DRIVE WHEEL	19-1	19
1313 - TIRES, TUBES, TIRE CHAINS		
FRONT AND REAR TIRES	20-1	20
GROUP 14 STEERING		
1401 - MECHANICAL STEERING GEAR ASSEMBLY	21-1	
STEERING GEAR ASSEMBLY	21-1	21
BELLCRANK ASSEMBLY AND RELATED PARTS	22-1	22
GROUP 18 BODY, CAB, HOOD, AND HULL		
1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	23-1	
BODY COVERS, GUARDS, AND FLOOR PLATES	23-1	23
1806 - UPHOLSTERY, SEATS, AND CARPETS	24-1	
SEAT ASSEMBLY	24-1	24

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS	
2210 -	DATA PLES ND INSRUCION HOLDERS	25-1
	DATA PLATES	25-1
		25
GROUP 24	HYDRAULIC AND FLUID SYSTEMS	
2401 -	PUMP AND MOTOR	26-1
	HYDRAULIC PUMP AND COUPLING	26-1
		26
2402 -	MANIFOLD AND/OR CONTROL VALVES	27-1
	HYDRAULIC DIRECTIONAL CONTROL VALVE	27-1
		27
2403 -	HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	28-1
	HYDRAULIC CONTROLS LINKAGE	28-1
		28
2404 -	TILT CYLINDERS AND TILT CRANK	29-1
	TILT CYLINDER ASSEMBLY	29-1
		29
2405 -	MAST COLUMN	30-1
	HYDRAULIC CYLINDER MAST ASSEMBLY, 100 INCH LIFT	30-1
		30
	HYDRAULIC CARRIAGE MAST ASSEMBLY, 100 INCH LIFT	31-1
		31
	HYDRAULIC CYLINDER MAST ASSEMBLY, 180 INCH LIFT	32-1
		32
	HYDRAULIC CARRIAGE MAST ASSEMBLY, 180 INCH LIFT	33-1
		33
	HYDRAULIC LIFT CYLINDER ASSEMBLY, 100 INCH LIFT	34-1
		34
	HYDRAULIC LIFT CYLINDER ASSEMBLY, 180 INCH LIFT	35-1
		35
2406 -	STRAINERS, FILTERS, LINES, AND FITTINGS, ETC.	36-1
	HYDRAULIC LINES AND FITTINGS	36-1
		36
	HYDRAULIC OIL FILTER	37-1
		37
2408 -	LIQUID TANKS OR RESERVOIRS	38-1
	HYDRAULIC OIL RESERVOIR	38-1
		38
GROUP 40	ELECTRIC MOTORS AND GENERATORS	
4000 -	MAJOR ASSEMBLAGE: MOTOR GENERATOR AND ROTATING EXCITER ASSEMBLIES	39-1
	DRIVE MOTOR ASSEMBLY	39-1
		39
	PUMP MOTOR ASSEMBLY, 100 INCH LIFT	40-1
		40
	PUMP MOTOR ASSEMBLY, 180 INCH LIFT	41-1
		41
4007 -	DRIVE COMPONENTS	42-1
	DRIVE MOTOR COUPLING	42-1
		42
4009 -	CONTROL PANELS, HOUSING, CUBICLES	43-1
	CONTROL BOX ASSEMBLY	43-1
		43
	CONTROL BOX CABLE AND JUMPER ASSEMBLIES	44-1
		44
4010 -	MASTER OR AUXILIARY CONTROL ASSEMBLY	45-1
	ACCELERATOR SWITCH ASSEMBLY	45-1
		45
	ACCELERATOR CONTROL	46-1
		46
	1A AND L CONTACTOR ASSEMBLY	47-1
		47
	F AND R CONTACTOR ASSEMBLY	48-1
		48
	P CONTACTOR ASSEMBLY	49-1
		49
4011 -	CIRCUIT BREAKERS, CUTOUTS, FUSES, AND FUSEHOLDERS	50-1
	FUSEHOLDER AND FUSES	50-1
		50
4012 -	SWITCHES	51-1
	DIRECTIONAL CONTROL SWITCH	51-1
		51
4017 -	TRANSFORMERS, RECTIFIERS	52-1
	SCR CONTROL	52-1
		52

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
GROUP 94	REPAIR KITS			
	9401 - REPAIR KITS		KIT-1	
	REPAIR KITS		KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS			
	9501 - BULK MATERIEL		BULK-1	
	BULK MATERIEL		BULK-1	BULK
SECTION III	SPECIAL TOOLS			
GROUP 26	TOOLS AND TEST EQUIPMENT			
	2604 - SPECIAL TOOLS		53-1	
	SPECIAL TOOLS		53-1	53
SECTION IV	CROSS-REFERENCE INDEXES			
	NATIONAL STOCK NUMBER INDEX		I-1	
	PART NUMBER INDEX		I-10	
	FIGURE AND ITEM NUMBER INDEX		I-39	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Forklift Truck. It authorizes the requisitioning, Issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The fig-

ure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO.* (Column (1)). Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

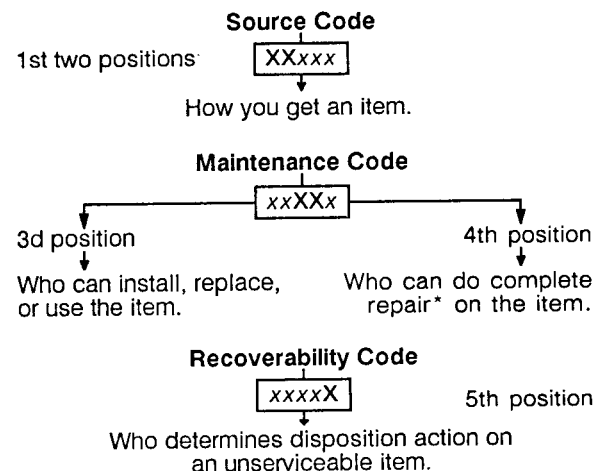

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: