

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**TRUCK, LIFT, FORK, GED, SOLID
RUBBER TIRED WHEELS, 4000 LB
CAPACITY, 180 INCH LIFT
ARMY MODEL MHE -231
NSN 3930 -00 -556 -4955**

**ALLIS -CHALMERS MODEL ACC40 -24PS180
AND**

**100 INCH LIFT,
ARMY MODEL MHE -231
NSN 3930 -00 -590 -7814**

ALLIS -CHALMERS MODEL ACC40 -24PS100

**This manual supersedes TM 10-3930-630-20P, 25 July 1984 and
TM 10-3930-630-34P, 23 April 1984.**

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JUNE 1991

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

TRUCK, LIFT, FORK, GED, SOLID
RUBBER TIRED WHEELS, 4000 LB
CAPACITY, 180 INCH LIFT

ARMY MODEL MHE -231

NSN 3930 -00 -556 -4955

ALLIS -CHALMERS MODEL ACC40 -24PS180

100 INCH LIFT

ARMY MODEL MHE -231

NSN 3930 -00 -590 -7814

ALLIS -CHALMERS MODEL ACC40 -24PS100

Current as of 31 July 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028 -2, located in the back of this manual, direct to: Commander, U.S. Army Tank -Automotive Command, ATTN: AMSTA -MB, Warren, MI 48397 -5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE AND RELATED PARTS	1-1	

*This manual supersedes TM 10-3930-630-20P, 25 July 1984 and TM 10 -3930 -630 -34P, 23 April 1984 and all changes.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0101 - CRANKCASE, BLOCK, CYLINDER HEAD.....	2-1	
CYLINDER BLOCK AND RELATED PARTS.....	2-1	2
CYLINDER HEAD AND RELATED PARTS.....	3-1	3
0102 - CRANKSHAFT	4-1	
CRANKSHAFT, GEARS AND BEARINGS	4-1	4
0103 - FLYWHEEL ASSEMBLY.....	5-1	
FLYWHEEL AND FLYWHEEL HOUSING ASSEMBLY.....	5-1	5
0104 - PISTONS, CONNECTING RODS.....	6-1	
PISTONS AND CONNECTING RODS	6-1	6
0105 - VALVES,CAMSHAFTS, AND TIMING SYSTEM	7-1	
CAMSHAFTS, TAPPETS AND VALVES	7-1	7
GEAR COVER AND RELATED PARTS	8-1	8
CHAMBER COVER AND RELATED PARTS	9-1	9
0106 - ENGINE LUBRICATION SYSTEM.....	10-1	
OIL PAN AND GASKETS	10-1	10
OIL PUMP ASSEMBLY	11-1	11
ENGINE OIL FILTER AND RELATED PARTS	12-1	12
OIL FILLER CAP AND GAGE	13-1	13
0108 - MANIFOLDS.	14-1	
INTAKE AND EXHAUST MANIFOLD	14-1	14
GROUP 03 FUEL SYSTEM		
0301 - CARBURETOR, FUEL INJECTOR.....	15-1	
CARBURETOR	15-1	15
0302 - FUEL PUMPS	16-1	
FUEL PUMP.....	16-1	16
0304 - AIR CLEANER	17-1	
AIR CLEANER AND RELATED PARTS	17-1	17
0306 - TANKS, LINES, FITTINGS, HEADERS	18-1	
FUEL TANK, HOSES. AND RELATED PARTS.....	18-1	18
0308 - ENGINE SPEED GOVERNOR AND CONTROLS.....	19-1	
GOVERNOR AND RELATED PARTS	19-1	19
0309 - FUEL FILTERS	20-1	
FILTER ASSEMBLY.....	20-1	20
FILLER CAP.....	21-1	21
0312 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS	22-1	
ACCELERATOR AND RELATED PARTS	22-1	22
CHOKE CONTROL AND RELATED PARTS.....	23-1	23
GROUP 04 EXHAUST SYSTEM		
0401 - MUFFLER AND PIPES	24-1	
EXHAUST SYSTEM EXPLODED VIEW.....	24-1	24
GROUP 05 COOLING SYSTEM		
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	25-1	
RADIATOR AND RELATED PARTS	25-1	25
0503 - WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET	26-1	
THERMOSTAT AND RELATED PARTS	26-1	26
RADIATOR HOSES AND CLAMPS	27-1	27

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0504 - WATER PUMP	28-1	
WATER PUMP AND RELATED PARTS	28-1	28
0505 - FAN ASSEMBLY	29-1	
FAN AND RELATED PARTS	29-1	29
 GROUP 06 ELECTRICAL SYSTEM		
0601 - GENERATOR, ALTERNATOR	30-1	
GENERATOR MOUNTING PARTS	30-1	30
GENERATOR ASSEMBLY	31-1	31
0603 - STARTING MOTOR	32-1	
STARTER ASSEMBLY AND RELATED PARTS	32-1	32
0605 - IGNITION COMPONENTS	33-1	
SPARK PLUGS, COIL, AND RELATED PARTS	33-1	33
DISTRIBUTOR ASSEMBLY	34-1	34
0607 - INSTRUMENT OR ENGINE CONTROL PANEL	35-1	
INSTRUMENT PANEL	35-1	35
0608 - MISCELLANEOUS ITEMS	36-1	
FUSES, PLATES, AND SWITCHES	36-1	36
0609 - LIGHTS	37-1	
HEADLIGHT ASSEMBLY AND MOUNTING PARTS	37-1	37
TAILLIGHT ASSEMBLY AND MOUNTING PARTS	38-1	38
0610 - SENDING UNITS AND WARNING SWITCHES	39-1	
FUEL TANK TRANSMITTER AND RELATED PARTS	39-1	39
WARNING SWITCHES	40-1	40
0611 - HORN, SIREN	41-1	
HORN COVER AND RELATED PARTS	41-1	41
HORN, RELAY, AND RELATED PARTS	42-1	42
0612 - BATTERIES, STORAGE	43-1	
BATTERY AND RELATED PARTS	43-1	43
 GROUP 07 TRANSMISSION		
0705 - TRANSMISSION SHIFTING COMPONENTS	44-1	
SHIFTING LEVER AND RELATED PARTS	44-1	44
0708 - TORQUE CONVERTER OR FLUID COUPLING	45-1	
TORQUE CONVERTER AND RELATED PARTS	45-1	45
0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	46-1	
TRANSMISSION ASSEMBLY AND RELATED PARTS	46-1	46
TRANSMISSION CONVERTER HOUSING AND RELATED PARTS	47-1	47
0713 - INTERMEDIATE CLUTCH	48-1	
FORWARD AND REVERSE CLUTCH	48-1	48
0714 - SERVO UNIT	49-1	
TRANSMISSION CONTROL VALVE ASSEMBLY AND RELATED PARTS	49-1	49
0721 - COOLERS, PUMPS, MOTORS	50-1	
TRANSMISSION PUMP ASSEMBLY AND RELATED PARTS	50-1	50
TRANSMISSION FILTER AND RELATED PARTS	51-1	51
0726 - BRAKES	52-1	
INCHING PEDAL	52-1	52
 GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
0900 - PROPELLER SHAFTS	53-1	
UNIVERSAL JOINT ASSEMBLY AND RELATED PARTS	53-1	53

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 10	FRONT AXLE		
	1000 - FRONT AXLE ASSEMBLY	54-1	
	DRIVE AXLE AND RELATED PARTS	54-1	54
	1002 - DIFFERENTIAL	55-1	
	DIFFERENTIAL CARRIER	55-1	55
	DIFFERENTIAL ASSEMBLY	56-1	56
GROUP 11	REAR AXLE		
	1100 - REAR AXLE ASSEMBLY	57-1	
	REAR STEERING AXLE AND RELATED PARTS	57-1	57
GROUP 12	BRAKES		
	1201 - HANDBRAKES	58-1	
	PARKING BRAKE LEVER	58-1	58
	PARKING BRAKE	59-1	59
	1202 - SERVICE BRAKES	60-1	
	SERVICE BRAKES	60-1	60
	1204 - HYDRAULIC BRAKE SYSTEM	61-1	
	BRAKE LINES AND FITTINGS	61-1	61
	MASTER CYLINDER ASSEMBLY	62-1	62
	WHEEL CYLINDER ASSEMBLY	63-1	63
	1206 - MECHANICAL BRAKE SYSTEM	64-1	
	BRAKE PEDAL AND RELATED PARTS	64-1	64
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	65-1	
	DRIVE AND REAR WHEELS AND RELATED PARTS	65-1	65
	1313 - TIRES, TUBES, TIRE CHAINS	66-1	
	DRIVE AND REAR TIRES	66-1	66
GROUP 14	STEERING		
	1401 - MECHANICAL STEERING GEAR ASSEMBLY	67-1	
	STEERING VALVE ASSEMBLY AND RELATED PARTS	67-1	67
	STEERING VALVE CONTROL ASSEMBLY AND RELATED PARTS	68-1	68
	TIE ROD END ASSEMBLY AND RELATED PARTS	69-1	69
	1405 - STEERING YOKES	70-1	
	STEERING AXLE SPINDLES AND RELATED PARTS	70-1	70
	1411 - HOSES, LINES, FITTINGS	71-1	
	HYDRAULIC STEERING LINES AND FITTINGS	71-1	71
	1412 - HYDRAULIC OR AIR CYLINDERS	72-1	
	STEERING CYLINDER ASSEMBLY AND RELATED PARTS	72-1	72
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1502 - COUNTERWEIGHTS	73-1	
	COUNTERWEIGHT	73-1	73

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1503 - PINTLES AND TOWING ATTACHMENTS	74-1	
TOWING ATTACHMENTS	74-1	74
 GROUP 18 BODY, CAB. HOOD AND HULL		
1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	75-1	
COWLS AND OVERHEAD GUARD	75-1	75
GUARDS, SIDE PANELS, AND RELATED PARTS	76-1	76
1805 - FLOORS, SUBFLOORS, AND RELATED COMPONENTS	77-1	
FLOOR PLATES	77-1	77
1806 - UPHOLSTERY, SEATS, AND CARPETS.....	78-1	
SEAT ASSEMBLY AND RELATED PARTS	78-1	78
 GROUP 24 HYDRAULIC FLUID SYSTEMS		
2401 - PUMP AND MOTOR	79-1	
HYDRAULIC PUMP ASSEMBLY	79-1	79
2402 - MANIFOLD AND/OR CONTROL VALVES	80-1	
CONTROL VALVE ASSEMBLY AND RELATED PARTS.....	80-1	80
LIFT SECTION ASSEMBLY CONTROL VALVE	81-1	81
TILT SECTION ASSEMBLY CONTROL VALVE	82-1	82
2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	83-1	
CONTROL VALVE LEVERS AND LINKAGE.....	83-1	83
2404 - TILT CYLINDERS AND TILT CRANK	84-1	
TILT CYLINDER ASSEMBLY AND RELATED PARTS	84-1	84
2405 - MAST COLUMN.....	85-1	
LIFTING FORKS	85-1	85
BACKREST	86-1	86
CARRIAGE.....	87-1	87
MAST MOUNTING PARTS.....	88-1	88
MAST ASSEMBLY (100 INCH LIFT)	89-1	89
MAST ASSEMBLY (180 INCH LIFT)	90-1	90
LIFT CYLINDER (180 INCH LIFT)	91-1	91
CLUSTER CYLINDER ASSEMBLY	92-1	92
2406 - STRAINERS. FILTERS, LINES AND FITTINGS, ETC	93-1	
HYDRAULIC RESERVOIR STRAINER, FILTER, LINES AND FITTINGS	93-1	93
HYDRAULIC LINES AND FITTINGS	94-1	94
HYDRAULIC FILTER ASSEMBLY	95-1	95
2408 - LIQUID TANKS OR RESERVOIRS	96-1	
HYDRAULIC RESERVOIR ASSEMBLY AND RELATED PARTS.....	96-1	96
 GROUP 47 GAGES, WEIGHING AND MEASURING DEVICES		
4702 - GAGES, (NONELECTRICAL) MOUNTINGS, LINES AND FITTINGS	97-1	
TRANSMISSION TEMPERATURE THERMOMETER INDICATOR	97-1	97
 GROUP 94 REPAIR PARTS		
9401 - REPAIR KITS.....	KIT	
REPAIR KITS.....	KIT	KIT-1

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK	
	BULK MATERIEL	BULK	BULK-1
SECTION III	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV	CROSS REFERENCE INDEXES		
	NATIONAL STOCK NUMBER	I-1	
	PART NUMBER INDEX	I-10	
	FIGURE AND ITEM NUMBER INDEX	I-43	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Fork, Lift, Truck. It authorizes the requisitioning, Issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration (s) /figure(s) .

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross -reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross -referenced to each illustration/figure and item number appearance. The figure and item number

index lists figure and item numbers in alphanumeric sequence and cross -references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5 - position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

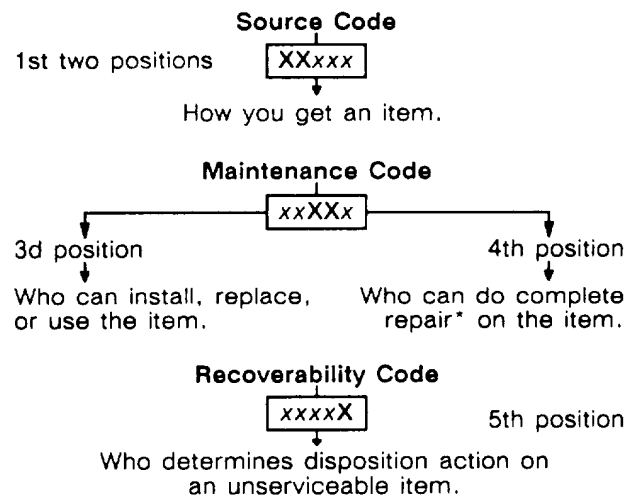

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: