

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**TRUCK, CONTAINER HANDLER: ROUGH TERRAIN,
50,000 LB CAPACITY, DIESEL ENGINE DRIVEN,
PNEUMATIC TIRES**

**MODEL DV43 (NSN 3930-01-082-3758)
WITH 20 FOOT TOPLOADER
MODEL E9137 (NSN 3990-01-107-5716)
WITH 35 FOOT TOPLOADER
MODEL E9138 (NSN 3990-01-107-5717)
WITH 40 FOOT TOPLOADER
MODEL E9139 (NSN 3990-01-107-5718)**

This manual supersedes TM 10-3930-641-24P, dated 27 December 1990 and all changes.

Approved for public release, distribution is unlimited.

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS
FOR
TRUCK, CONTAINER HANDLER: ROUGH TERRAIN,
50,000 LB CAPACITY, DIESEL ENGINE DRIVEN,
PNEUMATIC TIRES

MODEL DV43 (NSN 3930-01-082-3758)

WITH 20 FOOT TOPLOADER
MODEL E9137 (NSN 3990-01-107-5716)

WITH 35 FOOT TOPLOADER
MODEL E9138 (NSN 3990-01-107-5717)

WITH 40 FOOT TOPLOADER
MODEL E9139 (NSN 3990-01-107-5718)

Current as of 1 December 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE ASSEMBLY	1-1	1
	ENGINE SUPPORT, TRUNNION, AND LIFTING BRACKET	2-1	2

* This manual supersedes TM 10-3930-641-24P, dated 27 December 1990 and all changes.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	3-1	
CYLINDER BLOCK ASSEMBLY	3-1	3
ENGINE BLOCK COVERS	4-1	4
CYLINDER HEAD ASSEMBLY	5-1	5
0102 - CRANKSHAFT	6-1	
CRANKSHAFT AND DAMPER ASSEMBLY	6-1	6
0103 - FLYWHEEL ASSEMBLY	7-1	
FLYWHEEL HOUSING ASSEMBLY	7-1	7
0104 - PISTONS AND CONNECTING RODS	8-1	
PISTON AND CONNECTING ROD ASSEMBLY	8-1	8
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM	9-1	
CAMSHAFT ASSEMBLY	9-1	9
VALVE COVERS (LEFT-HAND AND RIGHT-HAND)	10-1	10
VALVE ASSEMBLIES	11-1	11
VALVE MECHANISM ASSEMBLY	12-1	12
TIMING GEAR HOUSING ASSEMBLY	13-1	13
TIMING GEAR HOUSING COVERS	14-1	14
TIMING GEAR ASSEMBLY	15-1	15
0106 - ENGINE LUBRICATION SYSTEM	16-1	
OIL PAN ASSEMBLY	16-1	16
ENGINE OIL SUCTION LINES	17-1	17
ENGINE OIL PUMP	18-1	18
ENGINE OIL LINES	19-1	19
ENGINE OIL COOLER ASSEMBLY	20-1	20
ENGINE OIL FILTER ASSEMBLY	21-1	21
ENGINE OIL FILTER AND BREATHER ASSEMBLIES	22-1	22
ENGINE OIL LEVEL GAGE ASSEMBLY	23-1	23
0108 - MANIFOLDS	24-1	
EXHAUST MANIFOLD	24-1	24
0109 - ACCESSORY DRIVING MECHANISMS	25-1	
ACCESSORY DRIVE GEARS	25-1	25
DRIVE GEAR, GOVERNOR, AND FUEL PUMP	26-1	26
TACHOMETER DRIVE	27-1	27
GROUP 03 FUEL SYSTEM		
0302 - FUEL PUMPS	28-1	
FUEL INJECTION LINES AND NOZZLES	28-1	28
FUEL INJECTION PUMP ASSEMBLY	29-1	29
FUEL INJECTION PUMP	30-1	30
FUEL INJECTION PUMP HOUSING ASSEMBLY	31-1	31
FUEL TRANSFER PUMP AND DRAIN ASSEMBLY	32-1	32
FUEL TRANSFER PUMP	33-1	33
FUEL PUMP LINES	34-1	34
FUEL LINES FASTENER ASSEMBLY	35-1	35
FUEL PRIMING PUMP ASSEMBLY	36-1	36
0304 - AIR CLEANER	37-1	
AIR CLEANER AND DUST EJECTOR ASSEMBLY	37-1	37
0305 - SUPERCHARGER, BLOWER, TURBOCHARGER, OR ALTITUDE COMPENSATOR	38-1	
TURBOCHARGER AIR LINES	38-1	38
TURBOCHARGER EXHAUST LINES	39-1	39
TURBOCHARGER ASSEMBLY	40-1	40
TURBOCHARGER OIL LINES	41-1	41

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0306 - TANKS, LINES, FITTINGS, HEADERS	42-1	
FUEL TANK AND SWITCHES	42-1	42
FUEL LINES	43-1	43
0308 - ENGINE SPEED GOVERNOR AND CONTROLS	44-1	
GOVERNOR CONTROL	44-1	44
GOVERNOR CONTROL ASSEMBLY	45-1	45
GOVERNOR COVER ASSEMBLY	46-1	46
GOVERNOR ASSEMBLY	47-1	47
GOVERNOR PLATE ASSEMBLY	48-1	48
GOVERNOR SPRING ASSEMBLY	49-1	49
FUEL RATIO CONTROL ASSEMBLY	50-1	50
0309 - FUEL FILTERS	51-1	
PRIMARY FUEL FILTER ASSEMBLY	51-1	51
SECONDARY FUEL FILTER ASSEMBLY	52-1	52
0311 - ENGINE STARTING AIDS	53-1	
ETHER STARTING AID	53-1	53
 GROUP 04 EXHAUST SYSTEM		
0401 - MUFFLER AND PIPES	54-1	
FUME DISPOSAL ASSEMBLY	54-1	54
MUFFLER AND EXHAUST EXTENSION	55-1	55
 GROUP 05 COOLING SYSTEM		
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	56-1	
RADIATOR COMPONENTS	56-1	56
RADIATOR ASSEMBLY	57-1	57
0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET	58-1	
COOLANT FLOW SWITCH	58-1	58
WATER LINES	59-1	59
0504 - WATER PUMP	60-1	
WATER PUMP ASSEMBLY	60-1	60
0505 - FAN ASSEMBLY	61-1	
FAN DRIVE ASSEMBLY	61-1	61
FAN AND GUARD ASSEMBLY	62-1	62
CRANKSHAFT PULLEY ASSEMBLY	63-1	63
BELT TIGHTENER ASSEMBLY	64-1	64
0507 - AUXILIARY COOLING	65-1	
HYDRAULIC OIL COOLER LINES	65-1	65
HYDRAULIC OIL COOLER ASSEMBLY	66-1	66
0508 - WATER FILTER	67-1	
COOLANT FILTER ASSEMBLY	67-1	67
 GROUP 06 ELECTRICAL SYSTEM		
0601 - GENERATOR, ALTERNATOR	68-1	
ALTERNATOR AND BELT ASSEMBLY	68-1	68
ALTERNATOR ASSEMBLY	69-1	69
0603 - STARTING MOTOR	70-1	
ELECTRIC STARTING MOTOR	70-1	70

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0606 - ENGINE SAFETY CONTROLS	71-1	
ELECTRIC SHUTOFF ASSEMBLY	71-1	71
OIL LEVEL SWITCH	72-1	72
ENGINE WIRING ASSEMBLY	73-1	73
ENGINE WIRING HARNESS ASSEMBLY	74-1	74
0607 - INSTRUMENT OR ENGINE CONTROL PANEL	75-1	
LEFT-HAND INSTRUMENT PANEL	75-1	75
LEFT-HAND INSTRUMENT PANEL WIRING HARNESS	76-1	76
RIGHT-HAND INSTRUMENT PANEL	77-1	77
RIGHT-HAND INSTRUMENT PANEL WIRING HARNESS	78-1	78
CONSOLE WIRING ASSEMBLY	79-1	79
CONSOLE WIRING HARNESS	80-1	80
CONTAINER LOCK INDICATOR PANEL	81-1	81
0609 - LIGHTS	82-1	
HEADLIGHT ASSEMBLY	82-1	82
AUXILIARY ROPS-MOUNTED LIGHTS	83-1	83
STOPLIGHT AND TAILLIGHT ASSEMBLY	84-1	84
REAR LIGHTING GROUP	85-1	85
CAB DOMELIGHT	86-1	86
LAMP ASSEMBLIES	87-1	87
0611 - HORN, SIREN	88-1	
BACKUP WARNING SYSTEM	88-1	88
ELECTRIC HORN GROUP	89-1	89
0612 - BATTERIES, STORAGE	90-1	
BATTERIES AND DISCONNECT SWITCH	90-1	90
0613 - HULL OR CHASSIS WIRING HARNESS	91-1	
FRONT WIRING HARNESS ASSEMBLY	91-1	91
REAR WIRING ASSEMBLY	92-1	92
REAR WIRING HARNESS ASSEMBLY	93-1	93
0615 - RADIO INTERFERENCE SUPPRESSION	94-1	
RADIO INTERFERENCE SUPPRESSION SYSTEM	94-1	94
GROUP 07 TRANSMISSION		
0708 - TORQUE CONVERTER OR FLUID COUPLING	95-1	
TORQUE CONVERTER LINES	95-1	95
PRESSURE RELIEF VALVE ASSEMBLY	96-1	96
TORQUE CONVERTER	97-1	97
TORQUE CONVERTER ASSEMBLY	98-1	98
0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	99-1	
TRANSMISSION ARRANGEMENT	99-1	99
TRANSMISSION CASE ASSEMBLY	100-1	100
HYDRAULIC TRANSMISSION CONTROL ASSEMBLY	101-1	101
NEUTRALIZER VALVE ASSEMBLY	102-1	102
SELECTION AND PRESSURE CONTROL VALVES	103-1	103
PLANETARY GEARS (NO. 1 CLUTCH)	104-1	104
PLANETARY GEARS (NO. 2 AND NO. 3 CLUTCHES)	105-1	105
PLANETARY GEARS (NO. 4 AND NO. 6 CLUTCHES)	106-1	106
INPUT TRANSFER GEARS	107-1	107
OUTPUT TRANSFER GEARS	108-1	108
TRANSFER CASE ASSEMBLY	109-1	109
TRANSMISSION CONTROL ASSEMBLY	110-1	110
TRANSMISSION LOCK ASSEMBLY	111-1	111

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0721 - COOLERS. PUMPS. MOTORS	112-1	
TRANSMISSION OIL COOLER	112-1	112
TRANSMISSION OIL PUMP	113-1	113
TRANSMISSION OIL FILTER SUPPORT	114-1	114
TRANSMISSION FILTER ASSEMBLY	115-1	115
TRANSMISSION OIL FILTER	116-1	116
TRANSMISSION OIL LINES	117-1	117
SEQUENCES AND PRESSURE CONTROL VALVES ASSEMBLY	118-1	118
 GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
0900 - PROPELLER SHAFTS	119-1	
MAIN DRIVE SHAFT ASSEMBLY	119-1	119
UPPER DRIVE SHAFT ASSEMBLY	120-1	120
 GROUP 10 FRONT AXLE		
1000 - FRONT AXLE ASSEMBLY	121-1	
FRONT AXLE ASSEMBLY	121-1	121
1002 - DIFFERENTIAL	122-1	
DIFFERENTIAL ASSEMBLY	122-1	122
BEVEL GEAR ASSEMBLY	123-1	123
 GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY	124-1	
REAR AXLE ASSEMBLY	124-1	124
 GROUP 12 BRAKES		
1201 - HANDBRAKES	125-1	
SAFETY BRAKE LINES GROUP	125-1	125
PARKING BRAKE ASSEMBLY	126-1	126
BRAKE CONTROL	127-1	127
FINAL DRIVE AND BRAKE ASSEMBLY	128-1	128
1202 - SERVICE BRAKES	129-1	
SERVICE BRAKE ASSEMBLY	129-1	129
1204 - HYDRAULIC BRAKE SYSTEM	130-1	
SERVICE BRAKE LINES	130-1	130
SERVICE BRAKE CONTROL ASSEMBLY	131-1	131
SERVICE BRAKE CONTROL ASSEMBLY	132-1	132
BRAKE ACCUMULATOR ASSEMBLY	133-1	133
NEUTRALIZER VALVE ASSEMBLY	134-1	134
PARKING BRAKE VALVE ASSEMBLY	135-1	135
BRAKE ACCUMULATOR CHARGING VALVE ASSEMBLY	136-1	136
BRAKE VALVE ASSEMBLY	137-1	137
1206 - MECHANICAL BRAKE SYSTEM	138-1	
BRAKE PEDAL ASSEMBLY	138-1	138
 GROUP 13 WHEELS AND TRACKS		
1311 - WHEEL ASSEMBLY	139-1	
FINAL DRIVE AND BRAKE GROUP	139-1	139
RIM ASSEMBLY	140-1	140

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1313 - TIRES, TUBES, TIRE CHAINS	141-1	
TIRE	141-1	141
GROUP 14 STEERING		
1401 - MECHANICAL STEERING GEAR ASSEMBLY	142-1	
STEERING CONTROL SYSTEM (VALVE GROUP)	142-1	142
STEERING CONTROL SYSTEM (VALVE GROUP, NEUTRAL)	143-1	143
METERING PUMP ASSEMBLY	144-1	144
ADJUSTABLE STEERING COLUMN ASSEMBLY	145-1	145
STEERING CONTROL ASSEMBLY	146-1	146
1402 - TRACTOR HITCH STEERING	147-1	
ARTICULATED HITCH	147-1	147
1410 - HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	148-1	
STEERING AND BRAKE PUMP ASSEMBLY	148-1	148
SUPPLEMENTAL STEERING PUMP	149-1	149
1411 - HOSES, LINES, FITTINGS	150-1	
STEERING OIL FILTER ASSEMBLY	150-1	150
SUPPLEMENTAL STEERING LINES	151-1	151
STEERING OIL LINES	152-1	152
STEERING OIL LINES	153-1	153
1412 - HYDRAULIC OR AIR CYLINDERS	154-1	
STEERING CYLINDER AND MOUNTING	154-1	154
1414 - STEERING SYSTEM VALVES	155-1	
DIVERTER VALVE ASSEMBLY	155-1	155
STEERING NEUTRALIZER VALVE ASSEMBLY	156-1	156
STEERING VALVE ASSEMBLY AND RELATED PARTS	157-1	157
STEERING VALVE ASSEMBLY	158-1	158
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 - FRAME ASSEMBLY	159-1	
REAR FRAME ASSEMBLY	159-1	159
FRONT FRAME ASSEMBLY	160-1	160
REAR BUMPER ASSEMBLY	161-1	161
CENTER PLATFORM ASSEMBLY	162-1	162
CAB PLATFORM ASSEMBLY	163-1	163
SIDE PLATFORM ASSEMBLY	164-1	164
LADDER AND GUARD ASSEMBLY	165-1	165
1502 - COUNTERWEIGHTS	166-1	
COUNTERWEIGHT ASSEMBLY	166-1	166
GROUP 18 BODY, CAB, HOOD, AND HULL		
1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	167-1	
GUARD AND HOOD ASSEMBLIES	167-1	167
GUARD ASSEMBLIES	168-1	168
PLATFORM SUPPORT ASSEMBLY	169-1	169
ROLL-OVER PROTECTIVE STRUCTURE (ROPS)	170-1	170
CAB	171-1	171
CAB ASSEMBLY	172-1	172
DOOR WINDOW ASSEMBLY	173-1	173
CAB DOOR ASSEMBLY	174-1	174

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC	175-1	
REAR FENDER ASSEMBLY	175-1	175
FRONT FENDER ASSEMBLY	176-1	176
1806 - UPHOLSTERY, SEATS, AND CARPETS	177-1	
SEAT, SEATBELT, AND ARM CUSHION ASSEMBLY	177-1	177
SEAT ASSEMBLY	178-1	178
SEAT SUSPENSION ASSEMBLY	179-1	179
 GROUP 22 BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
2202 - ACCESSORY ITEMS	180-1	
WASHER AND WIPER ASSEMBLY	180-1	180
FRONT WIPER MOTOR ASSEMBLY	181-1	181
REAR WIPER ASSEMBLY	182-1	182
REAR WIPER MOTOR ASSEMBLY	183-1	183
REARVIEW MIRROR ASSEMBLY	184-1	184
REMOTE GREASE LINES	185-1	185
CAB HEATER LINES	186-1	186
CAB HEATER ASSEMBLY (HEATER GROUP)	187-1	187
CAB HEATER ASSEMBLY (HEATER GROUP, FAN)	188-1	188
AIR CONSOLE ASSEMBLY	189-1	189
CAB HEATER	190-1	190
CAB HEATER BLOWER ASSEMBLY	191-1	191
BLOWER	192-1	192
CAB HEATER HARNESS ASSEMBLY	193-1	193
CAB AIR FILTER ASSEMBLY	194-1	194
 GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401 - PUMP AND MOTOR	195-1	
HYDRAULIC IMPLEMENT PUMP ASSEMBLY	195-1	195
2404 - TILT CYLINDERS AND TILT CRANK	196-1	
TILT CYLINDER ASSEMBLY	196-1	196
SIDESHIFT AND SIDE TILT CYLINDERS	197-1	197
2405 - MAST COLUMN	198-1	
MAST ASSEMBLY	198-1	198
OUTER MAST AND MOUNTING ASSEMBLY	199-1	199
LIFT CYLINDER ASSEMBLY	200-1	200
CARRIAGE ASSEMBLY	201-1	201
2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	202-1	
ATTACHMENT LINES	202-1	202
TILT CYLINDERS LINES	203-1	203
LIFT CYLINDER LINES	204-1	204
CARRIAGE LINES	205-1	205
HYDRAULIC PUMP LINES	206-1	206
 GROUP 33 SPECIAL PURPOSE KITS (Con't)		
3307 - SPECIAL PURPOSE KITS	207-1	
20 FOOT TOPHANDLER	207-1	207
35 FOOT TOPHANDLER	208-1	208
40 FOOT TOPHANDLER	209-1	209

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 33 SPECIAL PURPOSE KITS (Con't)		
3307 - SPECIAL PURPOSE KITS	207-1	
20 FOOT FORCE LIMITER	210-1	210
35 FOOT FORCE LIMITER	211-1	211
40 FOOT FORCE LIMITER	212-1	212
20 FOOT HYDRAULIC LINES (SCHEMATIC)	213-1	213
35 FOOT HYDRAULIC LINES (SCHEMATIC)	214-1	214
40 FOOT HYDRAULIC LINES (SCHEMATIC)	215-1	215
HYDRAULIC CYLINDER (TOPHANDLER)	216-1	216
GROUP 43 GAS, AIR. AND VACUUM SYSTEMS		
4317 - MANIFOLD AND/OR CONTROL VALVES	217-1	
HYDRAULIC VALVES MOUNTING GROUP	217-1	217
LIFT AND TILT VALVES ASSEMBLY	218-1	218
CARRIAGE VALVE ASSEMBLY	219-1	219
4320 - MANUAL CONTROLS		
HYDRAULIC HAND CONTROLS ASSEMBLY	220-1	220
4321 - TANKS OR RESERVOIRS		
HYDRAULIC TANK ASSEMBLY	221-1	221
HYDRAULIC TANK MOUNTING	222-1	222
GROUP 94 REPAIR KITS		
9401 - REPAIR KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501 - BULK MATERIEL	BULK-1	
BULK MATERIEL	BULK-1	BULK
SECTION III. SPECIAL TOOLS		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604 - SPECIAL TOOLS	223-1	
SPECIAL TOOLS	223-1	223
SECTION IV. CROSS-REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-39	
FIGURE AND ITEM NUMBER INDEX	I-156	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Container Handler Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each

illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

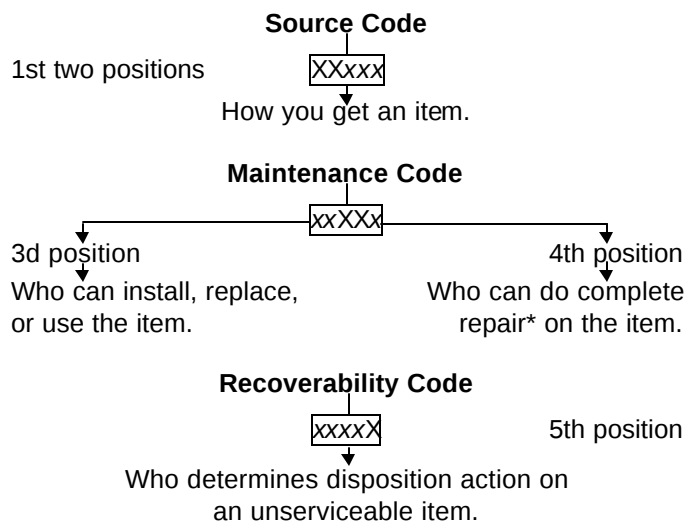

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: