

TM 10-3930-643-24P

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS)**

**TRUCK, FORKLIFT: DED, PNEUMATIC TIRES,
10,000 LB CAPACITY, ROUGH TERRAIN,
ARTICULATED FRAME STEER**

**DRESSER INDUSTRIES MODEL M10A AND MHE236
(NSN 3930-01-054-3833)**

This manual supersedes TM 10-3930-643-24P, dated 30 January 1990.

Approved for public release; distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY JULY 1993

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS)**

**TRUCK, FORKLIFT: DED, PNEUMATIC TIRES,
10,000 LB CAPACITY, ROUGH TERRAIN,
ARTICULATED FRAME STEER
DRESSER INDUSTRIES MODEL M10A, AND MHE236
(NSN 3930-01-054-3833)**

Current as of 4 December 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100- ENGINE ASSEMBLY	1-1	
ENGINE ASSEMBLY AND MOUNTING.	1-1	1
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
FRONT COVER, FUEL PUMP DRIVE ACCESS PLATE, AND MOUNTING	2-1	2
CYLINDER HEAD, VALVES, VALVE GUIDES, VALVE SEATS, VALVE SPRINGS, AND MOUNTING	3-1	3
CYLINDER BLOCK, CYLINDER SLEEVES, AND MOUNTING	4-1	4
0102- CRANKSHAFT	5-1	
CRANKSHAFT ASSEMBLY VIBRATION DAMPER, AND MOUNTING	5-1	5
0103- FLYWHEEL ASSEMBLY	6-1	
FLYWHEEL ASSEMBLY HOUSING, AND MOUNTING,	6-1	6

* This manual supersedes TM 10-3930-643-24P, 30 January 1990.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0104 -PISTONS AND CONNECTING RODS	7-1	
PISTON, CONNECTING RODS, AND MOUNTING	7-1	7
0105 -VALVES, CAMSHAFTS, AND TIMING SYSTEM	8-1	
ROCKER ARMS, PUSHRODS, VALVE COVERS, AND MOUNTING	8-1	8
CAMSHAFT ASSEMBLY IDLER GEAR, AND MOUNTING	9-1	9
0108 -ENGINE LUBRICATION SYSTEM.....	10-1	
OIL SAMPLING VALVE AND MOUNTING	10-1	10
ENGINE OIL FILTER, CONNECTIONS, AND MOUNTING	11-1	11
OIL COOLER, CONNECTIONS, AND MOUNTING	12-1	12
OIL PAN, OIL LEVEL GAGE, AND MOUNTING	13-1	13
OIL PUMP INLET TUBE, AND MOUNTING	14-1	14
CRANKCASE VENTILATION AND MOUNTING	15-1	15
FUEL AND TURBOCHARGER OIL LINES AND MOUNTING	16-1	16
AIR COMPRESSOR OIL LINES	17-1	17
0108 -MANIFOLDS.	18-1	
INTAKE AND EXHAUST MANIFOLDS AND MOUNTING	18-1	18
0109 -ACCESSORY DRIVING MECHANISMS	19-1	
TACHOMETER DRIVE	19-1	19
GROUP 03 FUEL SYSTEM		
0301 - CARBURETOR, FUEL INJECTOR	20-1	
FUEL INJECTOR LINES	20-1	20
FUEL INJECTOR	21-1	21
0302 - FUEL PUMPS.	22-1	
FUEL PUMP LINES, Flutings, AND MOUNTING	22-1	22
FUEL INJECTOR PUMP ASSEMBLY	23-1	23
FUEL INJECTOR PUMP ASSEMBLY COMPONENTS	24-1	24
FUEL INJECTOR PUMP ASSEMBLY COMPONENTS	25-1	25
FUEL INJECTOR PUMP CAMSHAFT ASSEMBLY	26-1	26
FUEL INJECTOR PUMP HEAD ASSEMBLY.....	27-1	27
0304 - AIR CLEANER	28-1	
AIR CLEANER ASSEMBLY AND MOUNTING	28-1	28
AIR CLEANER ASSEMBLY	29-1	29
0305 - SUPERCHARGER, BLOWER, TURBOCHARGER, OR ALTITUDE COMPENSATOR . .	30-1	
TURBOCHARGER PIPING AND MOUNTING	30-1	30
TURBOCHARGER AND MOUNTING	31-1	31
0306 -TANKS, LINES, FITTINGS,HEADERS	32-1	
FUEL TANK ASSEMBLY AND MOUNTING.....	32-1	32
FUEL TANK LINES, FITTINGS, AND MOUNTING	33-1	33
0309 - FUEL FILTERS	34-1	
FUEL FILTER AND MOUNTING	34-1	34
0311 -ENGINE STARTING AIDS	35-1	
ETHER START AND MOUNTING	35-1	35
0312- ACCELERATOR, THROTTLE, OR CHOKE CONTROLS	36-1	
THROTTLE CONTROL LINKAGE AND MOUNTING	36-1	36
GROUP 04 EXHAUST SYSTEM		
0401 - MUFFLER AND PIPES	37-1	
MUFFLER AND ASPIRATOR AND MOUNTING HARDWARE	37-1	37
GROUP 05 COOLING SYSTEM		
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	38-1	
RADIATOR SUPPORT, GUARD, AND MOUNTING	38-1	38

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET	39-1	
RADIATOR PIPING AND MOUNTING	39-1	39
THERMOSTAT, HOUSING, BYPASS HOSE, AND MOUNTING	40-1	40
0504 - WATER PUMP	41-1	
WATER PUMP AND MOUNTING	41-1	41
0505 - FAN ASSEMBLY	42-1	
FAN, FAN DRIVE, BELTS, AND MOUNTING	42-1	42
 GROUP 06 ELECTRICAL SYSTEM		
C601-GENERATOR, ALTERNATOR	43-1	
ALTERNATOR AND MOUNTING	43-1	43
0603 - STARTING MOTOR	44-1	
STARTER MOTOR MOUNTING	44-1	44
STARTING MOTOR ASSEMBLY	45-1	45
STARTER LOCKOUT RELAY AND MOUNTING	46-1	46
0607 -INSTRUMENT OR ENGINE CONTROL PANEL	47-1	
INSTRUMENT PANEL ASSEMBLY	47-1	47
INSTRUMENT PANEL ASSEMBLY COMPONENTS	48-1	48
INSTRUMENT PANEL ASSEMBLY WIRING HARNESS AND COMPONENTS	49-1	49
INSTRUMENT PANEL ASSEMBLY WIRING HARNESS COMPONENTS	50-1	50
INSTRUMENT PANEL ASSEMBLY WIRING HARNESS COMPONENTS	51-1	51
INSTRUMENT PANEL HOUSING AND MOUNTING	52-1	52
0608 -MISCELLANEOUS ITEMS	53-1	
MASTER DISCONNECT SWITCH, SLAVE RECEPTACLE, AND MOUNTING	53-1	53
STOPLIGHT SWITCH, MAGNETIC SWITCH, AND MOUNTING	54-1	54
NEUTRAL SWITCH, PARKING BRAKE SWITCH, AND FORK POSITIONING SWITCH	55-1	55
0609 - LIGHTS	56-1	
REAR WORK LIGHT ASSEMBLY AND MOUNTING	56-1	56
STOP AND TAILLIGHT ASSEMBLY BLACKOUT STOP AND TAILLIGHT ASSEMBLY AND MOUNTING	57-1	57
FRONT WORK LIGHTS, HEADLIGHTS, BLACKOUT LIGHTS, AND MOUNTING	58-1	58
0610 - SENDING UNITS AND WARNING SWITCHES	59-1	
GROUND DRIVEN STEERING SWITCH.. . . .	59-1	59
ENGINE WATER TEMPERATURE SENDER AND SWITCH, ENGINE OIL PRESSURE SENDER AND SWITCH, AND MOUNTING	60-1	60
TORQUE CONVERTER TEMPERATURE SENDER AND SWITCH, FUEL LEVER SENDER, AND MOUNTING	61-1	61
0611 - HORN, SIREN	62-1	
ALARM SWITCH, BACKUP ALARM, AND MOUNTING	62-1	62
0612 -BATTERIES, STORAGE,	63-1	
BATTERIES, BATTERY CABLES, AND MOUNTING	63-1	63
0613 - HULL OR CHASSIS WIRING HARNESS	64-1	
MAIN HARNESS AND MOUNTING	64-1	64
MAIN HARNESS AND MOUNTING	65-1	65
INTERMEDIATE HARNESS AND MOUNTING (S/N 2000 AND BELOW	66-1	66
INTERMEDIATE HARNESS AND MOUNTING (S/N 2001 AND ABOVE)	67-1	67
FORK CONTROL HARNESS AND MOUNTING	68-1	68
HEATER AND DEFROSTER HARNESS, FRONT LIGHTS HARNESS, CABLES, AND MOUNTING	69-1	69

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 07	TRANSMISSION	
0705 - TRANSMISSION SHIFTING COMPONENTS	70-1	
TRANSMISSION CONTROL AND MOUNTING	70-1	70
0708 - TORQUE CONVERTER OR FLUID COUPLING	71-1	
TORQUE CONVERTER ASSEMBLY	71-1	71
TORQUE CONVERTER ASSEMBLY COMPONENTS	72-1	72
TORQUE CONVERTER VALVE ASSEMBLIES	73-1	73
TORQUE CONVERTER PUMP ASSEMBLY	74-1	74
TRANSMISSION, TORQUE CONVERTER LINES, AND FITTINGS	75-1	75
TRANSMISSION, TORQUE CONVERTER LINES, AND FITTINGS	76-1	76
TRANSMISSION, TORQUE CONVERTER LINES, AND FITTINGS	77-1	77
0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	78-1	
TRANSMISSION HOUSING AND TUBING	78-1	78
TRANSMISSION AND MOUNTING	79-1	79
TRANSMISSION REAR COVER AND RELATED PARTS	80-1	80
BEARINGS AND MOUNTED EXTERNAL PARTS	81-1	81
EXTERNAL LUBRICATION PARTS AND MOUNTING	82-1	82
FIRST GEAR EXTERNAL PARTS	83-1	83
CONTROL VALVE, REVERSE IDLER, SCHEDULING VALVE, AND MOUNTING	84-1	84
CLUTCH ASSEMBLY, FIRST GEAR	85-1	85
CLUTCH ASSEMBLY SECOND AND THIRD GEAR	86-1	86
CLUTCH ASSEMBLY FORWARD AND REVERSE	87-1	87
UPPER COUNTERSHAFT,	88-1	88
0721 - COOLERS, PUMPS, MOTORS	89-1	
TRANSMISSION SCHEDULING VALVE ASSEMBLY	89-1	89
CONTROL VALVE ASSEMBLY	90-1	90
OIL COOLER,	91-1	91
OIL SAMPLING VALVE AND MOUNTING	92-1	92
FILTER ASSEMBLY, OIL CONVERTER	93-1	93
BREATHER AND MOUNTING	94-1	94
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY	
0900 - PROPELLER SHAFTS	95-1	
DRIVE TRAIN, UPPER REAR DRIVE SHAFT, AND MOUNTING	95-1	95
DRIVE TRAIN, LOWER REAR DRIVE SHAFT	96-1	96
DRIVE TRAIN, BEARING HANGER TO FRONT AXLE	97-1	97
DRIVE SHAFT, TRANSMISSION TO BEARING HANGER (OPTIONAL WITH ASSY. #937700C91)	98-1	98
DRIVE SHAFT TRANSMISSION TO BEARING HANGER (OPTIONAL WITH ASSY #893245C92)	99-1	99
GROUP 10	FRONT AXLE	
1000 - FRONT AXLE ASSEMBLY	100-1	
FRONT AXLE ASSEMBLY AND MOUNTING (S/N 2001 TO 2903)	100-1	100
FRONT AXLE ASSEMBLY AND MOUNTING (S/N 2904 AND ABOVE) AND (S/N 2000 AND Below)	101-1	101
1002 - DIFFERENTIAL	102-1	
FRONT DIFFERENTIAL AND MOUNTING (S/N 2000 AND BELOW) AND (S/N 2904 AND ABOVE)	102-1	102
FRONT DIFFERENTIAL AND MOUNTING (S/N 2001 TO 2903)	103-1	103

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1003 - PLANETARY OR FINAL DRIVE	104-1	
FRONT PLANETARY AND MOUNTING (S/N 2000 AND BELOW)	104-1	104
FRONT PLANETARY AND MOUNTING (S/N 2001 TO 2903)	105-1	105
FRONT PLANETARY AND MOUNTING (S/N 2904 AND ABOVE)	106-1	106
GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY	107-1	
REAR AXLE ASSEMBLY AND MOUNTING (S/N 2000 AND BELOW) AND (S/N 2904 AND ABOVE)	107-1	107
REAR AXLE ASSEMBLY AND MOUNTING (S/N 2001 TO 2903)	108-1	108
1102 - DIFFERENTIAL	109-1	
REAR DIFFERENTIAL ASSEMBLY PARKING BRAKE, AND MOUNTING (S/N 2000 AND BELOW AND (S/N AND ABOVE)	109-1	109
REAR DIFFERENTIAL ASSEMBLY PARKING BRAKE, AND MOUNTING (S/N 2001 TO 2903)	110-1	110
1103 - PLANETARY OR FINAL DRIVE	111-1	
REAR PLANETARY AND MOUNTING (S/N 2000 AND BELOW)	111-1	111
REAR PLANETARY AND MOUNTING (S/N 2001 TO 2903)	112-1	112
REAR PLANETARY AND MOUNTING (S/N 2304 AND ABOVE)	113-1	113
GROUP 12 BRAKES		
1201 - HANDBRAKES	114-1	
PARKING BRAKE LINKAGE, AIR CYLINDER, AND MOUNTING	114-1	114
1202 - SERVICE BRAKES	115-1	
BRAKE ASSEMBLY AND MOUNTING	115-1	115
1204 - HYDRAULIC BRAKE SYSTEM	116-1	
FRONT AND REAR BRAKE CYLINDER LINES AND FITTINGS	116-1	116
POWER CLUSTER BREATHER LINES (S/N 2000 AND BELOW)	117-1	117
PRESSURE CONVERTER BREATHER LINES (S/N 2001 AND ABOVE)	118-1	118
POWER CLUSTER (S/N 2000 AND BELOW)	118-1	119
PRESSURE CONVERTER (S/N 2001 AND ABOVE)	120-1	120
BRAKE RESERVOIR, LINES, FITTINGS, AND MOUNTING (S/N 2000 AND BELOW)	121-1	121
BRAKE RESERVOIR, LINES, FITTINGS, AND MOUNTING (S/N 2001 AND ABOVE)	122-1	122
1208 - AIRBRAKE SYSTEM	123-1	
AIR TANKS AND MOUNTING	123-1	123
TREADLE VALVE ASSEMBLY (S/N 2000 AND BELOW)	124-1	124
TREADLE VALVE COMPONENTS (S/N 2000 AND BELOW)	125-1	125
PEDAL ASSEMBLY (S/N 2001 AND ABOVE)	126-1	126
TREADLE VALVE (S/N 2001 AND ABOVE)	127-1	127
WET TANK AIR LINES AND FITTINGS TO COMPRESSOR AND GOVERNOR ...	128-1	128
WET AND DRY TANK AIR LINES, CONNECTIONS, AND FITTINGS	129-1	129
PARKING BRAKE TREADLE VALVE TRANSMISSION AIR LINES AND FITTINGS ..	130-1	130
PRESSURE CONVERTER, POWER CLUSTER AIR LINES, AND CONNECTIONS ...	131-1	131
PARKING BRAKE VALVE	132-1	132
1209 - AIR COMPRESSOR ASSEMBLY	133-1	
AIR COMPRESSOR ASSEMBLY	133-1	133
AIR COMPRESSOR PIPING AND RELATED PARTS	134-1	134
GOVERNOR ASSEMBLY	135-1	135
GOVERNOR MOUNTING	136-1	136
GROUP 13 WHEELS AND TRACKS		
1311 - WHEEL ASSEMBLY	137-1	
WHEEL AND MOUNTING	137-1	137
1313 - TIRES, TUBES, TIRE CHAINS	138-1	
TIRES	138-1	138

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 14 STEERING		
1401 - MECHANICAL STEERING GEAR ASSEMBLY	139-1	
STEERING WHEEL ASSEMBLY	139-1	139
STEERING COLUMN AND MOUNTING.. . . .	140-1	140
STEERING LINKAGE AND MOUNTING.. . . .	141-1	141
1407 -POWER STEERING GEAR ASSEMBLY.	142-1	
STEERING GEAR ASSEMBLY AND MOUNTING	142-1	142
1410 - HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	143-1	
GROUND DRIVEN STEERING PUMP AND MOUNTING (S/N 2000 AND BELOW) ..	143-1	143
GROUND DRIVEN STEERING PUMP (S/N 2001 AND ABOVE)	144-1	144
1411 -HOSES, LINES, FITTINGS,	145-1	
HOSES, LINES, AND FITTINGS (HYDRAULIC RESERVOIR TO GROUND DRIVEN STEERING PUMP AND RETURN) (S/N 2001 AND BELOW)	145-1	145
HOSES, LINES, AND FITTINGS (HYDRAULIC RESERVOIR TO GROUND DRIVEN STEERING PUMP AND RETURN) (S/N 2001 AND ABOVE)	146-1	146
HOSES, LINES, AND FITTINGS (HYDRAULIC RESERVOIR TO GROUND DRIVEN STEERING PUMP TO STEERING VALVE) (S/N 2000 AND BELOW) ...	147-1	147
HOSES, LINES, AND FITTINGS (HYDRAULIC PUMP TO GROUND DRIVEN STEERING PUMP TO STEERING VALVE) (S/N 2001 AND ABOVE) ., . . .	148-1	148
HYDRAULIC CIRCUIT (STEERING VALVE TO CONTROL VALVE)	149-1	149
HYDRAULIC LINES AND FITTINGS (STEERING VALVE TO CYLINDERS)	150-1	150
HYDRAULIC LINES AND FITTINGS (STEERING VALVE TO CYLINDERS)	151-1	151
1412 - HYDRAULIC OR AIR CYLINDERS,	152-1	
STEERING CYLINDER AND MOUNTING	152-1	152
1414 - STEERING SYSTEM VALVES	153-1	
STEERING SYSTEM VALVE (STEERING CONTROL AND RELIEF)	153-1	153
STEERING SYSTEM VALVE (RELIEF VALVES AND MOUNTING)	154-1	154
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 - FRAME ASSEMBLY	155-1	
STEP LADDER, RAIL, AND MOUNTING.	155-1	155
OPEN ROPS CAB AND MOUNTING (S/N 2000 AND BELOW)	156-1	156
HINGE PIN AND RELATED PARTS	157-1	157
MAIN REAR FRAME	158-1	158
FRONT FRAME ASSEMBLY	159-1	159
BOLSTER AND CONNECTIONS	160-1	160
1502- COUNTERWEIGHTS	161-1	
COUNTERWEIGHT AND MOUNTING	161-1	161
1503 - PINTLES AND TOWING ATTACHMENTS.	162-1	
PINTLE HOOK, DRAWBAR, AND MOUNTING	162-1	162
GROUP 18 BODY, CAB, HOOD, AND HULL		
1801 - BODY CAB, HOOD, AND HULL ASSEMBLIES	163-1	
HOOD, GRILLE, SUPPORTS, AND MOUNTING	163-1	163
CAB MOUNTING HARDWARE (S/N 2001 AND ABOVE)	164-1	184
CAB SOUND SUPPRESSION, SUPPORTS, MAINTENANCE CASE, AND MOUNTING (S/N 2001AND ABOVE)	165-1	165
CAB, DOOR, WINDOW FRAMES, AND SEALS	166-1	166

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC.	167-1	
WINDSHIELD, WINDOWS, AND SEALS.	167-1	167
FENDERS, TOOLBOX, AND MOUNTINGS.	168-1	168
PLATFORMS, FLOORMATS, AND MOUNTING	169-1	169
1806 - UPHOLSTERY SEATS, AND CARPETS	170-1	
SEAT SUPPORT AND MOUNTING.	170-1	170
 GROUP 22 BODY CHASSIS, AND HULL ACCESSORY ITEMS		
2202 - ACCESSORY ITEMS.	171-1	
HORN LINES AND Flutings	171-1	171
HORN AND MOUNTING (FLUID OPERATING, OPTIONAL WITH 1101458C91) . .	172-1	172
HORN AND MOUNTING (AIR, OPTIONAL WITH 1101318C91)	173-1	173
HORN VALVE AND MOUNTING	174-1	174
DEFROSTER FAN AND MOUNTING (S/N 2001 AND ABOVE)	175-1	175
WIPER AIR LINES AND FITTINGS (S/N 2001 AND ABOVE) .,	176-1	176
WIPER AIR LINES AND FITTINGS (S/N 2001 AND ABOVE)	177-1	177
WIPERS AND MOUNTING (S/N 2001 AND ABOVE)	178-1	178
HEATER HOSES, LINES, AND FITTINGS (S/N 2001 AND ABOVE)	179-1	179
HEATER ASSEMBLY AND MOUNTING (S/N 2001 AND ABOVE)	180-1	180
2210 - DATA PLATES AND INSTRUCTION HOLDERS	181-1	
DATA PLATES	181-1	181
DATA PLATES (MISCELLANEOUS)	182-1	182
DATA PLATES (LUBRICATION)	183-1	183
 GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401 - PUMP AND MOTOR.	184-1	
HYDRAULIC GEAR PUMP,	184-1	184
2402 - Manifold AND/OR CONTROL VALVES	185-1	
MAIN FORK VALVE MOUNTING AND INLET SECTION	185-1	185
MAIN FORK VALVE FORK SECTION	186-1	186
MAIN FORK VALVE TILT SECTION	187-1	187
MAIN FORK VALVE BOOM SECTION	188-1	188
MAIN FORK VALVE OUTLET SECTION	189-1	189
HYDRAULIC RESERVOIR RELIEF VALVE	190-1	190
FORK CONTROL VALVE	191-1	191
2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	192-1	
CONTROL, LEVERS, AND LINKAGES	192-1	192
2404 -TILT CYLINDERS AND TILT CRANK	193-1	
TILT CYLINDER	193-1	193
2405 - MAST COLUMN	194-1	
BOOM CYLINDER	194-1	194
BOOM AND FORK LINKAGE	195-1	195
FORK LIFT CARRIAGE ASSEMBLY	196-1	196
FORK LIFT CARRIAGE ASSEMBLY COMPONENTS	197-1	197
2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC.	198-1	
HYDRAULIC OIL FILTER AND MOUNTING	198-1	198
HYDRAULIC HOSES, LINES, AND FITTINGS TO CYLINDERS.	199-1	199
CYLINDER TUBES, LINES, AND FITTINGS	200-1	200
HYDRAULIC HOSES, TUBES, AND FITTINGS	201-1	201
TILT CYLINDER HOSES, CONNECTIONS, AND FITTINGS	202-1	202
SECONDARY FORK VALVE LINES, HOSES, CONNECTIONS, AND FITTINGS	203-1	203

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
2407 - HYDRAULIC CYLINDERS	204-1	
OSCILLATION CYLINDER (S/N 2001 AND ABOVE)	204-1	204
OSCILLATING CYLINDER (S/N 2000 AND BELOW)	205-1	205
SIDESHIFT CYLINDER (S/N 2000 AND ABOVE)	206-1	206
SIDESHIFT CYLINDER (S/N 2000 AND BELOW)	207-1	207
FORK POSITIONER CYLINDER (S/N 2001 AND ABOVE)	208-1	208
FORK POSITIONER CYLINDER (S/N 2000 AND BELOW)	209-1	209
2406 - LIQUID TANKS OR RESERVOIRS	210-1	
HYDRAULIC RESERVOIR AND MOUNTING	210-1	210
GROUP 94 REPAIR KITS		
9401 - REPAIR KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501 - BULK MATERIEL	BULK-1	
BULK MATERIEL	BULK-1	BULK
SECTION III. SPECIAL TOOLS		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604 - SPECIAL TOOLS	211-1	
SPECIAL TOOLS	211-1	211
SPECIAL TOOLS	212-1	212
SECTION IV. CROSS-REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-41	
FIGURE AND ITEM NUMBER INDEX	I-137	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Forklift Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration (s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item identification Number (NIIN) sequence, of all National stock numbered items appearing in the Listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The fig-

ure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO.* (Column (1)). Indicates the number used to identify items tailed out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

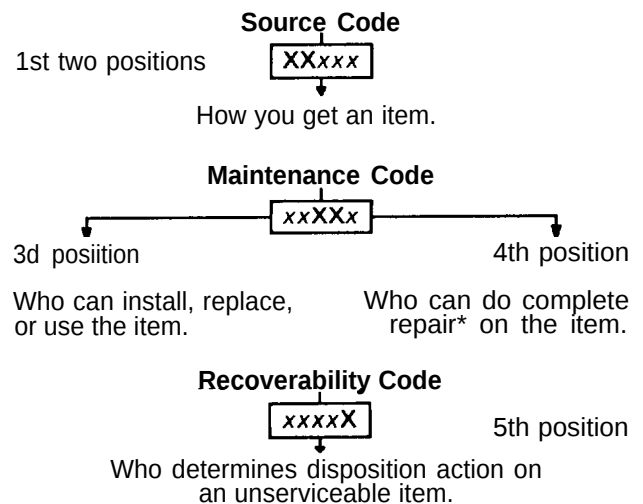

*Complete Repair Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: