


**TECHNICAL MANUAL
UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS)
FOR
TRUCK, LIFT, FORK, ELECTRIC, SOLID RUBBER TIRED (SRT)
6,000 POUND CAPACITY, SSN M493
HYSTER MODEL E60XL-MIL
(NSN 3930-01-223-8436)**

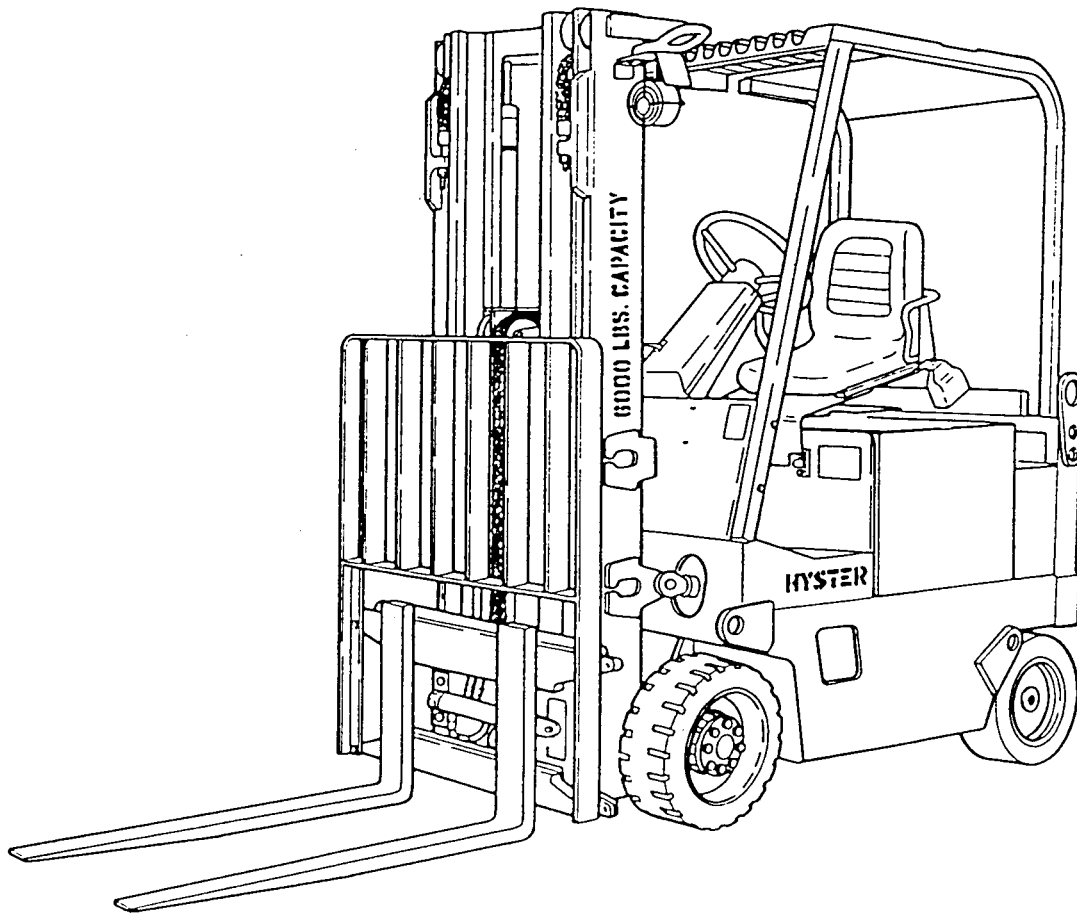

Approved for public release, distribution is unlimited.

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS)
FOR

TRUCK, LIFT, FORK, ELECTRIC, SOLID RUBBER TIRED (SRT)
6,000 POUND CAPACITY, SSN M493
HYSTER MODEL E60XL-MIL
(NSN 3930-01-223-8436)

Approved for public release, distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve the manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Mail your letter, -DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, Attn: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

TABLE OF CONTENTS

		Illus/ Figure
SECTION I	INTRODUCTION.....	1
SECTION II	REPAIR PARTS LIST	
GROUP 06	Instrument Installation	1
	Starter Switch	2
	Light Switch	3
	Seat Switch	4
	Brake Light Switch.....	5
	Headlight	6
	Taillights	7
	Horn.....	8
	Battery Connector	9

TABLE OF CONTENTS - Continued

			Illus/ Figure
		Electrical Installation.....	10
		Main Wiring Harness.....	11
		Instrument Panel Wiring Harness	12
		Headlight Wiring Harness	13
		Taillight Wiring Harness	14
		Seat Brake Wiring Harness.....	15
		Steering Column Wiring Harness.....	16
		Potentiometer Wiring Harness	17
		Control Panel Wiring Harness.....	18
GROUP	07	Transmission	19
GROUP	10	Drive A x l e	20
		Differential	21
GROUP	11	Steering Axle	22
		Steering Axle & Tie Rod Assembly	23
GROUP	12	Parking Brake Linkage	24
		Seat Brake Linkage.....	25
		Seat Brake.....	26
		Service Brakes	27
		Service Brake Linkage	28
		Service Brake Pedal.....	29
GROUP	13	Drive Axle Assembly	30
		Steering Axle Wheel Assembly	31
		Tires	32
GROUP	14	Steering Column Assembly	33
		Steering Pump Assembly.....	34
		Steering Lines	35
		Steering Cylinder.....	36
		Steering Control Unit.....	37
GROUP	15	Counterweight	38
GROUP	18	Overhead Guard.....	39
		Floorplates and Covers	40
		Seat Assembly Page 1.....	41
		eat Assembly Page 2	41
GROUP	22	Decals	42
GROUP	24	Hydraulic Pump Mounting	43
		Hydraulic Pump	44
		Hydraulic Pump Motor.....	45
		Control Valve.....	46

TABLE OF CONTENTS - Continued

	Illus/ Figure
Control Valve Linkage	47
Tilt Cylinder.....	48
Upright Assembly	49
Intermediate Assembly.....	50
Inner Upright Assembly.....	51
Main Lift Assembly	52
Main Lift Cylinder.....	53
Free Lift Assembly.....	54
Free Lift Cylinder	55
Carriage.....	56
Load Backrest	57
Fork Assembly.....	58
Sideshift Assembly	59
Sideshift Cylinder.....	60
Hydraulic Assembly.....	61
Header Hose Assembly.....	62
Hydraulic Tank	63
GROUP 40 Steering Motor.....	64
Traction Motor	65
Hydraulic Pump Motor Armature	66
Steering Motor Armature	67
Traction Motor Armature	68
Hydraulic Pump Motor Brushes.....	69
Steering Pump Motor Brushes	70
Traction Motor Brushes.....	71
Hydraulic Pump Motor Fan.....	72
Traction Motor Fans	73
Control Panel.....	74
Traction Panel	75
Forward/Reverse Contactor	76
1 A/FW/Pump Contactor	77
Fuses.....	78
Horn Switch	79
Control Valve Blade Switches	80
Directional Control Switch	81
Accelerator	82
Resistor	83
Lift Interrupt Controller.....	84

TABLE OF CONTENTS - Continued

		Illus/ Figure
	Thermal Sensor.....	85
	Transformer.....	86
	Terminal Strip.....	87
	Contactator Suppressor	88
	Static Strap.....	89
	Capacitor and Diode.....	90
SECTION III	SPECIAL TOOLS AND TEST EQUIPMENT.....	TOOLS-1
SECTION IV	CROSS-REFERENCES INDEXES.....	I-1

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS)

Section I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the E60XL. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. General.

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in this section. Items listed are shown on the associated illustration(s), figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

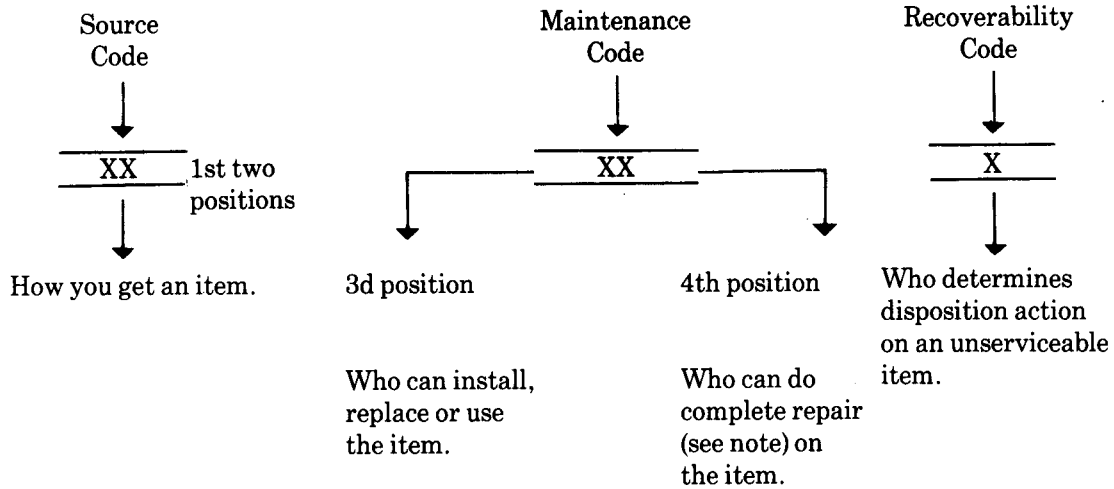

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of end item/equipment. Explanations of source codes follow:

Code

Explanation

PA
PB
PC
PD
PE
PF
PG

Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.

****NOTE**

Items coded PC are subject to deterioration.

KD
KF
KB

Items with these codes are not requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

MO—Made at org/
AVUM category
MF—Made at DS/
AVUM category
MH—Made at GS
category
ML—Made at
Specialized
Repair Activity
(SRA)
MD—Made at Depot

Items with these codes are not to be requested/ requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION AND USABLE ON CODE. (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.

AO —Assembled by
org/AVUM
category
AF —Assembled by
DS/AVUM
category
AH —Assembled by
GS category
AL —Assembled by
SRA
AD —Assembled by
Depot

Items with these codes are not to be requested/ requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher level, order the item from the higher level of maintenance.

XA - Do not requisition an "XA"-coded item. Order its next higher assembly Also, refer to the NOTE below.)

XB - If an "XB" item is not available from salvage, order it using the FSCM and part number given.

XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.

XD - Item is not stocked Order an "XD"-coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE: Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those coded "XA" or those aircraft support items restricted by requirements of AR 700-42.