

TECHNICAL MANUAL

**UNIT,DIRECT SUPPORT,
AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS LISTS AND SPECIAL TOOL LISTS)**

**TRUCK, FORK LIFT, CLEAN BURN,
DIESEL ENGINE DRIVEN,
4,000 LB. CAPACITY, 144 INCH LIFT,
PNEUMATIC TIRED, MHE 265,
HYSTER MODEL H40XL-MIL
NSN 3930-01-172-7891**

SUPERSESSION NOTICE: This manual supersedes the repair parts section
only for TM 10-3930-657-14&P dated 8 January 1988

Approved for public release, distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JUNE 1992

TECHNICAL MANUAL

No. 10-3930-657-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D. C., 5 June 1992

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS)
FOR

TRUCK, FORK LIFT, CLEAN BURN,
DIESEL ENGINE DRIVEN, 4000
LB. CAPACITY, 144 INCH LIFT,
PNEUMATIC TIRE, MHE 265, HYSTER
MODEL H40XL-MIL
(NSN: 3930-01-172-7891)

SUPERSESSION NOTICE: This manual supersedes the repair park section
only for TM 10-3930-657-14&P dated 8 January 1988

CURRENT AS OF 1 OCTOBER 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve the manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, Attn: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illus/ Figure
SECTION I	I N T R O D U C T I O N	1	
SECTION II	REPAIR PARTS LIST.	1-1	
Group 01	Engine	1-1	
	0100 Engine Mounts.	1-1	1
	0101 Cylinder Head.	2-1	2
	0101 Cylinder Block.	3-1	3
	0101 Crankcase	4-1	4
	0102 Crankshaft Assembly	5-1	5
	0103 Flywheel Assembly	6-1	6
	0104 Pistons, Rings and Connecting Rods	7-1	7
	0105 Camshaft and Valves	8-1	8

TABLE OF CONTENTS - Continued

		Page	Illus/ Figure
	0105 Timing Gears.	9-1	9
	0106 Oil Pan Assembly	10-1	10
	0106 Emission Control System	11-1	11
	0106 Engine Oil Filter	12-1	12
	0106 Engine Oil Pump.	13-1	13
	0108 Manifolds	14-1	14
Group 03	Fuel System	15-1	
	0301 Fuel Injectors	15-1	15
	0302 Fuel Lines and Fittings	16-1	16
	0302 Fuel Injector Pump Assembly	17-1	17
	0302 Fuel Feed Pump	18-1	18
	0304 Air Cleaner Assembly	19-1	19
	0306 Fuel Tank, Lines, and Fittings	20-1	20
	0308 Engine Governor	21-1	21
	0309 Fuel Filter Assembly	22-1	22
	0311 Start Aids	23-1	23
	0312 Throttle Linkage	24-1	24
Group 04	Exhaust System	25-1	
	0401 Exhaust System	25-1	25
Group 05	Cooling System	26-1	
	0501 Radiator and Expansion Tank	26-1	26
	0502 Radiator Shroud	27-1	27
	0503 Cooling System Thermostat and Fittings	28-1	28
	0503 Cooling System	29-1	29
	0504 Water Pump	30-1	30
	0505 Fan Assembly	31-1	31
Group 06	Electrical System	32-1	
	0601 Alternator	32-1	32
	0603 Starter Motor.	33-1	33
	0607 Instrument Panel	34-1	34
	0609 Headlights and Tail Lights	35-1	35
	0610 Water Temperature Sending Unit	36-1	36
	0611 Horn Assembly.	37-1	37
	0612 Storage Battery	38-1	38
	0613 Hull/Body Wiring Harness	39-1	39
Group 07	Transmission	40-1	
	0705 Forward/Reverse Shift Linkage	40-1	40
	0708 Torque Converter	41-1	41

TABLE OF CONTENTS - Continued

	Page	Illus/ Figure
0710 Transmission Assembly	42-1	42
0710 Forward/Reverse Clutch	43-1	43
0714 Transmission Control Valve	44-1	44
Group 10 Front Axles	45-1	
1000 Drive Axle	45-1	45
1002 Differential Assembly	46-1	46
Group 11 Rear Axles	47-1	
1104 Steering Axle	47-1	47
Group 12 Brakes	48-1	
1201 Hand Brake Lever Assembly.	48-1	48
1202 Service Brakes	49-1	49
1204 Hydraulic Brake System.. . . .	50-1	50
1205 Brake Vacuum Booster	51-1	51
1206 Brake Pedals and Linkage	52-1	52
Group 13 Wheels	53-1	
1311 Wheel Assemblies	53-1	53
1313 Tires and Tubes	54-1	54
Group 14 Steering	55-1	
1401 Steering Column	55-1	55
1411 Steering Lines and Fittings.	56-1	56
1412 Steering Cylinder	57-1	57
1414 Steering Control Unit	58-1	58
Group 15 Frame and Towing Attachments.. . . .	59-1	
1501 Frame any body	59-1	59
1502 Counterweight Installation	60-1	60
Group 18 Cab, Body, Hood, and Hull.....	61-1	
1801 Hood Assembly	61-1	61
1805 Floor Plates	62-1	62
1806 Seat installation	63-1	63
Group 22 Body, Chassis, and Hull Accessory Items	64-1	
2210 Data Plates and Decals...	64-1	64
Group 24 Hydraulic Lift Components	65-1	
2401 Hydraulic Pump	65-1	65
2401 Flow Regulator and Relief Valve	66-1	66
2402 Control Valve	67-1	67
2403 Control Valve Linkage	68-1	68
2404 Tilt Cylinder	69-1	69
2405 Uprights	70-1	70

TABLE OF CONTENTS - Continued

		Page	Illus/ Figure
	2405 Carriage Assembly	71-1	71
	2405 Fork Assembly	72-1	72
	2405 Side Shift Carriage	73-1	73
	2405 Lift Cylinder installation	74-1	74
	2405 Main Lift Cylinder	75-1	75
	2405 Free Lift Cylinder	76-1	76
	2406 Hydraulic System	77-1	77
	2406 Header Hoses	78-1	78
	2406 Hose Reel	79-1	79
	2406 Side-Shift Cylinder	80-1	80
Group 94	Repair Kits		
	9401 Kits	Kits-1	Kits
Group 95	General Use Standardized Parts		
	9501 Bulk	Bulk-1	Bulk
Section III	SPECIAL TOOLS LIST	81-1	
Group 26	Tools and Test Equipment	81-1	
	2604 Tools	81-1	81
Section IV	CROSS-REFERENCE INDEXES	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-17	
	Figure and Item Number Index	I-51	

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
Section L INTRODUCTION**

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Fork Lift Truck, Model MHE 265. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I, *Introduction*, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL [as indicated by Basis of issue (BOI) information in the *DESCRIPTION AND USABLE ON CODE* column] for the performance of maintenance.

c. Section IV. Cross-reference indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. [Column (1)]. Indicates the number used to identify items called out in the illustration.

b. SMR CODE [Column (2)]. The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

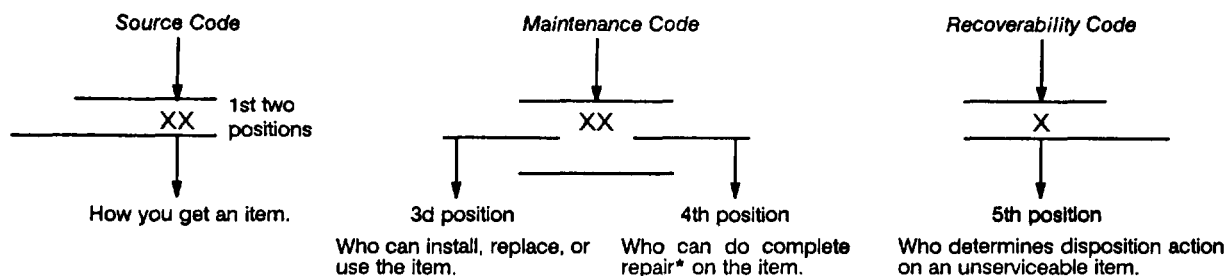

**Complete Repair*: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

3. Explanation of Columns (Sections II and III) (Con't).

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow:

Code	<u>Application/Explanation</u>
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. **Items coded PC are subject to <i>deterioration</i>.
KD KF KB	items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
MO - Made at UM/AVUM Level MF - Made at DS/AVUM Level MH - Made at GS Level ML - Made at Specialized Repair Activity (WA) MD - Made at Depot	items with these codes are not to be requested/requisitioned individually. They must be made from bulk materiel which is identified by the part number in the <i>DESCRIPTION AND USABLE ON CODE (UOC)</i> column and listed in the bulk materiel group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO - Assembled by UMI AVUM Level AF - Assembled by DSI AVUM Level AH - Assembled by GS Level AL - Assembled by SRA AD - Assembled at Depot	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates that the item is assembled at a higher level, order the item from the higher level of maintenance.

NOTE

Cannibalization or controlled exchange, when authorized, maybe used as a source of supply for items with the above source codes, except for those source coded "XA."

XA - DO NOT requisition an "XA"-coded item. Order its next higher assembly.

XB - If an "XB" item is not available from salvage, order it using the CAGE and part number given.