

ROLLER, TOWED, SMOOTH DRUM, G E D VIBRATING AIRMOBILE,
SINGLE DRUM (ESSICK MODEL VR 55TM)
W/ENGINE MIL-STD 10 HP

Reference: FEDERAL SUPPLY CATALOG C9100-IL, L05-2805-258-12

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and sever conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

- Clean fittings before lubricating.
- Relubricate after washing.
- Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.
- A dotted circle indicates a drain below.
- Lubricate points indicated by dotted arrow shafts on both sides of equipment.
- Drain crankcases and gear cases when hot. Fill and check level.

FOLD

FOLD

