

TM 5-3895-366-24P

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**SAW, CONCRETE, SELF PROPELLED,
ABRASIVE DISK, MODEL C-3000-30
NSN 3895-01-303-8909**

Approved for public release distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

Technical Manual

No. 5-3895-366-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 15 October 1991

**Unit, Direct Support and General Support Maintenance
Repair Parts and Special Tools List
for
SAW, CONCRETE, SELF PROPELLED, ABRASIVE DISK
MODEL C-3000-30
NSN 3895-01-303-8909**

Current as of 15 October, 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: U.S. Army Tank-Automotive Command, Warren, MI 489397-5000, Attn: AMSTA-MBS. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I	Introduction	1	
Section II	Repair Parts List	1 - 1	
Group 01	Engine		
	Engine Assembly	1 - 1	1
	Cylinder Head	2 - 1	2
	Engine Block and Crankcase	3 - 1	3
	Crankshaft, Bearing, and Seals	4 - 1	4
	Flywheel Assembly	5 - 1	5
	Connecting Rod Assembly	6 - 1	6
	Piston Assembly	7 - 1	7
	Valves, Guides, and Seats	8 - 1	8
	Camshaft, Timing Gear, and Gear Cover	9 - 1	9
	Oil Pump Assembly	10 - 1	10
	Oil Filter Assembly	11 - 1	11
	Oil Breather Assembly	12 - 1	12
	Oil Pan Assembly	13 - 1	13
	Oil Level Gauge	14 - 1	14
	Hand Crank	15 - 1	15
	Manifold, Intake, and Exhaust	16 - 1	16
	Pulley and Guard Assembly	17 - 1	17
Group 03	Fuel System		
	Carburetor	18 - 1	18
	Fuel Pump	19 - 1	19

Approved for public release distribution is unlimited.

TABLE OF CONTENTS (Cont)

	Page	Illus/ Figure
Air Cleaner Assembly	20-1	20
Fuel Tank Lines and Fittings	21-1	21
Governor Assembly	22-1	22
Governor Controls	23-1	23
Fuel Strainer, Adapter, and Primer Assembly	24-1	24
Group 04 Exhaust System		
Muffler	25-1	25
Group 05 Cooling System		
EngineCover	26-1	26
Shrouds and Heat Deflectors	27-1	27
Group 06 Electrical System		
Flywheel Alternator	28-1	28
Starter Assembly	29-1	29
Ignition Components	30-1	30
Distributor, ignition	31-1	31
Engine Control Panel	32-1	32
Battery, Storage	33-1	33
Group 10 Front Axle		
Front Axle, Blade Drive	34-1	34
Group 13 Wheels and Tracks		
Wheel Assemblies, Front	35-1	35
Group 15 Frame, Towing Attachments, Drawbars, and Articulation Systems		
Chassis	36-1	36
Under Carriage Weldment	37-1	37
A-Frame	38-1	38
Depth Control Rod	39-1	49
Depth Control Indicator	40-1	40
Group 24 Pump and Motor		
Hydraulic Pump	41-1	41
Hydraulic Hand Pump	42-1	42
Hydraulic Motor	43-1	43
Directional Control Valve	44-1	44
Flow Control Valve	45-1	45
Hydraulic Cylinder	46-1	46
Hydraulic Hoses	47-1	47
HydraulicHoses	48-1	48
Oil Filter and Base	49-1	49
Group 35 Pulley, Bens and Shafts, Blade Drive		
Blades and Blade Collars	50-1	50
Blade Guard	51-1	51
SplashGuard	52-1	52
Group 73 Concrete and Asphalt Equipment Components		
Drive Wheels, Axle, Sprockets, and Bearings	53-1	53
Water Pump	54-1	54
Water Manifold	55-1	55
Water Pressure Safety Switch, Valves, and Hoses	56-1	56

TABLE OF CONTENTS (Cont)

		Page	Illus/ Figure
Group 9401	Kits	KITS-1	
Section III	Special Tools List (Not applicable)		
IV	Cross Reference Indexes		
	National Stock Number Index	I-1	
	Part Number Index	I-7	
	Figure and item Number Index	I-20	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the concrete saw. It authorizes the requisitioning, issue, and disposition of spares, repair pans and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL.

In addition to Section I, *Introduction*, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL [as indicated by Basis of Issue (BOI) information in the *DESCRIPTION AND USABLE ON CODE* column] for the performance of maintenance.

c. **Section IV. Cross-reference Indexes.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. **ITEM NO. [Column (1)].** Indicates the number used to identify items called out in the illustration.

b. **SMR CODE [Column (2)].** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

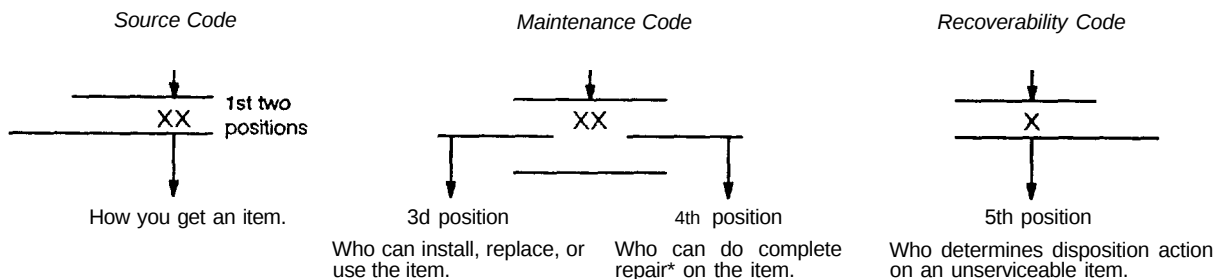

* *Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a faded item.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III) (Con't).

(1) **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow:

Code	<u>Application/Explanation</u>
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. <i>** Items coded PC are subject to deterioration.</i>
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
MO - Made at UM/AVUM Level MF - Made at DS/AVUM Level MH - Made at GS Level MD - Made at Depot	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk materiel which is identified by the part number in the <i>DESCRIPTION AND USABLE ON CODE</i> (UOC) column and listed in the bulk materiel group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO - Assembled by UM/AVUM Level AF - Assembled by DS/AVUM Level AH - Assembled by GS Level AD - Assembled at Depot	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates that the item is assembled at a higher level, order the item from the higher level of maintenance.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA."

■ XA - DO NOT requisition an "XA"-coded item. Order its next higher assembly.

■ XB - If an "XB" item is not available from salvage, order it using the CAGE and part number given.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III) (Con't).

XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.

XD - Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGE and part number given, if no NSN is available. ■

(2) **Maintenance Code.** Maintenance codes tell you the level(s) of maintenance authorized to use and repair support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

- (a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance.

<i>Code</i>	<i><u>Application/Explanation</u></i>
C	- Crew or operator maintenance done within unit maintenance or aviation unit maintenance.
O	- Unit maintenance or aviation unit can remove, replace, and use the item. ■
F	- Direct support or aviation intermediate level can remove, replace, and use the item.
H	- General support level can remove, replace, and use the item.
L	- Specialized repair activity can remove, replace, and use the item.
D	- Depot level can remove, replace, and use the item.

NOTE

Some Limited repair may be done on the item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

- (b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized "Repair" functions). This position will contain one of the following maintenance codes: ■

<i>Code</i>	<i><u>Application/Explanation</u></i>
O	- Unit maintenance or aviation unit is the lowest level that can do complete repair of the item. ■
F	- Direct support or aviation intermediate is the lowest level that can do complete repair of the item.
H	- General support is the lowest level that can do complete repair of the item.
L	- Specialized repair activity is the lowest level that can do complete repair of the item.
D	- Depot is the lowest level that can do complete repair of the item.
Z	- Nonreparable. No repair is authorized.
B	- No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B"-coded item.) However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III) (Con't).

(3) **Recoverability Code.** Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR code as follows:

<i>Code</i>	<i>Application/Explanation</i>
Z	- Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in the 3d position of the SMR code.
O	- Reparable item. When uneconomically reparable, condemn and dispose of the item at unit maintenance or aviation unit level.
F	- Reparable item. When uneconomically reparable, condemn and dispose of the item at the direct support or aviation intermediate level.
H	- Reparable item. When uneconomically reparable, condemn and dispose of the item at the general support level.
D	- Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal of item not authorized below depot level.
L	- Reparable item. Condemnation and disposal of item not authorized below specialized repair activity (SRA).
A	- Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. **CAGEC [Column (3)].** The Commercial and Government Entity (CAGE) Code (C) is a 5-digit alphanumeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

d. **PART NUMBER [Column (4)].** Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

e. **DESCRIPTION AND USABLE ON CODE (UOC) [Column (5)].** This column includes the following information:

- (1) The Federal item name and, when required, a minimum description to identify the item.
- (2) Physical security classification. Not Applicable.
- (3) Items that are included in kits and sets are listed below the name of the kit or set on Figure KIT
- (4) Spare/repair parts that make up an assembled item are listed immediately following the assembled item line entry.
- (5) Part numbers for bulk materials are referenced in this column in the line item entry for the item to be manufactured/fabricated.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III) (Con't).

(6) When the item is not used with all serial numbers of the same model, the effective serial numbers are shown on the last line(s) of the description (before UOC).

(7) The usable on code, when applicable (see paragraph 5, Special Information).

(8) In the Special Tools List section, the Basis of Issue (BOI) appears as the last line(s) in the entry for each special tool, special TMDE, and other special support equipment. When density of equipments supported exceeds density spread indicated in the Basis of Issue, the total authorization is increased proportionately.

(9) The statement "END OF FIGURE" appears Just below the last item description in Column 5 for a given figure in both Section II and Section III.

f. **QTY [Column (6)].** The QTY (quantity per figure) column indicates the quantity of the item used in the breakout shown on the illustration/figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

4. EXPLANATION OF COLUMNS (SECTION IV).

a. **National Stock Number (NSN) Index.**

(1) **STOCK NUMBER column.** This column lists the NSN by National Item Identification Number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN (i.e., NSN
5305-01-674-1467). When using this column to locate an item, ignore the first 4 digits of the NSN. However, the complete NSN should be used when ordering items by stock number.

(2) **FIG. column.** This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III.

(3) **ITEM column.** The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.

b. **Part Number Index.** Part numbers in this index are listed by part number in ascending alphanumeric sequence (i.e., vertical arrangement of letter and number combination which places the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9 and each following letter or digit in like order).

(1) **CAGEC column.** The Commercial and Government Entity (CAGE) Code (C) is a 5-digit alphanumeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(2) **PART NUMBER column.** Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards and inspection requirements to identify an item or range of items.

(3) **STOCK NUMBER column.** This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and CAGE columns to the left.

(4) **FIG. column.** This column lists the number of the figure where the item is identified/located in Section II and Section III.

(5) **ITEM column.** The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

4. EXPLANATION OF COLUMNS (SECTION IV) (Con't).

c. Figure and Item Number Index.

(1) **FIG. column.** This column lists the number of the figure where the item is identified/located in Sections II and III.

(2) **ITEM column.** The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) **STOCK NUMBER column.** This column lists the NSN for the item.

(4) **CAGEC column.** The Commercial and Government Entity (CAGE) Code (C) is a 5-digit alphanumeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(5) **PART NUMBER column.** Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards and inspection requirements to identify an item or range of items.

5. SPECIAL INFORMATION.

a. Usable On Code. The usable on code appears in the lower left corner of the Description column heading. Usable on codes are shown as "UOC: " in the Description column (justified left) on the first line applicable item description/nomenclature. Uncoded items are applicable to all models. Identification of the usable on codes used in this RPSTL are:

<i>Code</i>	<i>Used On</i>
SAW	C-3000-30

b. Kits. Line item entries for repair parts kits appear in group 9401 in Section II.

c. Index Numbers. Items which have the word BULK in the FIG. column will have an index number shown in the item column. This index number is a cross-reference between the National Stock Number/Part Number Index and the bulk materiel list in Section II.

d. Associated Publications. The publications listed below pertain to the concrete saw and its components.

<u>Publication</u>	<u>Short Title</u>
TBD	

6. HOW TO LOCATE REPAIR PARTS.

a. When National Stock Number or Part Number Is Not Known:

(1) **First.** Using the Table of Contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) **Second.** Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) **Third.** Identify the item on the figure and use the Figure and Item Number Index to find the NSN.

6. HOW TO LOCATE REPAIR PARTS (Con't).

b. When National Stock Number or Part Number is Known:

(1) **First.** Using the National Stock Number or Part Number Index, find the pertinent National Stock Number or Part Number. The NSN Index is in National Item Identification Number (NIIN) sequence [see paragraph 4.a(1)]. The part numbers in the Part Number Index are listed in ascending alphanumeric sequence (see paragraph 4.b). Both indexes cross-reference you to the illustration/figure and item number of the item you are looking for.

(2) **Second.** Turn to the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.

7. ABBREVIATIONS.

For standard abbreviations see MIL-STD-12D, *Military Standard Abbreviations for Use on Drawings, Specifications, Standards, and in Technical Documents*.

<u>Abbreviations</u>	<u>Explanation</u>
NIIN	National Item Identification Number (consists of the last 9 digits of the NSN)
RPSTL	Repair Parts and Special Tools Lists

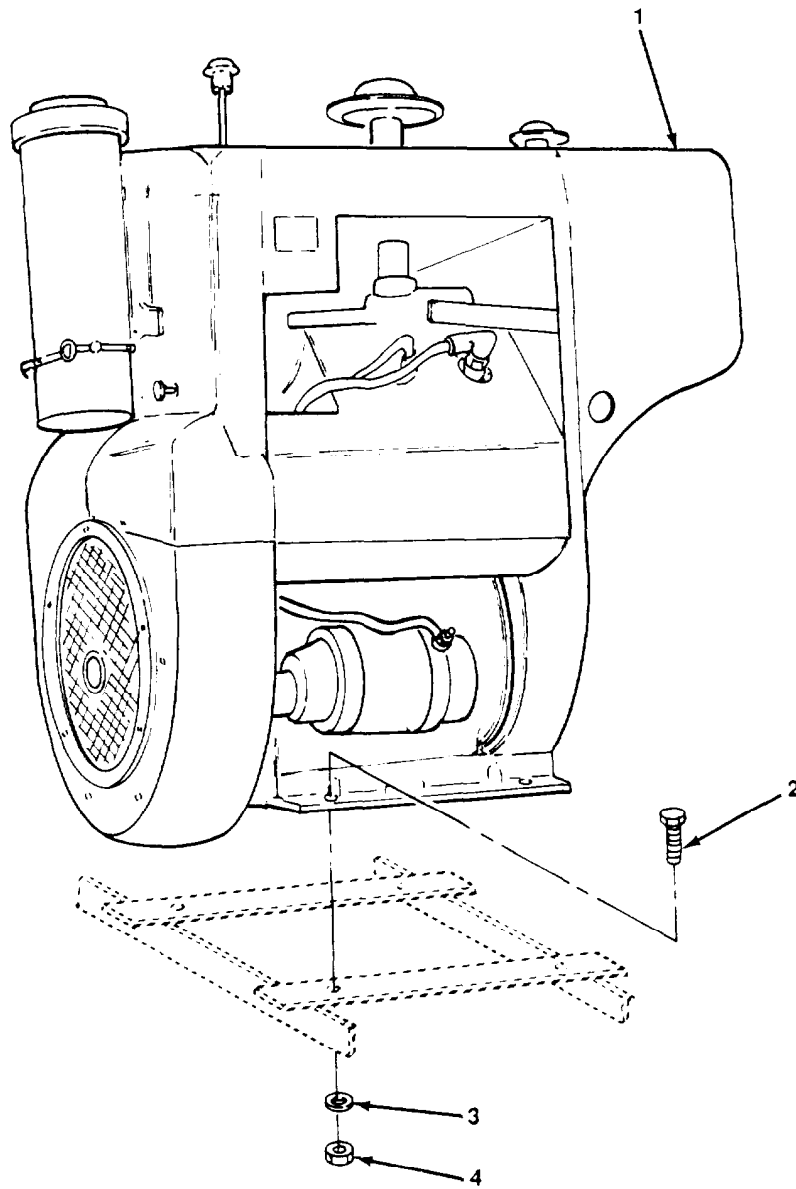


Figure 1. Engine Assembly.

SECTION II			TM5-3895-366-24PC01		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC) QTY	

GROUP 01 ENGINE
GROUP 0100 ENGINE ASSEMBLY
FIG. 1 ENGINE ASSEMBLY

1	PAFHH	66289	VH4OIA-319735	•POWER UNIT, GASOLINE.	1
* 2	PAOZZ	80204	81821BH031C200N	•BOLT, MACHINE.	4
3	PAOZZ	88044	AN960-816	•WASHER, FLAT.	4
4	PAOZZ	96906	MS51922-33	•NUT, SELF-LOCKING, HE.	4

END OF FIGURE

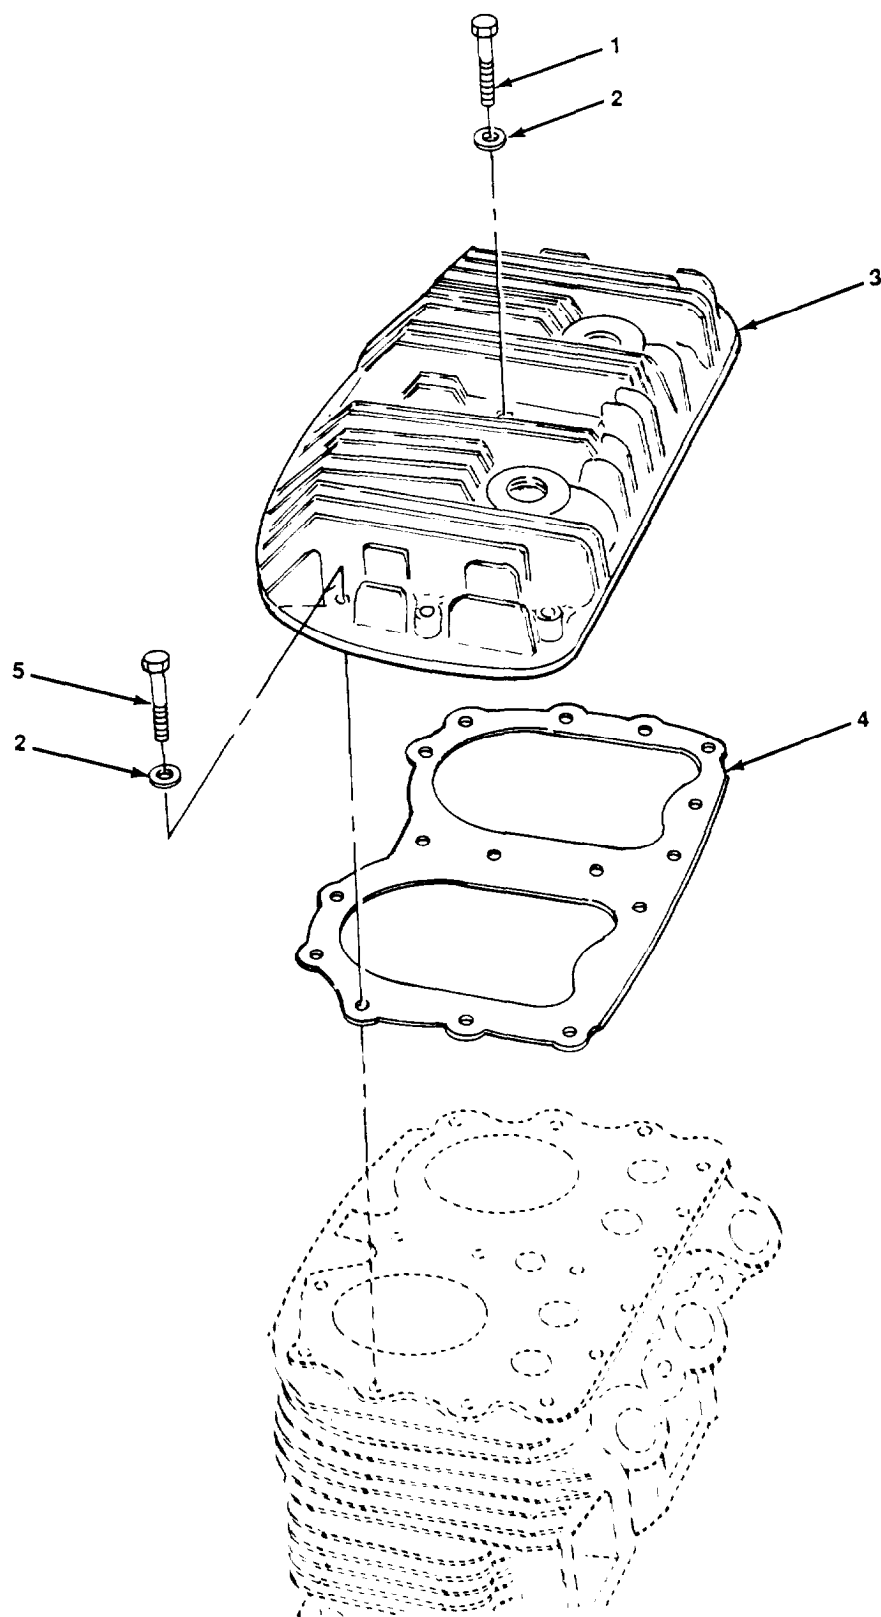


Figure 2. Cylinder Head.

SECTION II			TM5-3895-366-24P		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY

GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD

FIG. 2 CYLINDER HEAD

	PAFHH	26278	TMC1504	•CYLINER ASSEMBLY, A.	1
1	PAFZZ	66289	XD20	•BOLT, MACHINE.....	4
2	PAFZZ	58275	615319	•WASHER, FLAT.....	34
3	PAFZZ	66289	AB100	•CYLINER HEAD, GASOL.....	2
4	PAFZZ	66289	QD613C	•GASKET PART OF KIT P/N Q12B	2
				PART OF	
				KIT P/N Q2B.	
5	PAFZZ	97942	330C889D5018C20	•SCREW, CAP, HEXAGON P.....	34

END OF FIGURE

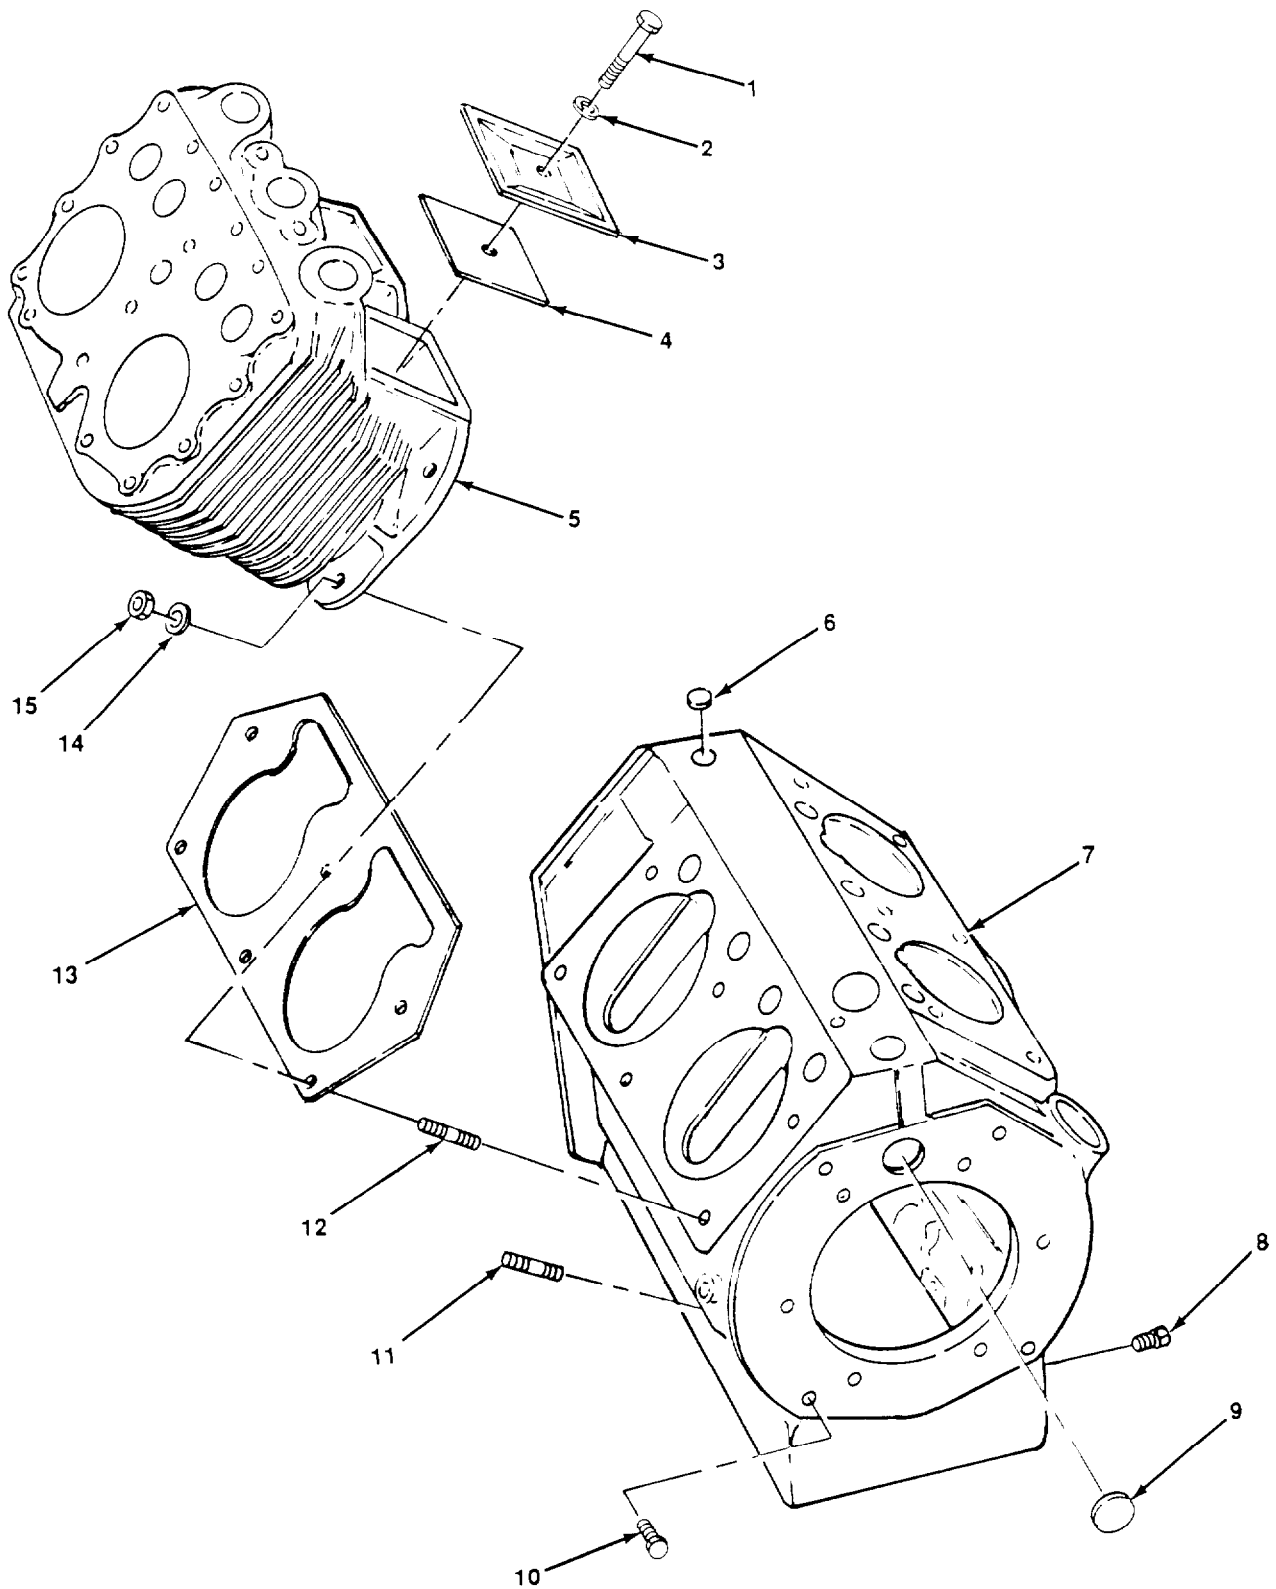


Figure 3. Engine Block and Crankcase.

SECTION II			TM5-3895-366-24PC01				
(1)	(2)	(3)	(4)	(5)		(6)	
ITEM	SMR		PART				
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)		QTY	
				GROUP 0101 CRANKCASE,BLOCK,CYLINDER HEAD			
				FIG. 3 ENGINE BLOCK AND CRANKCASE			
* 1	PAFZZ	80204	81821BH031C150N	• BOLT, MACHINE		4	
2	PAFZZ	66289	PHI4	• WASHER, FLAT		4	
3	PAFZZ	66289	SA68	• COVER, ACCESS		4	
4	PAFZZ	66289	QD612A	• GASKET PART OF KIT P/N QI2B PART OF KIT P/N 428		4	
5	PAFHH	66289	AA98S7	• ENGINE BLOCK.GASOLI		2	
6	PAFZZ	66289	SA26	• PLUG, EXPANSION		2	
7	PFFHH	66289	BA48CS1	• ENGINE BLOCK.GASOLI		2	
8	PAFZZ	66289	XK3	• PLUG		1	
9	PAFZZ	66289	SA58	• PLUG, EXPANSION		1	
10	PAFZZ	66289	PFI44	• PLUG		4	
11	PAFZZ	66289	PC396	• STUD, PLAIN		2	
12	PAFZZ	66289	PC615	• STUD, PLAIN		12	
13	PAFZZ	66289	QD617	• GASKET PART OF KIT P/N 4128		2	
14	PAFZZ	66289	PE63	• WASHER, LOCK		12	
15	PAFZZ	96906	MS51968-11	• NUT, PLAIN, HEXAGON		12	

END Of FIGURE

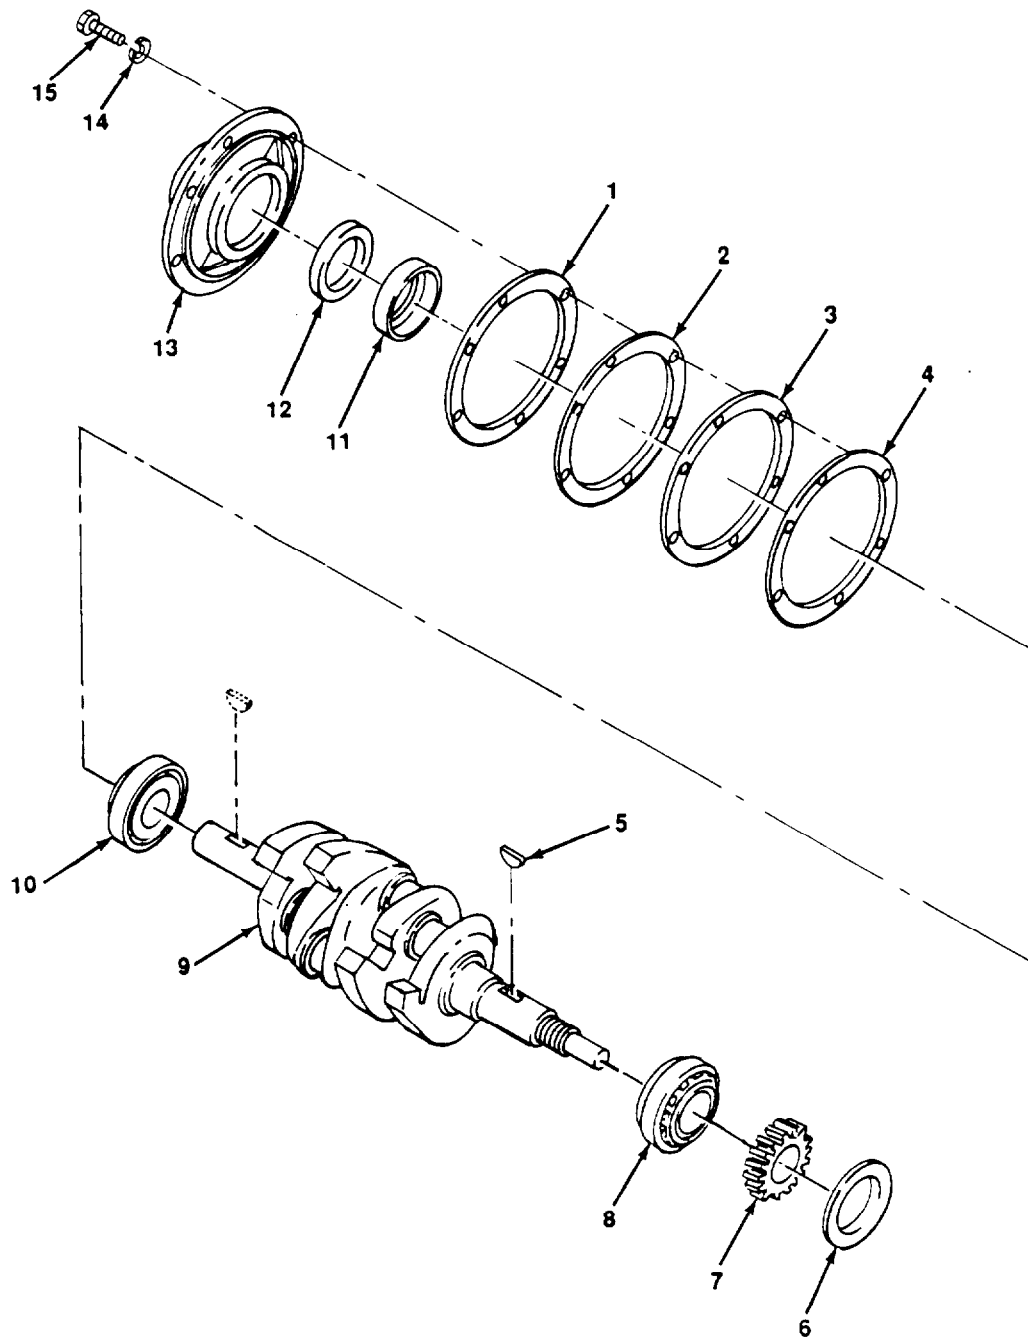


Figure 4. Crankshaft, Bearing, and Seals.

SECTION II			TM5-3895-366-24PC01			
(1)	(2)	(3)	(4)	(5)	(6)	
ITEM	SMR		PART			
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY	
GROUP 0102 CRANKSHAFT						
FIG. 4 CRANKSHAFT,BEARING,AND SEALS						
1	PAFZZ	66289	Q0527C	•GASKET PART OF KIT P/N Q12B.....	3	
2	PAFZZ	66289	QD527D	•GASKET.....	1	
3	PAFZZ	66289	QD527C	•GASKET.....	1	
4	PAFZZ	66289	QD527D	•GASKET PART OF KIT P/N Q12B.....	3	
5	PAFZZ	96906	MS35756-11	•KEY, WOODRUFF.....	3	
6	PAFZZ	66289	RK170	•DEFLECTOR, DIRT AND.....	1	
7	PAFZZ	66289	GA36A	•GEAR, HELICAL.....	1	
8	PAFZZ	66289	ME71	•BEARING, ROLLER, TAPE.....	1	
* 9	PAHHH	66289	CA71A	•CRANKSHAFT, ENGINE.....	1	
10	PAFZZ	66289	ME114	•BEARING, ROLLER, TAPE.....	1	
11	PAf ZZ	66289	SD43	•RETAINER, PACKING.....	1	
12	PAFZZ	66289	HF261	•GASKET.....	1	
13	PAFZZ	66289	BG210C-S2	•PARTS KIT, POWER TAK.....	1	
14	PAFZZ	66289	PE5A	•WASHER, LOCK.....	6	
* 15	PAFZZ	80204	B1821BH038C125N	•SCREW, CAP, HEXAGON H.....	6	

END OF FIGURE

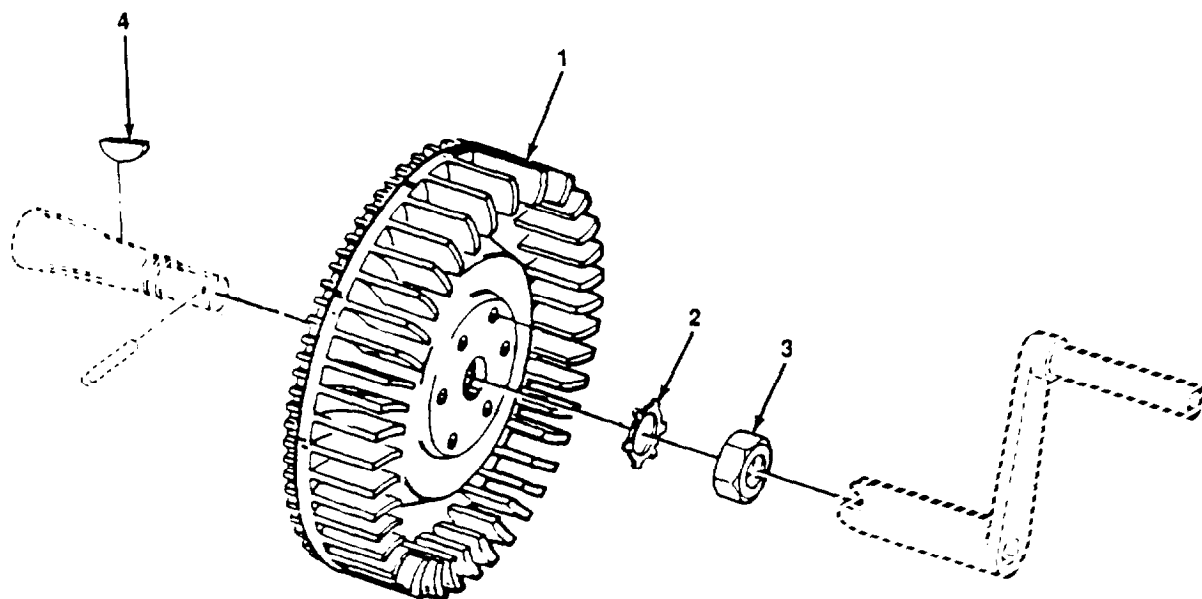


Figure 5. flywheel Assembly.

SECTION II			TM5-3895-366-24P		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
				GRCUP 0103 FLYWHEEL ASSEMBLY	
				FIG. 5 FLYWHEEL ASSEMBLY	
1	PAFZZ	66289	N101-10	•FLYWHEEL, ENGINE	1
2	PAFZZ	66289	PE66	•WASHER, KEY	1
3	PAFZZ	66289	PD123	•NUT, PLAIN, HEXAGON	1
4	PAFZZ	96906	MS35756-26	•KEY, WOODRUFF	1

END OF FIGURE