

LOADER, SCOOP TYPE, D.E.D., 4 WHEEL DRIVE, PNEUMATIC TIRES,
HINGED FRAME STEER, W/FORKLIFT FRONT MOUNTED,
HYDRAULIC OPERATED, 10,00 LB CAPACITY (EATON
YALE & TOWN, TROJAN MODEL 3000M) W/ENGINE
CUMMINS MODEL C-180-CI

Reference: LO 5-3805-243-12-1 and C9100-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operations and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing or fording.

Clean parts with SOLVENT, dry-cleaning, or with OIL, Fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Drain gearcases when hot. Fill and check level.

FOLD

FOLD

LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

