

ORDER

26 MARCH 1971 (Supersedes L.05-3810-201-12-4, dtd 9 Feb 1968 and L05-3810-206-12-4, dtd 18 Mar 1968)

CRANE-SHOVEL, BASIC UNIT, CRAWLER MOUNTED, 40 TON, 2 CU YD,
DIESEL DRIVEN, (HARNISCHFEGER MODEL 855 BG, 855 BG-2 AND
855 BG-3) W/HARNISCHFEGER ENGINE MODEL 687C-18-ES AND
CATERPILLAR ENGINE MODELS D333TA AND D333C

Reference L05-3810-206-12-1,-3, and -5 C9100-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operations and severe conditions. During Inactive periods sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubrication. sides of equipment.

Relubricate after washing or fording.

A dotted circle Indicates a drain below.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points Indicated by dotted arrow shafts on both

Drain gearcases when hot. Fill and check level.

LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

FOLD

FOLD

