

CRANE-SHOVEL, BASIC UNIT, TRUCK MOUNTED: 20 TON,3/4
CU. YD; GASOLINE ENGINE, 6X6 (AMERICAN HOIST &
DERRICK MODELS W-2360 (WINTERIZED) & 2360
(NON-WINTERIZED) W/CONTINENTAL ENGINE
MODELSS749 (CARRIER) BS415 (CRANE)

Reference: LO 5-3810-227-15-1, -2, and -4 C 9100-SL

Intervals are based on normal hours of operations. Reduce to compensate for abnormal operations. and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.
Relubricate after washing or fording.

Clean ports with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

LUBRICANT • INTERVAL


INTERVAL • LUBRICANT

Control Levers and Brake Pedal Bushings GAA

Hoist Drum Brake Shaft Bushings GAA

Boom Hoist Control Bellcrank GAA

Swing Control Bellcrank GAA

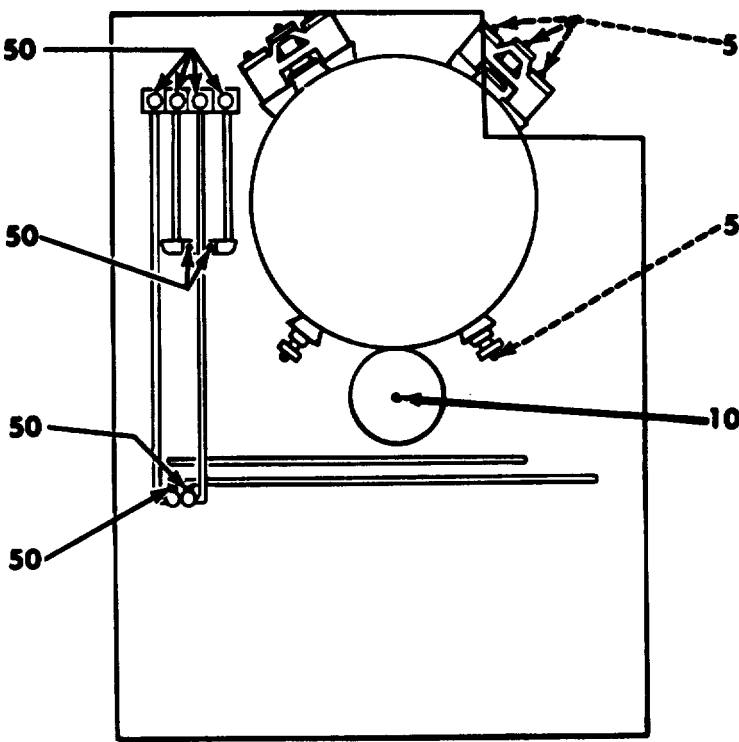

GAA Front Load Roller Bushings

GAA Rear Load Roller Bushings

GAA Vertical Reversing Shaft Bearing

CONTROLS AND ROLLERS