

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**TRACTOR, WHEELED, DED, LOADER BACKHOE:
WITH HYDRAULIC IMPACT TOOL
AND WITH HYDRAULIC EARTH
AUGER ATTACHMENT**

JOHN DEERE MODEL JD410 (CCE)

**WITH BUCKET, IMPACTOR,
AND EARTH DRILL
NSN 2420-00-567-0135**

This manual superseded TM 5-2420-222-34P, 30 December 1985.

Approved for public release; distribution is unlimited.

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS****TRACTOR, WHEELED, DED, LOADER BACKHOE:
WITH HYDRAULIC IMPACT TOOL
AND WITH HYDRAULIC EARTH
AUGER ATTACHMENT
JOHN DEERE MODEL JD410 (CCE)****WITH BUCKET, IMPACTOR,
AND EARTH DRILL****NSN 2420-00-567-0135**

Current as of 18 June 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP	01 ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE ASSEMBLY	1-1	1
	0101 - CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
	CYLINDER BLOCK AND LINERS	2-1	2
	CYLINDER HEAD AND GASKET	3-1	3
	ENGINE FRONT PLATE	4-1	4
	0102 - CRANKSHAFT	5-1	
	CRANKSHAFT AND BEARING CAPS	5-1	5
	0103 - FLYWHEEL ASSEMBLY	6-1	
	FLYWHEEL	6-1	6
	FLYWHEEL HOUSING	7-1	7
	0104 - PISTONS AND CONNECTING RODS	8-1	
	PISTONS AND CONNECTING RODS	8-1	8

* This manual supersedes TM 5-2420-222-34P, 30 December 1985.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM.....	9-1	
ROCKER ARMS AND VALVES.....	9-1	9
IDLER GEARS.....	10-1	10
CAMSHAFT	11-1	11
TIMING GEAR COVER	12-1	12
ROCKER ARM COVER.....	13-1	13
BALANCER SHAFT	14-1	14
0106 - ENGINE LUBRICATION SYSTEM	15-1	
ENGINE OIL COOLER	15-1	15
OIL FILLER INLET	16-1	16
LUBRICATING OIL PUMP	17-1	17
ENGINE OIL FILTER, DIPSTICK, AND VENTILATOR TUBE.....	18-1	18
OIL PAN AND GASKET	19-1	19
0108 - MANIFOLDS	20-1	
EXHAUST MANIFOLD	20-1	20
 GROUP 02 CLUTCH		
0200 - CLUTCH ASSEMBLY	21-1	
CLUTCH DISCONNECT, USE ON SERIAL NUMBERS 235786 THRU 235999.....	21-1	21
CLUTCH DISCONNECT, USE ON SERIAL NUMBERS 319995 THRU 342573.....	22-1	22
0202 - CLUTCH RELEASE MECHANISM.....	23-1	
CLUTCH PEDAL SHAFT	23-1	23
 GROUP 03 FUEL SYSTEM		
0301 - CARBURETOR, FUEL INJECTOR	24-1	
FUEL INJECTION NOZZLE ASSEMBLY	24-1	24
0302 - FUEL PUMPS.....	25-1	
FUEL INJECTION SYSTEM.....	25-1	25
FUEL PUMP HELICAL GEAR	26-1	26
FUEL INJECTION PUMP HOUSING AND DRIVE.....	27-1	27
FUEL INJECTION PUMP HEAD AND ROTOR	28-1	28
FUEL INJECTION PUMP TRANSFER.....	29-1	29
FUEL INJECTION PUMP AUTOMATIC ADVANCE	30-1	30
FUEL INJECTION PUMP DRIVE, EXPLODED VIEW	31-1	31
FUEL INJECTION PUMP LINKAGE.....	32-1	32
FUEL PUMP ASSEMBLY	33-1	33
0304 - AIR CLEANER	34-1	
AIR INTAKE	34-1	34
AIR CLEANER	35-1	35
0306 - TANKS, LINES, FITTINGS, HEADERS.....	36-1	
FUEL INJECTION PUMP, ELECTRIC SHUT-OFF	36-1	36
FUEL TANK	37-1	37
0308 - ENGINE SPEED GOVERNOR AND CONTROLS	38-1	
FUEL INJECTION PUMP GOVERNOR	38-1	38
0309 - FUEL FILTERS.....	39-1	
DUAL STAGE FUEL FILTER ASSEMBLY	39-1	39
0311 - ENGINE STARTING AIDS	40-1	
COLD WEATHER STARTING AID	40-1	40
0312 - ACCELERATOR, THROTTLE, OR CHOKE CONTROLS	41-1	
SPEED CONTROL LEVER AND CABLE.....	41-1	41
ACCELERATOR PEDAL AND SPEED CONTROL ROD	42-1	42

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 04	EXHAUST SYSTEM		
0401 -	MUFFLER AND PIPES.....	43-1	
	MUFFLER.....	43-1	43
GROUP 05	COOLING SYSTEM		
0501 -	RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	44-1	
	ENGINE COOLANT HEATER AND HOSES.....	44-1	44
	RADIATOR AND RELATED PARTS.....	45-1	45
0502 -	COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, ETC ..	46-1	
	FAN SHROUD.....	46-1	46
0503 -	WATER MANIFOLD, HEADERS, THERMOSTATS, AND		
	HOUSING GASKET.....	47-1	
	THERMOSTAT HOUSING ASSEMBLY.....	47-1	47
	RADIATOR HOSES AND CLAMPS.....	48-1	48
0504 -	WATER PUMP.....	49-1	
	WATER PUMP ASSEMBLY.....	49-1	49
0505 -	FAN ASSEMBLY.....	50-1	
	FAN, BELT, AND RELATED PARTS.....	50-1	50
GROUP 06	ELECTRICAL SYSTEM		
0601 -	GENERATOR, ALTERNATOR.....	51-1	
	GENERATOR ATTACHING PARTS.....	51-1	51
	GENERATOR ASSEMBLY, EXPLODED VIEW.....	52-1	52
	GENERATOR AND RELATED PARTS.....	53-1	53
0602 -	GENERATOR REGULATOR.....	54-1	
	VOLTAGE REGULATOR.....	54-1	54
0603 -	STARTING MOTOR.....	55-1	
	STARTING MOTOR, DRIVE, AND SWITCH ASSEMBLY.....	55-1	55
	STARTING MOTOR COIL ASSEMBLY HOUSING AND	56-1	56
0606 -	ENGINE SAFETY CONTROLS.....	57-1	
	PRESSURE AND STARTER SAFETY SWITCH.....	57-1	57
0607 -	INSTRUMENT OR ENGINE CONTROL PANEL.....	58-1	
	PARKING BRAKE WARNING SWITCH AND WIRING.....	58-1	58
	ENGINE ELECTRIC HOURMETER.....	59-1	59
	GAGES, INDICATOR LIGHTS, AND WIRING HARNESS.....	60-1	60
	IGNITION SWITCH.....	61-1	61
	INSTRUMENT PANEL COVER AND DASH.....	62-1	62
	LIGHT SWITCH AND TURN SIGNAL SWITCH.....	63-1	63
	FLUID STARTING AID WIRING.....	64-1	64
0608 -	MISCELLANEOUS ITEMS.....	65-1	
	CIGAR LIGHTER.....	65-1	65
0609 -	LIGHTS.....	66-1	
	TURNING LIGHT AND WARNING LIGHT.....	66-1	66
	COMBINATION REAR LIGHT ASSEMBLY.....	67-1	67
	COMBINATION REAR LIGHT AND RELATED PARTS.....	68-1	68
	FRONT LIGHT.....	69-1	69
	WARNING LIGHT FLASHER.....	70-1	70

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
0610 -	SENDING UNITS AND WARNING SWITCHES	71-1	
	FUEL GAGE SENDING UNIT	71-1	71
0611 -	HORN, SIREN	72-1	
	ELECTRIC HORN	72-1	72
	REVERSE WARNING ALARM.....	73-1	73
0612 -	BATTERIES, STORAGE	74-1	
	BATTERIES AND CABLES	74-1	74
	BATTERY TRAY AND CLAMP.....	75-1	75
0613 -	HULL OR CHASSIS WIRING HARNESS	76-1	
	REVERSE WARNING ALARM AND HORN HARNESS	76-1	76
	FRONT AND REAR LIGHT WARNING SYSTEM.....	77-1	77
	ELECTRICAL WIRING SYSTEM	78-1	78
GROUP 07	TRANSMISSION		
0700 -	TRANSMISSION ASSEMBLY	79-1	
	TRANSMISSION AND CASE	79-1	79
	TRANSMISSION CASE PLUGS	80-1	80
	TRANSMISSION SUMP COVER	81-1	81
	TRANSMISSION REAR COVER.....	82-1	82
0701 -	TRANSMISSION SHAFTS	83-1	
	COUNTERSHAFT AND BEARING SUPPORT	83-1	83
	TRANSMISSION DRIVE SHAFT ASSEMBLY1	84-1	84
0702 -	OPPOSED OUTPUT	85-1	
	DIFFERENTIAL DRIVE SHAFT ASSEMBLY	85-1	85
	DIFFERENTIAL ASSEMBLY	86-1	86
	DIFFERENTIAL LOCK MECHANISM	87-1	87
0704 -	TRANSMISSION TOP COVER ASSEMBLY	88-1	
	GEARSHIFTERS AND SHIFTER SHAFTS	88-1	88
	REVERSER SPEED, TOP COVER.....	89-1	89
	TRANSMISSION TOP COVER, USE ON SERIAL NUMBERS 235786 THRU 235999	90-1	90
	TRANSMISSION TOP COVER, USE ON SERIAL NUMBERS 319995 THRU 342573	91-1	91
0705 -	TRANSMISSION SHIFTING COMPONENTS.....	92-1	
	REVERSER SHIFTER LEVER.....	92-1	92
	REVERSER CONTROL LEVER LINKAGE	93-1	93
	REVERSER CONTROL LEVER.....	94-1	94
0710 -	TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS ...	95-1	
	REVERSER BRAKE HOUSING	95-1	95
	REVERSER BRAKE CARRIER AND SHAFT	96-1	96
	REVERSER BRAKE PLATES AND DISKS.....	97-1	97
	REVERSER CLUTCH DRUM AND DISKS	98-1	98
	REVERSER CLUTCH HOUSING.....	99-1	99
0721 -	COOLERS, PUMPS, MOTORS.....	100-1	
	REVERSER POWER SHAFT DRIVE AND BODY1.....	100-1	100
	REVERSER CLUTCH CONTROL VALVE ASSEMBLY.....	101-1	101
	REVERSER CLUTCH CONTROL VALVE, SHAFT, AND ARM ASSEMBLY	102-1	102
	REVERSER CLUTCH CONTROL VALVE AND PISTON	103-1	103
	REVERSER OIL LINES.....	104-1	104
	TRANSMISSION RELIEF VALVE	105-1	105
	TRANSMISSION LUBRICATING OIL LINES	106-1	106
	TRANSMISSION OIL FILTER	107-1	107
	TRANSMISSION OIL COOLER	108-1	108
	TRANSMISSION FILTER SCREEN	109-1	109

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 10	FRONT AXLE		
1000 -	FRONT AXLE ASSEMBLY	110-1	
	FRONT AXLE ASSEMBLY	110-1	110
1004 -	STEERING AND LEANING WHEEL MECHANISM	111-1	
	FRONT AXLE, SPINDLE, AND KNUCKLE ASSEMBLY	111-1	111
GROUP 11	REAR AXLE		
1103 -	PLANETARY OR FINAL DRIVE	112-1	
	REAR AXLE HOUSING	112-1	112
	REAR AXLE SHAFT	113-1	113
	PLANETARY PINION CARRIER	114-1	114
GROUP 12	BRAKES		
1201 -	HANDBRAKES	115-1	
	BRAKE BAND, LINING, AND LINKAGE	115-1	115
	PARKING BRAKE LEVER AND LINKAGE	116-1	116
1202 -	SERVICE BRAKES	117-1	
	BRAKE DISK ASSEMBLY	117-1	117
1204 -	HYDRAULIC BRAKE SYSTEM	118-1	
	BRAKE VALVE AND OIL LINES	118-1	118
	BRAKE VALVE HOUSING RELATED PARTS	119-1	119
1206 -	MECHANICAL BRAKE SYSTEM	120-1	
	BRAKE PEDALS	120-1	120
GROUP 13	WHEELS AND TRACKS		
1311 -	WHEEL ASSEMBLY	121-1	
	FRONT WHEEL ASSEMBLY	121-1	121
	REAR WHEEL STEEL DISK	122-1	122
1313 -	TIRES, TUBES, TIRE CHAINS	123-1	
	TIRES, REAR AND FRONT	123-1	123
GROUP 14	STEERING		
1401 -	MECHANICAL STEERING GEAR ASSEMBLY	124-1	
	TIE-ROD ASSEMBLY	124-1	124
	STEERING COLUMN AND RELATED PARTS	125-1	125
1411 -	HOSES, LINES, FITTINGS	126-1	
	POWER STEERING CYLINDER HYDRAULIC HOSES, USE ON SERIAL NUMBERS 235786 THRU 235999	126-1	126
	POWER STEERING CYLINDER HYDRAULICS, USE ON SERIAL NUMBERS 319995 THRU 342573	127-1	127
	POWER STEERING CYLINDER OIL LINES, USE ON SERIAL NUMBERS 235786 THRU 235999	128-1	128
	POWER STEERING VALVE HYDRAULICS, USE ON SERIAL NUMBERS 319995 THRU 342573	129-1	129
	POWER STEERING VALVE RETURN LINE AND ACCUMULATOR HOSE, USE ON SERIAL NUMBERS 235786 THRU 235999	130-1	130

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
1412 -	HYDRAULIC OR AIR CYLINDERS	131-1	
	POWER STEERING CYLINDER AND PINS, USE ON SERIAL NUMBERS 235786 THRU 235999	131-1	131
	POWER STEERING CYLINDER AND PINS, USE ON SERIAL NUMBERS 319995 THRU 342573	132-1	132
1414 -	STEERING SYSTEM VALVES.....	133-1	
	POWER STEERING VALVE, USE ON SERIAL NUMBERS 235786 THRU 235999	133-1	133
	POWER STEERING VALVE, USE ON SERIAL NUMBERS 319995 THRU 342573	134-1	134
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 -	FRAME ASSEMBLY	135-1	
	FRONT SUPPORT	135-1	135
1502 -	COUNTERWEIGHTS	136-1	
	SINGLE COUNTERWEIGHT	136-1	136
GROUP 18	BODY, CAB, HOOD, AND HULL		
1801 -	BODY, CAB, HOOD, AND HULL ASSEMBLIES.....	137-1	
	CANOPY REAR CUSHION MOUNT SUPPORT1	137-1	137
	BACKHOE CONTROL GUARDS	138-1	138
	CANOPY	139-1	139
	CANOPY ROOF AND RELATED PARTS, USE ON SERIAL NUMBERS 319995 THRU 342573	140-1	140
	CANOPY ROOF AND RELATED PARTS, USE ON SERIAL NUMBERS 235786 THRU 235999	141-1	141
	COWL SUPPORT	142-1	142
	COWL	143-1	143
	HOOD AND RELATED PARTS.....	144-1	144
	CANOPY FRONT CUSHION MOUNT SOCKET AND BRACKET	145-1	145
	GRILLE HOUSING AND RELATED PARTS	146-1	146
1802 -	FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC	147-1	
	STEP	147-1	147
	FENDERS.....	148-1	148
	STABILIZER	149-1	149
1805 -	FLOORS, SUBFLOORS, AND RELATED COMPONENTS....	150-1	
	LEFT PLATFORM AND SUPPORT	150-1	150
	RIGHT PLATFORM AND RELATED PARTS.....	151-1	151
	CENTER PLATFORM, REAR PLATFORMS, AND BATTERY	152-1	152
1806 -	UPHOLSTERY, SEATS, AND CARPETS.....	153-1	
	SEAT LOWER SUPPORT AND SWIVEL	153-1	153
	DELUXE SEAT SUPPORT.....	154-1	154
	SEAT AND SEATBELT	155-1	155
1808 -	STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC	156-1	
	BACKHOE VALVE BOX AND COVER.....	156-1	156
	TOOLBOX AND TRAY	157-1	157
	CONTROL BOX.....	158-1	158
GROUP 22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
2202 -	ACCESSORY ITEMS	159-1	
	REFLECTORS, USE ON SERIAL NUMBERS 319995 THR	159-1	159

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 24	2210 - DATA PLATES AND INSTRUCTION HOLDERS.....	160-1	
	LOADER AND BACKHOE DECALS	160-1	160
	TRACTOR DECALS	161-1	161
	TRACTOR LABELS.....	162-1	162
	HYDRAULIC AND FLUID SYSTEMS		
	2401 - PUMP AND MOTOR	163-1	
	HYDRAULIC ACCUMULATOR AND BRACKET.....	163-1	163
	HYDRAULIC PUMP.....	164-1	164
	HYDRAULIC PUMP DRIVE AND RELATED PARTS, USE ON SERIAL NUMBERS 235786 THRU 235999.....	165-1	165
	HYDRAULIC PUMP DRIVE, EXPLODED VIEW, USE ON SERIAL NUMBERS 319995 THRU 342573	166-1	166
	2402 - MANIFOLD AND/OR CONTROL VALVES.....	167-1	
	HYDRAULIC PUMP STROKE CONTROL VALVE.....	167-1	167
	PRESSURE CONTROL VALVE.....	168-1	168
	HYDRAULIC RELIEF VALVE.....	169-1	169
	HYDRAULIC IMPACTOR VALVE AND MANIFOLD	170-1	170
	JAW CONTROL VALVE	171-1	171
	BACKHOE CONTROL VALVE ASSEMBLY.....	172-1	172
	BACKHOE STABILIZER AND BUCKET VALVE.....	173-1	173
	BACKHOE CROWD VALVE	174-1	174
	BACKHOE BOOM AND SWING VALVE.....	175-1	175
	BACKHOE CIRCUIT RELIEF VALVE CARTRIDGES.....	176-1	176
	LOADER VALVE MOUNTING BRACKET AND MANIFOLD BLOCK	177-1	177
	LOADER CONTROL VALVE.....	178-1	178
	BUCKET SECTION OF LOADER VALVE.....	179-1	179
	LOADER AND BUCKET RELIEF VALVE.....	180-1	180
	BOOM SECTION OF LOADER CONTROL VALVE.....	181-1	181
	2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS.....	182-1	182
	JAW VALVE LINKAGE	182-1	182
	BACKHOE CONTROL LEVERS AND LINKAGE, USE ON SERIAL NUMBERS 235786 THRU 235999.....	183-1	183
	BACKHOE CONTROL LEVERS AND LINKAGE, USE ON SERIAL NUMBERS 319995 THRU 342573	184-1	184
	LOADER CONTROL VALVE LINKAGE	185-1	185
	2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC.....	186-1	
	HYDRAULIC OIL LINE, PUMP TO COOLER.....	186-1	186
	HYDRAULIC OIL LINES TO PUMP, CLUTCH CONTROL VALVE, FILTER RELIEF VALVES, AND RETURN	187-1	187
	LOADER LEFT- AND RIGHT-HAND BOOM CYLINDER HOSES	188-1	188
	AUGER HYDRAULIC LINES AND FITTINGS, USE ON SERIAL NUMBERS 319995 THRU 342573	189-1	189
	JAW BUCKET HYDRAULIC HOSES, USE ON SERIAL NUMBERS 319995 THRU 342573	190-1	190
	CROWD AND BUCKET CYLINDER HYDRAULICS, USE ON SERIAL NUMBERS 319995 THRU 342573	191-1	191
	CROWD CYLINDER LINES AND FITTINGS	192-1	192
	HYDRAULIC HOSES, USE ON SERIAL NUMBERS 235786. THRU 235999	193-1	193
	BACKHOE CONTROL TO MANIFOLD BLOCK OIL LINE AND FITTINGS\	194-1	194
	BACKHOE BOOM, CROWD AND BUCKET OIL LINES AND FITTINGS, USE ON SERIAL NUMBERS 319995 THRU 342573.....	195-1	195
	BACKHOE BOOM, CROWD AND BUCKET OIL LINES, USE ON SERIAL NUMBERS 235786 THRU 235999	196-1	196

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC (Con't)		
BACKHOE STABILIZER AND SWING CIRCUIT OIL LINES AND FITTINGS	197-1	197
BACKHOE PRESSURE AND RETURN CIRCUIT OIL LINES AND FITTINGS, USE ON SERIAL NUMBERS 319995 THRU 342573	198-1	198
BACKHOE PRESSURE AND RETURN CIRCUIT OIL LINES AND FITTINGS, USE ON SERIAL NUMBERS 235786 THRU 235999	199-1	199
BACKHOE OIL LINES AND FITTINGS, USE ON SERIAL NUMBERS 319995 THRU 342573	200-1	200
LOADER LEFT AND RIGHT BUCKET CYLINDER CIRCUITS	201-1	201
LOADER PRESSURE AND RETURN CIRCUITS.....	202-1	202
HYDRAULIC PUMP OIL PRESSURE LINES.....	203-1	203
HYDRAULIC OIL FILTER.....	204-1	204
JAW CYLINDER HOSES	205-1	205
HYDRAULIC IMPACTOR HOSE.....	206-1	206
VALVE LINES AND FITTINGS.....	207-1	207
2407 - HYDRAULIC CYLINDERS.....	208-1	
LOADER BOOM CYLINDER.....	208-1	208
JAW BUCKET CYLINDER	209-1	209
BACKHOE BOOM CYLINDER	210-1	210
BACKHOE SWING CYLINDER.....	211-1	211
BACKHOE BUCKET CYLINDER, USE ON SERIAL NUMBERS 235786 THRU 235999	212-1	212
BACKHOE CROWD CYLINDER	213-1	213
BACKHOE STABILIZER CYLINDER	214-1	214
LOADER BUCKET CYLINDER	215-1	215
GROUP 47 GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES		
4701 - INSTRUMENTS.....	216-1	
TACHOMETER.....	216-1	216
4702 - GAGES, MOUNTINGS, LINES, AND FITTINGS	217-1	
AIR CLEANER RESTRICTION INDICATOR	217-1	217
GROUP 74 CRANES, SHOVELS, AND EARTHMOVING EQUIPMENT COMPONENTS		
7412 - BACKHOE ATTACHMENTS	218-1	
JAW BUCKET	218-1	218
BACKHOE DIPPERSTICK	219-1	219
BACKHOE BOOM, USE ON SERIAL NUMBERS 319995..... THRU 342573	220-1	220
BACKHOE BOOM, USE ON SERIAL NUMBERS 235786..... THRU 235999	221-1	221
BACKHOE SWING FRAME, USE ON SERIAL NUMBERS 319995 THRU 342573	222-1	222
BACKHOE SWING FRAME, USE ON SERIAL NUMBERS 235786 THRU 235999	223-1	223
BACKHOE MAIN FRAME AND TIE BARS, USE ON SERIAL224-1 NUMBER 319995 THRU 342573-1	224	
BACKHOE MAIN FRAME AND TIE BARS, USE ON..... SERIAL NUMBERS 0235786 THRU 235999	225-1	225
7437 - LOADER BUCKET ASSEMBLY OR FORKLIFT	226-1	
LOADER	226-1	226
BUCKET	227-1	227
LOADER SIDE FRAMES.....	228-1	228
BUCKET LEVEL INDICATOR	229-1	229
LOADER BUCKET LINKAGE.....	230-1	230

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS	KIT-1	
	REPAIR KITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	BULK
GROUP 99	PARTS PECULIAR		
	9901 - MULTILISTED PARTS	231-1	
	HYDRAULIC MOTOR.....	231-1	231
	AUGER HYDRAULIC HOSES AND RELATED PARTS	232-1	232
	IMPACTOR LINES AND FITTINGS	233-1	233
	HYDRAULIC EARTH DRILL.....	234-1	234
	HYDRAULIC BACKHOE IMPACTOR	235-1	235
	BACKHOE IMPACTOR WORKING TOOLS	236-1	236
	HYDRAULIC BORING HEAD.....	237-1	237
	HYDRAULIC BORING HEAD AND RELATED PARTS.....	238-1	238
	HYDRAULIC BORING HEAD MOTOR AND RELATED PARTS	239-1	239
	IMPACTOR ADAPTER.....	240-1	240
	EARTH DRILL MOTOR	241-1	241
SECTION III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX.....	I-1	
	PART NUMBER INDEX.....	I-34	
	FIGURE AND ITEM NUMBER INDEX	I-106	

Change 1 ix/(x Blank)

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (CTMDE); and other special support equipment required for performance of Direct Support and General Support Maintenance of the Loader Backhoe Wheeled Tractor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

 
c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance.

The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).


a. *ITEM NO.* (Column (1)). Indicates the number used to identify items called out in the illustration.

b. *SMR CODE* (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

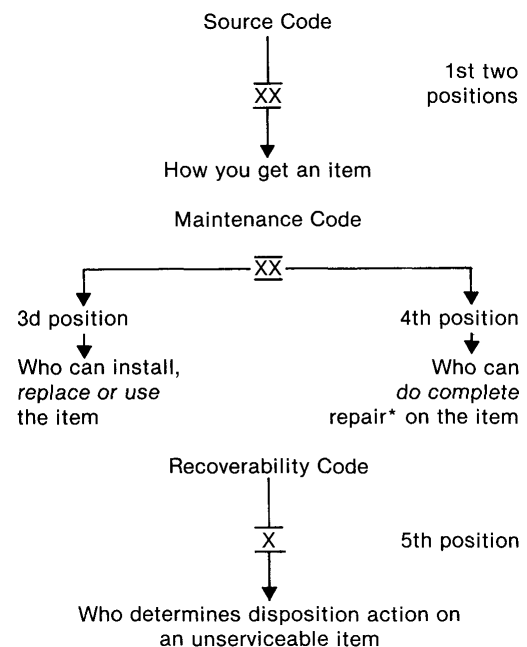

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the 'Repair' function in a use/user environment in order to restore serviceability to a failed item.

 (1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

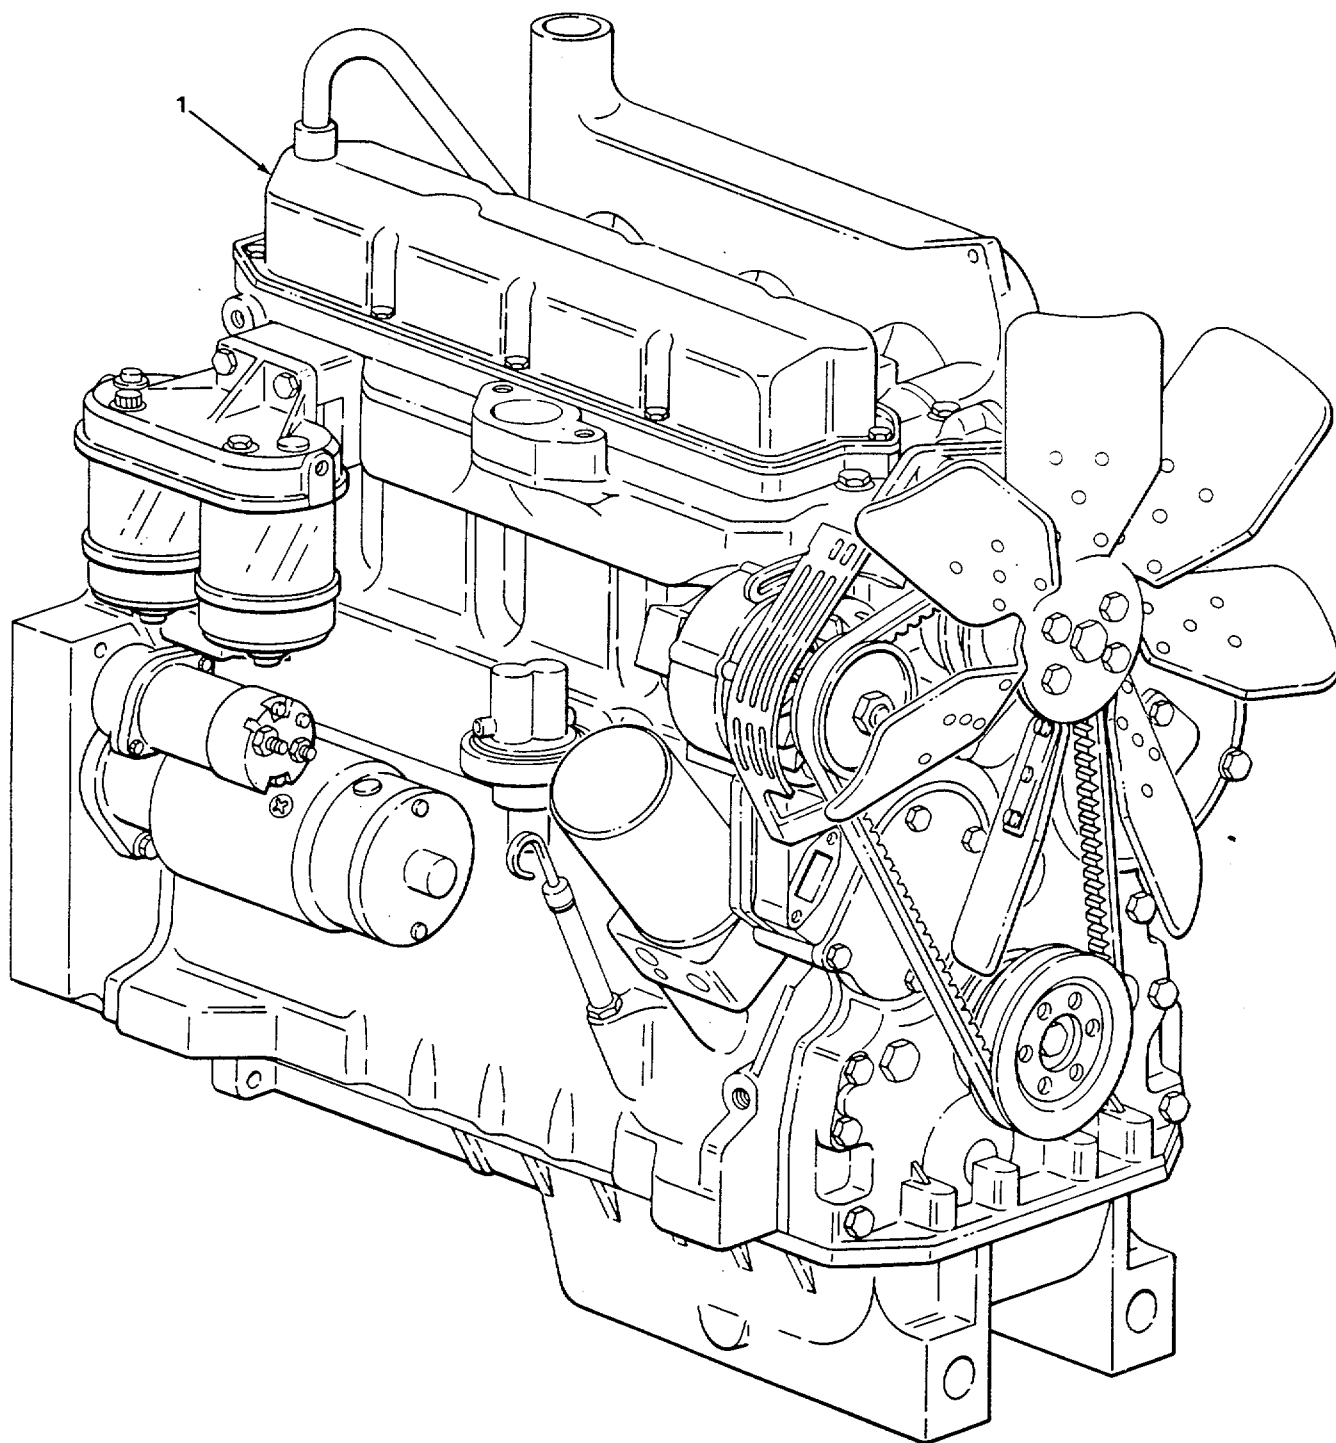

TA506362

FIGURE 1. ENGINE ASSEMBLY.

SECTION II.

TM 5-2420-222-34P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
				GROUP 01 ENGINE	
				GROUP 0100 ENGINE ASSEMBLY	
				FIG. 1 ENGINE ASSEMBLY	
1	PAFHD 75160		AR68049	ENGINE, DIESEL.....	1
				END OF FIGURE	


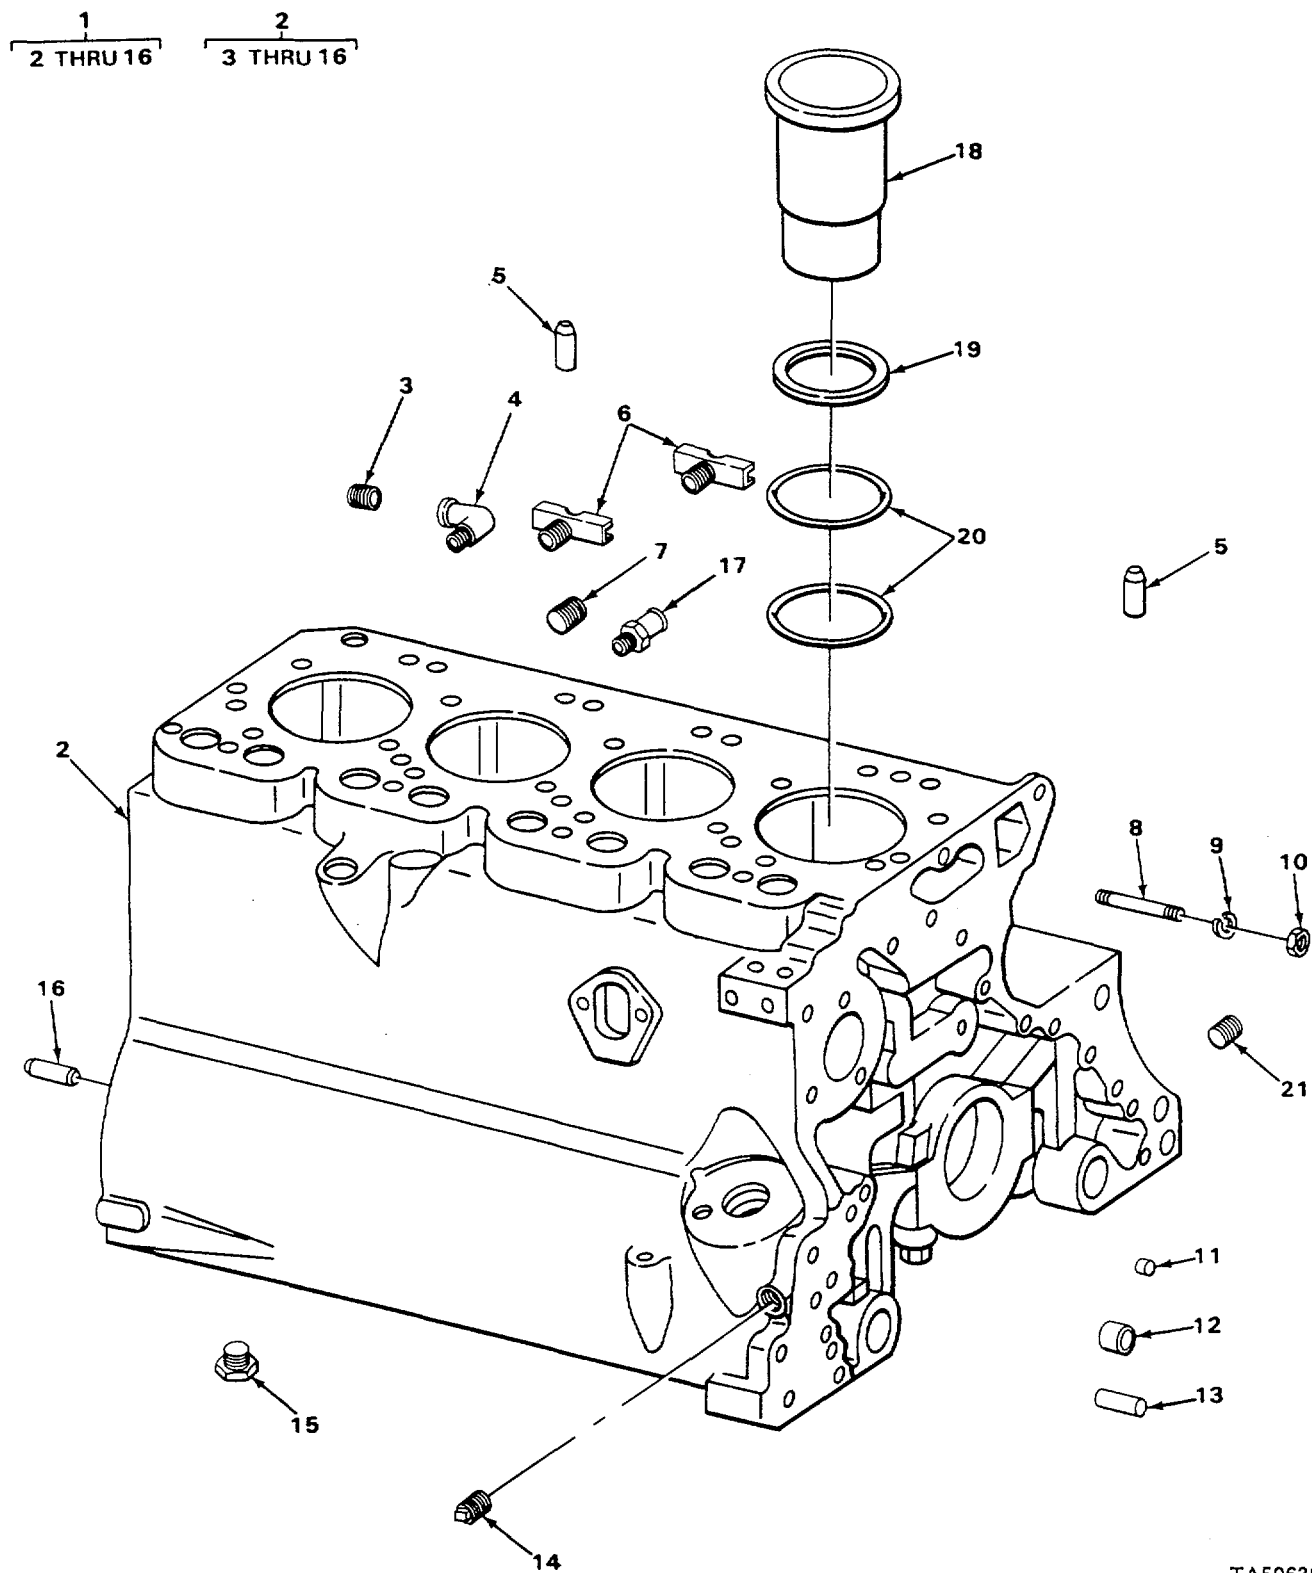 


FIGURE 2. CYLINDER BLOCK AND LINERS.

TA506363

SECTION II					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD					
FIG. 2 CYLINDER BLOCK AND LINERS					
1	PAHHH	75160	AR97103	ENGINE BLOCK ASSEMB	1
* 2	XBHHH	75160	AR64727	ENGINE BLOCK, DIESEL.....	1
* 3	PAFZZ	75160	15H649	PLUG, MACHINE THREAD	1
* 4	PAFZZ	75160	15H613	ELBOW, PIPE 90 DEGREES, TO BE USED WITH ENGINE COOLANT HEATER	2
5	PFFZZ	75160	R26241	••PIN, STRAIGHT.HEADLE	2
6	PAFZZ	75160	AT13740	••COCK, DRAIN TO BE USED WIO ENGINE COOLANT HEATER	2
7	PFFZZ	96906	MS27769-3	••PLUG, PIPE.....	1
8	PAHZZ	75160	T33279	••STUD, PLAIN COVER.....	2
8	PAHZZ	75160	T25701	••STUD, PLAIN.....	1
9	PAHZZ	96906	MS35338-46	••WASHER, LOCK	3
10	PFFZZ	75160	14H812	••NUT HEX	3
11	PAHZZ	75160	T18891	••PLUG	2
12	PAHZZ	75160	R26493	••BUSHING, SLEEVE ENGINE.....	1
13	PFFZZ	75160	R26650	••PIN, STRAIGHT, HEADLE	2
14	PAHZZ	75160	15H255	••PLUG, PIPE.....	1
15	PAHZZ	75160	R54802	••RESTRICTOR, FLUID FL COOLING	4
16	PAHZZ	75160	R48685	••PIN, STRAIGHT, HEADLE	2
17	PFFZZ	75160	T29388	NIPPLE, SPECIAL TO BE USED WITH ENGINE COOLANT HEATER	2
18	KFHZZ	75160	T32343	CYLINDER SLEEVE PART OF KIT P/N AR78041	4
* 19	PAHZZ	75160	R48768	PACKING PART OF KIT P/N AR97191 PART OF KIT P/N AR65071 PART OF KIT P/N AR78041 PART OF KIT P/N RE38857	4
20	PAHZZ	06021	AR71618	KIT PACKING CYL PART OF KIT P/N AR78041	8
21	PAHZZ	75160	15H558	PLUG, PIPE	5

 END OF FIGURE

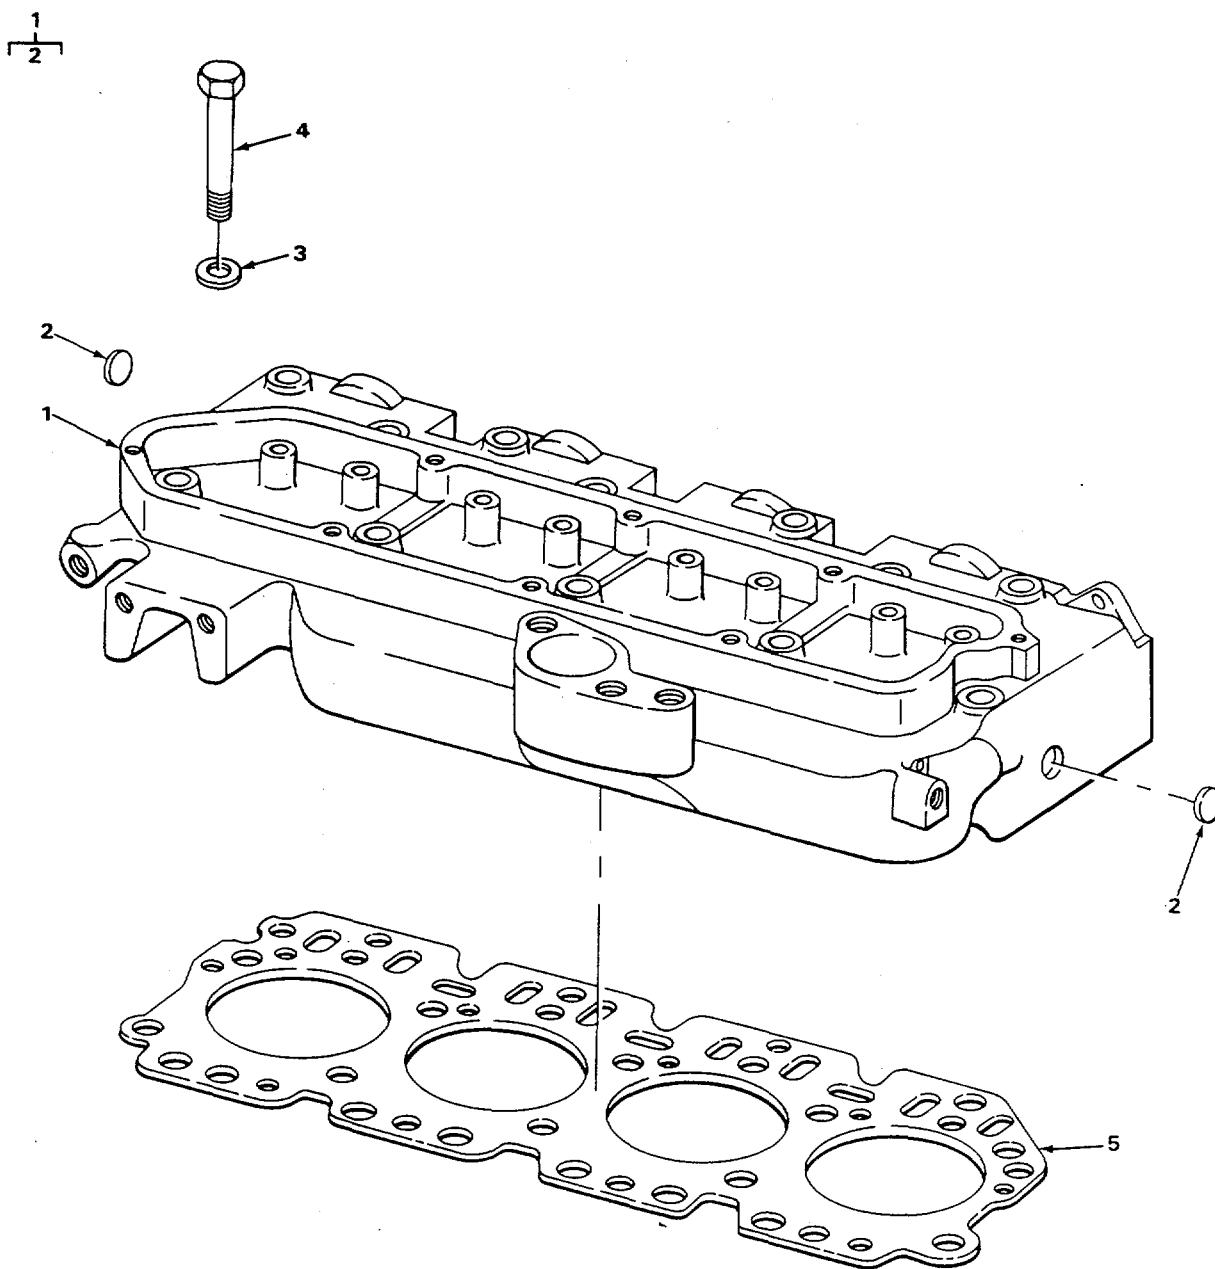

TA506364

FIGURE 3. CYLINDER HEAD AND GASKET.


SECTION II				TM 5-2420-222-34P	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY

GROUP 0101 CRANKCASE, BLOCK,
CYLINDER HEAD

FIG 3 CYLINDER HEAD AND GASKET

1	PAFFF	75160	AR62452	CYLINDER HEAD, DIESE	1
2	PAFZZ	75160	A3910R	.PLUG, EXPANSION.....	2
3	PAFZZ	75160	T20168	WASHER, FLAT	18
4	PAFZZ	75160	R53223	SCREW, CAP, HEXAGON H.....	18
*5	PAFZZ	75160	R91878	GASKET PART OF KIT P/N AR100426 PART	1
				OF KIT P/N RE38857	

 END OF FIGURE

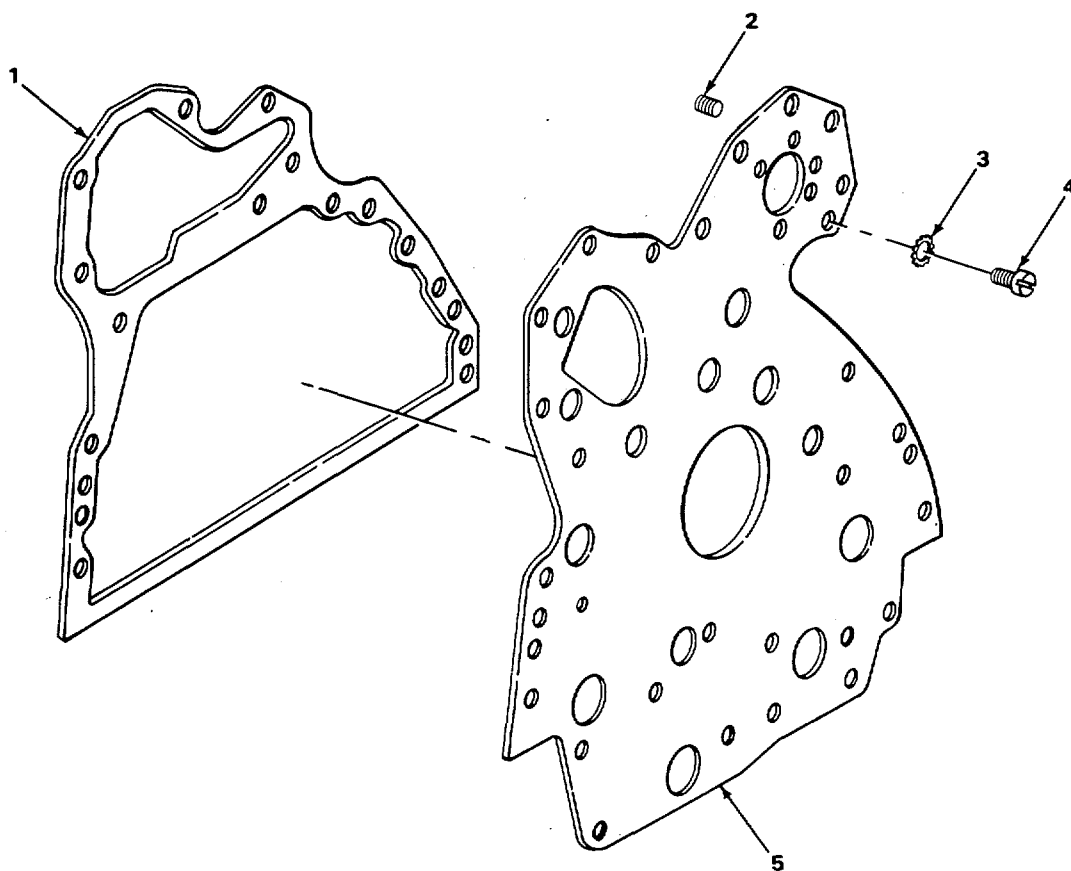

TA506365

FIGURE 4. ENGINE FRONT PLATE.

SECTION II

TM 5-2420-222-34P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD					
FIG. 4 ENGINE FRONT PLATE					
* 1	PAHZZ	75160	R73140	GASKET PART OF KIT P/N RE38857	1
2	PAHZZ	96906	MS51966-136	SETSCREW	5
2	PAHZZ	75160	AT22919	SETSCREW	2
3	PAHZZ	75160	12H324	WASHER, LOCK EXTERNAL TEETH	5
4	PAHZZ	75160	T20166	SCREW, MACHINE	5
5	PAHZZ	75160	R56736	PLATE, CYLINDER BLOC	1
END OF FIGURE					