 


TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
INTERIM HIGH-MOBILITY ENGINEER
EXCAVATOR (IHMEE)**

NSN 2420-66-148-7692

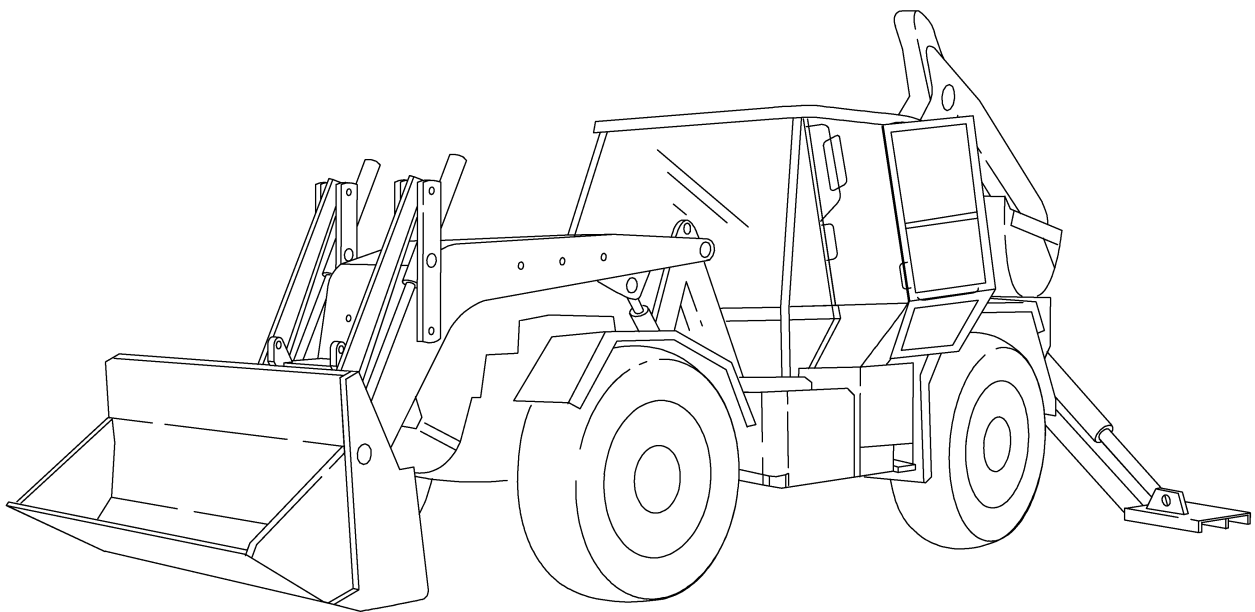

Approved for public release; distribution unlimited.

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR INTERIM HIGH-MOBILITY ENGINEER EXCAVATOR (IHMEE)

NSN 2420-66-148-7692

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Publications and Blank Forms) through the Internet on the Army Electronic Product Support (AEPS) Web site. The Internet address is <http://aeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax, or e-mail your letter or DA Form 2028 directly to: AMSTA-LC-CI / TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, IL 61299-7630. The e-mail address is TACOM-TECH-PUBS@ria.army.mil. The fax number is (DSN) 793-0726 or Commercial (309) 782-0726.

TABLE OF CONTENTS

	Page	Illus Figure
INTRODUCTION	0001 00-1	
GROUP AA Engine		
AA Engine Assembly	0002 00-2	1
AA Cylinder Block	0002 00-4	2
AA Crankshaft and Main Bearings.....	0002 00-6	3
AA Flywheel and Flywheel Housing	0002 00-8	4
AA Connecting Rod and Piston	0002 00-10	5
AA Camshaft and Valve Tappets.....	0002 00-12	6
AA Fan Drive Assembly	0002 00-14	7
AA Drive Belt Tensioner	0002 00-16	8
AA Vibration Damper	0002 00-18	9
AA Dipstick	0002 00-20	10
AA Cylinder Head	0002 00-22	11
AA Exhaust Manifold	0002 00-24	12
AA Rocker Arms	0002 00-26	13
AA Oil Pump	0002 00-28	14

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
	AA Oil Filter.....	0002 00-30	15
	AA Secondary Fuel Filter.....	0002 00-32	16
	AA Data Plates	0002 00-34	17
	AA Front Gear Cover	0002 00-36	18
	AA Mechanical Tachometer Drive Cover.....	0002 00-38	19
	AA Valve Covers.....	0002 00-40	20
	AA Oil Pan, Gasket and Suction Tube.....	0002 00-42	21
	AA Cam Follower Cover	0002 00-44	22
	AA Engine Mount.....	0002 00-46	23
	AA Front Engine Support.....	0002 00-48	24
GROUP AB	Cooling System		
	AB Radiator, Hydraulic Cooler, Air Conditioner Condensor and Hoses	0002 00-50	25
	AB Coolant Reservoir and Hoses	0002 00-54	26
	AB Fan and Motor Assembly	0002 00-56	27
	AB Water Pump and Thermostat.....	0002 00-58	28
	AB Engine Oil Cooler.....	0002 00-60	29
	AB Transmission Oil Cooler.....	0002 00-62	30
GROUP AC	Exhaust System		
	AC Exhaust System	0002 00-65	31
GROUP AD	Fuel System		
	AD Fuel Tank and Mounting	0002 00-69	32
	AD Fuel Lines and Brackets	0002 00-73	33
	AD Primary Fuel Filter and Housing	0002 00-76	34
	AD Fuel Pump and Outlet Pipe.....	0002 00-78	35
	AD Fuel Injection Pump	0002 00-80	36
	AD Fuel Injector	0002 00-82	37
	AD Fuel Shutoff Valve.....	0002 00-84	38
	AD Turbocharger	0002 00-86	39
	AD Turbocharger Oil System	0002 00-88	40
	AD Aftercooler.....	0002 00-90	41
	AD Air Intake System.....	0002 00-92	42
	AD Accelerator Controls	0002 00-94	43
GROUP AE	Electrical System		
	AE Battery, Battery Box and Toolbox Assembly.....	0002 00-96	44
	AE Engine Wiring Harness	0002 00-102	45
	AE Hydraulic System Wiring Harness	0002 00-104	46
	AE Loader Arm Wiring Harness.....	0002 00-106	47
	AE Power Distribution Panel Electrical Components.....	0002 00-109	48
	AE Power Distribution Panel Case	0002 00-114	49
	AE Starter Motor Assembly	0002 00-116	50
	AE Alternator and Mounts.....	0002 00-118	51
	AE Front Light Wiring Harness	0002 00-120	52
	AE Main Front Light Assemblies.....	0002 00-122	53
	AE Cabin Light Mount.....	0002 00-128	54
	AE Work Light Assy, Front.....	0002 00-130	55
	AE Reverse Alarm and Rear Lighting Wiring Harness	0002 00-132	56
	AE Tail, Brake, Reversing and Blackout Lights	0002 00-134	57
	AE Interior Light.....	0002 00-136	58
	AE Indicator Light	0002 00-138	59

TABLE OF CONTENTS (Continued)

	Page	Illus Figure
AE Rear Marker Lights	0002 00-140	60
AE Convoy Light	0002 00-142	61
AE Rear Work Light	0002 00-144	62
AE Strobe Light.....	0002 00-146	63
AE Cabin Wiring Harness	0002 00-148	64
AE Front Windshield Wipers	0002 00-150	65
AE Rear Windshield Wipers	0002 00-152	66
AE Windshield Washer Assembly	0002 00-154	67
AE Dash Wiring Harness	0002 00-156	68
AE Electronic Control Unit	0002 00-158	69
AE Electronic Gear Shift and Turn Signal Switch	0002 00-160	70
AE Instrument Panel and Gauges LH.....	0002 00-162	71
AE Instrument Panel and Gauges Center	0002 00-164	72
AE Instrument Panel and Gauges RH	0002 00-166	73
AE Handcontrols Harness Assembly	0002 00-168	74
GROUP AF Transmission and Driveline Components		
AF Transmission and Output Shaft Flanges.....	0002 00-170	75
AF Converter Housing	0002 00-172	76
AF Transmission and Cover	0002 00-174	77
AF Turbine Shaft and Oil Baffle.....	0002 00-176	78
AF Torque Converter.....	0002 00-178	79
AF Pump Drive	0002 00-180	80
AF Drive Plate Group	0002 00-182	81
AF Reverse and High Shaft Group	0002 00-184	82
AF Forward and 2nd Shaft Group	0002 00-186	83
AF Low Speed Shaft Group.....	0002 00-188	84
AF 4th Speed Shaft Group	0002 00-190	85
AF Idler Shaft Group with Steer Pump Drive	0002 00-192	86
AF 8-Speed Output Shaft Group	0002 00-194	87
AF Charging Pump	0002 00-196	88
AF Remote Solenoid Control Valve.....	0002 00-198	89
AF Modulator Valve	0002 00-200	90
AF High and Low Range Shift Control.....	0002 00-202	91
AF Range Cylinders	0002 00-204	92
AF Transmission Remote Control Hydraulics.....	0002 00-206	93
AF Lock-Up Modulator Valve Hydraulics	0002 00-208	94
AF Lock-Up Modulator Valve.....	0002 00-210	95
AF Transmission Oil Filler And Dipstick	0002 00-212	96
AF Transmission Mount.....	0002 00-214	97
AF Front Differential	0002 00-216	98
AF Rear Differential	0002 00-220	99
AF Front Axle Assembly	0002 00-224	100
AF Front Axle, Hub, Brake Slack Adjusters, and Steering Head Assembly	0002 00-227	101
AF Rear Axle Assembly.....	0002 00-232	102
AF Rear Axle and Hub Assembly	0002 00-234	103
AF Tire and Rim Assemblies	0002 00-236	104
AF Front Driveshaft	0002 00-238	105
AF Rear Driveshaft	0002 00-240	106
AF Transmission Oil Filters	0002 00-242	107

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
GROUP AG	Steering System		
	AG Steering Wheel and Column Mounts	0002 00-244	108
	AG Steering Box and Mitre Box	0002 00-246	109
	AG Power Steering Pump and Drive	0002 00-248	110
	AG Power Steering Reservoir and Pipes	0002 00-250	111
	AG Steering Linkages	0002 00-252	112
	AG Dampner Assembly	0002 00-256	113
GROUP AH	Suspension Components		
	AH Shock Absorber	0002 00-258	114
	AH Air Bags	0002 00-260	115
	AH Air Bags Isolation Valve	0002 00-262	116
	AH Ride Level Valve	0002 00-264	117
	AH Suspension Control Arms	0002 00-267	118
	AH Sway Bar	0002 00-270	119
	AH Panhard Rods	0002 00-273	120
	AH Pneumatic Assembly	0002 00-277	121
GROUP AJ	Brake System		
	AJ Air Compressor	0002 00-282	122
	AJ Air Compressor Governor	0002 00-284	123
	AJ Air Transfer Connection	0002 00-286	124
	AJ Pneumatic Supply	0002 00-289	125
	AJ Air Tank (9.7L)	0002 00-294	126
	AJ Air Tank (20L), Service Brakes	0002 00-296	127
	AJ Rear Air Tank (28L), Park Brake	0002 00-298	128
	AJ Air Tank (28L), Service Brakes	0002 00-300	129
	AJ Air Tank (16.8L), Service Brakes	0002 00-302	130
	AJ Air Tank (13.8L), Park Brake	0002 00-304	131
	AJ Air Drier	0002 00-306	132
	AJ Brake Pedal and Valve	0002 00-308	133
	AJ Service Brake Lines and Fittings	0002 00-310	134
	AJ Front Brake Assemblies	0002 00-312	135
	AJ Front Spring Brake Chambers	0002 00-314	136
	AJ Rear Brake Assemblies and Slack Adjusters	0002 00-316	137
	AJ Rear Spring Brake Chambers	0002 00-318	138
	AJ Quick Release Valve	0002 00-320	139
	AJ Pressure Ratio Valve	0002 00-322	140
	AJ Park Brake Lines and Fittings	0002 00-324	141
GROUP AK	Body		
	AK Nose Cone	0002 00-326	142
	AK Engine Hood	0002 00-328	143
	AK Rear Hood	0002 00-330	144
	AK Center Belly Plates	0002 00-332	145
	AK Hydraulic Oil Filter Cover	0002 00-334	146
	AK Front Fenders	0002 00-336	147
	AK Rear Fenders	0002 00-338	148
GROUP AL	Hydraulic System		
	AL Tandem Hydraulic Pump	0002 00-340	149
	AL Hydraulic Filter	0002 00-342	150
	AL Hydraulic Tank Fittings	0002 00-344	151

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
	AL Hydraulic Tank and Mounting	0002 00-346	152
	AL 4 In 1 Bucket Cylinders, Lines and Fittings	0002 00-349	153
	AL Lift Cylinders and Hydraulics	0002 00-353	154
	AL Tilt Cylinders, Lines and Fittings (Sheet 1 of 3)	0002 00-358	155
	AL Hydraulic Fan Drive Lines and Fittings	0002 00-362	156
	AL Engine, Transmission, and Hydraulic Sampling Valve Assemblies	0002 00-366	157
	AL Transmission Cooler and Filter, Lines and Fittings	0002 00-369	158
	AL FEL Lines and Fittings	0002 00-372	159
GROUP AM	FEL Components		
	AM FEL Arms, Quick Hitch, and Lift Potentiometer	0002 00-374	160
	AM FEL Tilt Cylinder Arms, Potentiometer and Linkage	0002 00-377	161
	AM FEL Bucket Components	0002 00-380	162
	AM FEL Valve Block Assembly	0002 00-382	163
GROUP AN	Backhoe Components		
	AN Backhoe Stabilizer Arms	0002 00-384	164
	AN Backhoe Lock Pedal	0002 00-386	165
	AN Backhoe Swing Tower and Cylinders	0002 00-388	166
	AN Stabilizer Cylinders and Hydraulic Pipes	0002 00-390	167
	AN Backhoe Boom Assembly And Cylinders	0002 00-392	168
	AN Backhoe Boom Cylinder Lines and Fittings	0002 00-394	169
	AN Backhoe Dipper Cylinder Lines and Fittings	0002 00-396	170
	AN Backhoe Bucket Cylinder Lines and Fittings	0002 00-398	171
	AN Dipper Arm, Bucket, and Bucket Cylinder	0002 00-400	172
	AN Backhoe Valve Block Assembly	0002 00-402	173
GROUP AP	Accessories		
	AP Spare Tire Carrier Assembly	0002 00-404	174
	AP Tow Hitch Components	0002 00-406	175
	AP Trailer Brake Pneumatic Lines and Fittings	0002 00-410	176
	AP Fork Attachment	0002 00-416	177
	AP Chassis Cabin and Body Components	0002 00-418	178
	AP Belly Plates and Components RH	0002 00-420	179
	AP Belly Plates and Components LH	0002 00-422	180
	AP Rifle Rack	0002 00-424	181
GROUP AQ	Cabin Components		
	AQ Operator Seat	0002 00-426	182
	AQ Operator Pedestal/Rotator Assembly	0002 00-428	183
	AQ Hand Controls	0002 00-430	184
	AQ Passenger Seat	0002 00-434	185
	AQ Air Conditioner	0002 00-437	186
	AQ Cabin Floor Plates	0002 00-442	187
	AQ Cabin Glass	0002 00-444	188
	AQ Door Assembly	0002 00-446	189
	AQ Door Strut	0002 00-448	190
	AQ Mirror Left Hand	0002 00-450	191
	AQ Mirror Right Hand	0002 00-452	192
	AQ Windshield Defrost Cover Assembly And Sun Visor	0002 00-454	193
	AQ Brake and Accelerator Pads	0002 00-456	194
	AQ EGS Blackout Cover	0002 00-458	195
	AQ Warning Light Blackout Cover	0002 00-460	196

TABLE OF CONTENTS (Continued)

	Page	Illus Figure
AQ Firewall.....	0002 00-462	197
AQ Operator's Manual Stowage	0002 00-464	198
AQ Ancillary Frame Toolbox Assembly.....	0002 00-466	199
AQ Fuel Tank Cover	0002 00-468	200
AQ Radio Mount.....	0002 00-470	201
GROUP AR Decals and Reflectors		
AR Decals	0002 00-473	202
AR Reflectors.....	0002 00-476	203
GROUP AS Repair Kits		
AS Repair Kits	0002 00-479	
GROUP AT Bulk Material		
AT Bulk Material	0002 00-481	
GROUP AU Special Tools		
AU Unit Maintenance Special Tools	0003 00-2	204
AU Direct Support and General Support Special Tools	0003 00-5	205
NATIONAL STOCK NUMBER (NSN) INDEX.....	0004 00-1	
PART NUMBER INDEX	0004 00-19	

INTRODUCTION

SCOPE

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the IHMEE. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

GENERAL

In addition to the Introduction work package, this RPSTL is divided into the following work packages.

1. **Repair Parts List Work Packages.** Work packages containing lists of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. These work packages also include parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Sending units, brackets, filters, and bolts are listed with the component they mount on. Bulk materials are listed by item name in FIG. BULK at the end of the work packages. Repair parts kits are listed separately in their own functional group and work package. Repair parts for reparable special tools are also listed in a separate work package. Items listed are shown on the associated illustrations.
2. **Special Tools List Work Packages.** Work packages containing lists of special tools, special TMDE, and special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in the DESCRIPTION AND USABLE ON CODE (UOC) column). Tools that are components of common tool sets and/or Class VII are not listed.
3. **Cross-Reference Indexes Work Packages.** There are two cross-reference indexes work packages in this RPSTL: the National Stock Number (NSN) Index work package and the Part Number (P/N) Index work package. The National Stock Number Index work package refers you to the figure and item number. The Part Number Index work package refers you to the figure and item number.

EXPLANATION OF COLUMNS IN THE REPAIR PARTS LIST AND SPECIAL TOOLS LIST WORK PACKAGES

ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.


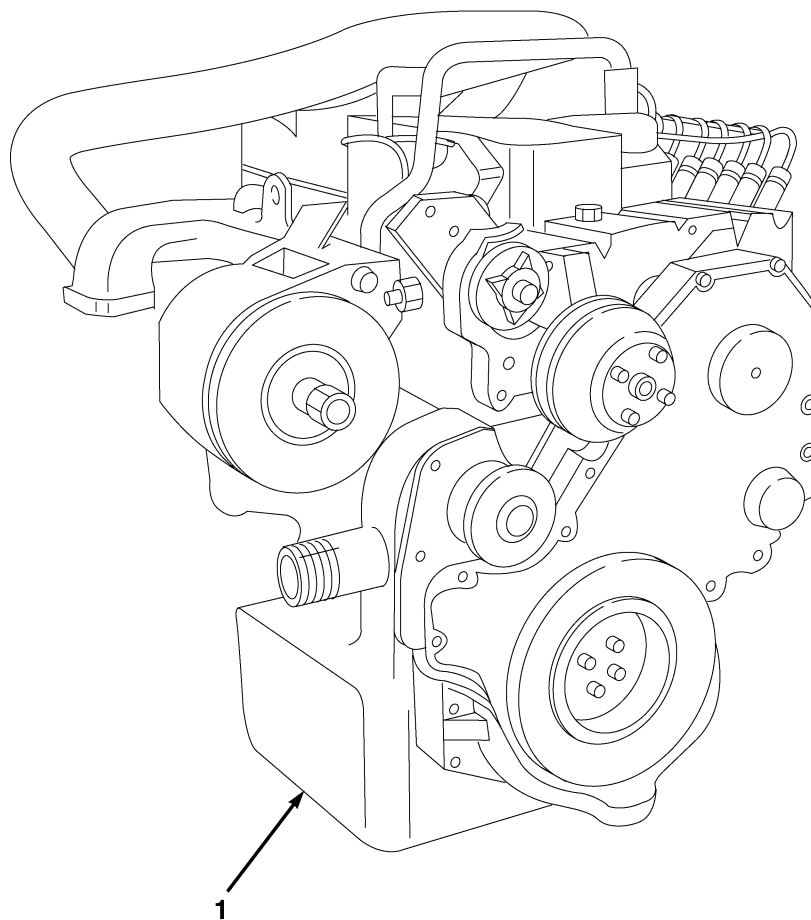 


FIG. 1 ENGINE ASSEMBLY

(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM NO	SMR CODE	NSN	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
					GROUP AA: ENGINE	
					FIG. 1 ENGINE ASSEMBLY	
1	PAFHH	2815-01-506-1786	15434	D403057CX02	ENGINE,CUMMINS 6BTA 5.9-185 HP	1
END OF FIGURE						

 2-3 THROUGH 22

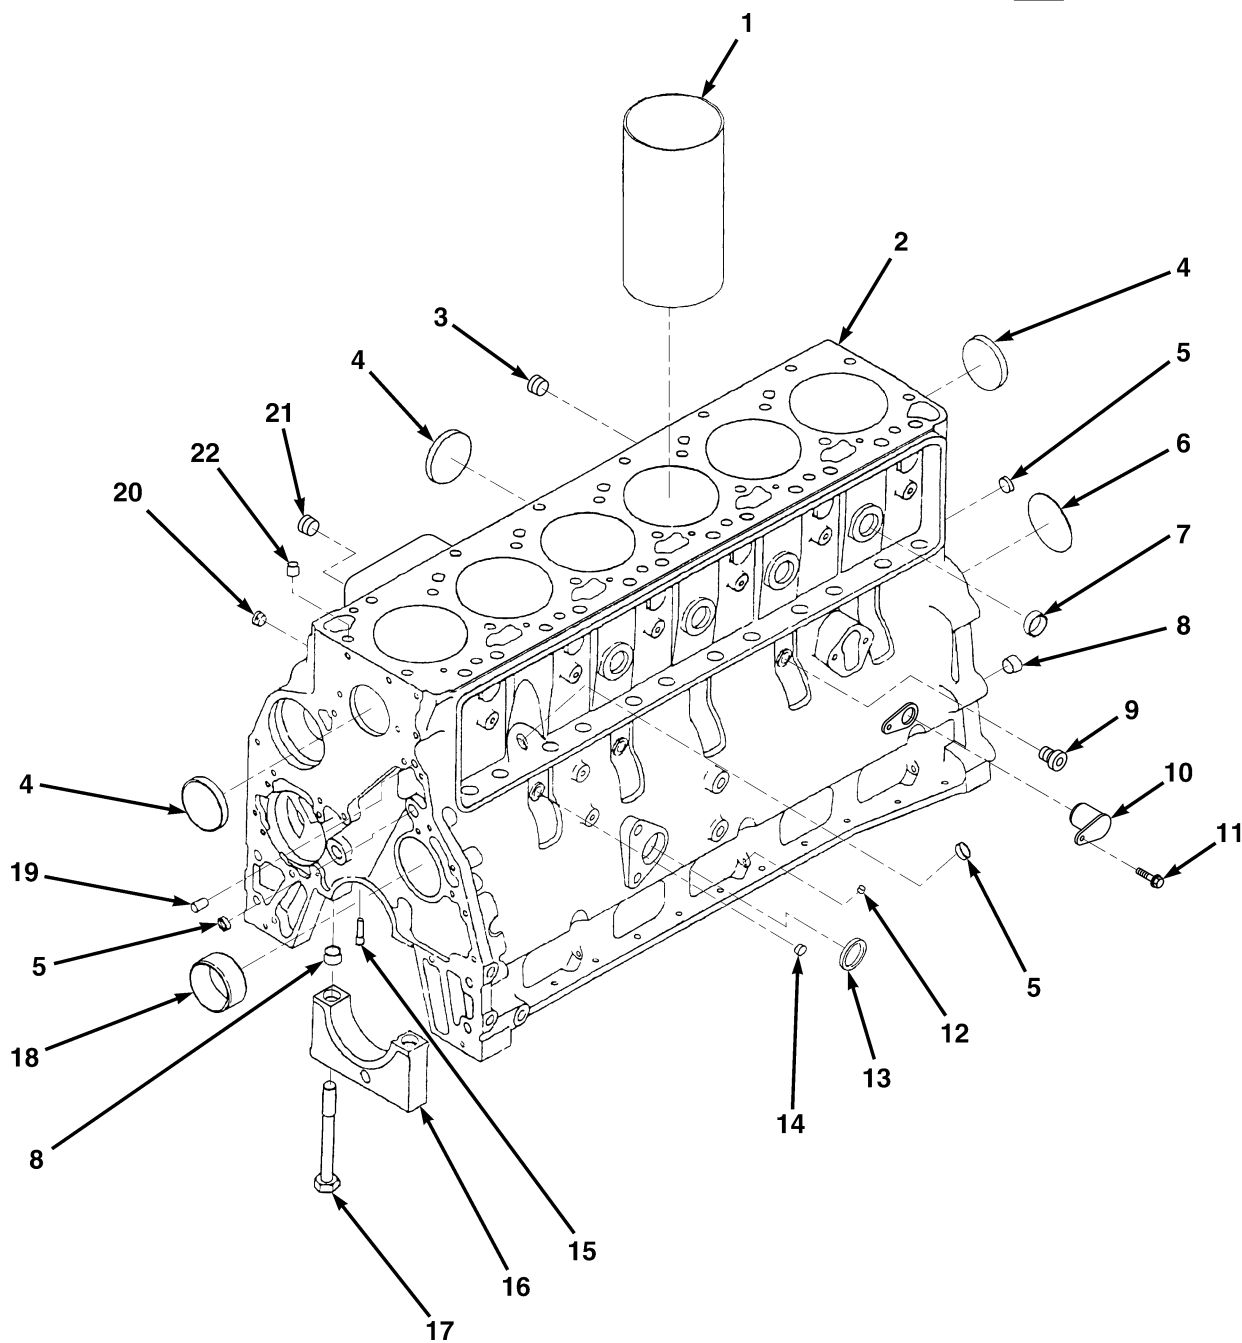


ME0464

FIG. 2 CYLINDER BLOCK

(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM NO	SMR CODE	NSN	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP AA: ENGINE						
FIG. 2 CYLINDER BLOCK						
1	PAHZZ	2815-01-262-3390	15434	3904166	CYLINDER SLEEVE, FOR REPAIR ONLY.....	1
2	PFHHH	2815-01-340-7123	15434	3935943	ENGINE BLOCK,DIESEL	1
3	KFHZZ	4730-01-214-7081	15434	3008469	• PLUG,PIPE,PART OF KIT P/N 3933220.....	1
4	PFHZZ	5340-01-431-8753	15434	3922072	• PLUG,EXPANSION	5
5	PFHZZ	5340-01-190-7424	15434	3900956	• PLUG,EXPANSION	3
6	KFHZZ	5340-01-194-4667	15434	3900687	• PLUG,EXPANSION,PART OF KIT P/N 3933220	1
7	PFHZZ	5340-01-435-7103	86403	4429 735	• PLUG,EXPANSION	4
8	KFHZZ	3120-01-294-9503	15434	3900068	• BEARING,SLEEVE,PART OF KIT P/N 3933220	14
9	KFHZZ	5365-01-454-5476	15434	3678921	• PLUG,MACHINE THREAD,PART OF KIT P/N 3933220	1
10	KFHZZ	5340-01-481-4437	15434	3932296	• PLUG,O-RING,PART OF KIT P/N 3933220	1
11	KFHZZ	5305-01-237-4915	15434	3900629	• SCREW,CAP,HEXAGON,PART OF KIT P/N 3933220	1
12	KFHZZ	5340-01-239-8607	15434	3900955	• PLUG,EXPANSION,PART OF KIT P/N 3933220	3
13	KFHZZ	5340-01-190-7425	15434	3900958	• PLUG,EXPANSION,PART OF KIT P/N 3933220	1
14	KFHZZ	5365-01-454-5474	15434	3678923	• PLUG,MACHINE THREAD,PART OF KIT P/N 3933220	3
15	KFHZZ	2815-01-485-5023	15434	3937214	• NOZZLE,LUBRICATING,PART OF KIT P/N 3933220	6
16	PFHZZ	2815-01-493-3058	0B8S3	3936791	• CAP,MAIN BEARING	7
17	PAHZZ	5306-01-477-6050	15434	3927948	• BOLT,SHOULDER	14
18	PAHZZ	3120-01-477-6294	15434	3940059	• BUSHING,SLEEVE	1
19	KFHZZ	5315-01-188-0761	15434	3900257	• PIN,STRAIGHT,HEADLE,PART OF KIT P/N 3933220	2
20	KFHZZ	4730-99-214-1783	K4843	3008468	• PLUG,PIPE,PART OF KIT P/N 3933220.....	1
21	KFHZZ	5340-01-431-8752	15434	3920706	• PLUG,EXPANSION,PART OF KIT P/N 3933220	1
22	KFHZZ	5315-01-188-0762	15434	3902343	• PIN,STRAIGHT,HEADLE,PART OF KIT P/N 3933220	2
END OF FIGURE						

 
1- 2 AND 3

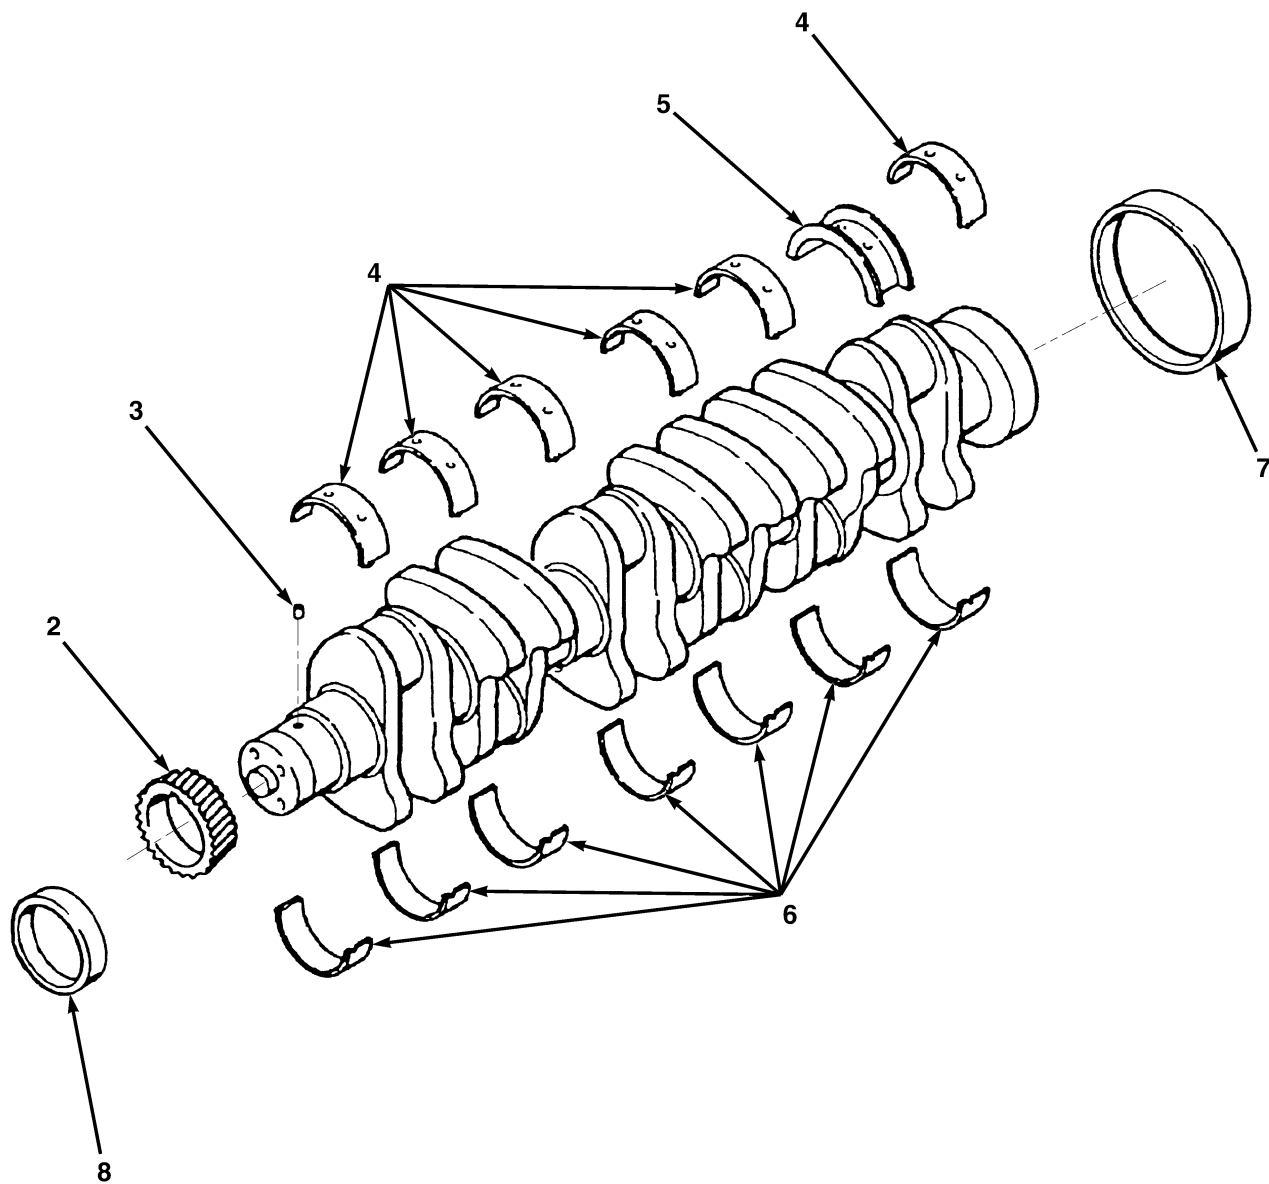

ME0466

FIG. 3 CRANKSHAFT AND MAIN BEARINGS


(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM NO	SMR CODE	NSN	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
					GROUP AA: ENGINE	
					FIG. 3 CRANKSHAFT AND MAIN BEARINGS	
1	PAHZZ	2815-01-294-1296	15434	3908032	CRANKSHAFT,ENGINE	1
2	PAHZZ	3020-01-355-3361	15434	3929027	GEAR,HELICAL,PART OF P/N 3908032	1
3	PAHZZ	5315-01-270-8285	15434	3904483	PIN,STRAIGHT,HEADLE,PART OF P/N 3908032	1
4	PAHZZ	3120-01-464-1298	15434	3929016	BEARING,MAIN,STD,PART OF KIT P/N 3802070	6
5	PAHZZ	3120-01-438-7001	15434	3926723	BEARING, HALF SET,PART OF KIT P/N 3802070	1
6	PAHZZ	3120-01-254-5344	15434	3802520	BEARING,SLEEVE,PART OF KIT P/N 3802070	7
7	PAHZZ	3120-01-266-1529	15434	3802820	BEARING,SLEEVE	1
8	PAHZZ	3120-01-266-1530	15434	3926126	BEARING,SLEEVE	1
END OF FIGURE						

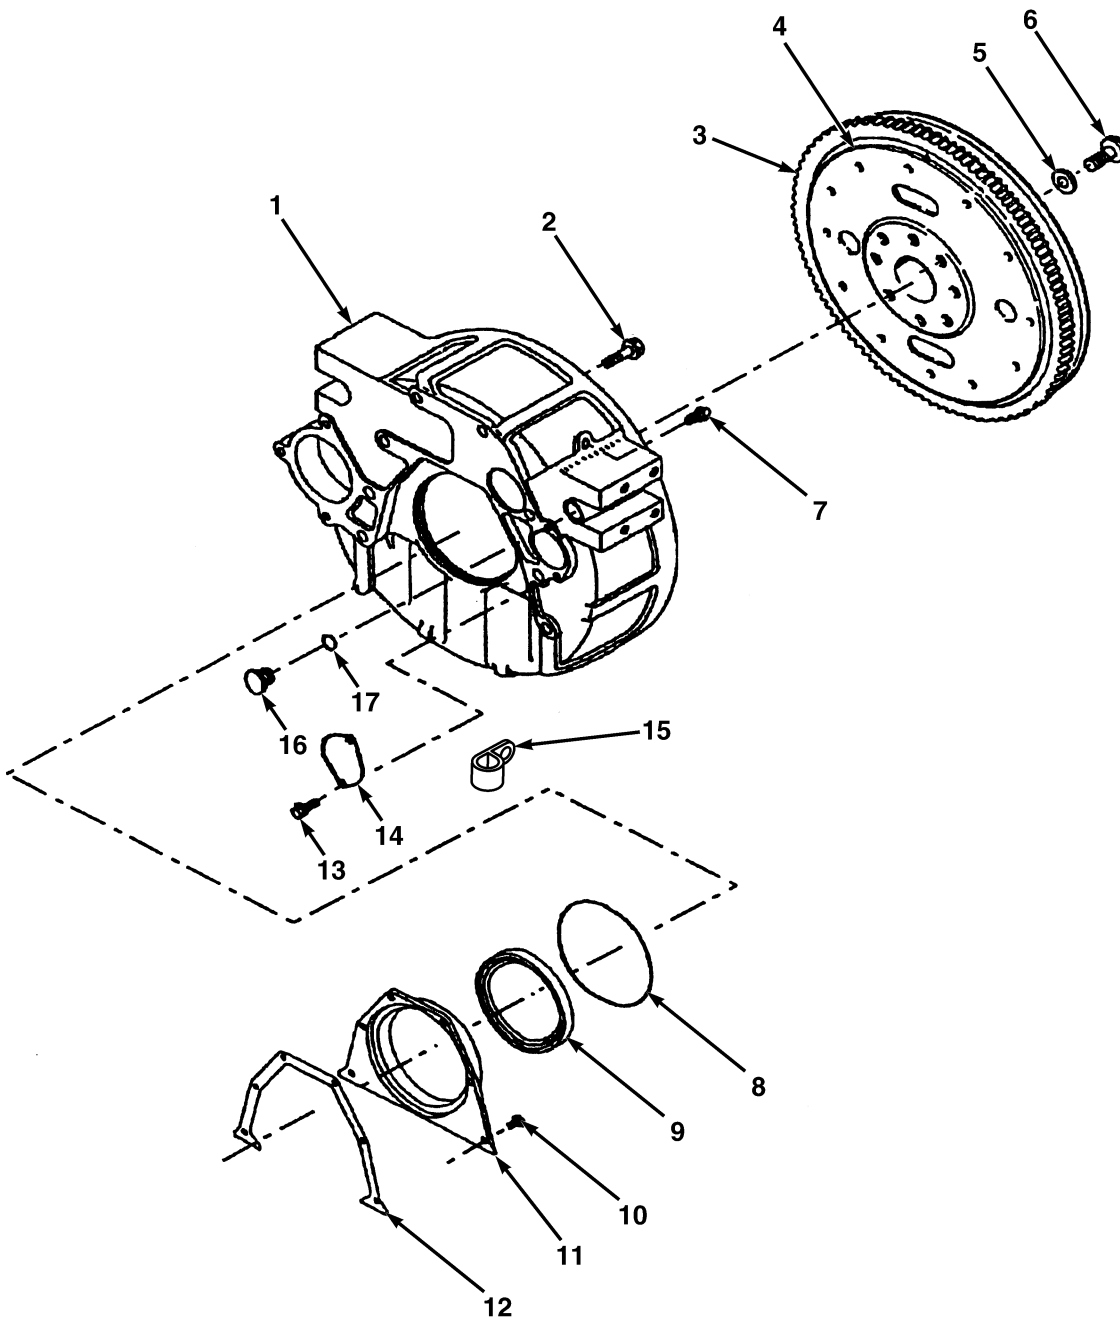 

ME0467

FIG. 4 FLYWHEEL AND FLYWHEEL HOUSING

(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM NO	SMR CODE	NSN	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP AA: ENGINE						
FIG. 4 FLYWHEEL AND FLYWHEEL HOUSING						
1	PFFZZ	2815-01-506-9971	0B8S3	3933387	HOUSING, FLYWHEEL	1
2	PAFZZ	5305-01-340-8395	15434	3920447	SCREW, CAP, HEXAGON	8
3	PAFZZ	3020-01-262-3343	15434	390177400	GEAR, INTERNAL, PART OF P/N 3908828	1
4	PAFZZ	2815-01-481-4268	12361	3908828	FLYWHEEL, ENGINE	1
5	PAFZZ	5310-01-234-2517	15434	3900269	WASHER, FLAT	8
6	PAFZZ	5305-01-192-5677	10988	J901395	SCREW, CAP, HEXAGON	8
7	PAFZZ	4730-01-237-6950	15434	3904181	PLUG, PIPE	1
8	PAFZZ	5330-01-271-9375	15434	3912473	PACKING, PREFORMED	1
9	PAFZZ	5331-01-480-9716	15434	3434485	O-RING	1
10	PAFZZ	5305-01-271-5851	15434	3913638	SCREW, CAP, HEXAGON	6
11	PAFZZ	2815-01-400-4036	15434	3936904	COVER, TIMING GEAR	1
12	PAFZZ	5330-01-304-7807	15434	3938159	GASKET	1
13	PAFZZ	5305-01-192-2036	15434	3912072	SCREW	2
14	PFFZZ	5340-01-406-9458	15434	3925234	COVER, ACCESS	1
15	PAFZZ	5340-01-478-0550	15434	3928989	CLAMP, LOOP	1
16	PAFZZ	2815-01-273-0571	15434	3910248	PLUG, FLYWHEEL HOUS	1
17	PAFZZ	5330-01-272-1124	15434	3910260	PACKING, PREFORMED	1
END OF FIGURE						

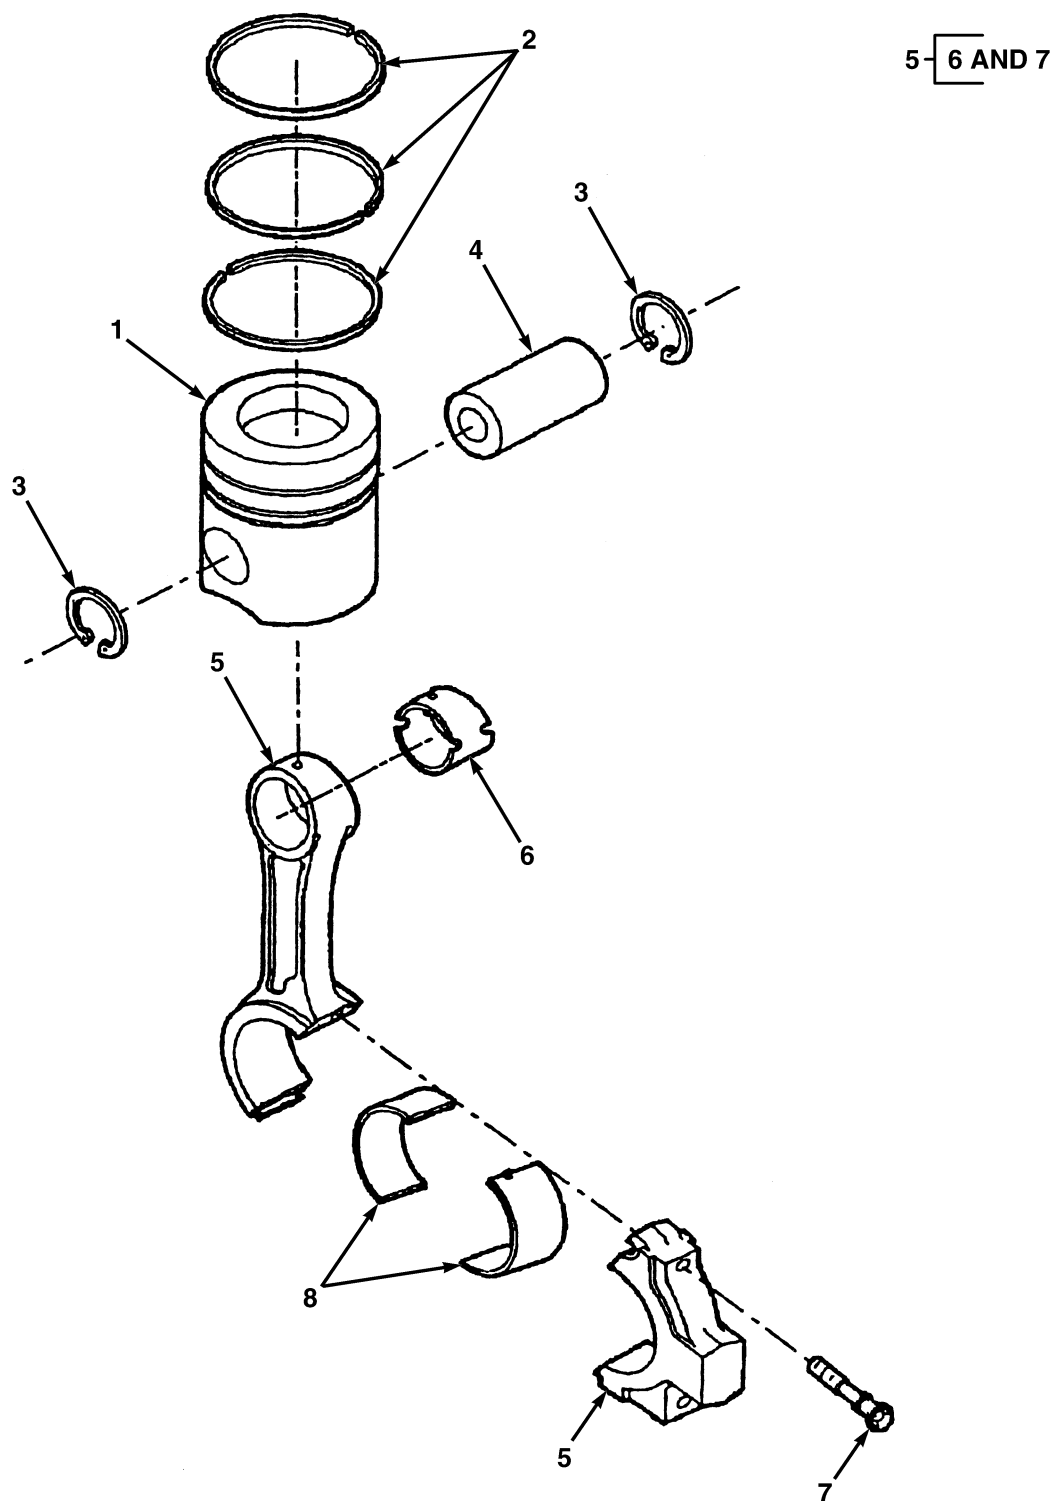 

ME0468

FIG. 5 CONNECTING ROD AND PISTON

(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM NO	SMR CODE	NSN	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
					GROUP AA: ENGINE	
					FIG. 5 CONNECTING ROD AND PISTON	
1	KFHZZ		15434	3802757-1	PISTON, PART OF KIT P/N 3802757	6
2	PAHZZ	2815-01-488-5708	15434	3802750	RING SET,PISTON,PART OF KIT P/N 3802757	6
3	PAHZZ	5325-01-412-6320	15434	3920691	RING,RETAINING,PART OF KIT P/N 3802757	12
4	PAHZZ	2815-01-441-6464	15434	3934047	PIN,PISTON	6
5	PAHZZ	2815-01-193-2638	15434	3942581	ROD,ENGINE CONNECTING.	1
6	XAHZZ		15434	3941476	BEARING,SLEEVE,PART OF P/N 3942581	1
7	PAHZZ	5305-01-190-1478	15434	3900919	SCREW,PART OF P/N 3942581	2
8	PAHZZ	3120-01-193-9475	15434	3901170	BEARING,SLEEVE	2
END OF FIGURE						