

This copy is a reprint which includes current
pages from Change 1.

TECHNICAL MANUAL

INTERMEDIATE DIRECT SUPPORT AND;
INTERMEDIATE GENERAL SUPPORT
MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS)
LOADER, SCOOP TYPE, DED 4X4
ARTICULATED FRAME STEER, 4 1/2 TO
5 CU. YD., (CCE)
ARMY MODEL H100C RB
TYPE I WITH 4 1/2 CU. YD. ROCK
BUCKET
NSN 3805-01-052-9042
ARMY MODEL
TYPE II WITH 5 CU. YD.
GENERAL PURPOSE BUCKET
NSN 3805-01-052-9043

SUPERSEDES COPY DATED 1 MAY 1986 AND ALL CHANGES.

Approved for Public Release: Distribution is Unlimited
HEADQUARTERS, DEPARTMENT OF THE ARMY

OCTOBER 1988

TECHNICAL MANUAL
TM 5-3805-255-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D. C., 12 October, 1988.

INTERMEDIATE DIRECT SUPPORT AND
INTERMEDIATE GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE PARTS)

LOADER, SCOOP TYPE, DED, 4 X 4,
ARTICULATED FRAME STEER, 4 1/2 TO
5 CU. YD., (CCE)
ARMY MODEL H100C RB
TYPE I WITH 4 1/2 CU. YD. ROCK BUCKET
NSN 3805-01-052-9042
ARMY MODEL H100C GPB
TYPE 11 WITH 5 CU. YD. GENERAL PURPOSE BUCKET
NSN 3805-01-052-9043

Current as of 21 Jun 1988.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommend Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

			PAGE	ILLUS FIG
SECTION I.	INTRODUCTION		1	
SECTION II.	REPAIR PARTS LIST		1-1	
GROUP 01	ENGINE			
	0101-ENGINE ASSEMBLY.....		1-1	
	I.H ENGINE AND MOUNTING		1-1	1
	0101-CRANKCASE, BLOCK, CYLINDER HEAD		2-1	
	ENGINE BLOCK ASSEMBLY AND RELATED PARTS.....		2-1	2
	CYLINDER HEAD		3-1	3

SUPERSEDES COPY DATED May 1986 and all changes.

TABLE OF CONTENTS

	PAGE	ILLUS FIG
0102-CRANKSHAFT	4-1	
CRANKSHAFT	4-1	4
0103-FLYWHEEL ASSEMBLY	5-1	
FLYWHEEL HOUSING AND RELATED PARTS	5-1	5
0104-PISTONS, CONNECTING RODS.....	6-1	
CONNECTION ROD, PISTON AND CYLINDER SLEEVE	6-1	6
0105-VALVES, CAMSHAFTS, AND TIMING SYSTEM.....	7-1	
TIMING GEARE TRAIN AND COVER	7-1	7
HYDRAULIC PUMP AND IDLER GEARE SHAFT.....	8-1	8
CAMSHAFT AND RELATED PARTS	9-1	9
VALVE HOUSING AND RELATED PARTS.....	10-1	10
0106-ENGINE LUBRICATION SYSTEM	12-1	
LUBRICATING OIL FILTER	12-1	12
LUBRICATING OIL PUMP AND CONNECTIONS	13-1	13
OIL PAN	14-1	14
ENGINE LUBRICATION SYSTEM LINES AND FITTINGS	15-1	15
OIL GAGE, FILLER PIPE, LUBRICATION SUCTION PIPING AND RELATED PARTS	16-1	16
BREATHEERASSEMBLY	17-1	17
ENGINE OIL COOLER.....	18-1	18
0108-MANIFOLDS	19-1	
MANIFOLD	19-1	19
GROUP 03 FUEL SYSTEM		
0301-CAREBURETOR, FUEL INJECTOR	20-1	
NOZZLE AND NOZZLE HOLDER	20-1	20
FUEL INJECTION PIPES.....	21-1	21
0302-FUEL PUMPS	22-1	
FUEL INJECTION PUMP DRIVE	22-1	22
FUEL INJECTOR LINES AND FITTINGS	23-1	23
0304-AIR CLEANER	24-1	
AIR CLEANER.....	24-1	24
AIR CLEANER LINES AND FITTINGS	25-1	25
0305-SUPERCHAREGER, BLOWER OR TURBOCHAREGER	26-1	
TURBOCHAREGER PIPING AND RELATED PARTS	26-1	26
TURBOCHAREGER.....	27-1	27
0306-TANKS, LINES, FITTINGS, HEADERS.....	28-1	
FUEL HEADERS	28-1	28
FUEL TANK AND RELATED PARTS	29-1	29
0308-ENGINE SPEED GOVERNOR AND CONTROLS	30-1	
ENGINE GOVERNOR LINKAGE	30-1	30
0309-FUEL FILTERS	31-1	
FINAL FUEL FILTER AND RELATED PARTS	31-1	31
0311-ENGINE STARETING AIDS	32-1	
ETHEER STARETING KIT.....	32-1	32
ETHEER STARETER ATTACHING PARTS.....	33-1	33
0312-ACCELERATOR, THEROTTLE OR CHOKE CONTROLS	34-1	
ACCELERATOR PEDAL AND LINKAGE.....	34-1	34
ENGINE SHUTDOWN	35-1	35
GROUP 04 EXHAUST SYSTEM		
0401-MUFFLER AND PIPES	36-1	
MUFFLER AND EXHAUST PIPE.....	36-1	36

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 05 COOLING SYSTEM		
0501-RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	37-1	
RADIATOR GRILLE AND CONVERTER OIL COOLER	37-1	37
RADIATOR	38-1	38
0502-COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, ETC	39-1	
RADIATOR SHROUD	39-1	39
0503-WATER MANIFOLD, HEADERS, THERMOSTATS AND		
HOUSING GASKET	40-1	
RADIATOR HOSES AND PIPES	40-1	40
WATER MANIFOLD, THERMOSTATS AND RELATED PARTS	41-1	41
0505-FAN ASSEMBLY	42-1	
FAN	42-1	42
FAN PULLEY, FAN DRIVE SHAFT AND DRIVE GEARE	43-1	43
0508-WATER FILTER	44-1	
COOLANT FILTER AND COMPONENTS	44-1	44
GROUP 06 ELECTRICAL SYSTEM		
0601-GENERATOR, ALTERNATOR	45-1	
ALTERNATOR WITH THE INTEGRAL REGULATOR	45-1	45
ALTERNATOR RELATED PARTS	46-1	46
ALTERNATOR MOUNTING HARDWARE	47-1	47
0603-CRANKING MOTOR ASSEMBLY	48-1	
CRANKING MOTOR	48-1	48
STARTER BRUSHES AND RELATED PARTS	49-1	49
STARTER ARMATURE AND RELATED PARTS	50-1	50
MOTOR DRIVE AND RELATED PARTS	51-1	51
STARTER SOLENOID AND RELATED PARTS	52-1	52
0607-INSTRUMENT OR ENGINE CONTROL PANEL	53-1	
INSTRUMENT PANEL	53-1	53
SHIFT MODULATOR SYSTEM	54-1	54
0609-LIGHTS	55-1	
LAMP ASSEMBLY	55-1	55
LOW LEVEL HEAD LAMP ASSEMBLY	56-1	56
LOW LEVEL HEAD LIGHT WIRING	57-1	57
0610-SENDING UNITS AND WARNING SWITCHES	58-1	
SENDING UNITS	58-1	58
0612-BATTERIES, STORAGE	59-1	
BATTERY AND MOUNTING	59-1	59
0613-CHASSIS WIRING HARNESS	60-1	
WIRING HARNESS	60-1	60
GROUP 07 TRANSMISSION		
0705-TRANSMISSION SHIFTING COMPONENTS	61-1	
TRANSMISSION CONTROL GEAR SHIFT LINKAGE	61-1	61
0708-TORQUE CONVERTER OR FLUID COUPLING	62-1	
TORQUE CONVERTER	62-1	62
TORQUE CONVERTER CONTINUED	63-1	63
TORQUE CONVERTER LINES AND FITTINGS	64-1	64
0710-TRANSMISSION ASSEMBLY	65-1	
TRANSMISSION REAR COVER	65-1	65
TRANSMISSION MOUNTING	66-1	66
TRANSMISSION	67-1	67
TRANSMISSION	68-1	68
TRANSMISSION	69-1	69

TABLE OF CONTENTS

	PAGE	ILLUS FIG
0713-INTERMEDIATE CLUTCH.....	70-1	
BASIC CLUTCH PACK	70-1	70
CLUTCH GROUP FORWARDED AND REVERSE.....	71-1	71
CLUTCH GROUP, 1ST AND 3RD, 2ND AND 4TH.....	72-1	72
0721-COOLERS, PUMPS, MOTORS.....	73-1	
TRANSMISSION OIL FILTER.....	73-1	73
RANGE SELECTOR VALVE.....	74-1	74
FORWARDED AND REVERSE VALVE	75-1	75
NEUTRAL KNOCKDOWN VALVE	76-1	76
MAIN REGULATOR VALVE.....	77-1	77
CHARGING PUMP	78-1	78
CONVERTER LINE OIL FILTER.....	79-1	79
GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
0900-PROPELLER SHAFTS.....	80-1	
DRIVE SHAFTS	80-1	80
DRIVE SHAFTS	81-1	81
DRIVE SHAFTS	82-1	82
DRIVE SHAFTS	83-1	83
TRANSFER DRIVE ASSEMBLY	84-1	84
GROUP10 FRONT AXLE		
1000-FRONT AXLE ASSEMBLY	85-1	
FRONT AXLE ASSEMBLY.....	85-1	85
1002-DIFFERENTIAL.....	86-1	
FRONT DIFFERENTIAL ASSEMBLY	86-1	86
1003-PLANETAREY OR FINAL DRIVE	87-1	
FRONT PLANETAREY DRIVE ASSEMBLY	87-1	87
GROUP 11 REARE AXLE		
1100-REARE AXLE ASSEMBLY.....	88-1	
REARE AXLE ASSEMBLY.....	88-1	88
1101-HOUSING, BEAM, HOUSING COVERS, PLUGS, SEALS, ETC ..	89-1	
REARE AXLE HOUSING	89-1	89
1102-DIFFERENTIAL.....	90-1	
REARE DIFFERENTIAL ASSEMBLY	90-1	90
1103-PLANETAREY OR FINAL DRIVE.....	91-1	
REARE PLANETAREY DRIVE ASSEMBLY	91-1	91
GROUP12 BRAKES		
1201-HAND BRAKES.....	92-1	
PARKING BRAKE LEVER	92-1	92
PARKING BRAKE ASSEMBLY.....	93-1	93
1202-SERVICE BRAKES	94-1	
BRAKE ASSEMBLY	94-1	94
1204-HYDRAULIC BRAKE SYSTEM.....	95-1	
WHEEL CYLINDER AND RELATED PARTS	95-1	95
POWER CLUSTER	96-1	96
1208-AIR BRAKE SYSTEM	97-1	
ALCOHOL INJECTOR	97-1	97
DRAIN VALVE.....	98-1	98
SAFETY VALVE	99-1	99
CHECK VALVE	100-1	100
TREADLE VALVE LEFT HAND	101-1	101

TABLE OF CONTENTS

	PAGE	ILLUS FIG
TREADLE VALVE RIGHT HAND	102-1	102
RELAY VALVE ASSEMBLY	103-1	103
AIR BRAKE LINES AND FITTINGS	104-1	104
AIR BRAKE LINES AND FITTINGS PRIMAREY AND SECONDAREY RESERVOIR TO DRAIN VALVE	105-1	105
AIR BRAKE LINES AND FITTINGS PRIMAREY AND SECONDAREY RESERVOIR TO RIGHT HAND TREADLE VALVE	106-1	106
AIR BRAKE LINES AND FITTINGS POWER CLUSTER, TREADLE VALVE AND CHECK VALVE	107-1	107
1209-AIR COMPRESSOR ASSEMBLY	108-1	
AIR COMPRESSOR AND RELATED PARTS	108-1	108
CRANKSHAFT	109-1	109
PISTONS AND CONNECTING RODS	110-1	110
AIR DISCHAREGE SYSTEM	111-1	111
GOVERNOR ASSEMBLY	112-1	112
AIR COMPRESSOR LINES AND FITTINGS	113-1	113
GROUP 13 WHEELS AND TRACKS		
1311-WHEEL ASSEMBLY	114-1	
BRAKE DRUM AND RELATED PARTS	114-1	114
WHEEL AND MOUNTING	115-1	115
1313-TIRES, TUBES, TIRE CHAINS	116-1	
TIRE	116-1	116
GROUP 14 STEERING		
1401-MECHANICAL STEERING GEARE ASSEMBLY	117-1	
STEERING SHAFT COLUMN ASSEMBLY	117-1	117
STEERING LINKAGE	118-1	118
STEERING GEARE ASSEMBLY	119-1	119
1410-HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	120-1	
STEERING PUMP ASSEMBLY	120-1	120
1411-HOSES, LINES, FITTINGS	121-1	
STEERING LINES AND FITTINGS	121-1	121
1412-HYDRAULIC OR AIR CLYLINDERS	122-1	
STEERING CYLINDER	122-1	122
1414-STEERING SYSTEM VALVES	123-1	
STEERING VALVE	123-1	123
STEERING VALVE CONTINUED	124-1	124
DEMAND VALVE	125-1	125
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARES		
1501-FRAME ASSEMBLY	126-1	
HINGE PIN	126-1	126
FRAME ASSEMBLY	127-1	127
BOLSTER ASSEMBLY	128-1	128
1502-COUNTERWEIGHTS	129-1	
COUNTERWEIGHTS	129-1	129
GROUP 18 BODY, CAB, HOOD		
1801-BODY, CAB, AND HOOD ASSEMBLIES	130-1	
BULKHEAD, COWLING AND PANELS	130-1	130
CAB ASSEMBLY	131-1	131
ROLL OVER PROTECTIVE STRUCTURE AND RELATED PARTS	132-1	132
1802-FENDERS, WINDSHIELD, GLASS ETC	133-1	
WINDSHIELD AND WINDOW GLASS AND SEAL	133-1	133

TABLE OF CONTENTS

	PAGE	ILLUS FIG
1805-FLOORS, SUBFLOORS, AND RELATED COMPONENTS	134-1	
FRONT AND REARE FLOORBOARDS	134-1	134
1806-UPHOLSTERY SEATS AND CAREPETS	135-1	
SEAT ASSEMBLY	135-1	135
GROUP 22 BODY AND CHASSIS ITEMS		
2202-ACCESSORY ITEMS.....	136-1	
HEATER AND DEFROSTER PIPING	136-1	136
AIR HORN VALVE ASSEMBLY	137-1	137
AIR HORN ASSEMBLY.....	138-1	138
AIR HORN ASSEMBLY.....	139-1	139
BLOWER	140-1	140
BACK UP ALAREM KIT	141-1	141
WIPER MOTOR ASSEMBLY	142-1	142
WIPER MOTOR AIR OPERATED	143-1	143
WIPER MOTOR ASSEMBLY AIR OPERATED	144-1	144
2210-DATA PLATES AND INSTRUCTION HOLDERS	145-1	
DATA AND INSTRUCTION PLATES.....	145-1	145
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401-PUMP AND MOTOR.....	146-1	
MAIN HYDRAULIC PUMP	146-1	146
2402-MANIFOLD AND/OR CONTROL VALVES.....	147-1	
MAIN CONTROL VALVE ASSEMBLY (2 SPOOL)	147-1	147
MAIN CONTROL VALVE CYLINDER RELIEF AND VOID CONTROL ASSEMBLY (2 SPOOL).....	148-1	148
MAIN CONTROL VALVE AND RELATED PARTS (2 SPOOL)	149-1	149
MAIN CONTROL VALVE CARETRIDGE ASSEMBLY (2 SPOOL)	150-1	150
RESERVOIR RELIEF VALVE	151-1	151
DRAIN VALVE.....	152-1	152
MAIN CONTROL VALVE (3 SPOOL)	153-1	153
MAIN CONTROL VALVE CARETRIDGE ASSEMBLY (3 SPOOL)	154-1	154
MAIN CONTROL VALVE AND RELATED PARTS (3 SPOOL)	155-1	155
MAIN CONTROL VALVE CYLINDER RELIEF (3 SPOOL).....	156-1	156
CONTROL VALVE	157-1	157
2403-HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	158-1	
VALVE CONTROL LINKAGE (2 SPOOL)	158-1	158
VALVE CONTROL LINKAGE (3 SPOOL).....	159-1	159
2406-STRAINERS, FILTERS, LINES AND FITTINGS, ETC	160-1	
HYDRAULIC LINES AND FITTINGS	160-1	160
HYDRAULIC LINES AND FITTINGS OIL COOLING	161-1	161
HYDRAULIC LINES AND FITTINGS DEMAND AND LOADER	162-1	162
HYDRAULIC LINES AND FITTINGS VALVE TO BOOM CYLINDER, BUCKET CYLINDER, AND CYLINDER BUCKET PUMP.....	163-1	163
HYDRAULIC LINES AND FITTINGS FRONT END ATTACHMENT	164-1	164
BUCKET LEVELER AND POSITION INDICATOR KIT	165-1	165
BUCKET POSITION INDICATOR	166-1	166
2407-HYDRAULIC CYLINDERS.....	167-1	
BOOM AND LOGGER CYLINDER	167-1	167
BUCKET CYLINDER.....	168 -1	168
HYDRAULIC AIR CYLINDERS	169-1	169
2408-LIQUID TANKS OR RESERVOIRS	170-1	
HYDRAULIC RESERVOIR ASSEMBLY	170-1	170

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 47 GAUGES (NON ELECTRICAL), WEIGHING AND MEASURING DEVICES		
4702-GAUGES, MOUNTINGS, LINES, AND FITTINGS	171-1	
FUEL PRESSURE AND AIR PRESSURE GAUGE	171-1	171
GROUP 74 CRANES, SHOVELS, AND EARETHE MOVING EQUIPMENT COMPONENTS		
7436-LIFT AREMS AND PIVOTASSEMBLIES.....	172-1	
BOOM AND LINKAGE	172-1	172
7437-LOADER BUCKET ASSEMBLY OR FORKLIFT	173-1	
GENERAL PURPOSE BUCKET	173-1	173
SPADE NOSE BUCKET.....	174-1	174
BUCKET TEETHE AND TOOTHE TIPS	175-1	175
BUCKET TEETHE AND TOOTHE TIPS	176-1	176
7439-CIRCLE REVERSE DRAWBARE SIDE SHIFT AND		
LIFT MECHANISM	177-1	
BOOM POSITIONER	177-1	177
BOOM POSITIONER CONTROL VALVE	178-1	178
GROUP 94 REPAIR KITS		
9401-REPAIR KITS.....	KIT-1	
KIT	KIT-1	KIT
GROUP 95 GENERAL USE STANDAREDIZED PARTS		
9501-BULK MATERIEL.....	BULK-1	
BULK MATERIEL	BULK-1	BULK

SECTION. III. SPECIAL TOOLS LIST (NOT APPLICABLE)

SECTION IV. CROSS-REFERENCE INDEXES

NATIONAL STOCK NUMBER INDEX	I-1
PARET NUMBER INDEX	I-21
FIGURE AND ITEM NUMBER INDEX	I-100

INTERMEDIATE DIRECT SUPPORT AND
INTERMEDIATE GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE PARTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment CTMDE); and other special support equipment required for performance of Intimidate Direct Support and Intimidate General Support Maintenance of the Loader, Scoop Type. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) cods.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

 
a. *Section II. Repair Parts List.* A list of spares and Repair parts authorized by this RPSTL for us in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending Figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/Figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/Figure and item number apparent. The Figure and item number index lists Figure and item numbers in alphanumeric sequence and cross- references NSN, FSCM or CAGE, and part numbers.

3. Explanation of Columns (Sections 11 and 111).

- a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.
- b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) cod is a 5-position cod containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

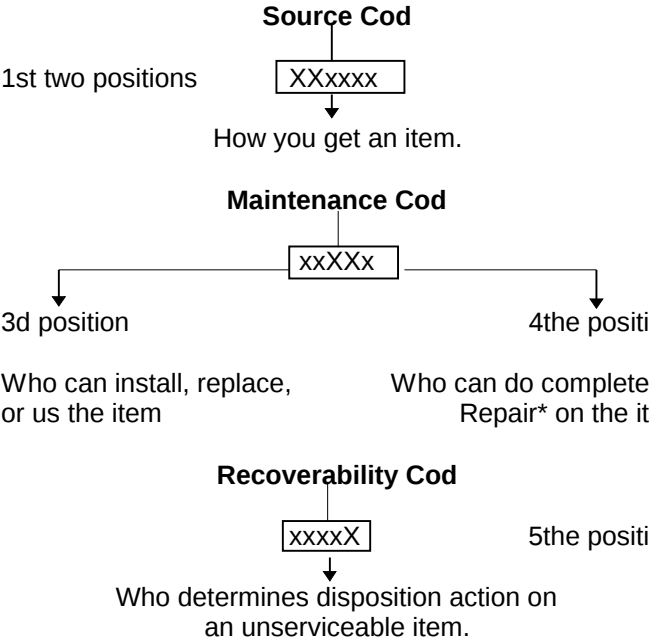

 *Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a us/user environment in order to restore serviceability to a failed item.

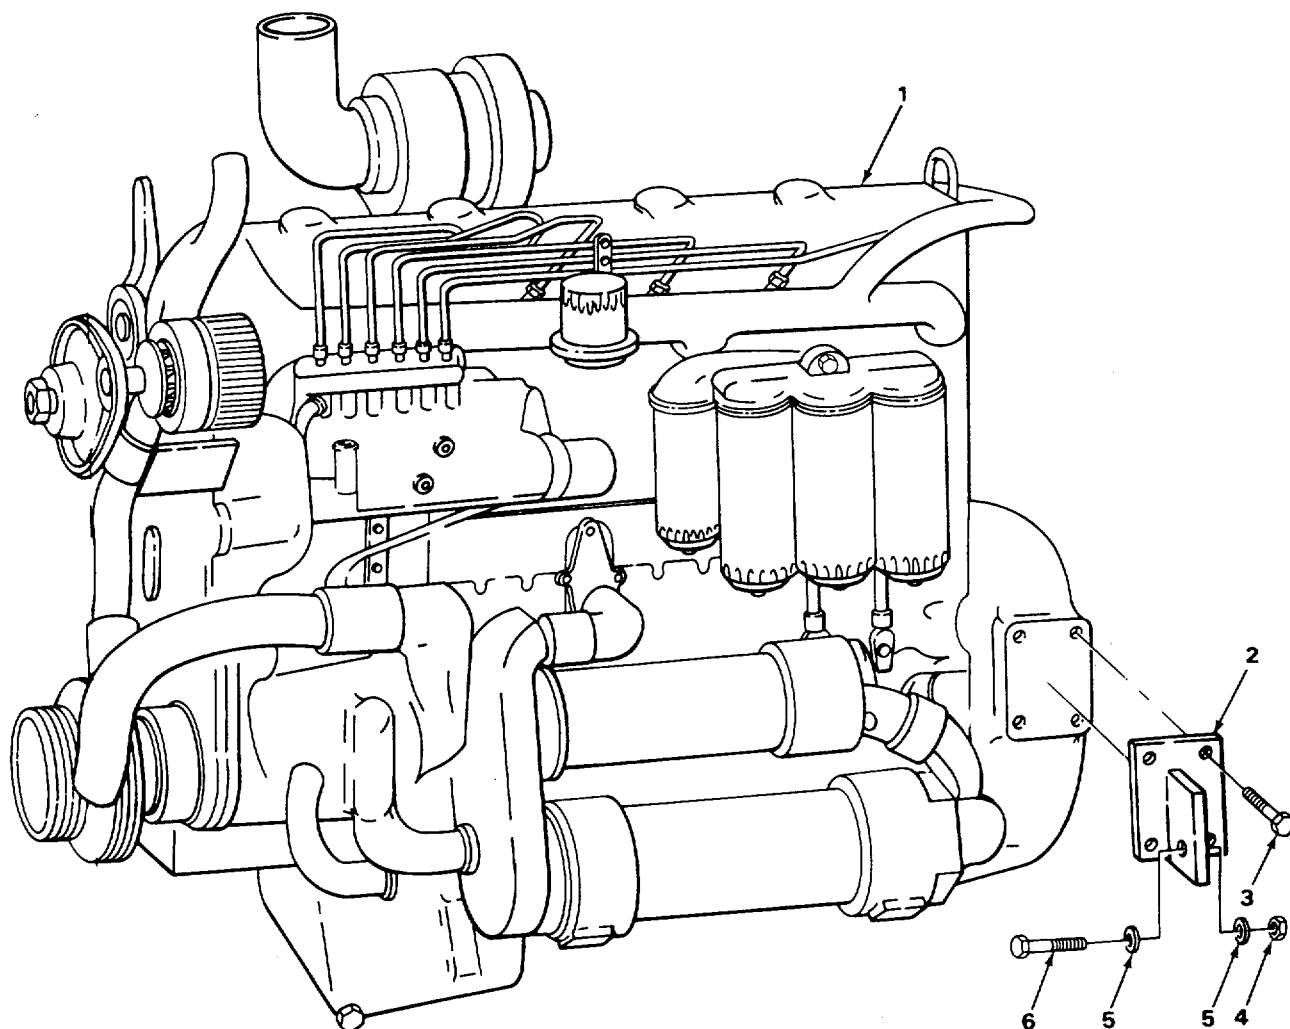

TA235009

FIGURE 1. I.H. ENGINE AND MOUNTING

SECTION II					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PARET		
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 01 ENGINE					
GROUP 0100 ENGINE ASSEMBLY					
FIG. 1 I.H.ENGINE AND MOUNTING					
1	PAFHD	29510	68446692	ENGINE,DIESEL	1
2	XDFZZ	29510	163441H1	MOUNT,RH BELL HOUSING AND ENGINE	1
2	XDFZZ	29510	163442H2	MOUNT,LH BELL HOSING AND ENGINE.....	1
3	PFFZZ	29510	26162R1	SCREW,CAP,HEXAGON H	8
4	PFFZZ	29510	9413986	NUT,PLAINPHEXAGON.....	2
5	PFFZZ	29510	25550R1	WASHER,FLAT	4
6	PFFZZ	29510	25777RI	SCREW,MACHINE	2

END OF FIGURE


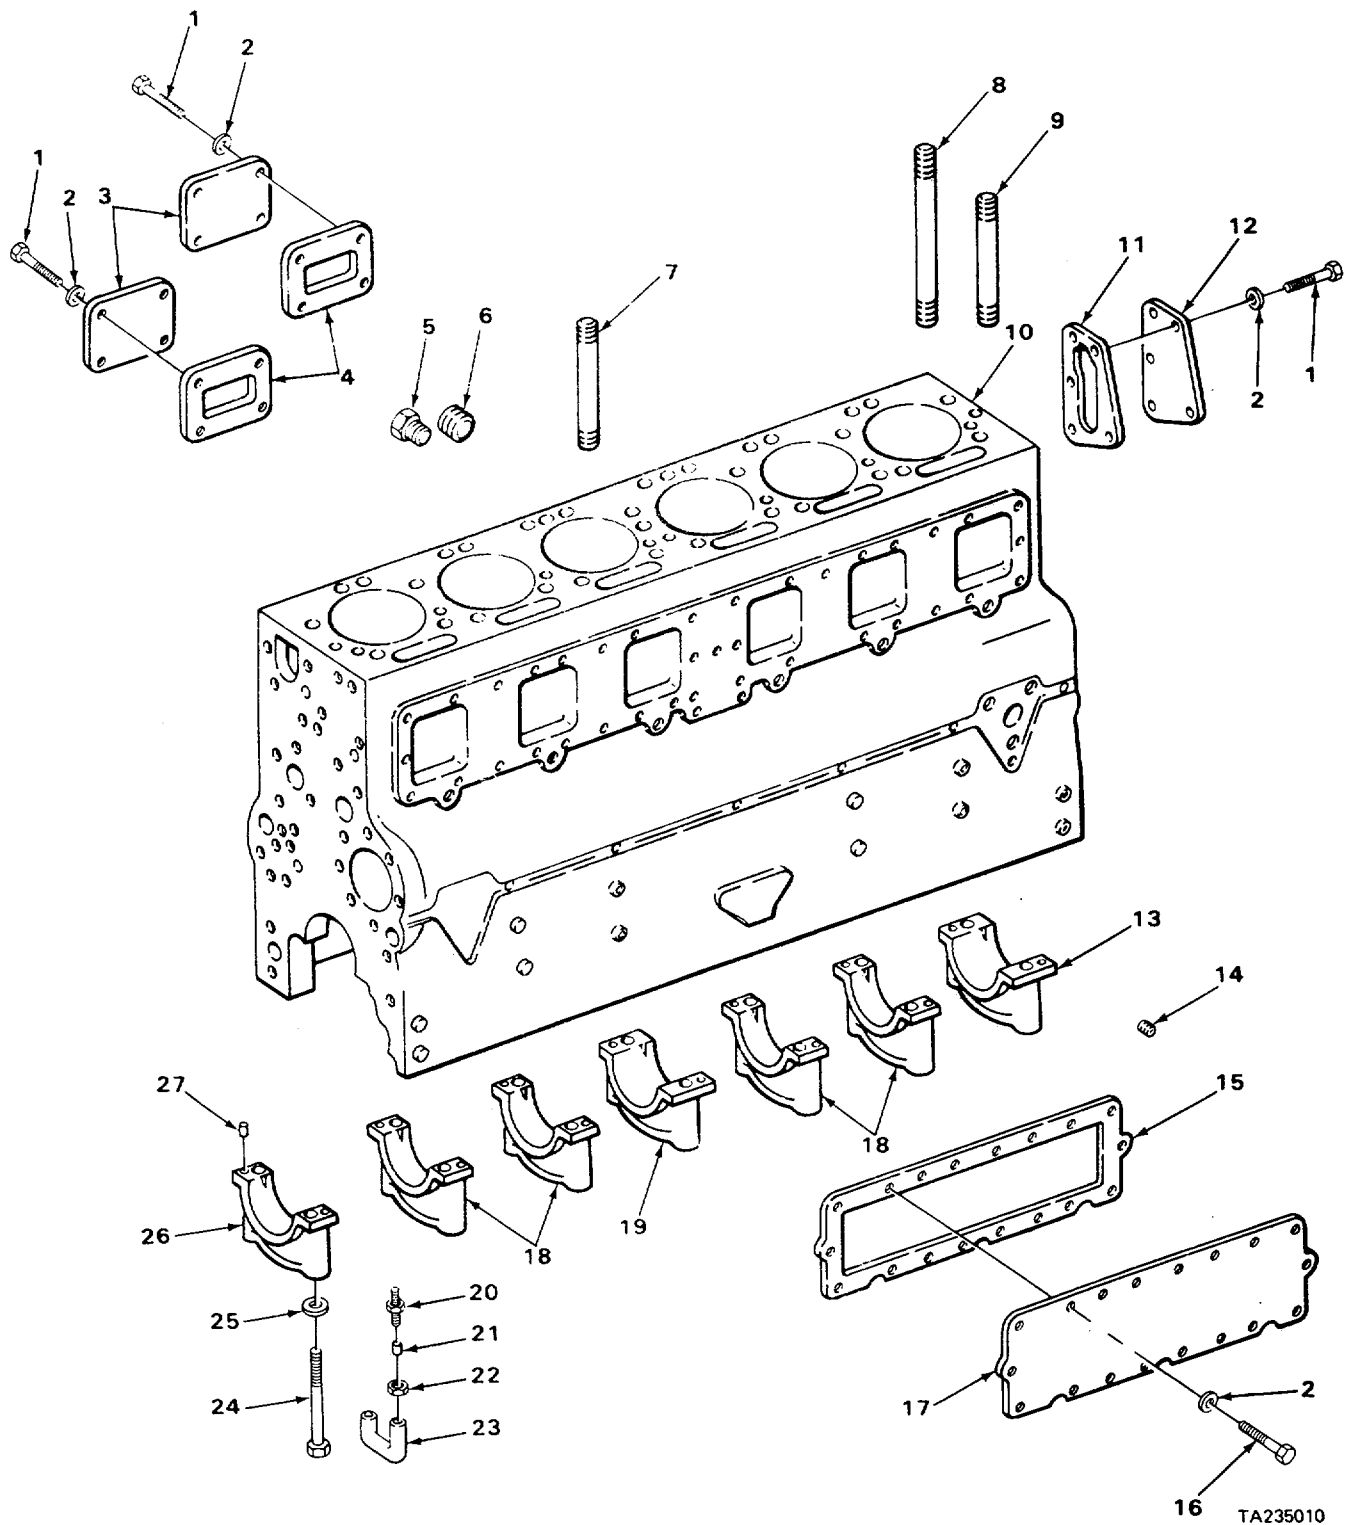 


FIGURE 2. ENGINE BLOCK ASSEMBLY AND RELATED PARTS

SECTION II				TM 5-3805-255-34P	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR	FSCM	PARET	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
NO	CODE		NUMBER		
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD FIG.2 ENGINE BLOCK ASSEMBLY AND RELATED PARTS					
1	PFFZZ	89346	24940R1	BOLT.....	13
2	PFFZZ	29510	25896R1	WASHER,FLAT	49
3	PFFZZ	93742	125-3062	COVER,ACCESS CRANKCASE SIDE.....	2
4	PFFZZ	29510	279713R1	GASKET CRANKCASE SIDE COVER PARET OF..... KIT P/N 332662R94.....	2
5	XOFZZ	29510	192085	BUSHING REDUCING PIPE	1
6	PFFZZ	29510	21502R1	PLUG PIPE	3
7	PFFZZ	29510	687588C2	STUD,PLAIN USE ON ENGINE SERIAL	1
8	PFFZZ	29510	279799R1	NUMBER 13064 AND UP	12
9	PFFZZ	29510	279798R1	ROOTTHEREADED END O(LONG)04	13
9	PFFZZ	29510	279798R1	STUD,PLAIN CYLINDER HEAD,USE ON..... SERIAL NUMBER 13063 AND BELOW	12
10	PFHHD	29510	687106C91	(SHORT)	1
11	PFFZZ	29510	279724R1	STUD,PLAIN CYLINDER HEAD,USE ON..... ENGINE SERIAL NUMBER 13064 AND UP	1
12	XDFZZ	29510	279723R1	(SHORT)	1
13	XDFZZ	29510	305803R1	ENGINE BLOCK ASSEMB	1
14	PFFZZ	24617	444688	RING,LUBRICATING CI CRANKCASE REARE	1
15	PFFZZ	29510	349456R1	COVER PARET OF KIT P/N 332662R94.1	1
16	PFFZZ	29510	24839R1	COVER,ACCESS	5
17	PFFZZ	29510	349455R1	CAP,PILLOW BLOCK CRANKSHAFT THERUST	2
18	PFFZZ	29510	305801R1	BEAREING	2
19	XDFZZ	29510	305802R1	PLUG,PIPE	36
20	PFFZZ	29510	278039R1	GASKET PUSH ROD CHAMBER COVER PARET..... OF KIT P/N 332662R94662R	2
21	PFFZZ	29510	278040R2	SCREWTCAP,HEXAGON H	4
22	PFFZZ	29510	278041R1	COVER,ACCESS CHAMBER	1
23	PFFZZ	29510	277951R1	CAP,PILLOW BLOCK INTERMEDIATE	2
24	PFFZZ	93742	125-3116	CRANKSHAFT BEAREING	1
25	PFFZZ	11083	IF9233	CAP CENTER CRANKSHAFT BEAREING.....	2
26	XDFZZ	29510	305800R1	ADAPTER,STRAIGHT,PI	2
27	XDFZZ	29510	20031R1	REDUCER,TUBE GEARE OIL JET TUBE	2
				NUT,PLAIN,HEXAGON GEARE OIL JET TUBE.....	2
				TUBE,BENT,METALLIC GEARE OIL JET	1
				SCREW,CAP CRANKSHAFT BEAREING CAP.....	14
				WASHERTFLAT CRANKSHAFT BEAREING CAP	14
				CAP,PILLOW BLOCK FRONT CRANKSHAFT	1
				BEAREING	14
				DOWEL CRANKSHAFT BEAREING CAP	14

 END OF FIGURE

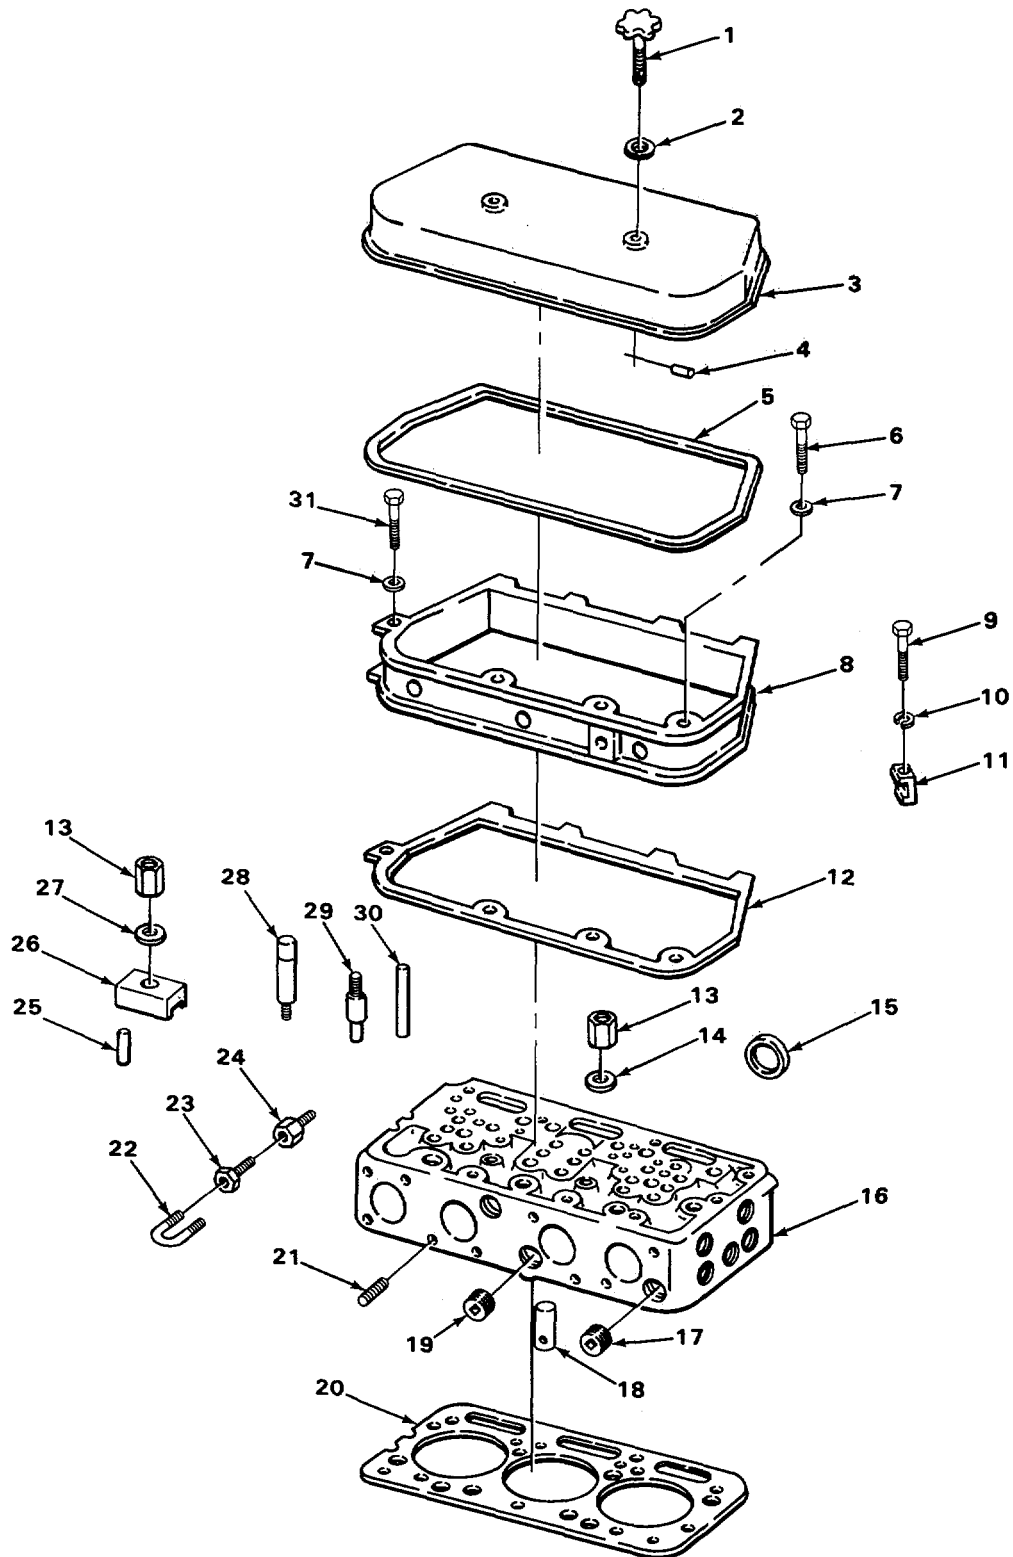

TA235011

FIGURE 3. CYLINDER HEAD

SECTION II					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR	FSCM	PARET	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
NO	CODE		NUMBER		
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD FIG.3 CYLINDER HEAD					
1	PFFZZ	29510	277613R11	THEUMBSCREW VALVE HOUSING COVER.....	4
2	XDFZZ	29510	606610C1	GASKET	4
3	XDFZZ	29510	671377C1	COVER FRONT AND REARE VALVE HOUSING	2
4	XDFZZ	29510	125-3170	PIN,SPRING	4
5	PFFZZ	29510	672167C1	GASKET VALVE COVER PARET OF KIT P/N	2
				701137C971137C 97.....	
6	PFFZZ	29510	24846R1	BOLT MACHINE.....	6
7	PFFZZ	29510	25896R1	WASHER,FLAT	8
8	XDFZZ	29510	671375C1	HOUSING VALVE COVER.....	2
9	PFFZZ	29510	374831R1	SOLT MACHINE.....	10
10	PFFZZ	96906	MS35338-65	WASHER,LOCK	10
11	XDFZZ	29510	672662C2	CLAMP VALVE HOUSING	10
12	KFFZZ	29510	671376C1	GASKET VALVE HOUSING TO CYLINDER.....	2
				PARET OF KIT P/N 701137C97.....	
*13	XDFZZ	29510	277605R1	NUT,PLAIN,HEXAGON STUD	25
14	PFFZZ	29510	277606R1	WASHER,FLAT	25
15	PFFZZ	29510	327413R1	PLUG,CORE HOLE.....	6
*16	PFFHH	29510	682924C91	CYLINDER HEAD,DIESE FRONT CYLINDER	1
*16	PFFHH	29510	682926C91	CYLINDER HEAD,DIESE REARE CYLINDER	1
17	XDFZZ	29510	304381R1	PLUG	22
18	XDFZZ	29510	341277R1	DIRECTOR,CYLINDER H1	4
19	PFFZZ	81348	WW-P-471ACBBLLE	PLUG,PIPE.....	8
20	PFFZZ	92679	609422C1	GASKET CYLINDER HEAD PARET OF KIT	2
				P/N 701137C97	
21	PFFZZ	29510	674263C1	ROD,CONTINUOUS THERE	12
22	PFFZZ	29510	277583R2	TUBE,WATER TRANSFER	1
23	PFFZZ	30327	28737	INVERTED NUT,TUBE C	2
24	PFFZZ	29510	38026DM	ADAPTER,STRAIGHT,PI	2
25	PFFZZ	31007	17283R1	PIN USE WITHE ENGINE SERIAL NUMBER	1
				13064 AND UP	
26	XDFZZ	29510	687595C91	CRAB ASSEMBLY CYLINDER HEAD,USE.....	1
				WITHE ENGINE SERIAL NUMBER 13064 AND	
				UP.....	
27	PFFZZ	29510	671372C1	WASHER,FLAT USE WITHE ENGINE SERIAL	1
				NUMBER 13063 AND BELOW UP	
27	PFFZZ	29510	687589C1	WASHER,FLAT USE WITHE ENGINE SERIAL	1
				NUMBER 13064 AND UP.....	
28	XDFZZ	29510	670199C1	SLEEVE,NOZZLE.....	6
29	XDFZZ	29510	332109R11	GUIDE VALVE BRIDGE	12
30	XDFZZ	29510	277582R1	POST,VALVE HOUSING COVER.....	4
31	PFFZZ	29930	140483H	BOLT,HEX HEAD.....	2

END OF FIGURE