

**TECHNICAL MANUAL
UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS)**

**LOADER, SCOOP-TYPE: DED, 4 X 4,
ARTICULATED FRAME STEER,
4-1/2 TO 5 CU YD (CCE)**

**WITH 4-1/2 CU YD ROCK BUCKET
NSN 3805-00-602-5006**

CLARK MEL 1758, TYPE I

**WITH 5 CU YD GENERAL PURPOSE BUCKET
NSN 3805-00-602-5013**

CLARK MODEL 1 TYPE 11

**This manual supersedes TM 53805257-20P, dated 12 November 1988 and
TM 53805257-34P, date d 1 November 1988.**

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY OCTOBER 1993

TECHNICAL MANUAL

TM 5-3805-257-24P*

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 22 October 1993

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS)**

**LOADER, SCOOP-TYPE: DED, 4 X 4,
ARTICULATED FRAME STEER,
4-1/2 TO 5 CU YD (CCE)**

**WITH 4-1/2 CU YD ROCK BUCKET
NSN 3805-00-602-5006
CLARK MODEL 175B, TYPE I**

**WITH 5 CU YD GENERAL PURPOSE BUCKET
NSN 3805-00-602-5013
CLARK MODEL 175B, TYPE 11**

Current as of 30 November 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I INTRODUCTION	1	
SECTION I I REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100 - ENGINE ASSEMBLY.....	1-1	
ENGINE.....	1-1	1
ENGINE MOUNTING	2-	2
ENGINE LIFTING BRACKETS	3-1	3

* This manual supersedes TM 5-3805-257-20P, dated 12 November 1988 and TM 5-3805-257-34P, dated 1 November 1988.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	4-1	
CYLINDER BLOCK	4-1	4
CYLINDER HEAD	5-1	5
0102 - CRANKSHAFT	6-1	
BEARING CAP STABILIZER	6-1	6
CRANKSHAFT	7-1	7
CRANKSHAFT PULLEY, VIBRATION DAMPER, AND HUB	8-1	8
0103 - FLYWHEEL ASSEMBLY	9-1	
FLYWHEEL AND HOUSING	9-1	9
0104 - PISTONS AND CONNECTING RODS	10-1	
PISTON AND CONNECTING ROD	10-1	10
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM	11-1	
CAMSHAFT AND GEAR	11-1	11
CAMSHAFT AND RELATED PARTS	12-1	12
CRANKSHAFT TIMING GEAR	13-1	13
BALANCE WEIGHT COVER AND RELATED PARTS	14-1	14
BALANCE WEIGHT COVER, EXPLODED VIEW	15-1	15
ROCKER ARM AND RELATED PARTS	16-1	16
ROCKER ARM VALVES	17-1	17
ROCKER ARM COVER	18-1	18
0106 - ENGINE LUBRICATION SYSTEM	19-1	
OIL PUMP	19-1	19
OIL DISTRIBUTION SYSTEM	20-1	20
OIL PRESSURE REGULATOR AND RELIEF VALVE ASSEMBLY ...	21-1	21
OIL FILTER	22-1	22
OIL COOLER	23-1	23
OIL FILLER CAP	24-1	24
OIL DIPSTICK	25-1	25
ENGINE BREATHER	26-1	26
VENTILATING SYSTEM	27-1	27
OIL PAN	28-1	28
0108 - MANIFOLDS	29-1	
EXHAUST MANIFOLD	29-1	29
GROUP 03 FUEL SYSTEM		
0301 - CARBURETOR, FUEL INJECTOR	30-1	
FUEL INJECTOR	30-1	30
FUEL INJECTOR, EXPLODED VIEW	31-1	31
FUEL INJECTOR CONTROL	32-1	32
0302 - FUEL PUMPS	33-1	
FUEL INJECTOR PUMP	33-1	33
0304 - AIR CLEANER	34-1	
ENGINE AIR CLEANER	34-1	34
0305 - SUPERCHARGER, BLOWER, TURBOCHARGER, OR ALTITUDE COMPENSATOR	35-1	
AIR INLET HOUSING	35-1	35
BLOWER	36-1	36
BLOWER AND RELATED PARTS	37-1	37
0306 - TANKS, LINES, FITTINGS, HEADERS	38-1	
FUEL TANK AND RELATED PARTS	38-1	38
FUEL FILTER AND STRAINER LINES	39-1	39

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0308 - ENGINE SPEED GOVERNOR AND CONTROLS	40-1	
	LIMITING SPEED GOVERNOR.....	40-1	40
	LIMITING SPEED GOVERNOR RELATED PARTS	41-1	41
	SPEED CONTROL MECHANISM.....	42-1	42
	0309 - FUEL FILTERS.....	43-1	
	FUEL FILTER AND STRAINER	43-1	43
	0311 - ENGINE STARTING AIDS	44-1	
	ALCOHOL INJECTOR SYSTEM	44-1	44
	ENGINE QUICK-START SYSTEM	45-1	45
	0312 - ACCELERATOR, THROTTLE, OR CHOKE CONTROLS	46-1	
	ACCELERATOR CONTROLS	46-1	46
GROUP	04 EXHAUST SYSTEM		
	0401 - MUFFLER AND PIPES.....	47-1	
	EXHAUST SYSTEM.....	47-1	47
GROUP	05 COOLING SYSTEM		
	0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	48-1	
	RADIATOR	48-1	48
	RADIATOR MOUNTING	49-1	49
	RADIATOR GRILLE	50-1	50
	0502 - COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, ETC	51-1	
	RADIATOR SHROUD	51-1	51
	0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING	52-1	
	GASKET RADIATOR HOSES.....	52-1	52
	THERMOSTAT AND BYPASS TUBE (RIGHT BANK)	53-1	53
	THERMOSTAT AND BYPASS TUBE (LEFT BANK).....	54-1	54
	0504 - WATER PUMP	55-1	
	WATER PUMP	55-1	55
	0505 - FAN ASSEMBLY	56-1	
	FAN, MOUNT, AND PULLEY.....	56-1	56
	FAN GUARD	57-1	57
GROUP	06 ELECTRICAL SYSTEM		
	0601 - GENERATOR, ALTERNATOR	58-1	
	GENERATOR PULLEY AND RELATED PARTS.....	58-1	58
	GENERATOR (65 AMP)	59-1	59
	GENERATOR.....	60-1	60
	0603 - STARTING MOTOR	61-1	
	STARTER.....	61-1	61
	0606 - ENGINE SAFETY CONTROLS.....	62-1	
	ELECTRIC SYSTEM SWITCHES AND CIRCUIT BREAKERS.....	62-1	62
	ELECTRIC SWITCHES	63-1	63
	0607 - INSTRUMENT OR ENGINE CONTROL PANEL	64-1	
	ELECTRIC HOURMETER	64-1	64
	BOOM DETENT RELEASE	65-1	65
	ELECTRIC GAGES AND INSTRUMENT PANEL.....	66-1	66
	0609 - LIGHTS.....	67-1	
	CAB HEADLIGHT	67-1	67
	MISCELLANEOUS LIGHTS.....	68-1	68

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0610 - SENDING UNITS AND WARNING SWITCHES	69-1	
	SENDING UNITS AND WARNING SWITCHES	69-1	69
	0611 - HORN, SIREN	70-1	
	BACKUP ALARM	70-1	70
	HORN	71-1	71
	0612 - BATTERIES, STORAGE	72-1	
	BATTERIES AND CABLES.....	72-1	72
	0613 - HULL OR CHASSIS WIRING HARNESS	73-1	
	ELECTRICAL WIRING	73-1	73
	CAB LIGHT WIRING	74-1	74
	INSTRUMENT PANEL WIRING HARNESS	75-1	75
GROUP	07	TRANSMISSION	
	0705 - TRANSMISSION SHIFTING COMPONENTS	76-1	
	TRANSMISSION CONTROLS	76-1	76
	TRANSMISSION CONTROLS AND RELATED PARTS.....	77-1	77
	0708 - TORQUE CONVERTER OR FLUID COUPLING	78-1	
	CONVERTER ASSEMBLY.....	78-1	78
	CONVERTER ASSEMBLY, EXPLODED VIEW	79-1	79
	CONVERTER AND RELATED PARTS.....	80-1	80
	0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS.....	81-1	
	TRANSMISSION CASE	81-1	81
	TRANSMISSION ASSEMBLY	82-1	82
	TRANSMISSION ASSEMBLY AND RELATED PARTS	83-1	83
	TRANSMISSION GEARS	84-1	84
	TRANSMISSION SHAFTS	85-1	85
	TRANSMISSION SHAFTS AND RELATED PARTS	86-1	86
	TRANSMISSION REVERSE, THIRD AND FOURTH CLUTCH	87-1	87
	ASSEMBLY		
	TRANSMISSION FIRST AND SECOND CLUTCH ASSEMBLY.....	88-1	88
	TRANSMISSION TOP COVER ASSEMBLY	89-1	89
	TOP COVER, EXPLODED VIEW	90-1	90
	0721 - COOLERS, PUMPS, MOTORS	91-1	
	TRANSMISSION OIL COOLER	91-1	91
	TRANSMISSION LINES, FILTER, AND RELATED PARTS1	92-1	92
	0725 - IDLER G E A R S.....	93-1	
	TRANSMISSION IDLER GEAR	93-1	93
	MIDMOUNT BEARING ASSEMBLY	94-1	94
GROUP	09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY	
	0900 - PROPELLER SHAFTS.....	95-1	
	TRANSMISSION TO REAR AXLE PROPELLER SHAFT ASSEMBLY	95-1	95
	CONVERTER TO TRANSMISSION PROPELLER SHAFT ASSEMBLY	96-1	96
	PROPELLER SHAFT ASSEMBLY	97-1	97
	PROPELLER SHAFT ASSEMBLY AND RELATED PARTS.....	98-1	98
	GROUP 10 FRONT AXLE		
GROUP	09	FRONT AXLE	
	1000 - FRONT AXLE ASSEMBLY	99-1	
	FRONT AXLE ASSEMBLY	99-1	99
	1002 - DIFFERENTIAL	100-1	
	FRONT DIFFERENTIAL CARRIER ASSEMBLY.....	100-1	100
	FRONT DIFFERENTIAL AND CARRIER, EXPLODED VIEW	101-1	101

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
		1003 - PLANETARY OR FINAL DRIVE.....	102-1	
		PLANETARY CARRIER, EXPLODED VIEW	102-1	102
GROUP	11	REAR AXLE		
		1100 - REAR AXLE ASSEMBLY	103-1	
		REAR AXLE ASSEMBLY	103-1	103
		1102 - DIFFERENTIAL	104-1	
		DIFFERENTIAL CARRIER ASSEMBLY	104-1	104
		DIFFERENTIAL, EXPLODED VIEW	105-1	105
		1103 - PLANETARY OR FINAL DRIVE.....	106-1	
		PLANETARY CARRIER, EXPLODED VIEW	106-1	106
GROUP	12	BRAKES		
		1201 - HANDBRAKES.....	107-1	
		PARKING BRAKE CONTROLS	107-1	107
		PARKING BRAKE LEVER ASSEMBLY	108-1	108
		1202 - SERVICE BRAKES	109-1	
		BRAKE HEAD ASSEMBLY	109-1	109
		1204 - HYDRAULIC BRAKE SYSTEM.....	110-1	
		BRAKE POWER CLUSTER.....	110-1	110
		1206 - MECHANICAL BRAKE SYSTEM.....	111-1	
		BRAKE PEDAL.....	111-1	111
		1208 - AIRBRAKE SYSTEM.....	112-1	
		BRAKE PEDAL VALVE.....	112-1	112
		BRAKE PEDAL VALVE, EXPLODED VIEW	113-1	113
		BRAKE COMPENSATOR ASSEMBLY.....	114-1	114
		REAR AIR RESERVOIRS AND VALVES	115-1	115
		REAR AIRBRAKE LINES AND RELATED PARTS.....	116-1	116
		AIR VALVES AND RELATED PARTS	117-1	117
		FRONT AIRBRAKE LINES AND VALVES.....	118-1	118
		1209 - AIR COMPRESSOR ASSEMBLY 119-1		
		AIR COMPRESSOR ASSEMBLY AND ATTACHING PARTS.....	119-1	119
		AIR COMPRESSOR LUBRICATION SYSTEM	120-1	120
		AIR COMPRESSOR AIR INTAKE	121-1	121
		AIR COMPRESSOR COOLING SYSTEM	122-1	122
GROUP	13	WHEELS AND TRACKS		
		1311 - WHEEL ASSEMBLY	123-1	
		WHEEL ASSEMBLY	123-1	123
		WHEEL HUB, DISK, AND RELATED PARTS	124-1	124
		1313 - TIRES, TUBES, TIRE CHAINS	125-1	
		TIRE	125-1	125
GROUP	14	STEERING		
		1401 - MECHANICAL STEERING GEAR ASSEMBLY	126-1	
		STEERING GEAR ASSEMBLY.....	126-1	126
		STEERING WHEEL SUPPORTS	127-1	127
		STEERING DRAG LINK ASSEMBLY	128-1	128
		STEERING PUMP ATTACHING PARTS.....	129-1	129
		STEERING PUMP ASSEMBLY	130-1	130

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
		1401 - MECHANICAL STEERING GEAR ASSEMBLY (Can't)		
		REAR STEERING PUMP RELATED PARTS	131-1	131
		FRONT STEERING PUMP ATTACHING PARTS	132-1	132
		STEERING SYSTEM HOSES AND RELATED PARTS	133-1	133
		1412 - HYDRAULIC OR AIR CYLINDERS.....	134-1	
		STEERING CYLINDER ASSEMBLY.....	134-1	134
GROUP	15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
		1501 - FRAME ASSEMBLY	135-1	
		FRAME AND ATTACHING PARTS	135-1	135
		FRAME RELATED PARTS	136-1	136
		LADDER AND STEP	137-1	137
		1502 - COUNTERWEIGHTS	138-1	
		COUNTERWEIGHT	138-1	138
GROUP	18	BODY CAB, HOOD, AND HULL		
		1801 - BODY CAB, HOOD, AND HULL ASSEMBLIES.....	139-1	
		HOOD AND RELATED PARTS	139-1	139
		PLATES AND RELATED PARTS	140-1	140
		COCKPIT SOUNDPROOFING	141-1	141
		COCKPIT ASSEMBLY	142-1	142
		ROLL-OVER PROTECTIVE STRUCTURE (ROPS).....	143-1	143
		CAB ASSEMBLY AND PANELS	144-1	144
		CAB TRIMSTRIPS	145-1	145
		1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC	146-1	
		WINDSHIELD, GLASS, AND MOLDING	146-1	146
		1806 - UPHOLSTERY SEATS, AND CARPETS.....	147-1	
		SEAT AND ATTACHING PARTS	147-1	147
		1808 - STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC		
		TOOLBOX	148-1	148
GROUP	22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
		2201 - CANVAS, RUBBER, OR PLASTIC ITEMS	149-1	
		CANVAS BAG MOUNTING	149-1	149
		2202 - ACCESSORY ITEMS	150-1	
		REAR WINDSHIELD WIPER	150-1	150
		FRONT WINDSHIELD WIPER, MOTOR, AND RELATED PARTS ...	151-1	151
		FRONT WINDSHIELD WIPER KIT	152-1	152
		DEFROSTER FAN ASSEMBLY.....	153-1	153
		HEATER HOSES AND RELATED PARTS.....	154-1	154
		HEATER ASSEMBLY.....	155-1	155
		2210 - DATA PLATES AND INSTRUCTION HOLDERS	156-1	
		DATA PLATES	156-1	156
GROUP	24	HYDRAULIC AND FLUID SYSTEMS		
		2401 - PUMP AND MOTOR	157-1	
		MAIN PUMP ATTACHING PARTS	157-1	157
		MAIN PUMP	158-1	158

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	2402 - MANIFOLD AND/OR CONTROL VALVES	159-1	
	MAIN BOOM VALVE ASSEMBLY.....	159-1	159
	MAIN BUCKET SECTION VALVE	160-1	160
	MAIN CONTROL SECTION VALVE	161-1	161
	MAIN RELIEF VALVE	162-1	162
	TRIPLE SPOOL MAIN VALVE.....	163-1	163
	MAIN PILOT VALVE	164-1	164
	PILOT VALVE RELATED PARTS.....	165-1	165
	THREE SPOOL PILOT VALVE.....	166-1	166
	BUCKET PILOT VALVE.....	167-1	167
	BOOM AND COVER END PILOT VALVE	168-1	168
	PILOT VALVE (INLET/OUTLET)	169-1	169
	DECLUTCH VALVE ASSEMBLY.....	170-1	170
	FEEDER MANIFOLD	171-1	171
	MOUNTING CONTROL VALVE	172-1	172
	SOLENOID VALVE	173-1	173
	PLUNGER AND PILOT VALVE ASSEMBLY	174-1	174
	PILOT VALVE ASSOCIATED PARTS	175-1	175
	2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS.....	176-1	
	CONTROL LEVER AND LINKAGE.....	176-1	176
	CONTROL LEVER AND LINKAGE (THREE SPOOL).....	177-1	177
	2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	178-1	
	HYDRAULIC LINES AND FITTINGS	178-1	178
	THREE SPOOL VALVE PIPING	179-1	179
	MAIN HYDRAULIC LINES	180-1	180
	BOOM HYDRAULIC LINES AND FITTINGS	181-1	181
	FEEDER LINES AND RELATED PARTS	182-1	182
	2407 - HYDRAULIC CYLINDERS	183-1	
	BUCKET CYLINDER.....	183-1	183
	BOOM CYLINDER	184-1	184
	2408 - LIQUID TANKS OR RESERVOIRS.....	185-1	
	HYDRAULIC RESERVOIR.....	185-1	185
	RESERVOIR RELATED PARTS.....	186-1	186
GROUP	47	GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES	
	4702 - GAGES, MOUNTINGS, LINES, AND FITTINGS	187-1	
	TRANSMISSION DIPSTICK.....	187-1	187
GROUP	74	CRANES, SHOVELS, AND EARTHMOVING EQUIPMENT COMPONENTS	
	7404 - ELECTRICAL CONTROLS	188-1	
	BOOM LIMIT SWITCH	188-1	188
	7436 - LIFT ARMS AND PIVOT ASSEMBLIES.....	189-1	
	BOOM	189-1	189
	BUCKET TEETH AND ADAPTERS	190-1	190
	7437 - LOADER BUCKET ASSEMBLY OR FORKLIFT.....	191-1	
	BUCKET	191-1	191
GROUP	94	REPAIR KITS	
	9401 - REPAIR KITS	KIT-1	
	REPAIR KITS	KIT-1	KIT

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
GROUP	95	GENERAL USE STANDARDIZED PARTS		
		9501 - BULK MATERIEL	BULK-1	
		BULK MATERIEL	BULK-1	BULK
SECTION	III	SPECIAL TOOLS (NOT APPLICABLE)		
SECTION	IV	CROSS-REFERENCE INDEXES		
		NATIONAL STOCK NUMBER INDEX	I-1	
		PART NUMBER INDEX	I-25	
		FIGURE AND ITEM NUMBER INDEX	I-100	


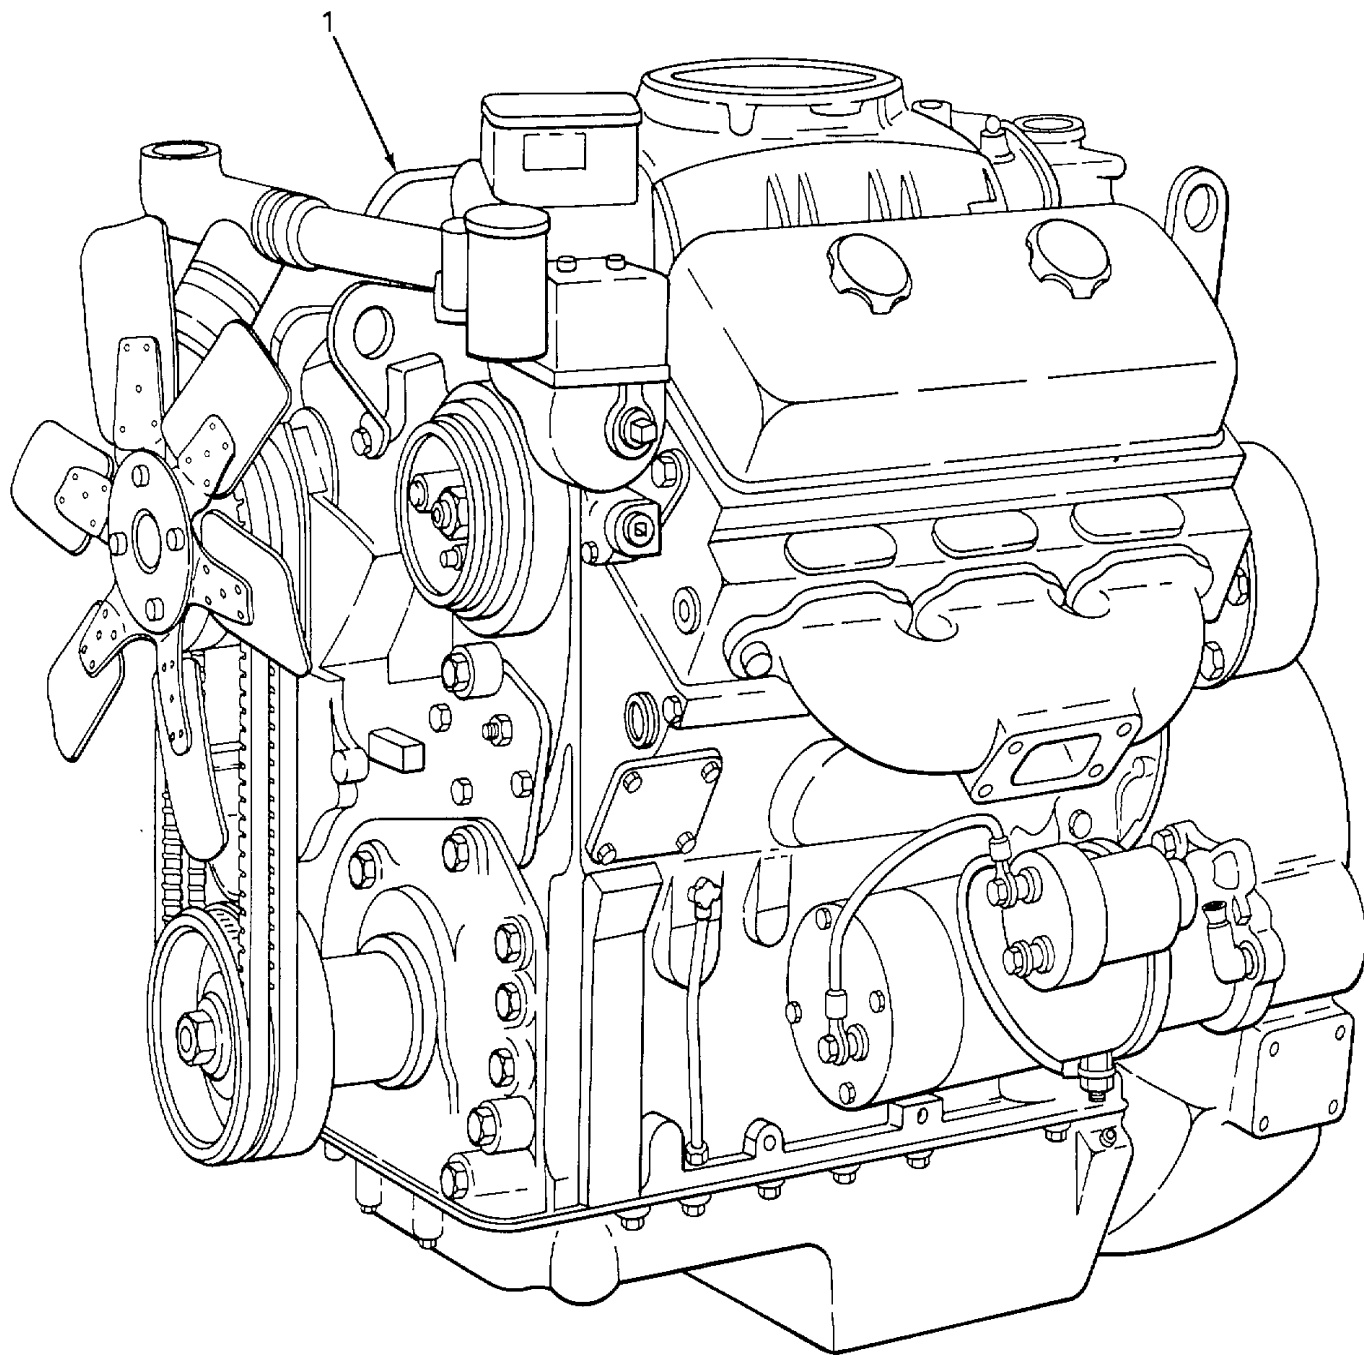 


FIGURE 1. ENGINE.

TA235463

SECTION II				TM 5-3805-257-24P	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
NO	CODE	CAGEC	NUMBER		
				GROUP 01 ENGINE	
				GROUP 0100 ENGINE ASSEMBLY	
				FIG. ENGINE	
1	PAFHD	72582	7083-7000	ENGINE, DIESEL.....	1
END OF FIGURE					

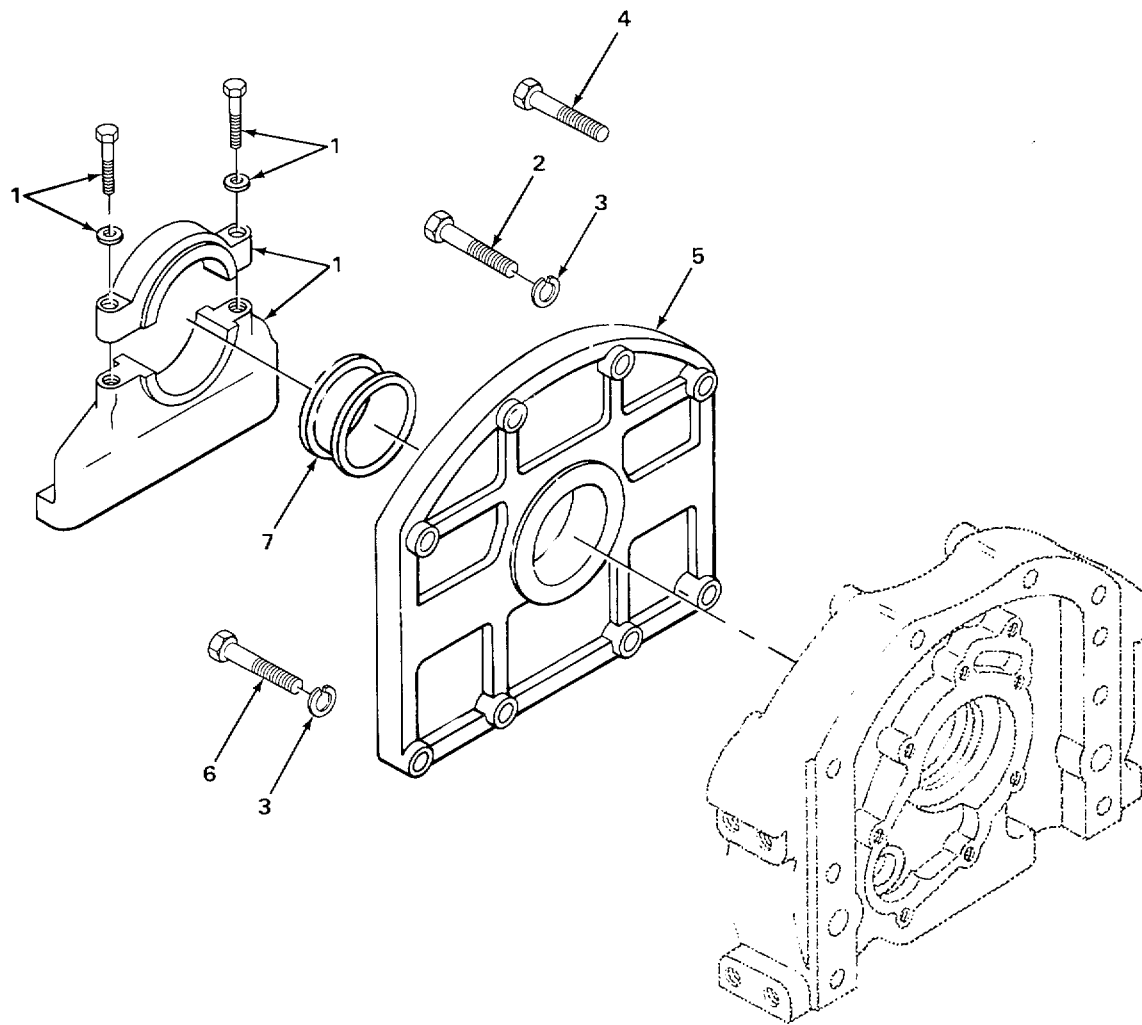 

TA235464

FIGURE 2. ENGINE MOUNTING.

SECTION II

TM 5-3805-257-24P


(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
-------------------	--------------------	--------------	-----------------------	--	------------

GROUP 0100 ENGINE ASSEMBLY

FIG. 2 ENGINE MOUNTING

1	PFFZZ	72582	5179360	SUPPORT ASSEMBLY.....	1
2	PFFZZ	96906	MS90728-62	SCREW, CAP, HEXAGON H.....	2
3	PFFZZ	96906	MS35338-8	WASHER, LOCK.....	6
4	PFFZZ	96906	MS90728-74	BOLT	2
5	PFFZZ	72582	5122294	TRUNNION	1
6	PFFZZ	96906	MS90728-124	BOLT	4
7	PFFZZ	72582	5179345	RING	1

 END OF FIGURE

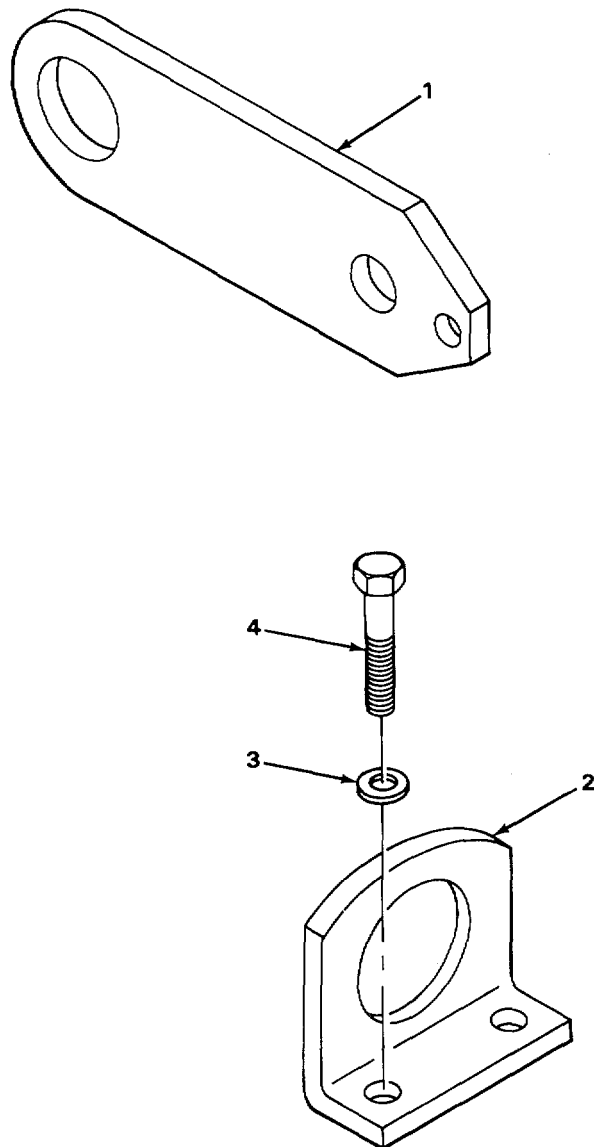

TA235465

FIGURE 3. ENGINE LIFTING BRACKETS.

SECTION II

TM 5-3805-257-24P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
-------------------	--------------------	--------------	-----------------------	--	------------

GROUP 0100 ENGINE ASSEMBLY

FIG. 3 ENGINE LIFTING BRACKETS

1	PFFZZ	72582	5109900	BRACKET, SPECIAL	1
2	PFFZZ	72582	5137761	BRACKET, ENGINE.....	2
3	PFFZZ	96906	MS27183-16	WASHER, FLAT	4
4	PFFZZ	72582	454933	SCREW, CAP, HEXAGON	4

END OF FIGURE

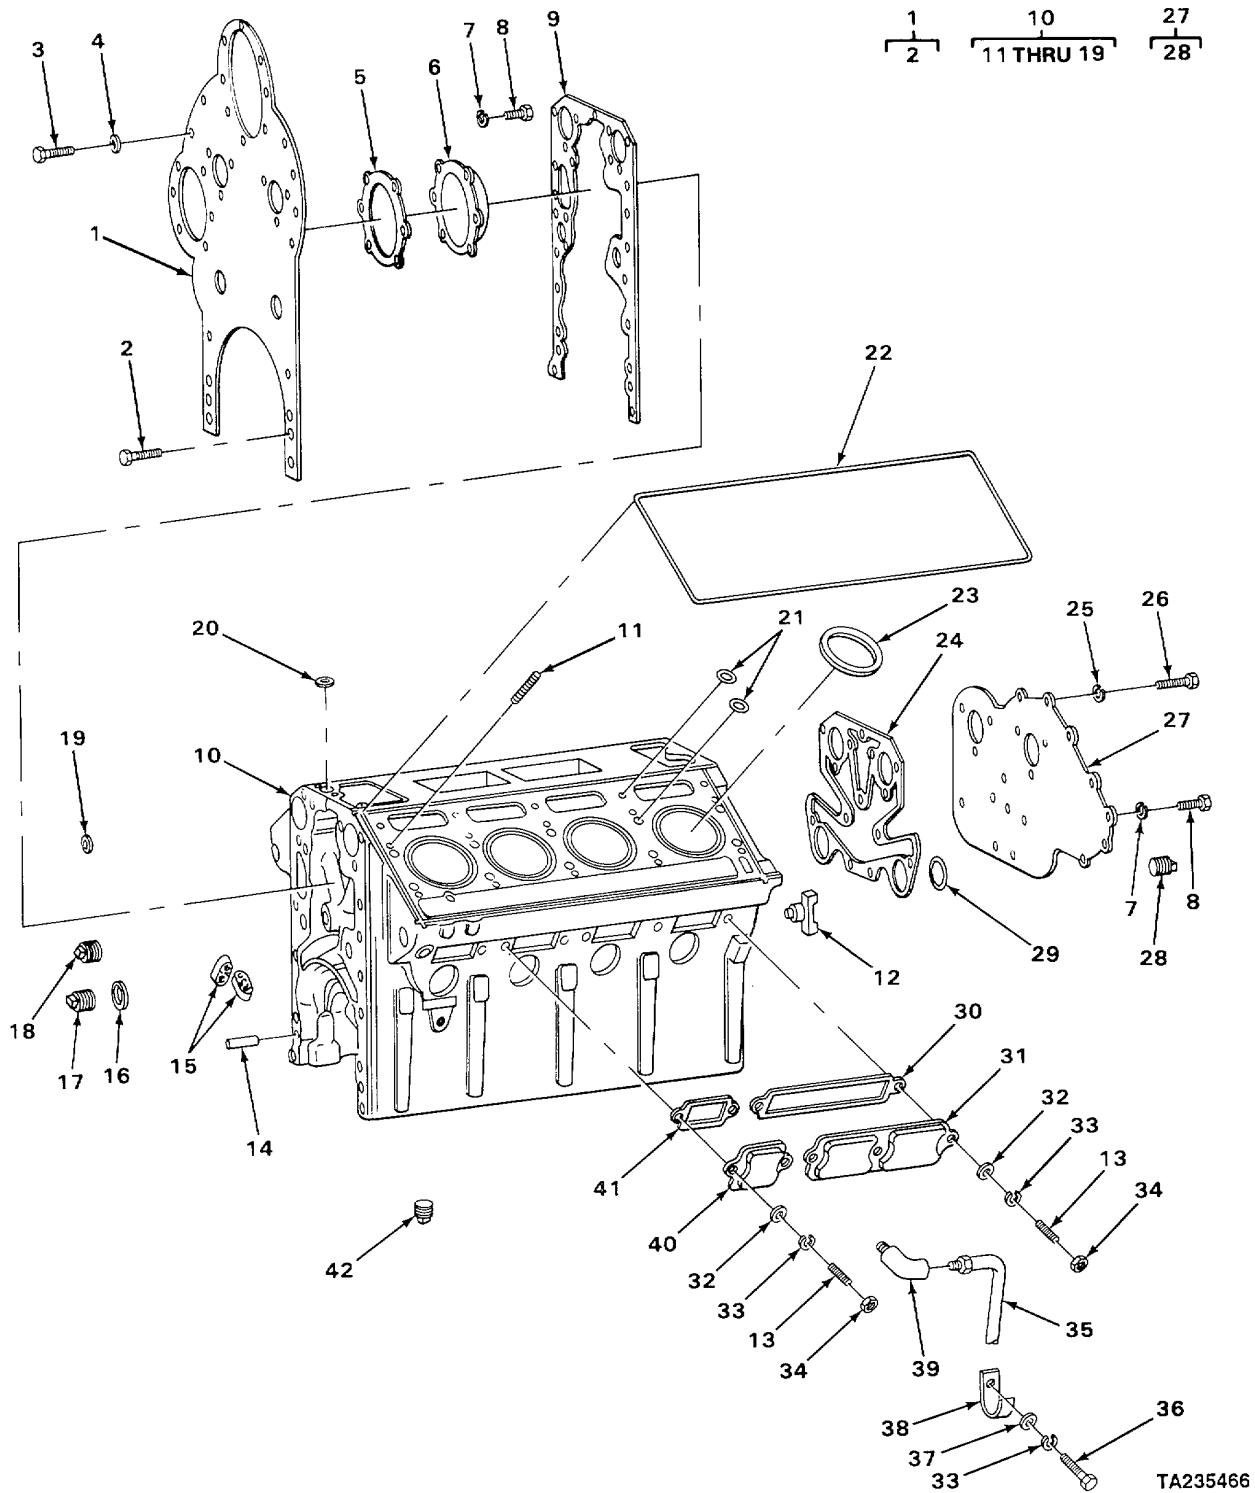 


FIGURE 4. CYLINDER BLOCK.

TA235466

SECTION II

TM 5-3805-257-24P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0101 CRANKCASE, BLOCK CYLINDER HEAD					
FIG 4 CYLINDER BLOCK					
1	PFHZZ	72582	5102562	PLATE, CYLINDER BLOC.....	1
2	PFHZZ	72582	5121459	INSERT, SCREW THREAD	11
3	PFHZZ	96906	90727-57	SCREW CAP, HEXAGON H	2
4	PFHZZ	10001	26585PC88	WASHER, FLAT	2
5	PFHZZ	72582	5117059	GASKET END PLATE COVER PART OF KIT P/N 5196374	1
6	PFHZZ	72582	5117058	COVER, ACCESS.....	1
7	PFHZZ	96906	35338-8	WASHER, LOCK	13
8	PFHZZ	96906	90728-60	SCREW, CAP, HEXAGON H	13
9	PFHZZ	72582	5102551	GASKET PART OF KIT P/N 5196374	1
10	PFHHH	72582	5199137	BLOCK ASSEMBLY-	1
11	PFHZZ	24617	103196	.STUD, PLAIN.....	1
12	PFHZZ	72582	8924140	.COCK. DRAIN	2
12	PFHZZ	96906	35782-6	.COCK, PLAIN	1
13	PFHZZ	24617	5152121	.STUD, PLAIN.....	14
14	PFHZZ	24617	141346	.PIN, STRAIGHT, HEADLE	4
14	PFHZZ	24617	5151576	.PIN, STRAIGHT, HEADLE	4
14	PFHZZ	72582	141214	.PIN, STRAIGHT, HEADLE	3
15	PFHZZ	72582	9428477	.PLUG EXPANSION	1
15	PFHZZ	72582	5139988 4	.PLUG STAINLESS	5
15	PFHZZ	24617	5150014	.PLUG EXPANSION CORE HOLE,	2
15	PFHZZ	72582	5132410	.PLUG EXPANSION STAINLESS	2
15	PFHZZ	72582	5117186	.PLUG EXPANSION STAINLESS	12
15	PFHZZ	72582	5123862	.PLUG EXPANSION SPECIAL	2
15	PFHZZ	72582	5138646	.PLUG, PROTECTIVE, DUS.....	2
16	PFHZZ	72582	5138659	.GASKET PART OF KIT P/N 5196374	2
17	PFHZZ	72582	5111798	.PLUG, PIPE SQUARE SOCKET HEAD	10
17	PFHZZ	72582	8924751	.PLUG, PIPE SQUARE SOCKET HEAD	1
17	PFHZZ	72582	5142549	.PLUG, PIPE SQUARE SOCKET HEAD	6
18	PFHZZ	81348	WW-P-471BCB	.PLUG, PIPE	5
18	PFHZZ	72582	5145014	.PLUG, PIPE MAGNETIC	1
18	PFHZZ	72582	5115214	.PLUG, PIPE	3
18	XDHZZ	73342	5130896	.PLUG, PIPE	2
18	PFHZZ	72582	5144472	.PLUG PRIMED	14
19	PFHZZ	77445	191663	.WASHER FLAT	3
20	PFHZZ	72582	5116122	WASHER FLAT END WATER HOLE.....	6
21	PFHZZ	72582	5186579	GASKET WATER HOLE	12
22	PFHZZ	24617	5119944PC5119973	GASKET PART OF KIT P/N 5196374	2
23	PFHZZ	72582	5183330	GASKET PART OF KIT P/N 5196374	8
24	PFHZZ	72582	5132445	GASKET PART OF KIT P/N 5196374	1
25	PFHZZ	96906	35338-48	WASHER LOCK	2
26	PFHZZ	96906	90728-109	SCREW, CAP, , HEXAGON H	2
27	PFHZZ	72582	5132422	PLATE, CYLINDER BLOC.....	1
28	PFHZZ	72582	5121459	.INSERT, SCREW THREAD	13
29	PFHZZ	72582	5121835	GASKET PART OF KIT PIN 5196374	1
30	PFHZZ	72582	5132572	GASKET LARGE PART OF KIT P/N 5196374	2

SECTION II

TM 5-3805-257-24P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
31	PFHZZ	72582	5144186	COVER, ACCESS LARGE	2
32	PFHZZ	96906	M27183-12	WASHER, FLAT	14
33	PFHZZ	96906	M35338-45	WASHER, LOCK	15
34	PFHZZ	96906	M51968-5	NUT, PLAIN, HEXAGON	14
35	PFHZZ	72582	5144327	TUBE ASSEMBLY, METAL	2
36	PFHZZ	96906	M90728-32	BOLT, MACHINE	1
37	PFHZZ	96906	M27183-12	WASHER, FLAT	1
38	XOHZZ	72582	5159490	CLIP	1
39	PFHZZ	79470	W400X5	ELBOW, PIPE TO TUBE	2
40	PFHZZ	72582	5132458	COVER, ACCESS MALL	4
41	XDHZZ	72582	5132924	GASKET MALL PART OF KIT P/N..... 5196374	4
42	PFHZZ	00501	87708-	PLUG, PIPE	2

END OF FIGURE