


TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL**

**HYDRAULIC EXCAVATOR
JOHN DEERE
MODEL 230LCR
NSN 3805-01-463-0804**

AND

**MODEL 230LCRD WITH ROCK DRILL
NSN 3805-01-463-0806**

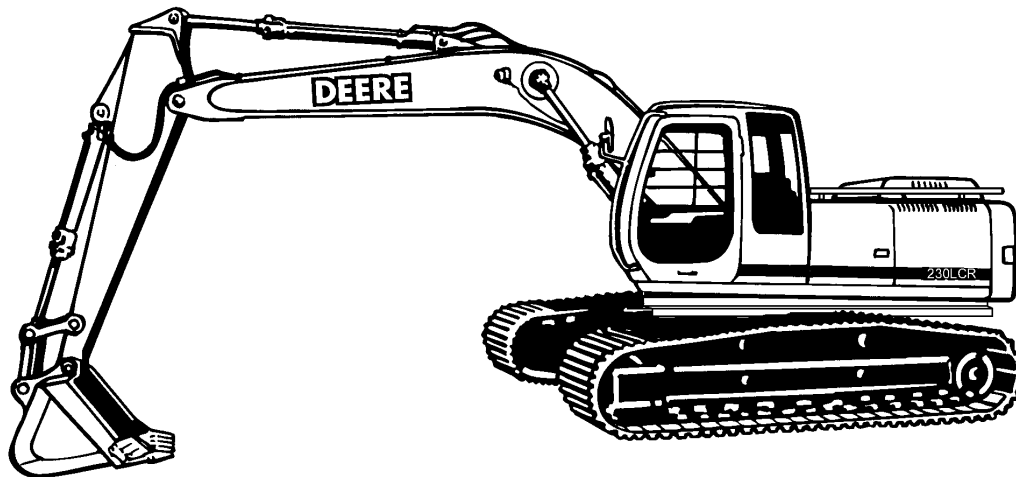

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

Reproduced by permission of Deere & Company, Moline, IL © 2000.
All rights reserved.

HEADQUARTERS, DEPARTMENT OF THE ARMY

15 FEBRUARY 2000

HEADQUARTERS,
DEPARTMENT OF THE ARMY
Washington, DC, 15 February 2000

UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT
MAINTENANCE MANUAL

HYDRAULIC EXCAVATOR
JOHN DEERE
MODEL 230LCR
NSN 3805-01-463-0804

AND

MODEL 230LCRD WITH ROCK DRILL
NSN 3805-01-463-0806

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028-2 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter, DA Form 2028, or DA Form 2028-2 direct to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-LC-CI, Rock Island, IL 61299-7630. The email address is AMSTA-LC-CI@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

TM 5-3805-280-24-1

			Page
Chapter 1	Section 9000	General Information	
	01	Safety.....	1-1
		Follow Safe Procedures.....	1-1
		Prepare for Emergencies	1-1
		Handle Fluids Safely—Avoid Fires	1-1
		Prevent Battery Explosions	1-2
		Handle Chemical Products Safely	1-2
		Prevent Acid Burns	1-3
		Avoid High-Pressure Fluids	1-4
		Warn Others of Service Work.....	1-4
		Park Machine Safely	1-5
		Support Machine Properly.....	1-5
		Operate Only From Operator's Seat.....	1-5

TABLE OF CONTENTS (Continued)

	Page
Stay Clear of Moving Parts	1-6
Avoid Power Lines.....	1-6
Use Handholds and Steps	1-6
Keep Riders Off Machine.....	1-7
Move and Operate Machine Safely	1-7
Wear Protective Clothing	1-7
Protect Against Flying Debris	1-8
Protect Against Noise	1-8
Illuminate Work Area Safely.....	1-8
Service Machines Safely	1-8
Remove Paint Before Welding or Heating.....	1-9
Avoid Heating Near Pressurized Fluid Lines.....	1-9
Beware of Exhaust Fumes.....	1-10
Use Proper Lifting Equipment.....	1-10
Service Cooling System Safely	1-10
Dispose of Waste Properly.....	1-11
Work in a Clean Area.....	1-11
Use Tools Properly.....	1-12
Replace Safety Signs	1-12
Live With Safety	1-12
Battery Terminals, Lifting Equipment, Dry Cleaning, Solvent and Compressed Air.....	1-13
Compressor Equipment Hazards	1-14
Rock Drill Precautions	1-16
02 General Specifications.....	1-19
03 Torque Values.....	1-20
Unified Inch Bolt and Cap Screw Torque Values	1-20
Metric Bolt and Cap Screw Torque Values.....	1-21
Additional Metric Cap Screw Torque Values	1-22
Check Oil Lines and Fittings.....	1-23
Service Recommendations for O-Ring Boss Fittings.....	1-24
Service Recommendations for Flat Face O-Ring Seal Fittings	1-26
Service Recommendations for 37° Flare and 30° Cone Seat Connectors	1-27
Service Recommendations for Flared Connections— Straight or Tapered Threads	1-28
Service Recommendations for Inch Series Four Bolt Flange Fittings.....	1-29
Service Recommendations for Metric Series Four Bolt Flange Fitting....	1-31
04 Fuels and Lubricants.....	1-32
Diesel Fuel	1-32
Lubricity of Diesel Fuels.....	1-32
Low Sulfur Diesel Fuel Conditioner	1-33
Diesel Fuel Storage	1-33
Fuel Tank	1-34
Do Not Use Galvanized Containers	1-34
Diesel Engine and Pump Gearbox Oils	1-35
Hydraulic Oil.....	1-36
Swing Gearbox and Propel Gearbox Oils.....	1-37
Track Roller, Front Idler, and Carrier Roller Oil	1-37
Track Adjuster, Working Tool Pivot, Swing Bearing, and Swing Bearing Gear Grease.....	1-38
Oil Filters	1-38
Rock Drill Lubricants Specifications	1-39
Lubricant Storage	1-41
Alternative and Synthetic Lubricants	1-41

TABLE OF CONTENTS (Continued)

			Page
		Mixing of Lubricants.....	1-42
		Air Compressor Lubrication.....	1-43
Chapter 2	Section 9005	Operational Checkout Procedure	
	10	Operational Checkout Procedure.....	2-1
		Operational Checkout.....	2-1
		Operator Station Checks—Key Switch On, Engine Off.....	2-2
		Operator Station Checks—Engine On.....	2-5
		Hydraulic System Checks.....	2-11
		Undercarriage Checks.....	2-19
		Accessories Checks.....	2-21
		Seat, Doors, Windows, Latches, and Locks Checks.....	2-23
		Engine Cooling System Checks.....	2-29
		Air Intake System Checks.....	2-33
		Fuel System Checks.....	2-36
		Visual Inspection.....	2-38
Chapter 3	Section 9010	Engine	
	05	Theory of Operation.....	3-1
		Engine—Sectional View.....	3-1
		Fan Drive.....	3-2
		Engine Speed Control	
		System Operation.....	3-3
		Engine RPM Dial.....	3-5
		E (Economy) Mode.....	3-7
		HP (High Power) Mode.....	3-8
		Auto-Idle Mode.....	3-10
		Engine Speed Learning.....	3-11
	10	System Operational Checks.....	3-13
		Engine Operational Checks.....	3-13
		Cooling System Checks.....	3-13
		Air Intake System Checks.....	3-18
		Lubrication System Checks.....	3-21
		Fuel System Checks.....	3-23
		Engine Speed and Performance Checks.....	3-25
	15	Diagnostic Information.....	3-28
		Diagnose Engine Malfunctions.....	3-28
	20	Adjustments.....	3-40
		JT05801 Clamp-On Electronic Tachometer Installation.....	3-40
		Fuel Shut-Off Solenoid Linkage, Check and Adjust.....	3-41
		Engine Speed Check.....	3-44
		Injection Pump Fast and Slow Idle Stops.....	3-45
		Engine Control Motor and Sensor.....	3-48
		Engine Speed Learning Procedure.....	3-49
		Cooling System Fill and Deaeration.....	3-51
	25	Tests.....	3-52
		Fuel Line Leakage.....	3-52
		Air Filter Restriction Indicator Switch.....	3-53
		Air Intake System Leakage.....	3-54
		Radiator Air Flow.....	3-55
		Engine Power Test Using Turbocharger Boost Pressure.....	3-58
		Torsional Dampener, Inspect.....	3-62

TABLE OF CONTENTS (Continued)

			Page
Chapter 4	Section 9015	Electrical System	
	05	System Information	4-1
		Visually Inspect Electrical System.....	4-1
		Circuit Malfunctions	
		Circuit Malfunctions	4-2
		Definition.....	4-3
		Location	4-8
		Troubleshooting.....	4-9
		Circuit Shorted to Power and Circuit Shorted to Itself	4-11
		Using Test Equipment	
		Multimeter	4-14
		Seven Step Electrical Test Procedure	4-15
		System Functional Schematic Information.....	4-16
		Reading a System Functional Schematic Diagram.....	4-17
		Reading a Harness Component Location Diagram	4-19
		Electrical Schematic Symbols	4-23
	10	System Diagrams	4-26
		Fuse Specifications.....	4-26
		Fuse (Blade-Type) Color Codes.....	4-27
		Component Identification Table.....	4-27
		Functional Schematic and Component Location Legend	4-29
		System Functional Schematic Section Legend.....	4-33
		System Functional Schematic (SE1—SE3).....	4-34
		System Functional Schematic (SE4—SE6).....	4-35
		System Functional Schematic (SE7—SE9).....	4-36
		System Functional Schematic (SE10—SE12).....	4-37
		System Functional Schematic (SE13—SE15).....	4-38
		System Functional Schematic (SE16—SE18).....	4-39
		System Functional Schematic (SE19)	4-40
		Engine and Frame Harness (W1)	
		Component Location	4-41
		Connectors, Wire and Pin Location	4-45
		Air Compressor and Rock Drill Harness (W10) Component Location....	4-49
		Cab Harness (W2)	
		Component Location	4-50
		Component Location—Detail A (Harness Mating Connectors)	4-51
		Component Location—Detail B (Fuse Block).....	4-53
		Connectors, Wire and Pin Location	4-54
		Monitor and Relay Harness (W3)	
		Component Location	4-60
		Component Location—Detail A (Monitor Controller Connectors)	4-61
		Component Location—Detail B (Monitor Controller Indicators)	4-62
		Connectors, Wire and Pin Location	4-63
		Air Conditioner Harness (W9)	
		Component Location—See Group 9031-15	4-65
		Connectors, Wire and Pin Location—See Group 9031-15.....	4-65
	15	Sub-System Diagnostics	4-66
		Power Circuit	
		Operational Information	4-66
		Theory of Operation	4-67
		Schematic.....	4-68
		Power Circuit Diagnostic Procedures.....	4-69
		Charging Circuit	
		Operational Information	4-73
		Theory of Operation	4-73

TABLE OF CONTENTS (Continued)

	Page
Schematic.....	4-74
Alternator Theory of Operation.....	4-75
Charging Circuit Diagnostic Procedures	4-76
Starting and Fuel Shutoff Circuit	
Operational Information	4-80
Theory of Operation	4-80
Schematic.....	4-81
Starting Circuit Diagnostic Procedures	4-82
Windshield Wiper and Washer Circuit	
Operational Information	4-88
Theory of Operation	4-89
Schematic.....	4-91
Windshield Wiper and Washer Circuit Diagnostic Procedures.....	4-92
Work and Drive Light Circuit	
Operational Information	4-97
Theory of Operation	4-97
Schematic.....	4-98
Work and Drive Light Circuit Diagnostic Procedures	4-99
Accessory Circuits	
Operational Information	4-102
Theory of Operation	4-102
Schematic.....	4-103
Accessory Circuits Diagnostic Procedures.....	4-104
Quick Hitch Circuit	
Operational Information	4-106
Theory of Operation	4-106
Schematic.....	4-107
Quick Hitch Circuit Diagnostic Procedures	4-107
Heater Circuit (Machines Without Air Conditioner).....	4-108
Heater Circuit (Machines With Air Conditioner).....	4-109
Monitor Controller and Display Circuit	
Specifications.....	4-110
Operational Information	4-111
Theory of Operation	4-112
Schematic.....	4-115
Monitor Controller and Display Circuit Diagnostic Procedures	4-116
Engine and Pump Controller Circuit	
Operational Information	4-133
Theory of Operation	4-134
Schematic.....	4-136
Engine and Pump Controller Circuit Diagnostic Procedures	4-137
Travel Alarm Circuit	
Operational Information	4-160
Theory of Operation	4-160
Schematic.....	4-161
Travel Alarm Circuit Diagnostic Procedures	4-162
Overload Alarm Circuit	
Operational Information	4-165
Theory of Operation	4-165
Schematic.....	4-166
Overload Alarm Circuit Diagnostic Procedures.....	4-166
20 References	4-169
Battery	
Operation	4-169
Specifications.....	4-170

TABLE OF CONTENTS (Continued)

			Page
		Diagnose Malfunctions	4-171
		Check Electrolyte Level and Terminals.....	4-172
		Batteries	
		Procedure for Testing	4-174
		Using Booster Batteries—24 Volt System.....	4-175
		Replacing	4-176
		Adding 12 or 24 Volt Accessories	4-177
		Travel Alarm, Changing Volume	4-178
		Test Harness	
		Proportional Solenoid	4-179
		Pump Control.....	4-179
		Pump Pressure Sensor.....	4-179
Chapter 5	Section 9020	Power Train	
	05	Theory of Operation	5-1
		Track Adjuster.....	5-1
		Propel Gearbox.....	5-2
	15	Diagnostic Information.....	5-4
		Diagnose Undercarriage Components Malfunctions.....	5-4
		Track Chain	
		Measure Bushing Wear.....	5-6
		Measure Link Wear	5-7
		Measure Pitch	5-8
		Track Shoe Grouser	
		Measure Wear (SN —599999)	5-9
		Measure Wear (SN 600000—)	5-10
		Track Roller, Measure Wear	5-11
		Track Carrier Roller, Measure Wear	5-12
		Front Idler, Measure Wear	5-13
		Swing Bearing, Measure Wear.....	5-14
	20	Adjustments	5-16
		Track Sag	5-16
Chapter 6	Section 9025	Hydraulic System	
	05	Theory of Operation	6-1
		Hydraulic System Diagram	6-1
		Pilot Pump Operation	6-2
		Pilot Pressure Regulating Valve and Filter Operation.....	6-3
		Pilot Shut-Off Valve Operation.....	6-4
		Pilot Controller	
		Neutral	6-6
		Metering and Full Stroke	6-7
		Propel Pilot Controller	6-8
		Pilot Controller Operation of Control Valve	6-10
		Flow Regulator Valve	6-11
		Hydraulic Pump and Drive Gearbox	6-13
		Hydraulic Pump Operation.....	6-15
		Hydraulic Pump Regulator	
		Component Operation.....	6-17
		Operation	6-19
		Increasing, Maximum, and Decreasing	6-21
		Summation and Speed Sensing	6-23
		Proportional Solenoid Valve	
		Manifold Operation	6-25

TABLE OF CONTENTS (Continued)

	Page
Arm Regenerative, Speed Sense, Propel Speed Change, and Power Boost	6-27
Engine Speed Sensing Control Circuit	6-29
Control Valve	
Component Identification Operation	6-30
Circuit Schematic.....	6-34
Pilot Pressure Signal Passage	6-36
Neutral and Power Passages	6-38
System Relief and Power Boost Valve.....	6-40
Power Boost Control Circuit	6-41
Circuit Relief Valve	6-42
Pump Control Valve.....	6-43
Flow Combiner Valve	6-45
Arm Regenerative Valve	6-47
Boom and Arm Reduced Leakage Valves.....	6-49
Bucket Flow Control Valve.....	6-50
Propel Flow Control Valve.....	6-52
Propel-Boom Down Selector Valve	6-53
Boom Regenerative Valve.....	6-54
Propel and Arm In Combined	6-55
Swing and Boom Up Combined.....	6-57
Swing Gearbox.....	6-59
Swing Motor	
Operation	6-61
Crossover Relief Valve	6-63
Make-Up Valve	6-64
Park Brake Release Valve.....	6-65
Rotary Manifold	6-67
Propel Motor	
Operation	6-68
Slow Speed	6-70
Fast Speed.....	6-71
Speed Change Circuit	6-72
Park Brake Valve Housing	6-74
Park Brake Release Circuit	6-76
Counterbalance Valve.....	6-78
Cylinder Boom, Arm, and Bucket.....	6-80
Return Filter	6-81
Boom Cylinder Controlled Load Lowering Valve Operation	6-82
Auxiliary Hydraulics Operation	6-84
Hydraulic System Circuit Symbols	6-86
Schematic	
Pilot Controllers Circuit.....	6-87
Hydraulic Pump and Control Valve.....	6-88
Swing and Propel Motor.....	6-89
15 Diagnostic Information.....	6-90
Diagnostic Procedure	6-90
Diagnose Malfunctions	
Electronic and Control Valve Component.....	6-91
Hydraulic System.....	6-101
Pilot Circuit.....	6-104
Dig Circuit	6-106
Swing Circuit.....	6-108
Propel System.....	6-110
Control Lever Pattern Conversion.....	6-113

TABLE OF CONTENTS (Continued)

	Page
Control Valve Line Identification	
Left Front	6-114
Right Rear	6-116
Bottom	6-118
Control Valve Component Identification	
Left Front	6-119
Right Rear	6-121
Bottom	6-123
Component Location	
Main Hydraulic System	6-124
Pilot Controllers-to-Flow Regulator—SAE Pattern	6-125
Pilot Controllers-to-Flow Regulator—John Deere Pattern	6-126
Pilot Flow Regulator-to-Control Valve	6-127
Propel System	6-128
Pressure and Return System	6-129
20 Adjustment	6-130
Pilot Shut-Off Valve Linkage	6-130
25 Tests	6-131
Laptop Computer General Description	6-131
Excavator Diagnostics Program	
Overview	6-131
Install	6-132
Uninstall	6-137
Starting	6-137
Feature—Service Codes	6-141
Feature—Monitor Data	6-143
Feature—Saving Monitor Data	6-145
Special Function—Engine Speed Adjustment	6-146
Service Codes List	6-150
Monitor Data Items	6-151
Special Function—Engine Speed Factory Settings Parameters	6-152
Engine Speed to Pump Flow Rate Chart	6-153
Excavator Diagnostics Program Troubleshooting	6-155
Reading Service Codes Without Excavator Diagnostics Program	6-156
Engine and Pump Controller Functions	6-158
JT05801 Clamp-On Electronic Tachometer Installation	6-159
JT05800 Digital Thermometer Installation	6-160
JT02156A Digital Pressure and Temperature Analyzer Installation	6-160
Start-Up Procedure	
Hydraulic Pump	6-161
Swing Motor	6-162
Swing Gearbox	6-163
Propel Motor	6-164
Hydraulic Oil Filter Inspection Procedure	6-164
Hydraulic Oil Cleanup Procedure Using Portable Filter Caddy	6-165
Hydraulic System Warm-Up Procedure	6-166
Lower Boom With Engine Stopped (Using Boom Cylinder Load Lowering Valve)	6-167
Lower Boom With Engine Stopped (When Not Equipped With Boom Cylinder Load Lowering Valve)	6-169
Harness Test	
Arm Regenerative Proportional Solenoid Valve (SC)	6-171
Speed Sensing Solenoid Valve (SD)	6-173
Propel Speed Change Proportional Solenoid Valve (SI)	6-175
Power Boost Proportional Solenoid Valve (SG)	6-177

TABLE OF CONTENTS (Continued)

			Page
		Engine Control Sensor (EC Sensor)	6-179
		Engine Control Motor (EC Motor)	6-182
		Miscellaneous Component.....	6-184
		Cycle Time	6-185
		Swing Dynamic Braking	6-188
		Pilot Pressure Regulating Valve	6-190
		Valve Spool Actuating Pilot Pressure	6-194
		System Relief and Power Boost Valve.....	6-197
		Circuit Relief Valve	6-202
		Swing Motor Crossover Relief Valve	6-208
		Propel Motor Crossover Relief Valve	6-211
		Proportional Solenoid Valve	6-215
		Pump Control Valve.....	6-220
		Hydraulic Pump Regulator	
		Adjustments	6-225
		Minimum Flow	6-228
		Maximum Flow	6-232
		Engine Pulldown.....	6-235
		Hydraulic Pump Flow	6-248
		Pilot Pump Flow.....	6-252
		Propel System Tracking	6-255
		Cylinder Drift—Boom, Arm, and Bucket	6-257
		Swing Motor Leakage	6-260
		Propel Motor Leakage.....	6-264
		Boom Cylinder Controlled Load Lowering Valve	6-268
		Hose Reel	6-270
Chapter 7	Section 9031	Air Conditioning System	
	05	Theory of Operation	7-1
		Proper Refrigerant Handling	7-1
		R134a Refrigerant Cautions	7-1
		Refrigerant Theory of Operation.....	7-2
		Heater and Air Conditioner Circuit	
		Operational Information	7-3
		Theory of Operation	7-4
		Functional Schematic.....	7-5
		Heater Circuit (Machines Without Air Conditioner)	
		Operational Information	7-6
		Theory of Operation	7-6
		Functional Schematic.....	7-7
		Receiver/Dryer Operation	7-8
		Compressor Relief Valve Operation	7-9
		Temperature Control	7-9
	10	System Operational Checks.....	7-10
		Air Conditioning Operational Checks	7-10
		Visual Inspection of Components	7-10
		System Operating Checks	7-12
		Heater Circuit Checks (Machines Equipped With Heater Only).....	7-14
		Heater and Air Conditioner Circuit Checks	7-15
	15	Diagnostic Information.....	7-17
		Diagnose Air Conditioning Electrical Malfunctions	7-17
		Air Conditioner Harness (W9)	
		Component Location	7-18
		Connectors, Wire and Pin Location.....	7-20

TABLE OF CONTENTS (Continued)

			Page
20	Adjustments		7-22
	Refrigerant		
	Proper Handling.....		7-22
	R134a Cautions.....		7-22
	Compressor		
	R134a Oil Charge Check		7-23
	R134a Oil Removal		7-23
	R134a Component Oil Charge		7-24
	R134a Refrigerant Recovery, Recycling, and Charging Station Installation Procedure		7-26
	R134a System		
	Recover.....		7-27
	Evacuate.....		7-28
	Charge.....		7-31
	Compressor Belt, Check and Adjust Tension.....		7-33
25	Tests.....		7-34
	Refrigerant		
	Proper Handling.....		7-34
	R134a Cautions.....		7-34
	R134a Air Conditioning System Test.....		7-35
	Operating Pressure Diagnostic Chart		7-38
	High and Low Pressure Switch Test		7-39
	Leak Testing.....		7-40
	Refrigerant Hoses and Tubing Inspection		7-41
Chapter 8	Section 9035 Arctic/Cold Weather Heater		
	05 Theory of Operation		8-1
	Arctic/Cold Weather Heater		
	Cautions		8-1
	Theory of Operation		8-2
	Wiring Diagram		8-4
	10 Operational Checks.....		8-6
	Arctic/Cold Weather Heater Checks		8-6
	15 Diagnostic Information.....		8-7
	Arctic/Cold Weather Heater		
	Diagnose Malfunctions		8-7
	Diagnostic Procedure.....		8-7
Chapter 9	Section 9040 Air Compressor		
	25 Troubleshooting.....		9-1
Chapter 10	Section 9045 Rock Drill Attachment		
	01 Components		10-1
	05 Drifter Maintenance.....		10-2
	Shank Replacement		10-2
	Flushing Seal Replacement		10-3
	Guide Ring Replacement.....		10-4
	Accumulator Check.....		10-5
	Accumulator Repairs.....		10-6
	Dust Collector Theory of Operation.....		10-7
	10 Adjusting of Drilling Automatism		10-10
	Location of Adjusting Screws		10-10
	E.53734 Pressure Gauges.....		10-11
	Presetting Before Drilling		10-12
	Presetting While Drilling.....		10-12

TABLE OF CONTENTS (Continued)

			Page
		Setting While Drilling	10-12
		Exceptional Adjustments.....	10-13
15		Thread Coupling/Uncoupling Adjustments	10-14
20		Diagrams.....	10-15
25		Troubleshooting.....	10-24
		Too Low Penetration Rate.....	10-25
		Troubleshooting Procedure for Rod Changer.....	10-28
		Troubleshooting Hydraulic Dust Collector	10-33
Chapter 11	Section 01	Tracks Repair	
	0130	Track System.....	11-1
		Service Equipment and Tools.....	11-1
		Other Material	11-5
		Specifications	11-6
		Track Roller, Measure Wear	11-8
		230LC Carrier Roller Tread Diameter	11-9
		Track Roller	
		Remove and Install	11-10
		Disassemble and Assemble.....	11-12
		Test for Oil Leakage	11-14
		Track Carrier Roller, Measure Wear	11-14
		792 Carrier Roller Tread Diameter.....	11-15
		Track Carrier Roller	
		Remove and Install	11-16
		Disassemble and Assemble.....	11-18
		Metal Face Seals, Inspect	11-20
		Track Shoe Grouser, Measure Wear	11-21
	1010		
		Three Bar Grouser Height.....	11-22
		Front Idler Flange Height	11-23
		230LC Front Idler Flange Height	11-24
		Track Shoe, Remove and Install.....	11-25
		Track Chain Link, Measure Wear	11-26
		230LCR/230LCRD Link Height	11-27
		Track Chain Bushing, Measure Wear	11-27
		230LC Bushing Outer Diameter.....	11-28
		Track Chain, Measure Pitch	11-29
		230LC Pitch 190.50 mm (7.50 in.).....	11-30
		Track Chain	
		Remove.....	11-31
		Install	11-33
		Disassemble and Assemble.....	11-35
		Disassemble and Assemble to Replace Broken Part.....	11-36
		Track Sag, Adjust.....	11-39
		Sprocket, Remove and Install.....	11-42
		Front Idler	
		Measure Wear	11-43
		230LC Flange Height	11-44
		Remove and Install	11-45
		Disassemble	11-46
		Assemble	11-47
		Test for Oil Leakage	11-49
		Track Adjuster and Recoil Spring	
		Remove and Install	11-50
		Disassemble and Assemble.....	11-52
		Track Adjuster Cylinder, Disassemble and Assemble	11-56

TABLE OF CONTENTS (Continued)

			Page
Chapter 12	Section 02	Axles and Suspension Systems (Propel) Repair	
	0250	Axle Shaft, Bearings, and Reduction Gears.....	12-1
		Service Equipment and Tools.....	12-1
		Other Material	12-2
		Specifications	12-3
		Towing the Excavator	12-4
		Propel Gearbox	
		Remove and Install	12-5
		Disassemble	12-7
		Metal Face Seals, Inspect	12-14
		Planet Carrier	
		Disassemble and Assemble First and Second	12-15
		Disassemble and Assemble Third.....	12-17
		Propel Gearbox, Assemble.....	12-18
	0260	Hydraulic System	12-26
		Essential Tools	12-26
		Service Equipment and Tools.....	12-26
		Other Material	12-28
		Specifications	12-29
		Propel Motor and Brake	
		Remove and Install	12-30
		Start-Up Procedure	12-33
		Disassemble	12-34
		Assemble	12-41
		Propel Motor Brake Valve Housing, Disassemble and Assemble.....	12-49
		Rotary Manifold	
		Remove and Install	12-51
		Disassemble and Assemble.....	12-58
		Air Test.....	12-60

TM 5-3805-280-24-2

Chapter 13	Section 04	Engine Repair	
	0400	Removal and Installation	13-1
		Essential Tools	13-1
		Service Equipment and Tools.....	13-2
		Other Material	13-2
		Specifications	13-3
		Engine	
		Remove.....	13-4
		Install	13-8
		Oil Pan	
		Remove.....	13-10
		Install	13-11
		In-Line Fuel Injection Pump	
		Remove.....	13-11
		Repair	13-14
		Install	13-14
		Bleed Fuel System.....	13-18
		Engine Crankcase Ventilation Tube, Clean.....	13-19
		Engine Valve Lash (Clearance), Check and Adjust	13-19
		Firing Order, 6-Cylinder Engine	13-22
		Starter, Remove and Install	13-23
		PowerTech® 4.5 L Engine	13-24
		PowerTech® 6.8 L Engine	13-25

TABLE OF CONTENTS (Continued)

	Page
General Information	13-26
Unified Inch Bolt and Cap Screw Torque Values	13-26
Metric Bolt and Cap Screw Torque Values.....	13-27
Engine Model Designation.....	13-28
Engine Serial Number Plate Information	13-29
General OEM Engine Specifications.....	13-30
Fuels, Lubricants and Coolant	13-31
Diesel Fuel	13-31
Lubricity of Diesel Fuels.....	13-31
Engine Break-In Oil	13-32
Diesel Engine Oil	13-33
Alternative and Synthetic Lubricants	13-34
Mixing of Lubricants.....	13-34
Grease.....	13-35
Diesel Engine Coolant Recommendations	13-36
Engine Coolant Specifications	13-37
Testing Diesel Engine Coolant.....	13-40
Replenishing Supplemental Coolant Additives (SCA's)	
Between Coolant Changes	13-41
Operating in Warm Temperature Climates	13-42
Flush and Service Cooling System.....	13-43
Disposing of Coolant.....	13-44
Engine Mounting	13-45
Engine Repair Stand.....	13-45
Safety Precautions	13-46
Install Adapters on Engine Repair Stand.....	13-47
Engine Lifting Procedure	13-48
Clean Engine	13-49
Disconnect Turbocharger Oil Inlet Line.....	13-50
Mount Engine on Repair Stand	13-51
Engine Mounted on Repair Stand.....	13-52
Engine Rebuild Guide	13-53
Engine Disassembly Sequence	13-53
Sealant Application Guidelines	13-55
Engine Assembly Sequence	13-57
Cylinder Head and Valves	13-59
Essential Tools	13-59
Service Equipment and Tools.....	13-62
Other Material	13-64
Cylinder Head and Valves Specifications	13-65
Valve Clearance, Check and Adjust.....	13-68
Valve Lift, Measure.....	13-71
Cylinder Head, Remove	13-73
Rocker Arm Shaft Assembly, Disassemble and Inspect	13-79
Rocker Arm Assembly, Assemble	13-80
Fuel Supply Pump Push Rod—If Applicable	
Inspect, Measure, and Install	13-80
Camshaft Followers—Inspect, Measure, and Assemble	13-82
Valve Recess in Cylinder Head, Measure	13-83
Preliminary Cylinder Head and Valve Checks.....	13-84
Valve Assembly, Remove	13-85
Valve Springs, Inspect and Measure	13-86
Valve Rotators, Inspect	13-86

TABLE OF CONTENTS (Continued)

	Page
Valves	
Clean.....	13-87
Inspect and Measure	13-87
Grind.....	13-88
Cylinder Head	
Inspect and Clean.....	13-89
Check Flatness	13-89
Measure Thickness	13-90
Clean Injection Nozzle Bores.....	13-90
Valve Guides	
Clean.....	13-91
Measure	13-91
Knurl.....	13-92
Valve Seats	
Clean and Inspect.....	13-92
Grind.....	13-93
Remove Inserts	13-96
Measure Bore in Cylinder Head	13-99
Install Inserts.....	13-100
Valves, Install.....	13-100
Cylinder Head Cap Screws, Clean and Inspect	13-101
Exhaust Manifold, Inspect and Clean.....	13-101
Top Deck of Cylinder Block, Clean and Inspect.....	13-102
Cylinder Liner Standout (Height Above Block), Measure	13-103
Cylinder Head, Install.....	13-104
Torque-Turn Method for Proper Torque	13-106
Rocker Arm Assembly, Install	13-107
Ventilator Outlet Hose, Inspect and Clean	13-107
Rocker Arm Cover, Install	13-108
Complete Final Assembly	13-109
Perform Engine Break-In	13-113
Cylinder Block, Liners, Pistons and Rods	13-114
Essential Tools	13-114
Service Equipment and Tools.....	13-117
Other Material	13-118
Cylinder Block, Liners, Pistons and Rods Specifications	13-119
Connecting Rods—General Information.....	13-125
Pistons and Connecting Rods, Remove.....	13-126
Cylinder Liners, Remove	13-129
Complete Disassembly of Cylinder Block (If Required)	13-131
Preliminary Liner, Piston and Rod Checks	13-132
Piston and Rod Assembly, Disassemble.....	13-133
Pistons	
Clean.....	13-134
Visually Inspect	13-135
Cylinder Liners	
Clean.....	13-136
Visually Inspect	13-137
Piston	
Check Ring Groove Wear.....	13-139
Measure Pin Bore	13-140
Measure Skirt.....	13-140
Measure Height.....	13-140
Determine Piston-to-Liner Clearance.....	13-141
Cylinder Liners, Deglaze.....	13-142

TABLE OF CONTENTS (Continued)

	Page
Piston and Liner Sets, Replace	13-143
Inspect and Measure Connecting Rod Bearings	
(Rods Removed From Engine)	13-143
(Rod and Crankshaft in Engine)	13-144
Rod and Cap, Inspect	13-145
Piston Pins and Bushings, Inspect	13-147
Piston Pin Bushing, Remove	13-148
Connecting Rod Pin Bore, Clean and Inspect	13-150
Piston Pin Bushing in Connecting Rod, Install	13-151
Rod Center-to-Center Bores, Measure	13-152
Cylinder Block, Inspect and Clean	13-153
Cylinder Liner O-Ring Bore, Clean	13-155
Measure	
Cylinder Block Main Bearing Bore	13-155
Camshaft Follower Machined Bore in Block	13-156
Camshaft Bushing Bores in Block	13-156
Balancer Shaft Bushing ID in Block—4-Cylinder Engines	13-158
Cylinder Liners and Block Bores	13-159
Liner Flange Counterbore Depth in Block	13-160
Liner Flange Thickness	13-160
Cylinder Block Top Deck Flatness	13-161
Piston Cooling Orifices— Remove, Inspect, and Install	13-162
Fuel Supply Pump Push Rod Bore and Push Rod OD, Measure	13-163
Cylinder Liner Standout (Height Above Block), Measure	13-164
Install Packing on Cylinder Liner and O-Rings in Block	13-166
Install Cylinder Liner in Block	13-167
Piston and Connecting Rod, Assemble	13-168
Piston Rings, Install	13-170
Piston and Connecting Rod Assembly, Install	13-171
Torque-Turn Connecting Rod Cap Screws	13-175
Check Engine Rotation for Excessive Tightness	13-176
Piston Protrusion, Measure	13-177
Complete Final Assembly	13-178
Crankshaft, Main Bearings and Flywheel	13-179
Essential Tools	13-179
Service Equipment and Tools	13-182
Other Material	13-184
Crankshaft, Main Bearings and Flywheel Specifications	13-185
Crankshaft and Main Bearing Failure Analysis	13-187
Vibration Damper (6-Cylinder Engine), Inspect	13-188
Pulley or Vibration Damper and Pulley, Remove	13-189
Pulley or Vibration Damper Pulley, Install	13-191
Checking Vibration Damper or Pulley	13-193
Front Crankshaft Oil Seal and Wear Sleeve, Replace	13-193
Crankshaft End Play, Check	13-198
Flywheel, Inspect	13-199
Flywheel Face, Check Flatness	13-200
Pilot Bearing Bore, Check Concentricity	13-200
Flywheel	
Check Housing Face Runout	13-201
Remove	13-202
Replace Ring Gear	13-202
Replace Pilot Bearing—If Equipped	13-204
Install	13-205

TABLE OF CONTENTS (Continued)

	Page
Crankshaft Rear Oil Seal and Wear Sleeve	
Handling Precautions.....	13-206
Remove.....	13-206
Crankshaft Flange, Clean and Inspect.....	13-209
Crankshaft Rear Oil Seal and Wear Sleeve, Install.....	13-210
Flywheel Housing, Remove.....	13-213
Crankshaft Main Bearings, Remove.....	13-213
Check Main Bearing Oil Clearance.....	13-215
Crankshaft Gear (Crankshaft Installed in Engine)	
Remove and Install.....	13-216
Crankshaft, Remove.....	13-218
Crankshaft, Inspect.....	13-219
Crankshaft Journals and Main Bearing ID, Measure.....	13-220
Main Thrust Journal and Thrust Bearing, Measure Width.....	13-221
Crankshaft Grinding Guidelines.....	13-222
Crankshaft Grinding Specifications.....	13-223
Main Bearing Caps, Measure Assembled ID.....	13-224
Piston Cooling Orifices—Remove, Inspect, and Install.....	13-225
Main and Thrust Bearing Inserts, Install in Block.....	13-226
Crankshaft, Install.....	13-228
Flywheel Housing, Install.....	13-231
Complete Final Assembly.....	13-232
Camshaft, Balancer Shafts and Timing Gear Train.....	13-233
Essential Tools.....	13-233
Service Equipment and Tools.....	13-236
Other Material.....	13-237
Camshaft, Balancer Shafts and Timing Gear Train Specifications.....	13-238
Measure Valve Lift.....	13-243
Timing Gear Cover, Remove.....	13-245
Camshaft Bushing With Front Plate Installed, Remove and Install.....	13-248
Camshaft Gear-Driven Auxiliary Drive, Remove and Install.....	13-251
Measure End Play	
Camshaft.....	13-252
Balancer Shaft (4-Cylinder Engines).....	13-252
Idler Gear.....	13-253
Timing Gear, Measure Backlash.....	13-254
Camshaft	
Remove.....	13-255
Visually Inspect.....	13-257
Measure Thrust Plate Clearance and Thickness.....	13-258
Inspect and Measure Bushing ID and Journal OD.....	13-259
Measure Lobe Height.....	13-260
Remove and Install Gear.....	13-260
Inspect Followers.....	13-262
Fuel Supply Pump Push Rod—Inspect, Measure, and Install.....	13-263
Electronic Tachometer (Magnetic Pick-Up) Sensor, Replace.....	13-264
Mechanical Tachometer Adapter, Replace.....	13-265
Balancer Shaft	
Remove—If Equipped (4-Cylinder Engines).....	13-266
Inspect and Measure Bushings and Journals.....	13-267
Remove and Install Bushings (4-Cylinder Engines).....	13-268
Inspect Gears and Thrust Plates.....	13-268
Remove and Install Gears.....	13-269
Cylinder Block Front Plate, Remove.....	13-270

TABLE OF CONTENTS (Continued)

	Page
Idler Gear Bushings	
Measure Bushing and Shaft	13-272
Remove	13-273
Install	13-274
Lower and Upper Idler Shafts, Remove	13-275
Front Plate, Clean and Inspect	13-275
Transfer Fuel Injection Pump Timing Mark	
Onto Replacement Front Plate	13-276
Idler Shaft Spring Pins (If Equipped), Install	13-277
Upper Idler Shaft, Install in Front Plate	13-277
Lower Idler Shaft, Install in Front Plate	13-278
Engine Front Plate, Install	13-278
Balancer Shafts (4-Cylinder Engines), Install and Time	13-280
Camshaft and Rotary Fuel Injection Pump, Install and Time	13-284
Timing Gear Cover, Clean and Inspect	13-287
Timing Gear Cover, Install	13-288
Crankshaft Front Wear Sleeve and Oil Seal, Install	13-290
Complete Final Assembly	13-293
Lubrication System	13-294
Essential Tools	13-294
Service Equipment and Tools	13-296
Other Material	13-297
Lubrication System Specifications	13-298
General Lubrication System Information	13-300
Remove, Inspect, and Install	
Oil Filter Base	13-300
Oil Cooler	13-303
Oil Bypass Valve	13-307
Remove and Install	
Oil Pressure Regulating Valve and Seat	13-307
Oil Fill Tube	13-309
Dipstick Tube With Oil Pan Installed	13-310
Dipstick Tube With Fitting	13-311
Oil Pump Pick-Up Tube Assembly—Remove, Inspect, and Install	13-312
Engine Oil Pump Assembly	13-313
Engine Oil Pump, Remove	13-313
Inspect and Measure Clearances	13-315
Complete Oil Pump Disassembly	13-318
Engine Oil Pump, Assemble	13-318
Engine Oil Pump, Install	13-319
Oil Pan, Install	13-322
Cooling System	13-324
Essential Tools	13-324
Service Equipment and Tools	13-324
Other Material	13-325
Cooling System Specifications	13-326
Diagnosing Cooling System Malfunctions	13-328
Water Manifold/Thermostat Cover and Thermostat, Remove	13-329
Water Manifold/Thermostat Cover and Thermostat, Install	13-330
Water Manifold and Thermostats	
(Dual Thermostats), Remove and Install	13-332
Test Thermostat(s)	13-333
Water Pump	
Remove	13-334
Assembly	13-335

TABLE OF CONTENTS (Continued)

	Page
Disassemble	13-335
Inspect, Clean, and Measure Parts	13-338
Assemble	13-339
Install	13-341
Cooling System Deaeration	13-343
Automatic (Spring) Belt Tensioner, Remove and Install	13-343
Checking Belt Tensioner Spring Tension and Belt Wear	13-344
Manual Belt Tensioner Adjustment	13-346
Fan Assembly, Inspect and Install	13-347
Fan Drive Assembly, Remove and Inspect	13-347
Adjustable Fan Drive Assembly, Replace Bearings	13-350
Fan Drive Assembly, Install	13-353
Coolant Heater—If Equipped, Remove and Install	13-355
Temperature Switch (Cold Start Advance), Remove and Install	13-356
Air Intake and Exhaust System	13-357
Other Material	13-357
Air Intake and Exhaust System Specifications	13-358
Turbocharger	
Extending Life	13-359
Remove	13-361
Failure Analysis	13-362
Seven-Step Inspection	13-364
Perform Radial Bearing Clearance Test	13-370
Perform Axial Bearing End Play Test	13-371
Turbocharger	
Adjust Wastegate Actuator	13-372
Repair	13-373
Prelube	13-373
Install	13-374
Break-In	13-375
Recommendations for Use	13-376
Exhaust Manifold—Remove, Inspect, and Install	13-376
Air-to-Air Aftercooler, Remove and Install	13-378
Air Intake Pipe, Remove and Install	13-378
Air Heater, Remove and Install	13-379
Fuel System	13-380
Essential Tools	13-380
Service Equipment and Tools	13-383
Other Material	13-384
Fuel System Specifications	13-385
Fuel System—General Information	13-388
Relieve Fuel System Pressure	13-389
Final Fuel Filter and/or Primary Fuel	
Filter/Water Separator Base, Remove	13-390
Primary Fuel Filter/Water Separator Assembly	13-392
Final Fuel Filter Assembly	13-393
Final Fuel Filter and Primary Fuel Filter/Water Separator, Replace	13-394
Fuel Supply Pump	
Remove	13-396
Bench Test	13-397
Install	13-399
Remove on In-Line Fuel Injection Pump	13-400
Test In-Line Pump for Leaks	13-401
Disassemble	13-402
Inspect and Repair Components	13-405

TABLE OF CONTENTS (Continued)

	Page
Assemble	13-407
Install on In-Line Fuel Injection Pump	13-408
Service Injection Pump Overflow Valve.....	13-408
Fuel Shutoff Solenoid, Remove and Install.....	13-410
Rotary Fuel Injection Pump Timing.....	13-411
In-Line Fuel Injection Pump Timing.....	13-412
Stanadyne Model DB2 and DB4 Injection Pump, Remove.....	13-413
Injection Pump Drive Gear I.D. and Shaft O.D., Inspect	13-415
Stanadyne Fuel Injection Pump, Repair	13-416
Stanadyne Model DB2 and DB4 Injection Pump, Install.....	13-417
Lucas Fuel Injection Pump	
Remove.....	13-420
Repair	13-423
Install	13-423
In-Line Fuel Injection Pump	
Remove.....	13-427
Repair	13-430
Install	13-430
Repair Aneroid	13-435
Transfer Fuel Injection Pump Timing Mark	
Onto Replacement Front Plate.....	13-436
Fuel Injection Nozzles	
Remove.....	13-437
Clean Nozzle Bore	13-438
Clean.....	13-439
Diagnose Malfunction	13-440
Test	13-441
Disassemble	13-446
Inspect and Clean Nozzle Body.....	13-449
Valve and Valve Seat, Inspect and Clean.....	13-450
Valve Adjusting Mechanism, Inspect.....	13-452
Fuel Injection Nozzles	
Assemble	13-453
Adjust.....	13-454
Install Seals.....	13-458
Install	13-459
Starting and Charging Systems.....	13-461
Essential Tools	13-461
Starting and Charging System Specifications	13-461
Starter, Remove and Install	13-462
Alternator, Remove and Install.....	13-463
Engine Tune-Up and Break-In.....	13-464
Effects of Altitude and Temperature on Engine Performance.....	13-464
Preliminary Engine Testing.....	13-465
General Tune-Up Recommendations	13-466
Dynamometer Test	13-467
Dynamometer Test Specifications.....	13-467
Engine Break-In Guidelines	13-470
Perform Engine Break-In	13-471
Engine Oil Consumption	13-472
Crankcase Ventilation System, Check	13-473
Air Intake System, Check.....	13-474
Exhaust System, Check	13-475
Cooling System, Check and Service	13-476
Electrical System, Check.....	13-478

TABLE OF CONTENTS (Continued)

	Page
Engine System Operation and Tests	13-479
Essential Tools	13-479
Engine Test Specifications	13-480
Engine—Sectional View	13-481
General Engine Description	13-482
How the Engine Lubrication System Works	13-483
How the Cooling System Works	13-485
Head Gasket Joint Construction and Operation	13-487
Diagnosing Head Gasket Joint Failures.....	13-489
Head Gasket Inspection and Repair Sequence	13-493
Diagnosing Engine Malfunctions	13-495
Test Engine Compression Pressure	13-498
Check Engine Oil Pressure.....	13-500
Check for Excessive Engine Crankcase Pressure (Blow-By).....	13-502
Pressure Test Cooling System and Radiator Cap	13-503
Inspect Thermostat and Test Opening Temperature.....	13-505
Engine Cranking Speed Test	13-506
Air Intake and Exhaust System Operation and Tests.....	13-507
Essential Tools	13-507
Service Equipment and Tools.....	13-507
Diagnosing Air Intake Malfunctions	13-509
How the Air Intake and Exhaust System Works	13-510
Air Cleaner Operation	13-511
Air Filter Restriction Indicator Switch Test	13-512
Intake Air Leak Test.....	13-513
Exhaust Leak Check (Turbocharged Engines)	13-514
Intake and Exhaust Restriction Check.....	13-515
Diagnosing Turbocharger Malfunctions.....	13-516
Turbocharger Operation	13-517
How the Turbocharger is Lubricated.....	13-517
Check Intake Manifold Pressure (Turbocharger Boost).....	13-518
Intake Manifold Pressure (Turbocharger Boost) Specifications.....	13-520
Turbocharger Wastegate Test.....	13-526
Turbocharger Oil Seal Leak Test	13-527
Fuel System Operation and Tests	13-528
Essential Tools	13-528
Service Equipment and Tools.....	13-529
Fuel System Test Specifications.....	13-531
Rotary Fuel Injection Pump Specifications	13-532
Fuel Injection Pump—General Information.....	13-542
Using TIME TRAC [®] as a Tachometer	13-543
Rotary Injection Pump Dynamic Timing, Check and Adjust.....	13-543
In-Line Injection Pump Static Timing, Check and Adjust	13-550
Fuel System Operation—Rotary Fuel Injection Pump	13-551
Fuel System Operation—In-Line Fuel Injection Pump	13-553
Diagnose Fuel System Malfunctions	13-555
Fuel Supply Quality Check	13-559
Air in Fuel Test	13-560
Restricted Fuel Return Line Check	13-561
Rotary Injection Pump	
Fuel Supply Pump Operation.....	13-562
Diagnose Fuel Supply Pump Malfunctions	13-563
Measure Fuel Supply Pump Pressure	13-564

TABLE OF CONTENTS (Continued)

Page

In-Line Injection Pump	
Fuel Supply Pump Operation.....	13-565
Measure Fuel Supply Pump Pressure	13-567
Diagnose Fuel Supply Pump Malfunctions	13-568
Test Fuel Supply Pump for Leaks.....	13-569
Check Fuel Supply Pump Operation.....	13-570
Service Fuel Supply Pump	13-572
Rotary Pumps	
Cold Start Advance System Operation	13-573
Cold Start Switch Operational Check	13-574
Cold Start Advance System Operational Check	13-575
Light Load Advance Operation	13-577
Light Load Advance Operational Checkout	13-577
Fuel Shut-Off Solenoid Operational Check	
(In-Line Injection Pumps).....	13-578
Fuel Shut-Off Solenoid Resistance Test (Nippondenso Pump).....	13-579
Fuel Shut-Off Solenoid Resistance Test (Lucas Pump)	13-580
Fuel Shut-Off Solenoid Linkage Adjustment	
(In-Line Injection Pumps).....	13-581
Final Fuel Filter/Water Separator Operation	13-582
Bleed the Fuel System.....	13-583
Stanadyne Rotary Fuel Injection Pump Operation	13-587
Lucas Rotary Fuel Injection Pump Operation	13-589
Diagnose Rotary Fuel Injection Pump Malfunctions	13-591
Check and Adjust Engine Speeds on Lucas Pump	13-592
Adjust Variable Speed on Generator Set Engines	
(Lucas Pumps Only)	13-593
Check and Adjust Engine Speeds on Stanadyne Pump	13-594
Adjust Variable Speed (Droop) on Generator Set Engines (3—5%	
Governor Regulation)—Stanadyne DB2 and DB4 Injection Pumps..	13-595
In-Line Fuel Injection Pump Operation.....	13-596
Diagnose In-Line Fuel Injection Pump Malfunctions	13-597
Check Fast Idle Speed—In-Line Fuel Injection Pump.....	13-598
Check and Adjust Slow Idle Speed—In-Line Fuel Injection Pump.....	13-599
Change Engine Rated Speed and Adjust	
Droop—In-Line Injection Pumps	13-601
How the Aneroid Works (If Equipped)	13-603
Diagnose Aneroid Malfunctions.....	13-604
Fuel Injection Nozzles—General Information and Operation.....	13-605
Diagnose Fuel Injection Nozzle Malfunctions	13-607
Test Fuel Injection Nozzles (Engine Running)	13-608
Fuel Drain Back Test Procedure	13-609
Dealer Fabricated Tools.....	13-610
How to Make Tools.....	13-610
DFRG3—Cylinder Liner Holding Fixture	13-610
DFRG5—Injection Pump Front Plate Timing Mark Transfer Tool.....	13-611
Engine Oil Dipstick Tube Driver	
(6010—6910 Series Tractor Engines)	13-612
Chapter 14 Section 05 Engine Auxiliary System Repair	
0505B Cold Weather Starting Aids.....	14-1
Engine Coolant Heater	
Remove and Install	14-1
Disassemble and Assemble.....	14-3

TABLE OF CONTENTS (Continued)

			Page
0510	Cooling System.....		14-5
	Specifications		14-5
	Radiator, Oil Cooler, and Fan Shroud—Remove and Install		14-5
	Fan and Fan Guard, Remove and Install		14-7
	Fan Belt, Remove and Install		14-8
	Thermostats, Remove and Install		14-9
	Cooling System Fill and Deaeration.....		14-11
0515	Speed Controls.....		14-12
	Service Equipment and Tools.....		14-12
	Specifications		14-13
	Injection Pump Fast and Slow Idle Stops Adjustment		14-14
	Engine Speed Control Cable, Remove and Install.....		14-17
	Engine Control Motor and Sensor		
	Remove and Install		14-18
	Adjustment.....		14-19
	Engine Speed Learning Procedure		14-20
	Fuel Shut-Off Solenoid Linkage		
	Remove and Install		14-22
	Check and Adjust.....		14-23
0520	Intake System		14-25
	Essential Tools		14-25
	Service Equipment and Tools.....		14-25
	Specifications		14-26
	Air Intake System Leakage Test.....		14-27
	Air Cleaner		
	Remove and Install		14-28
	Disassemble and Assemble.....		14-29
	Charge Air Cooler, Remove and Install		14-31
0560	External Fuel Supply System.....		14-33
	Other Material		14-33
	Specifications		14-33
	Fuel Tank, Remove and Install.....		14-34
	Primary Fuel Filter (Water Separator)		
	Remove and Install		14-36
	Element, Remove and Install		14-38
	Final Fuel Filter		
	Remove and Install		14-40
	Element, Remove and Install		14-41
	Bleed Fuel System.....		14-43
	Arctic/Cold Weather Heater Fuel Supply Pump, Remove and Install....		14-44
Chapter 15	Section 07	Dampener Drive (Flex Coupling) Repair	
	0752	Elements	15-1
		Service Equipment and Tools.....	15-1
		Other Material	15-1
		Specifications	15-2
		Dampener Drive (Flex Coupling), Remove and Install.....	15-2
Chapter 16	Section 16	Electrical System Repair	
	1671	Batteries, Support, and Cables.....	16-1
		Service Equipment and Tools.....	16-1
		Specifications	16-2
		Batteries	
		Handle Safely.....	16-3
		Procedure for Testing	16-4

TABLE OF CONTENTS (Continued)

	Page
Check Battery Electrolyte Level and Terminals.....	16-5
Using Booster Batteries—24-Volt System.....	16-6
Battery, Charge.....	16-8
Engine Speed Learning Procedure	16-10
Batteries, Remove and Install.....	16-12
Adding 12-Volt Accessories	16-13
24-Volt Slave Receptacle, Remove and Install	16-14
1672 Alternator, Regulator, and Charging System Wiring.....	16-15
Service Equipment and Tools.....	16-15
Specifications	16-15
Fan Belt—Inspect, Remove, and Install.....	16-16
Alternator, Remove and Install.....	16-17
Function of Alternator.....	16-19
Special or Essential Tools	16-21
Robert Bosch Charging Circuit Specifications.....	16-22
Alternator, Section View.....	16-23
Alternator—Removal	16-23
Removing Brush Holder With Regulator	16-24
Alternator—Disassembly	16-24
Stator—Removal.....	16-24
Diode Plate—Removal.....	16-24
Alternator, Exploded View.....	16-25
Testing Rotor for Short Circuit.....	16-26
Testing Rotor for Ground.....	16-26
Testing Slip Rings and Rotor Shaft for Radial Runout	16-26
Turning Down Slip Rings.....	16-27
Testing Stator Coil for Short Circuit	16-27
Testing Stator Coil for Grounds	16-27
Replacing Carbon Brushes	16-28
Replacing Ball Bearings.....	16-28
Checking Positive Diodes	16-28
Checking Negative Diodes.....	16-29
Testing Exciting Diodes	16-29
Diode Plate Installation	16-30
Soldering Stator Coils	16-30
Pressing Ball Bearing Onto Rotor Shaft.....	16-30
Pressing Rotor Into Drive End Frame	16-31
Alternator—Assembly.....	16-31
Installing Brush Holder With Regulator.....	16-31
Fan and Belt Pulley—Installation	16-31
1674 Wiring Harness and Switches	16-32
Excavator Overview.....	16-32
Component Location Drawing	
Legend	16-33
Cab.....	16-37
Engine and Frame Harness	16-38
Air Compressor and Rock Drill Harness	16-40
Fuses	
Replacing.....	16-41
(Blade-Type) Color Codes.....	16-43
Remove and Install	
Control Panel Switches.....	16-44
Dome Light Switch.....	16-45
Propel Alarm Cancel Switch and Start Aid Switch	16-46
Starter Switch.....	16-46

TABLE OF CONTENTS (Continued)

	Page
Cab Ground Straps.....	16-47
Engine Temperature Switch.....	16-48
Charge Air Temperature Switch.....	16-48
Coolant Level Switch	16-49
Engine Oil Pressure Switch	16-49
Engine Oil Level Switch.....	16-50
Engine Coolant Temperature Sensor	16-50
Fuel Level Switch.....	16-51
Fuel Level Sensor	16-51
Travel Alarm	
Remove and Install	16-52
Changing Volume.....	16-52
Remove and Install	
Propel Pressure Switch	16-53
Dig Pressure Switch.....	16-54
Rear Pump Pressure Sensor	16-54
Front Pump Pressure Sensor	16-55
Engine Speed Sensor	16-55
Pump Control Pressure Sensor	16-56
Proportional Solenoids.....	16-56
Engine Hourmeter Switch.....	16-57
Windshield Wiper Enable Switch.....	16-57
Air Cleaner Restriction Indicator Switch.....	16-58
Engine and Pump Controller (EPC)	
Connecting Harness Connector	16-58
Remove and Install	16-59
Monitor Panel and Switch Panel Bulb, Replace.....	16-60
Monitor Panel, Remove and Install	16-60
Hour Meter, Remove and Install	16-62
Propel Alarm Volume, Changing	16-62
Spring Wire Retainer Connectors, Disconnecting.....	16-63
Tab Retainer Connectors, Disconnecting	16-63
Remove and Install	
Battery Relay	16-64
Starter Relay	16-65
Fuel Shutoff Relay	16-66
Hydraulic Oil Filter Restriction Switch (230LCRD).....	16-67
Overload Alarm Relay	16-68
Overload Alarm Pressure Switch.....	16-69
Overload Alarm Proximity Switch	16-70
1675 System Controls.....	16-71
Specifications	16-71
Welding on Machine	16-71
Engine and Pump Controller (EPC)	
Connecting Harness Connector	16-73
Remove and Install	16-73
Engine Speed Learning Procedure	16-74
Remove and Install	
Monitor Controller.....	16-76
Rockdrill Control Console	16-77
Rock Drill Start—Stop Selector Control Box.....	16-79
Compressor Remote Control Panel.....	16-80
1677 Starting Motors	16-81
General Information	16-81
Typical Starting Circuit Operation	16-81

TABLE OF CONTENTS (Continued)

			Page
		Typical Starting Motor Operation	16-82
		Special or Essential Tools	16-83
		Robert Bosch Starting Motor Specifications	16-84
		Make No-Load Test	16-85
		Diagnosing Starting Motor Malfunctions	16-86
		Robert Bosch Starting Motor	16-87
		Starting Motor, Exploded View	16-88
		Disassembly	16-89
		Solenoid Switch—Removal	16-89
		Carbon Brush Plate—Removal	16-89
		Armature—Removal	16-90
		Snap Ring—Removal	16-90
		Cleaning Parts	16-90
		Testing Armature for Grounds	16-90
		Testing Armature for Short Circuit	16-91
		Testing Armature for Open Circuit	16-91
		Turning Commutator Down	16-92
		Testing Commutator for Out-of-Roundness	16-92
		Testing Field Winding for Ground Circuits	16-93
		Field Winding—Removal	16-93
		Make Open Circuit Test for Field Windings	16-94
		Lubrication of Starting Motor (Before and During Assembly)	16-94
		Field Winding—Installation	16-95
		Checking Carbon Brush Plate for Grounds	16-95
		Testing Carbon Brushes	16-96
		Replace Carbon Brushes	16-96
		Engaging Lever—Installation	16-96
		Testing Armature End Play	16-97
		Installing Starting Motor	16-97
Chapter 17	Section 17	Frame or Supporting Structure Repair	
	1740	Frame Installation	17-1
		Specifications	17-1
		Welding on Machine	17-1
		Welding Repair of Major Structure	17-3
	1749	Chassis Weights	17-4
		Service Equipment and Tools	17-4
		Specifications	17-4
		Counterweight, Remove and Install (Model 230LCR)	17-5
		Compressor, Remove and Install (Model 230LCRD)	17-6
Chapter 18	Section 18	Operator's Station Repair	
	1800	Operator's Station	18-1
		Specifications	18-1
		Cab, Remove and Install	18-1
	1810	Operator Enclosure	18-6
		Service Equipment and Tools	18-6
		Other Material	18-6
		Windowpane	
		Remove and Install Two Piece Molding	18-7
		Remove and Install One Piece Molding	18-8
		Sliding Windows, Remove and Install	18-9
		Windowpane Dimensions	18-10
	1821	Seat and Seat Belt	18-12
		Specifications	18-12

TABLE OF CONTENTS (Continued)

			Page
		Seat	
		Check Adjustments	18-12
		Remove and Install	18-13
		Seat Belt	
		Remove and Install	18-19
		Inspect.....	18-20
1830		Heating and Air Conditioning	18-21
		Essential Tools	18-21
		Service Equipment and Tools.....	18-22
		Other Material	18-22
		Specifications	18-23
		R134a Refrigerant	
		Proper Handling.....	18-23
		Cautions	18-24
		R134a Compressor Oil	
		Charge Check.....	18-25
		Removal.....	18-25
		R134a Component Oil Charge	18-26
		R134a Refrigerant Recovery, Recycling and Charging	
		Station Installation Procedure	18-27
		R134a System	
		Recover.....	18-28
		Evacuate.....	18-29
		Charge.....	18-30
		Air Conditioning Compressor	
		Check and Adjust Belt Tension	18-31
		Remove and Install	18-32
		Disassemble and Inspect.....	18-33
		Assemble	18-44
		Inspect Manifolds	18-47
		Remove and Install	
		Receiver Dryer.....	18-48
		Evaporator	18-50
		Condenser	18-52
		Heater Core—Machine With Air Conditioning.....	18-54
		Heater Core and Blower Motor	18-56
		Heater Hoses.....	18-58
Chapter 19	Section	19 Sheet Metal and Styling Repair	
	1910	Hand Rails, Remove and Install	19-1
	1919	Boom Cylinder Guard, Remove and Install.....	19-2
Chapter 20	Section	22 Compressor Repair	
	2200	Disassembly and Assembly	20-1
		Separator Tank	
		Separator Tank.....	20-1
		Remove and Install	20-3
		Disassemble and Assemble.....	20-4
		Disassemble and Assemble Cooling System.....	20-5
		Unloader Valve Assembly	
		Remove and Install	20-8
		Disassemble and Assemble.....	20-10
		Oil Temperature Bypass Valve Assembly	
		Remove and Install	20-11
		Disassemble and Assemble.....	20-14

TABLE OF CONTENTS (Continued)

Page

Oil Filter Assembly	
Remove and Install	20-14
Disassemble and Assemble.....	20-16
Minimum Pressure Valve	
Remove and Install	20-17
Disassemble and Assemble.....	20-19
Air Intake	
Remove and Install	20-20
Disassemble and Assemble.....	20-22
Disassemble and Assemble Air Cleaner Assembly.....	20-23
Instrument Panel Assembly	
Remove and Install	20-24
Disassemble and Assemble.....	20-26
Disassemble and Assemble Air Piping.....	20-28
Disassemble and Assemble Oil Piping.....	20-31

Chapter 21 Section 33 Excavator Repair

3302 Buckets	21-1
Specifications	21-1
Bucket Tooth, Replace	21-1
Bucket Tooth Tip—Heavy-Duty Bucket, Replace.....	21-3
Welding on Machine	21-3
Tooth Shank, Remove and Install	21-5
Cutting Edge	
Replace Welded.....	21-8
Repair Cracked	21-9
Bucket, Disassemble and Assemble.....	21-10
Hydraulic Thumb	
Remove and Install (Model 230LCR).....	21-12
Lock-Up Procedure.....	21-14
Quick-Disconnect Hitch	
Remove and Install (Model 230LCRD).....	21-15
Remove and Install (Model 230LCR).....	21-17
Disassemble	21-19
Assemble	21-21
3340 Frames	21-23
Service Equipment and Tools.....	21-23
Other Material	21-23
Specifications	21-24
Remove and Install	
Bucket Links.....	21-27
Arm.....	21-29
Boom	21-31
Boom, Arm, and Bucket Pins, Bushings and Bosses—Inspect.....	21-36
Bushings and Seals, Remove and Install.....	21-39
3360 Hydraulic System	21-40
Essential Tools	21-40
Service Equipment and Tools.....	21-41
Other Material	21-45
Specifications	21-46
Control Lever Pattern Conversion.....	21-56
Hydraulic System Warm-Up Procedure	21-57
Lower Boom With Engine Stopped (Using Boom Cylinder Load Lowering Valve).....	21-59

TABLE OF CONTENTS (Continued)

	Page
Lower Boom With Engine Stopped (When Not Equipped With Boom Cylinder Load Lowering Valve)	21-60
Hydraulic Oil Cleanup Procedure Using Portable Filter Caddy	21-62
Hydraulic Pump and Drive Gearbox	
Remove and Install	21-63
Start-Up Procedure	21-65
Disassemble	21-66
Pilot Pump Drive Shaft and Gear, Disassemble and Assemble	21-79
Hydraulic Pump and Drive Gearbox, Assemble	21-80
Hydraulic Pump Regulator, Disassemble and Assemble	21-88
Pilot Pump	
Remove and Install	21-91
Disassemble and Assemble	21-92
Pilot Pressure Regulating Valve and Filter	
Remove and Install	21-94
Disassemble and Assemble	21-96
Pilot Shut-Off Valve	
Remove and Install	21-96
Linkage Adjustment	21-98
Disassemble and Assemble	21-99
Proportional Solenoid Valve	
Manifold, Remove and Install	21-100
Disassemble and Assemble	21-103
Dig Function Pilot Controller	
Remove and Install	21-106
Disassemble and Assemble	21-109
Propel Pilot Controller	
Remove and Install	21-112
Disassemble and Assemble	21-114
Flow Regulator Valve	
Remove and Install	21-117
Disassemble and Assemble	21-119
Control Valve	
Remove and Install	21-120
Disassemble and Assemble	21-128
System Relief Valve, Disassemble and Assemble	21-145
Circuit Relief and Anti-Cavitation Valve, Disassemble and Assemble	21-147
Hydraulic Oil Tank	
Remove and Install	21-148
Disassemble and Assemble	21-154
Return Filter and Bypass Valve, Remove and Install	21-155
Suction Strainer, Remove and Install	21-158
Hydraulic Oil Tank Relief Valve and Breather Filter Cap	
Disassemble and Assemble	21-162
Remove and Install	
Swing Motor Make-Up Oil Restriction Valve	21-163
Oil Cooler Bypass Valve	21-165
Oil Cooler	21-167
230 Left Boom Cylinder Controlled Load Lowering Valve	21-171
230 Right Boom Cylinder Controlled Load Lowering Valve	21-173
Boom Cylinder	21-175
Arm Cylinder	21-179
Bucket Cylinder	21-182
Hydraulic Cylinder Bleed Procedure	21-187

TABLE OF CONTENTS (Continued)

			Page
		Boom, Arm or Bucket Cylinder	
		Disassemble	21-188
		Assemble	21-198
		Hydraulic Thumb Cylinder	
		Remove and Install	21-212
		Disassemble and Assemble.....	21-214
		Hydraulic Hose Reel, Remove and Install.....	21-215
Chapter 22	Section 43	Swing or Pivoting System Repair	
	4350	Mechanical Drive Elements.....	22-1
		Service Equipment and Tools.....	22-1
		Other Material	22-3
		Specifications	22-4
		Swing Gearbox	
		Remove and Install	22-5
		Start-Up Procedure	22-8
		Disassemble and Assemble.....	22-9
		Upperstructure	
		Remove.....	22-18
		Install	22-24
		Swing Bearing	
		Remove and Install	22-28
		Disassemble and Assemble.....	22-30
		Install Upper Seal	22-34
		Install Lower Seal	22-35
	4360	Hydraulic System	22-36
		Specifications	22-36
		Swing Motor and Park Brake	
		Remove and Install	22-36
		Start-Up Procedure	22-38
		Disassemble	22-39
		Assemble	22-45
		Swing Motor Make-Up and Crossover Relief Valves	
		Disassemble and Assemble.....	22-52
		Swing Park Brake Orifice and Check Valve, Remove and Install	22-54
		Swing Park Brake Release Valve, Remove and Install	22-55
Chapter 23	Section 44	Rock Drill Repair	
	4400	Rock Drill	23-1
		Service Equipment and Tools.....	23-1
		Other Material	23-5
		Torque Specifications.....	23-6
		Rock Drill, Disassemble.....	23-7
		Hydraulic Drifter, Disassemble and Assemble.....	23-28
		HP Accumulator	
		Central, Disassemble and Assemble	23-46
		Disassemble and Assemble.....	23-47
		LP Accumulator, Disassemble and Assemble	23-48
		Hydraulic Drifter Inspection	23-49
		Disassemble and Assemble	
		GCX 14/12 Feed.....	23-74
		Rod Changer	23-96
		Cradle and Articulation.....	23-109
		Cross-Tilting Cylinder	23-111
		Electro-Hydraulic Equipment	23-112

TABLE OF CONTENTS (Continued)

			Page
		Dust Collector	23-160
		Hydraulic Drifter Control	23-165
		Remote Control Assembly	23-185
		Rock Drill, Assemble	23-190
Chapter 24	Section 99	Dealer Fabricated Tools	
	9900	Dealer Fabricated Tools.....	24-1
		ST4920 Track Recoil Spring Disassembly and Assembly Tool	24-1
		DFT1087 Track Recoil Spring Disassembly and Assembly Guard Tool.....	24-5
		DFT1110 Spacer	24-6
		DFT1036A Propel Gearbox Nut Wrench.....	24-7
		DFT1109 Holding Bar	24-8
		Rotary Manifold Lifting Tool.....	24-9
		DFT1089 Barrel Support.....	24-10
		DFT1144 Guide Pin	24-11
		DFT1119 Pump Support	24-12
Appendix A		Unit Preventive Maintenance Checks and Services (PMCS).....	A-1
Appendix B		Maintenance Allocation Chart for Hydraulic Excavator 230LCR and 230LCRD.....	B-1
Appendix C		References	C-1

INTRODUCTION

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

SECTION NUMBERS (e.g., 01, 02, 16) of the Repair Chapters 11 through 24 refer to

the John Deere Functional Group Coding system.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate, which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

CHAPTER 1

SECTION 9000

GENERAL INFORMATION

FOLLOW SAFE PROCEDURES

Unsafe work practices are dangerous. Understand service procedure before doing work; do not attempt shortcuts.



TS231 -19-07OCT88


TX,05,FF1611 -19-14JUN90-1/1

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

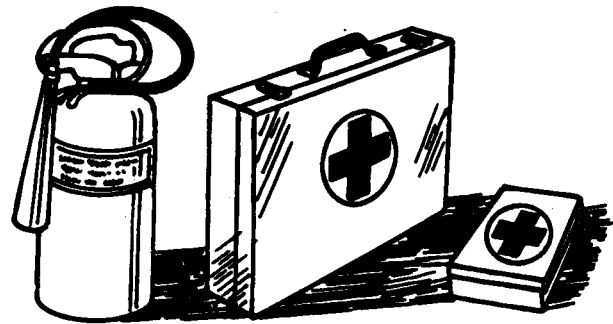

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

HANDLE FLUIDS SAFELY—AVOID FIRES

Handle fuel with care; it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks. Always stop engine before refueling machine. Fill fuel tank outdoors.



TS202 -UN-23AUG88

TX,05,FF1622 -19-14JUN90-1/2

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS227 -UN-23AUG88

TX,05,FF1622 -19-14JUN90-2/2

Safety

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88

DX,SPARKS -19-03MAR93-1/1


HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with your machine include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

See your authorized dealer for MSDS's on chemical products used with your machine.

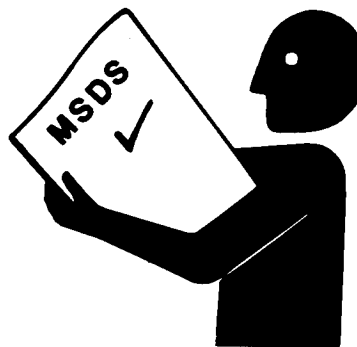

TS1132 -UN-26NOV90

TX,05,DH2500 -19-02OCT92-1/1

Safety

9000
01
3**PREVENT ACID BURNS**

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

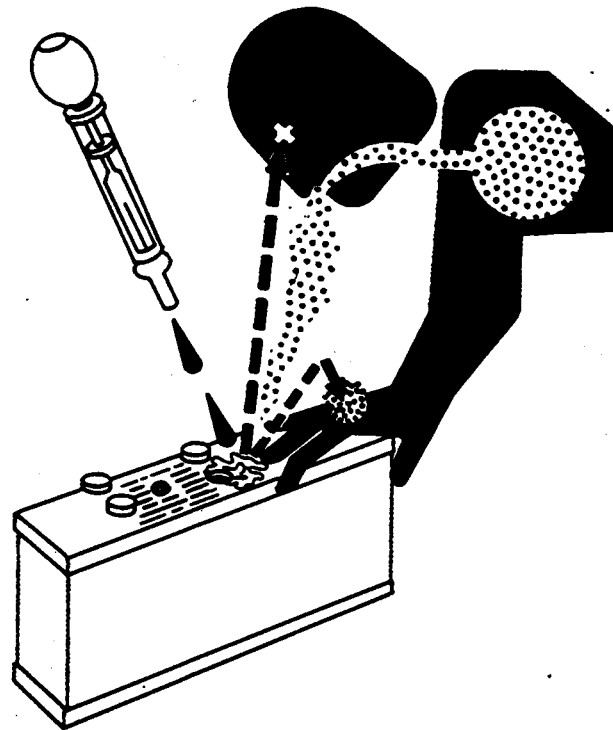

TS203 -JUN-23AUG88

DX,POISON -19-21APR93-1/1