

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT
MAINTENANCE PARTS LIST**

FOR

**HYDRAULIC EXCAVATOR
JOHN DEERE
MODEL 330LCR
NSN 3805-01-463-0805**

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

Reproduced by permission of Deere & Company, Moline, IL © 2000.
All rights reserved.

HEADQUARTERS, DEPARTMENT OF THE ARMY

15 FEBRUARY 2000

HEADQUARTERS,
DEPARTMENT OF THE ARMY
Washington, DC, 15 February 2000

UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE PARTS LIST

HYDRAULIC EXCAVATOR
JOHN DEERE
MODEL 330LCR
NSN 3805-01-463-0805

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028-2 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeprs.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter, DA Form 2028, or DA Form 2028-2 direct to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-LC-CI, Rock Island, IL 61299-7630. The email address is amsta-lc-ci@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

Distribution Statement A: Approved for public release: distribution is unlimited.

TABLE OF CONTENTS

	Page		Page
Introduction	I-1	Section 0402	
		Engine Continued	0402-1
Section 0130		Section 0403	
Wheels, Tires, Tracks	0130-1	Engine Continued	0403-2
Section 0260		Section 0404	
Axles and Suspension Systems	0260-2	Engine Continued	0404-2
Section 0400		Section 0407	
Engine	0400-2	Engine Continued	0407-1
Section 0401		Section 0409	
Engine Continued	0401-1	Engine Continued	0409-2

	Page
Section 0410	
Engine Continued	0410-1
Section 0413	
Engine Continued	0413-2
Section 0414	
Engine Continued	0414-2
Section 0416	
Engine Continued	0416-2
Section 0417	
Engine Continued	0417-2
Section 0418	
Engine Continued	0418-2
Section 0419	
Engine Continued	0419-2
Section 0420	
Engine Continued	0420-2
Section 0422	
Engine Continued	0422-2
Section 0423	
Engine Continued	0423-1
Section 0429	
Engine Continued	0429-2
Section 0433	
Engine Continued	0433-1
Section 0452	
Engine Continued	0452-1
Section 0505	
Engine Auxiliary System	0505-2
Section 0510	
Engine Auxiliary System Continued	0510-2
Section 0515	
Engine Auxiliary System Continued	0515-2
Section 0520	
Engine Auxiliary System Continued	0520-2
Section 0530	
Engine Auxiliary System Continued	0530-2
Section 0560	
Engine Auxiliary System Continued	0560-2
Section 1320	
Miscellaneous Vehicle	1320-2

	Page
Section 1369	
Miscellaneous Vehicle Continued	1369-2
Section 1671A	
Electrical System	1671A-2
Section 1673A	
Electrical System Continued	1673A-2
Section 1674	
Electrical System Continued	1674-2
Section 1740	
Frame, Chassis or Supporting Structure	1740-2
Section 1801A	
Operators Station	1801A-2
Section 1810	
Operators Station Continued	1810-2
Section 1821	
Operators Station Continued	1821-2
Section 1830	
Operators Station Continued	1830-2
Section 1910	
Sheet Metal and Styling	1910-2
Section 1913A	
Sheet Metal and Styling Continued	1913A-2
Section 1913B	
Sheet Metal and Styling Continued	1913B-2
Section 2002	
Safety, Convenience and Miscellaneous	2002-2
Section 2004A	
Safety, Convenience and Miscellaneous Continued	2004A-2
Section 2005A	
Safety, Convenience and Miscellaneous Continued	2005A-2
Section 2013B	
Safety, Convenience and Miscellaneous Continued	2013B-2
Section 2160	
Vehicle Main Hydraulic System	2160-2
Section 2163B	
Vehicle Main Hydraulic System Continued	2163B-1

Page

Section 3301

Excavator 3301-1

Section 3302

Excavator Continued..... 3302-2

Section 3315

Excavator Continued..... 3315-2

Section 3340

Excavator Continued..... 3340-2

Section 3344

Excavator Continued..... 3344-2

Section 3360

Excavator Continued..... 3360-2

Section 4151

Miscellaneous Function Mechanical
Drive..... 4151-2


Section 4360

Swing, Rotation or Pivoting System 4360-2

INTRODUCTION AND CUSTOMER INFORMATION

TP66767

-UN-27OCT99

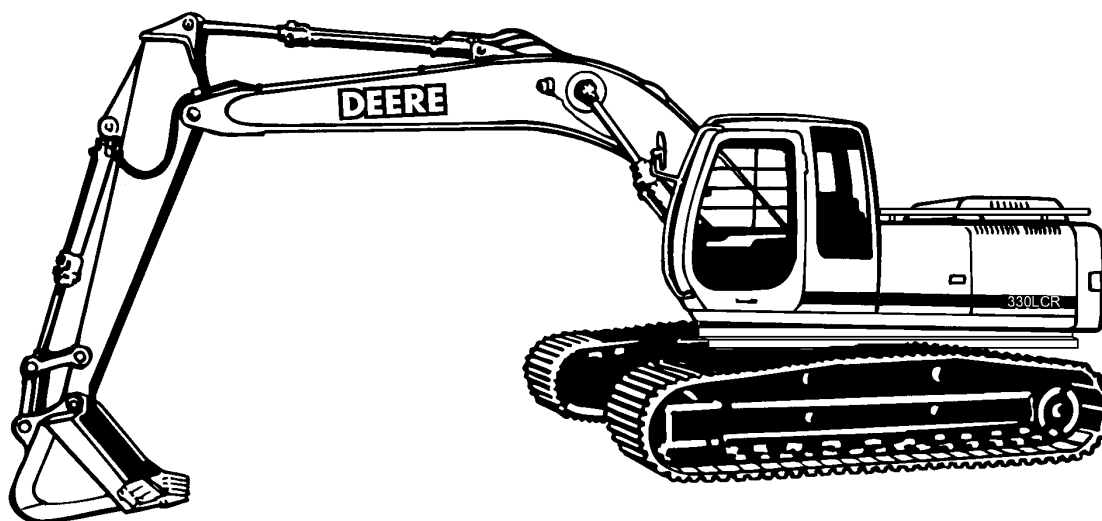

TP66767

*LEFT-HAND SIDE VIEW OF JOHN DEERE 330LCR EXCAVATOR
(MANUFACTURED 1999-)*

TO THE CUSTOMER

THE PART NUMBERS IN THIS PARTS CATALOG WERE CORRECT AT THE TIME YOUR CATALOG WAS PUBLISHED. IT IS OUR POLICY TO CONSTANTLY IMPROVE OUR MACHINES AND, THEREFORE, PART NUMBERS MAY CHANGE. WHEN ORDERING PARTS, VERIFY PART NUMBERS THROUGH YOUR DEALER'S MICROFICHE WHICH IS UP-TO-DATE.

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.)

SERIAL NUMBER LOCATIONS

EACH 330LCR EXCAVATOR HAS EIGHT SERIAL NUMBER PLATES:

A PRODUCT IDENTIFICATION NUMBER PLATE, AN ENGINE SERIAL NUMBER PLATE, A HYDRAULIC PUMP SERIAL NUMBER PLATE, A LEFT-HAND PROPEL MOTOR SERIAL NUMBER PLATE, A RIGHT-HAND PROPEL MOTOR SERIAL NUMBER PLATE, TWO SWING MOTOR SERIAL NUMBER PLATES AND A CONTROL VALVE SERIAL NUMBER PLATE.

THE PRODUCT IDENTIFICATION PLATE IS LOCATED ON THE RIGHT-HAND SIDE FRAME NEAR THE FRONT SUPPORT.

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT SIDE OF THE CYLINDER BLOCK NEAR THE FUEL INJECTION PUMP.

THE HYDRAULIC PUMP SERIAL NUMBER PLATE IS LOCATED NEAR THE FRONT OF THE HYDRAULIC PUMP.

THE SWING MOTOR SERIAL NUMBER PLATE IS LOCATED ON THE TOP OF THE SWING MOTOR.

THE PROPEL MOTOR SERIAL NUMBER PLATE IS LOCATED ON THE REAR OF THE PROPEL MOTOR.

THE CONTROL VALVE SERIAL NUMBER PLATE IS LOCATED ON THE UPPER LEFT-HAND SIDE OF THE CONTROL VALVE.


LEFT SIDE, RIGHT SIDE, FRONT AND REAR OF THE EXCAVATOR ARE VIEWED BY FACING IN THE DIRECTION OF THE EXCAVATOR FORWARD TRAVEL.

IF PRODUCT IDENTIFICATION NUMBERS OR SERIAL NUMBERS ARE REQUIRED FOR WARRANTY CLAIMS OR CORRESPONDENCE PERTAINING TO THIS PRODUCT. IT IS EXTREMELY IMPORTANT THAT ALL CHARACTERS BE FURNISHED. THIS POINT CANNOT BE OVEREMPHASIZED.

PRODUCT IDENTIFICATION NUMBER

TP49457

-UN-28AUG96

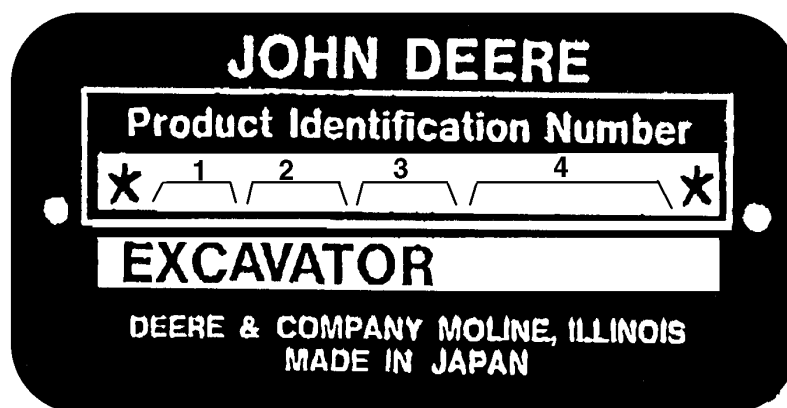

TP49457


- | | |
|---------------------------------------|-------------------------|
| 1. DESIGNATES EXCAVATOR MANUFACTURER | FF - JOHN DEERE-HITACHI |
| 2. DESIGNATES EXCAVATOR MODEL | '330LCR |
| 3. DESIGNATES EXCAVATOR CONFIGURATION | E |
| 4. DESIGNATES EXCAVATOR SERIAL NUMBER | 000000 |
| 5. DESIGNATES UNIT TYPE | EXCAVATOR |

SHORT BLOCK SERIAL NUMBER IDENTIFICATION

(6081) (EXAMPLE SHOWN)

RGP4574

-UN-02OCT95

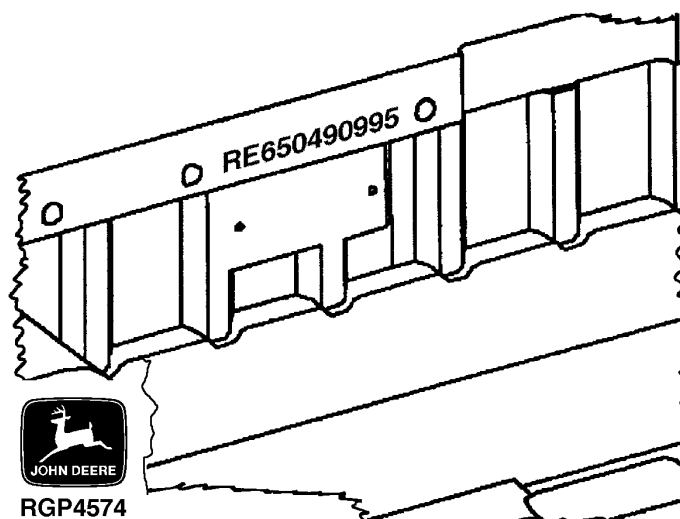

SERIAL NUMBER STAMPED INTO CASTING OF BLOCK NEAR PREVIOUS SERIAL NUMBER PLATE.

EXAMPLE: RE650490995

- | | |
|-----------------------------------|---------|
| 1. DESIGNATES SERVICE PART NUMBER | RE65049 |
| 2. DESIGNATES MONTH ASSEMBLED | 09 |
| 3. DESIGNATES YEAR ASSEMBLED | 95 |

TWO LINE BAR CODED ENGINE SERIAL NUMBER PLATE (LOCATED ON STARTER SIDE OF ENGINE)

RGP4928 -UN-25JUL97



FIRST LINE

DEFINES

RG - WATERLOO ENGINE WORKS

DESIGNATES ENGINE MANUFACTURER.

6

DESIGNATES NUMBER OF CYLINDERS.

081 (8.1 LITERS)

DESIGNATES LITER DISPLACEMENT.

H - AIR-TO-AIR

DESIGNATES TYPE OF AIR INTAKE SYSTEM.

T

DESIGNATES DUBUQUE VEHICLE.

XXXXXX

DESIGNATES ENGINE SERIAL NUMBER.

SECOND LINE

APPLICATION

6081HT001

' 330LCR EXCAVATOR

SERIAL NUMBER LISTING INFORMATION

SERIAL NUMBER INFORMATION IS LISTED TO SHOW ON WHICH MACHINES EACH PART CAN BE USED; FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.
- 000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.
- 000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.
- 000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER CHANGE WAS MADE BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRODUCED.

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES OF THE LOADER OR TRACTOR PARTS ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL

EXCEPTION: FOR ALL BACKHOE PARTS, "RIGHT-HAND" AND "LEFT-HAND" SIDES, "FRONT" AND "REAR" ARE DETERMINED WHEN SEATED FOR BACKHOE OPERATION.

BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY.

BOLT AND CAP SCREW STRENGTH IDENTIFICATION

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER.

COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

ORDERING PARTS FOR THE HYDRAULIC EXCAVATOR (HYEX) TYPE III

1. MILSTRIP requisitioning through Direct Vendor Delivery (DVD):

Submit a requisition using the normal MILSTRIP process. The CAGE Codes for John Deere, Indeco, Ingersoll-Rand and Montebert are listed below with the section of the parts manual to which each apply. The CAGE Code must be input along with the desired part number. The part numbers contained in the HYEX parts manual cross-reference to NSNs in FEDLOG. The requisition will be processed electronically through DLA or TACOM. Delivery of parts to units located within CONUS will be shipped directly to the originator. Delivery of parts to OCONUS locations will be shipped to the appropriate CONUS Containerization/Consolidation Point (CCP) for trans-shipment on military vessel/aircraft to the OCONUS-based CCP.

2. MILSTRIP requisitioning through wholesale system:

Submit a requisition using the normal MILSTRIP process. The CAGE Code must be input along with the desired part number. The part numbers contained in the HYEX parts manual cross-reference to NSNs in FEDLOG. If there is stock in the wholesale system, the part will be shipped from a DLA supply depot.

3. Local Purchase:

Parts can be purchased from the local dealer using the IMPAC card.

4. Phone or E-Mail:

Units can also telephone in requisitions directly to TACOM (DSN 786-6474/COMM (810) 574-6474 or DSN 786-6303/COMM (810) 574-6303). For further assistance, you can email TACOM Weapon System Manager, Harriet Stewart (stewarth@tacom.army.mil) or Maintenance System Manager, Geri Padden (paddeng@tacom.army.mil).

5. TM Section CAGE Code:

When ordering part for the John Deere Model 330 LCR Excavator use the following CAGE Codes with the required part number illustrated in this manual.

Section	Nomenclature	Manufacture	CAGE Code
Section 0130	Tracks	John Deere	1J955
Section 0260	Suspension	John Deere	1J955
Section 0400-0452	Engine	John Deere	1J955
Section 0505-0560	Engine Auxiliary Sys	John Deere	1J955
Section 1320-1369	Miscellaneous Veh.	John Deere	1J955
Section 1671A-1674	Electrical Sys	John Deere	1J955
Section 1740	Frame/Support Struc.	John Deere	1J955
Section 1801A-1830	Operator's Station	John Deere	1J955
Section 1910-1919	Sheet Metal Styling	John Deere	1J955
Section 2002-2013B	Safety, Convenience	John Deere	1J955
Section 2160-2163B	Vehicle Main Hydraulic	John Deere	1J955
Section 3301	Excavator	John Deere	1J955
Section 3302	Breaker Attachment	Indeco	1N0L6
Section 3315-3360	Excavator	John Deere	1J955
Section 4151	Miscellaneous Function	John Deere	1J955
	Mech. Drive		
Section 4360	Swing Rotation & Pivot	John Deere	1J955

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
A					
1E16	ADAPTER, OIL COOLER.....	0419 - 2	2B9	ARM, WINDSHIELD WIPER	1810 - 6
1E17	ADAPTER, OIL COOLER BYPASS.....	0419 - 3	2C23	ARMREST, SEAT	1821 - 2
1F3	ADJUSTABLE FAN DRIVE	0429 - 4	1D1	ARMS, ROCKER	0402 - 4
1B7	ADJUSTER	0130 - 10	2C5	ASHTRAY	1810 - 26
2C23	ADJUSTER, SEAT	1821 - 2	1I13	ATTACHMENT MODE KIT.....	1674 - 28
2D1	ADJUSTER, SEAT STAND	1821 - 4	1H14	AUTO IDLE INDICATOR	1674 - 4
2E17	AIR CIRCULATING FAN	1830 - 38	3G15	AUXILIARY ELECTRIC FOOT SWITCH	3360 - 80
1G15	AIR CLEANER	0520 - 2	3G13	AUXILIARY ELECTRIC HAND CONTROLLER.....	3360 - 78
1G17	AIR CLEANER PIPING TO ENGINE.....	0520 - 4	3H4	AUXILIARY FRONT DRIVE	4151 - 2
1G17	AIR CLEANER SUPPORT	0520 - 4	3H6	AUXILIARY FRONT DRIVE	4151 - 4
2D20	AIR CONDITIONER PIPING (UNIT, ENGINE)	1830 - 16	3G19	AUXILIARY HYDRAULIC PLUMBING	3360 - 84
2D16	AIR CONDITIONER (COMPRESSOR, CONDENSER, AND TANK INSTALLATIONS).....	1830 - 12	3G21	AUXILIARY SPOOL CONTROL W/FLOW CONTROL KIT	3360 - 86
2E3	AIR CONDITIONER BLOWER COMPONENTS	1830 - 24	1B5	AXEL, FRONT IDLER	0130 - 8
2D24	AIR CONDITIONER COMPONENTS.....	1830 - 20	1B11	AXLE, LOWER ROLLER	0130 - 14
2E1	AIR CONDITIONER COMPONENTS (RELAY, FILTER, BLOWER)	1830 - 22	B		
2D16	AIR CONDITIONER COMPRESSOR BELT	1830 - 12	1H14	BACKUP ALARM	1674 - 4
2D22	AIR CONDITIONER COMPRESSOR COMPONENTS	1830 - 18	2B21	BARS, WINDOW	1810 - 18
2D16	AIR CONDITIONER COMPRESSOR PIPING TO CONDENSER.....	1830 - 12	1E18	BASE, FUEL FILTER	0420 - 2
2D16	AIR CONDITIONER COMPRESSOR PULLEY	1830 - 12	1E20	BASE, FUEL FILTER	0422 - 2
2D16	AIR CONDITIONER CONDENSER PIPING TO COMPRESSOR	1830 - 12	1D14	BASE, OIL FILTER.....	0407 - 4
2D16	AIR CONDITIONER CONDENSOR PIPING TO TANK	1830 - 12	1H20	BATTERY	1674 - 10
2E7	AIR CONDITIONER CONTROLLER	1830 - 28	1H20	BATTERY BOOSTER CABLES	1674 - 10
2D14	AIR CONDITIONER DUCT	1830 - 10	1H20	BATTERY RELAY.....	1674 - 10
2E11	AIR CONDITIONER DUCT	1830 - 32	1H20	BATTERY WIRE HARNESS	1674 - 10
2E5	AIR CONDITIONER HOUSING UNIT COMPONENTS.....	1830 - 26	1C21	BEARING KIT, UNDERSIZED MAIN BEARING CRANKSHAFT	0401 - 3
2D18	AIR CONDITIONER PIPING (UNIT, TANK, COMPRESSOR).....	1830 - 14	1J8	BEARING, SWING	1740 - 8
2D18	AIR CONDITIONER PIPING TO COMPRESSOR.....	1830 - 14	1C20	BEARING, THRUST	0401 - 2
2D20	AIR CONDITIONER PIPING TO ENGINE.....	1830 - 16	1C20	BEARINGS, MAIN.....	0401 - 2
2D18	AIR CONDITIONER PIPING TO RECEIVING TANK	1830 - 14	1E24	BELT TENSIONER.....	0423 - 2
2D14	AIR CONDITIONER SYSTEM (CONTROLLER, WIRE HARNESS, AIR DUCT, MOUNTING)	1830 - 10	2D16	BELT, AIR CONDITONER COMPRESSOR	1830 - 12
2D16	AIR CONDITIONER TANK PIPING TO CONDENSOR	1830 - 12	1F5	BELT, FAN	0429 - 6
2D16	AIR CONDITIONER VAPOR CONDENSER	1830 - 12	2D3	BELT, SEAT	1821 - 6
2E5	AIR CONDITIONING BOX	1830 - 26	2D5	BELT, SEAT, RETRACTABLE (76MM (3") WIDE.....	1821 - 9
2D14	AIR CONTIONER MOUNTING	1830 - 10	2E17	BLADE, AIR CIRCULATING FAN	1830 - 38
1F23	AIR COOLER	0510 - 2	2E17	BLADE, DEFROSTER FAN	1830 - 38
1G3	AIR COOLER PLENUM	0510 - 6	2B9	BLADE, WINDSHIELD WIPER	1810 - 6
2E9	AIR DUCT	1830 - 30	1D7	BLOCK, SHORT	0404 - 4
2D14	AIR DUCT, AIR CONDITIONER	1830 - 10	2E17	BLOWER, AIR CIRCULATING FAN	1830 - 38
2E15	AIR DUCT, AIR CONDITIONING.....	1830 - 36	2E1	BLOWER, AIR CONDITIONER	1830 - 22
2D6	AIR DUCT, HEATER	1830 - 2	2E3	BLOWER, AIR CONDITIONER COMPONENTS.....	1830 - 24
1H14	AIR FILTER RESTRICTION INDICATOR LIGHT	1674 - 4	2E17	BLOWER, DEFROSTER FAN	1830 - 38
1G15	AIR RESTRICTION INDICATOR	0520 - 2	1D20	BOLTS, CYLINDER HEAD.....	0409 - 2
1H14	ALARM, BACKUP	1674 - 4	3D7	BOOM	3344 - 2
1I3	ALARM, MOTION	1674 - 18	3D23	BOOM BOTTOM PIPINGS.....	3360 - 16
2G17	ALARM, OVERLOAD	2004A - 2	3G23	BOOM CYLINDER LOAD LOWERING VALVE KIT	3360 - 88
1E23	ALTERNATOR	0423 - 1	3H1	BOOM CYLINDER LOAD LOWERING VALVE KIT	3360 - 90
1E24	ALTERNATOR ADJUSTING STRAP	0423 - 2	3D15	BOOM CYLINDER PIPINGS TO CONTROL VALVE	3360 - 8
1H14	ALTERNATOR LIGHT	1674 - 4	3G7	BOOM CYLINDER, LEFT	3360 - 72
1E23	ALTERNATOR PULLEY AND HARDWARE	0423 - 1	3G5	BOOM CYLINDER, RIGHT	3360 - 70
1E24	ALTERNATOR SUPPORT	0423 - 2	1I18	BOOM LIGHTS	1673A - 2
1E5	ANEROID ACTIVATOR, HYDRAULIC.....	0413 - 8	3F21	BOOM PIPING	3360 - 62
2B9	ANTENNA, RADIO	1810 - 6	3D17	BOOM PIPINGS TO CONTROL VALVE	3360 - 10
1F21	ARCTIC START KIT	0505 - 10	3F3	BOOM UP PRESSURE SWITCH	3360 - 44
3D5	ARM ASSEMBLY, SHORT 2.66M	3340 - 2	1H20	BOOSTER CABLES, BATTERY	1674 - 10
3G9	ARM CYLINDER.....	3360 - 74	3C9	BOOT, CONTROL LEVER.....	3315 - 2
3F3	ARM IN PRESSURE SWITCH.....	3360 - 44	2G23	BOX, STORAGE, VANDAL PROTECTION	2013B - 3
3D5	ARM, SHORT, 2.66M	3340 - 2	1G19	BRACE, MUFFLER.....	0530 - 2
			2D16	BRACKET, AIR CONDITIONER COMPRESSOR	1830 - 12
			1C17	BRACKET, ENGINE	0400 - 2
			1D18	BRACKET, ENGINE OIL DIPSTICK TUBE.....	0407 - 8
			1H1	BRACKET, FUEL FILTER WATER SEPARATOR	0560 - 6

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
1E7	BRACKET, FUEL SHUT-OFF0413-10	2G19	CAN MOUNT, DECONTAMINATION.....2005A-2
3B8	BRACKET, HAMMER3301-1	1G21	CAP, FILLER, FUEL TANK0560-2
1G19	BRACKET, MUFFLER0530-2	1G7	CAP, RESERVE WATER TANK0510-10
1B24	BRAKE RELIEF VALVE, PROPEL MOTOR0260-10	1D5	CAPS, MAIN BEARING0404-2
1B24	BRAKE RELIEF VALVE, TRAVEL MOTOR0260-10	2D6	CAR HEATER.....1830-2
1B22	BRAKE VALVE0260-8	2D8	CAR HEATER COMPONENTS1830-4
1B24	BRAKE VALVE COMPONENTS0260-10	3B21	CAST LIP BUCKET, SEVERE DUTY, TOOTH ASSEMBLY.....3302-14
3C8	BREAKER, IMPACT, HYDRAULIC3302-26	2C1	CATCH, CAB DOOR1810-22
3G11	BUCKET CYLINDER3360-76	1C5	CENTER JOINT0260-16
3D5	BUCKET CYLINDER WITH SHORT ARM ASSEMBLY 2.66M3340-2	1B16	CENTER JOINT ATTACHMENTS0260-2
3D5	BUCKET LINKAGE, SHORT ARM ASSEMBLY 2.66M3340-2	3D21	CENTER JOINT PIPINGS TO CONTROL VALVE3360-14
3C3	BUCKET PIN-UP DATA3302-20	3D13	CENTER JOINT PIPINGS TO RETURN PIPINGS3360-6
3C5	BUCKET PIN-UP DATA3302-23	3F1	CENTER JOINT PIPINGS TO SOLENOID VALVE3360-42
3C7	BUCKET PIN-UP DATA3302-25	1C9	CENTER JOINT PIPINGS TO TRAVEL DEVICE0260-20
3B9	BUCKET, GENERAL PURPOSE3302-2	1C7	CENTER JOINT SUPPORT0260-18
3B11	BUCKET, GENERAL PURPOSE3302-4	1B13	CHAIN, TRACK.....0130-16
3B13	BUCKET, GENERAL PURPOSE, TEETH.....3302-6	1F23	CHARGE AIR COOLER0510-2
3B15	BUCKET, GENERAL PURPOSE, TEETH3302-8	2C5	CIGAR LIGHTER1810-26
3B17	BUCKET, HEAVY DUTY, TOOTH ASSEMBLY3302-10	1J8	CIRCLE, SWING BEARING1740-8
3B19	BUCKET, HEAVY DUTY, TOOTH ASSEMBLY3302-12	1H14	CIRCUIT BOARD, MONITOR1674-4
3B10	BUCKET, ROCK3302-3	1G15	CLEANER, AIR0520-2
3B21	BUCKET, SEVERE DUTY CAST LIP, TOOTH ASSEMBLY.....3302-14	1G17	CLEANER, AIR, SUPPORT0520-4
3B23	BUCKET, SEVERE DUTY PLATE LIP, TOOTH ASSEMBLY.....3302-16	1F13	COLD WEATHER STARTING AID0505-2
1C23	BUSHING, CAMSHAFT0402-1	2D16	COMPRESSOR BELT, AIR CONDITIONER1830-12
1D5	BUSHING, CAMSHAFT0404-2	2D18	COMPRESSOR PIPING TO AIR CONDITIONER.....1830-14
3C9	BUTTON, HORN.....3315-2	2D16	COMPRESSOR PULLEY, AIR CONDITIONER1830-12
1I3	BUZZER, MOTION ALARM1674-18	2D16	COMPRESSOR WIRE HARNESS, AIR CONDITIONER1830-12
1H14	BUZZER, WARNING1674-4	2D16	COMPRESSOR, AIR CONDITIONER1830-12
1E17	BYPASS TUBES, OIL COOLER0419-3	2D22	COMPRESSOR, AIR CONDITIONER COMPONENTS1830-18
1D14	BYPASS VALVE, OIL FILTER.....0407-4	2E7	COMPUTER, AIR CONDITIONER CONTROLLER.....1830-28
C		2D16	CONDENSER BRACKET1830-12
		2D16	CONDENSER, AIR CONDITIONER1830-12
2B7	CAB1810-4	1D4	CONNECTING RODS0403-3
2C3	CAB COMPONENTS1810-24	1E3	CONNECTORS, FUEL INJECTION PUMP HOUSING.....0413-6
2C1	CAB COMPONENTS (DOOR CATCH)1810-22	1I5	CONNECTORS, WEATHERPACK.....1674-20
2B13	CAB COMPONENTS (DOOR)1810-10	2C17	CONSOLE1810-38
2B15	CAB COMPONENTS (DOOR)1810-12	2C19	CONSOLE COVER.....1810-40
2B17	CAB COMPONENTS (FRONT)1810-14	2C21	CONSOLE COVER.....1810-42
2B19	CAB COMPONENTS (FRONT)1810-16	3D3	CONSOLE COVER.....3315-20
2B21	CAB COMPONENTS (RIGHT SIDE)1810-18	3G21	CONTROL KIT, W/FLOW, AUXILIARY SPOOL3360-86
2B23	CAB COMPONENTS (TOP HATCH)1810-20	3C9	CONTROL LEVER3315-2
2B11	CAB COMPONENTS (TOP, LEFT SIDE, REAR).....1810-8	3C15	CONTROL LEVER, PROPEL.....3315-8
2B9	CAB COMPONENTS (WINDSHIELD WIPER, DOME LIGHT, RADIO ANTENNA, RADIO SPEAKER)1810-6	3E1	CONTROL VALVE3360-18
2C13	CAB FLOOR PARTS1810-34	3E5	CONTROL VALVE (COMPONENTS)3360-22
2C5	CAB INSIDE RIGHT COVER.....1810-26	3E7	CONTROL VALVE (COMPONENTS)3360-24
1I20	CAB LIGHTS.....1673A-4	3E9	CONTROL VALVE (COMPONENTS)3360-26
2B5	CAB MOUNTING1810-2	3E11	CONTROL VALVE (COMPONENTS)3360-28
2G8	CAB SCREEN, FRONT UPPER1913A-2	3E13	CONTROL VALVE (COMPONENTS)3360-30
2B11	CAB TOP, HEADLINER1810-8	3E15	CONTROL VALVE (COMPONENTS)3360-32
1H20	CABLE, BATTERY1674-10	2H19	CONTROL VALVE PIPING TO PUMP2160-18
1G9	CABLE, ENGINE CONTROL0515-2	3D17	CONTROL VALVE PIPINGS TO BOOM3360-10
1F19	CABLE, HEATER0505-8	3D23	CONTROL VALVE PIPINGS TO BOOM BOTTOM3360-16
1F20	CABLE, HEATER0505-9	3D15	CONTROL VALVE PIPINGS TO BOOM CYLINDER3360-8
2D10	CABLE, HEATER CONTROLLER1830-6	3D21	CONTROL VALVE PIPINGS TO CENTER JOINT3360-14
1C23	CAMSHAFT0402-1	3F3	CONTROL VALVE PIPINGS TO FLOW CONTROL VALVE3360-44
1C23	CAMSHAFT BUSHING.....0402-1	3F5	CONTROL VALVE PIPINGS TO FLOW CONTROL VALVE3360-46
1D5	CAMSHAFT BUSHING.....0404-2	3D9	CONTROL VALVE PIPINGS TO LOWER OIL TANK.....3360-2
1C23	CAMSHAFT FOLLOWER0402-1	3D11	CONTROL VALVE PIPINGS TO OIL COOLER3360-4
1D1	CAMSHAFT FOLLOWER0402-4	3F17	CONTROL VALVE PIPINGS TO OIL FILTER3360-58
1C23	CAMSHAFT GEAR0402-1	3F7	CONTROL VALVE PIPINGS TO OIL TANK3360-48
		3F17	CONTROL VALVE PIPINGS TO OIL TANK3360-58
		3E21	CONTROL VALVE PIPINGS TO SOLENOID VALVE3360-38
		3F1	CONTROL VALVE PIPINGS TO SOLENOID VALVE3360-42

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
3F1	CONTROL VALVE PIPINGS TO SWING DEVICE 3360 - 42	1F8	CYLINDER HEAD GASKET KIT 0452 - 2
3D19	CONTROL VALVE PIPINGS TO SWING MOTOR 3360 - 12	1D4	CYLINDER LINERS 0403 - 3
3D13	CONTROL VALVE PIPINGS TO TOP OF SWING DEVICE 3360 - 6	3G9	CYLINDER, ARM 3360 - 74
3F9	CONTROL VALVE PIPINGS TO TRAVEL PILOT VALVE 3360 - 50	3G7	CYLINDER, BOOM, LEFT 3360 - 72
3E3	CONTROL VALVE SUPPORT 3360 - 20	3G5	CYLINDER, BOOM, RIGHT 3360 - 70
2D6	CONTROL, HEATER 1830 - 2	3G11	CYLINDER, BUCKET 3360 - 76
2D14	CONTROLLER, AIR CONDITIONER 1830 - 10	3D5	CYLINDER, BUCKET, WITH SHORT ARM ASSEMBLY 2.66M 3340 - 2
2E7	CONTROLLER, AIR CONDITIONER 1830 - 28	1F13	CYLINDER, ETHER START FLUID 0505 - 2
1H12	CONTROLLER, EPVC 1674 - 2	3G7	CYLINDER, LEFT BOOM 3360 - 72
2D10	CONTROLLER, HEATER 1830 - 6	3G5	CYLINDER, RIGHT BOOM 3360 - 70
1I12	CONVERTER (24-VOLT TO 12-VOLT) 1674 - 27		
1H6	COOLANT CONDITIONER AND ENGINE PART LUBRICANTS 1369 - 2		D
1H14	COOLANT LEVEL LIGHT 1674 - 4	2H5	DAMPENER DRIVE, PUMP 2160 - 4
1H14	COOLANT TEMPERATURE GAUGE 1674 - 4	3C23	DAMPENER, PROPEL LEVER 3315 - 16
1F23	COOLER, AIR 0510 - 2	3C23	DAMPENER, TRAVEL LEVER 3315 - 16
1E16	COOLER, ENGINE OIL 0419 - 2	1C19	DAMPER KEY 0401 - 1
1F23	COOLER, OIL 0510 - 2	1F1	DAMPERS, CRANKSHAFT 0429 - 2
1J6	COUNTERWEIGHT 1740 - 6	3G15	DECAL, AUXILIARY CONTROL 3360 - 80
2I2	COUPLERS, QUICK, HYDRAULIC 2163B - 2	2H21	DECAL, HYDRAULIC FILTER RESTRICTION INDICATOR 2160 - 20
2H5	COUPLING, PUMP 2160 - 4	1H4	DECALS 1320 - 2
2F1	COVER (CAB TOP FRONT LEFT SIDE) 1910 - 6	2G19	DECONTAMINATION CAN MOUNT 2005A - 2
2F3	COVER (CENTER FRONT TOP) 1910 - 8	2E17	DEFROSTER FAN 1830 - 38
2F5	COVER (CENTER VERTICAL) 1910 - 10	2H19	DELIVERY PIPINGS 2160 - 18
2F7	COVER (FRONT LEFT SIDE) 1910 - 12	1H24	DIODE 1674 - 14
2E24	COVER (LEFT FRONT SIDE) 1910 - 4	1D18	DIPSTICK, ENGINE OIL 0407 - 8
2F9	COVER (RIGHT SIDE) 1910 - 14	2B9	DOE LIGHT 1810 - 6
2F11	COVER (RIGHT SIDE) 1910 - 16	2B9	DOE LIGHT WIRE HARNESS 1810 - 6
1H20	COVER, BATTERY 1674 - 10	2G5	DOOR LOCK 1910 - 34
2C5	COVER, CAB INSIDE RIGHT 1810 - 26	2G1	DOOR LOCK LATCH, TOOL BOX 1910 - 30
1B16	COVER, CENTER JOINT 0260 - 2	2B13	DOOR, CAB 1810 - 10
2C19	COVER, CONSOLE 1810 - 40	2B15	DOOR, CAB 1810 - 12
2C21	COVER, CONSOLE 1810 - 42	2C1	DOOR, CATCH 1810 - 22
3D3	COVER, CONSOLE 3315 - 20	3D13	DRAIN PIPINGS 3360 - 6
2F19	COVER, ENGINE 1910 - 24	1G21	DRAIN VALVE, FUEL TANK 0560 - 2
1C24	COVER, INJECTION PUMP ACCESS 0402 - 2	1C19	DRIVE GEAR, OIL PUMP 0401 - 1
2C7	COVER, LOWER MONITOR 1810 - 28	3H4	DRIVE, FRONT, AUXILIARY 4151 - 2
1E16	COVER, OIL COOLER 0419 - 2	3H6	DRIVE, FRONT, AUXILIARY 4151 - 4
1C11	COVER, PROPEL MOTOR 0260 - 22	3G13	DUAL CONTROL HANDLE WITH WIRING 3360 - 78
1D2	COVER, ROCKER ARM 0402 - 5	2E9	DUCT, AIR 1830 - 30
2F13	COVER, SIDE SHIELDS 1910 - 18	2D14	DUCT, AIR CONDITIONER 1830 - 10
1J10	COVER, SWING BEARING GREASE BATH 1740 - 10	2E11	DUCT, AIR CONDITIONER 1830 - 32
1E14	COVER, THERMOSTAT 0418 - 2	2E15	DUCT, AIR, AIR CONDITIONING 1830 - 36
1C24	COVER, TIMING GEAR 0402 - 2	2D6	DUCT, HEATER 1830 - 2
2F21	COVER, TOOL BOX 1910 - 26	1F15	D10W HEATER KIT 0505 - 4
1B1	COVER, TRACK 0130 - 4		
1B3	COVER, TRACK, UNDER 0130 - 6		E
1C11	COVER, TRAVEL MOTOR 0260 - 22	1H14	E MODE INDICATOR 1674 - 4
2G3	COVER, UNDER 1910 - 32	3B9	EAR ASSEMBLY, GENERAL PURPOSE BUCKET 3302 - 2
2F15	COVER, UNDER, LEFT SIDE 1910 - 20	3B11	EAR ASSEMBLY, GENERAL PURPOSE BUCKET 3302 - 4
2E22	COVER, WINDOW 1910 - 2	1H20	ELECTRIC PARTS (BATTERY) 1674 - 10
1C19	CRANKSHAFT 0401 - 1	1H24	ELECTRIC PARTS (MAIN WIRE HARNESS) 1674 - 14
1F1	CRANKSHAFT DAMPERS 0429 - 2	1H18	ELECTRIC PARTS (RELAYS) 1674 - 8
1C24	CRANKSHAFT FRONT OIL SEAL 0402 - 2	1H22	ELECTRIC PARTS (START SWITCH) 1674 - 12
1D3	CRANKSHAFT KIT, UNDERSIZE (CONNECTING ROD JOURNAL) 0403 - 2	1H16	ELECTRIC PARTS (WIRE HARNESS, FUSES) 1674 - 6
1F1	CRANKSHAFT PULLEY AND DAMPERS 0429 - 2	1E1	ELECTRIC SHUT-OFF SOLENOID 0413 - 4
2C23	CUSHION, SEAT 1821 - 2	1E7	ELECTRIC SHUT-OFF SOLENOID 0413 - 10
3B9	CUTTING EDGE, GENERAL PURPOSE BUCKET 3302 - 2	1I9	ELECTRICAL WIRING HARNESS KIT 1674 - 24
3B11	CUTTING EDGE, GENERAL PURPOSE BUCKET 3302 - 4	1G15	ELEMENT, AIR CLEANER 0520 - 2
3C1	CUTTING EDGES, ESCO 3302 - 18	1H1	ELEMENT, FUEL FILTER WATER SEPARATOR 0560 - 6
1D5	CYLINDER BLOCK FITTINGS 0404 - 2	1G9	ENGINE CONTROL CABLE 0515 - 2
1D20	CYLINDER HEAD 0409 - 2	1G11	ENGINE CONTROL MOTOR 0515 - 4
1D20	CYLINDER HEAD BOLTS 0409 - 2		
1D20	CYLINDER HEAD GASKET 0409 - 2		

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
1G13	ENGINE CONTROL UNIT ON CONSOLE0515-6	3G17	FLOW CONTROL VALVE3360-82
1G13	ENGINE CONTROLLER ON CONSOLE.....0515-6	3F3	FLOW CONTROL VALVE PIPINGS TO CONTROL VALVE3360-44
2F19	ENGINE COVER1910-24	3F5	FLOW CONTROL VALVE PIPINGS TO CONTROL VALVE3360-46
1C17	ENGINE MOUNTS0400-2	3F13	FLOW CONTROL VALVE PIPINGS TO FRONT PILOT VALVE.....3360-54
1H7	ENGINE OIL (TORQ-GARD)1369-3	3F15	FLOW CONTROL VALVE PIPINGS TO FRONT PILOT VALVE.....3360-56
1E16	ENGINE OIL COOLER.....0419-2	3F19	FLOW CONTROL VALVE PIPINGS TO LOCK VALVE3360-60
1D18	ENGINE OIL DIPSTICK0407-8	1F6	FLYWHEEL0433-1
1D18	ENGINE OIL DIPSTICK TUBE0407-8	1F7	FLYWHEEL HOUSING0433-2
1D14	ENGINE OIL FILTER0407-4	1C23	FOLLOWER, CAMSHAFT0402-1
1H14	ENGINE OIL LEVEL LIGHT.....1674-4	1D1	FOLLOWER, CAMSHAFT0402-4
1H14	ENGINE OIL PRESSURE LIGHT1674-4	3G15	FOOT SWITCH, AUXILIARY ELECTRIC3360-80
1D12	ENGINE OIL PUMP0407-2	3C17	FOOTREST.....3315-10
1D11	ENGINE OIL PUMP INTAKE0407-1	1J2	FRAME BUSHINGS1740-2
1D9	ENGINE OVERHAUL KIT.....0404-6	1A23	FRAME, TRACK0130-2
1H6	ENGINE PART LUBRICANTS1369-2	2D16	FREON TANK.....1830-12
1G17	ENGINE PIPING TO AIR CLEANER.....0520-4	3H4	FRONT DRIVE, AUXILIARY.....4151-2
2D20	ENGINE PIPING TO AIR CONDITIONER.....1830-16	3H6	FRONT DRIVE, AUXILIARY.....4151-4
1G23	ENGINE PIPING TO FUEL TANK0560-4	1B5	FRONT IDLER0130-8
2D12	ENGINE PIPING TO HEATER.....1830-8	1C24	FRONT OIL SEAL0402-2
1G5	ENGINE PIPING TO RADIATOR.....0510-8	3C11	FRONT PILOT VALVE3315-4
1G23	ENGINE PIPING TO WATER SEPARATOR.....0560-4	3C13	FRONT PILOT VALVE COMPONENTS3315-6
1F8	ENGINE REBUILD GASKET KIT0452-2	3F13	FRONT PILOT VALVE PIPINGS TO FLOW CONTROL VALVE3360-54
1G9	ENGINE SPEED CONTROL CABLE0515-2	3F15	FRONT PILOT VALVE PIPINGS TO FLOW CONTROL VALVE3360-56
2H5	ENGINE SPEED SENSOR2160-4	3F13	FRONT PILOT VALVE PIPINGS TO LOCK VALVE.....3360-54
1C17	ENGINE SUPPORTS0400-2	3F15	FRONT PILOT VALVE PIPINGS TO LOCK VALVE.....3360-56
3C1	ESCO BUCKET CUTTING EDGES.....3302-18	3F21	FRONT PIPING.....3360-62
1F13	ETHER START FLUID CYLINDER0505-2	3D5	FRONT PIPINGS, SHORT ARM ASSEMBLY 2.66M3340-2
1F13	ETHER VALVE0505-2	2G8	FRONT UPPER CAB SCREEN1913A-2
2D24	EVAPORATOR, AIR CONDITIONER.....1830-20	1E14	FRONT WATER MANIFOLD0418-2
1D23	EXHAUST MANIFOLD0410-1	1E18	FUEL CHECK VALVE0420-2
1D23	EXHAUST MANIFOLD GASKETS0410-1	1E20	FUEL CHECK VALVE0422-2
1G19	EXHAUST PIPE0530-2	1E1	FUEL CONTROL LINES0413-4
1D20	EXHAUST VALVE SHIELD0409-2	1E18	FUEL FILTER0420-2
1D20	EXHAUST VALVES0409-2	1E20	FUEL FILTER0422-2
2B9	EXTINGUISHER, FIRE.....1810-6	1E18	FUEL FILTER BASE0420-2
		1E20	FUEL FILTER BASE0422-2
		1H1	FUEL FILTER KIT0560-6
		1E18	FUEL FILTER LINES0420-2
		1E20	FUEL FILTER LINES0422-2
		1G23	FUEL FILTER WATER SEPARATOR0560-4
		1H1	FUEL FILTER WATER SEPARATOR BRACKET0560-6
		1G23	FUEL FILTER WATER SEPARATOR HOSE0560-4
		1H1	FUEL FILTER WATER SEPARATOR, COMPONENTS0560-6
		1H14	FUEL GAUGE INDICATOR1674-4
		1D24	FUEL INJ. LINES.....0413-2
		1E1	FUEL INJ. PUMP0413-4
		1E1	FUEL INJ. PUMP LUBE LINES0413-4
		1E8	FUEL INJECTION NOZZLE0413-11
		1D24	FUEL INJECTION NOZZLES.....0413-2
		1E4	FUEL INJECTION PUMP GOVERNOR LEVERS0413-7
		1E3	FUEL INJECTION PUMP HOUSING CONNECTORS0413-6
		1D24	FUEL LEAK-OFF LINES0413-2
		1H14	FUEL LEVEL LIGHT.....1674-4
		1G23	FUEL PIPINGS0560-4
		1E7	FUEL SHUT-OFF BRACKET0413-10
		1G21	FUEL TANK0560-2
		1G23	FUEL TANK PIPING TO ENGINE.....0560-4
		1G23	FUEL TANK PIPING TO WATER SEPARATOR0560-4
		1E1	FUEL TRANSFER PUMP.....0413-4
		1E6	FUEL TRANSFER PUMP (ROBERT BOSCH)0413-9

F

1F5	FAN0429-6
1F5	FAN BELT0429-6
2E17	FAN BLADE, AIR CIRCULATING1830-38
2E17	FAN BLADE, DEFROSTER FAN1830-38
1G3	FAN GUARD, COOLING PACKAGE0510-6
1F3	FAN PULLEY ADJUSTABLE0429-4
1F5	FAN SPACER.....0429-6
2E3	FAN, AIR CONDITIONER BLOWER1830-24
2E17	FAN, DEFROSTER.....1830-38
1G21	FILLER CAP, FUEL TANK.....0560-2
2H21	FILTER RESTRICTION INDICATOR, HYDRAULIC2160-20
1G15	FILTER, AIR CLEANER0520-2
2E1	FILTER, AIR CONDITIONER1830-22
2E11	FILTER, AIR CONDITIONER1830-32
1D14	FILTER, ENGINE OIL.....0407-4
1E18	FILTER, FUEL0420-2
1E20	FILTER, FUEL0422-2
1H1	FILTER, FUEL WATER SEPARATOR, COMPONENTS0560-6
2H15	FILTER, OIL, HYDRAULIC.....2160-14
3E19	FILTER, OIL, HYDRAULIC.....3360-36
2B9	FIRE EXTINGUISHER1810-6
1D5	FITTINGS, CYLINDER BLOCK0404-2
2H5	FLEX COUPLING, PUMP.....2160-4
1G21	FLOAT, FUEL TANK0560-2
2C13	FLOOR MAT1810-34
2C15	FLOOR PLATE1810-36
3F3	FLOW CONTROL VALVE3360-44
3F5	FLOW CONTROL VALVE3360-46

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
1H24	FUSE, ON MAIN WIRE HARNESS1674-14	1E23	HARDWARE, PULLEY, ALTERNATOR.....0423-1
1H16	FUSES1674-6	3G13	HARNESS, SOLENOID VALVE DUAL CONTROL3360-78
1H24	FUSIBLE LINK1674-14	1H16	HARNESS, WIRE1674-6
G		2D24	HARNESS, WIRE, AIR CONDITIONER1830-20
1F8	GASKET KIT, CYLINDER HEAD0452-2	2D16	HARNESS, WIRE, AIR CONDITIONER COMPRESSOR1830-12
1F8	GASKET KIT, ENGINE REBUILD0452-2	2E17	HARNESS, WIRE, DEFROSTER FAN1830-38
1F8	GASKET KIT, SHORT BLOCK0452-2	3G15	HARNESS, WIRE, FOOT SWITCH3360-80
1D20	GASKET, CYLINDER HEAD0409-2	2D8	HARNESS, WIRE, HEATER1830-4
1E9	GASKET, INTAKE MANIFOLD0414-2	1I9	HARNESS, WIRING, KIT1674-24
1D14	GASKET, OIL FILTER HOUSING0407-4	2F24	HASP, SECURITY, TOOL BOX.....1910-29
1D16	GASKET, OIL PAN.....0407-6	2B23	HATCH, CAB TOP1810-20
1D12	GASKET, OIL PUMP0407-2	1D20	HEAD BOLT KIT.....0409-2
1D11	GASKET, OIL PUMP INTAKE0407-1	2C23	HEAD RESTRAINT, SEAT.....1821-2
1C22	GASKET, REAR OIL SEAL0401-4	1D20	HEAD, CYLINDER0409-2
1D2	GASKET, ROCKER ARM COVER0402-5	2B11	HEADLINER, CAB TOP1810-8
1E14	GASKET, THERMOSTAT.....0418-2	2B23	HEADLINER, CAB TOP HATCH1810-20
1C24	GASKET, TIMING GEAR COVER.....0402-2	2D6	HEATER1830-2
1E10	GASKET, TURBOCHARGER.....0416-2	1F19	HEATER CABLE.....0505-8
1E14	GASKET, WATER MANIFOLD0418-2	1F20	HEATER CABLE.....0505-9
1E12	GASKET, WATER PUMP.....0417-2	2D8	HEATER COMPONENTS.....1830-4
1D23	GASKETS, EXHAUST MANIFOLD0410-1	2D6	HEATER CONTROL.....1830-2
2H15	GAUGE LEVEL, HYDRAULIC OIL2160-14	2D10	HEATER CONTROLLER COMPONENTS.....1830-6
2H11	GEAR PUMP2160-10	1F17	HEATER D10W.....0505-6
1C23	GEAR, CAMSHAFT0402-1	1F18	HEATER D10W.....0505-7
1C19	GEAR, OIL PUMP DRIVE0401-1	2D12	HEATER PIPING1830-8
1D12	GEAR, OIL PUMP DRIVE0407-2	2D12	HEATER PIPING TO ENGINE.....1830-8
1F6	GEAR, STARTER.....0433-1	3B17	HEAVY DUTY BUCKET TOOTH ASSEMBLY3302-10
3B9	GENERAL PURPOSE BUCKET3302-2	3B19	HEAVY DUTY BUCKET TOOTH ASSEMBLY3302-12
3B11	GENERAL PURPOSE BUCKET3302-4	2E19	HOCK, J1801A-2
3B13	GENERAL PURPOSE BUCKET TEETH.....3302-6	1I1	HORN1674-16
3B15	GENERAL PURPOSE BUCKET TEETH.....3302-8	3C9	HORN BUTTON3315-2
2B13	GLASS, CAB DOOR1810-10	1I1	HORN, WIRE HARNESS1674-16
2B15	GLASS, CAB DOOR1810-12	1G17	HOSE, AIR CLEANER TO ENGINE0520-4
2B17	GLASS, CAB FRONT WINDOW1810-14	2D16	HOSE, AIR CONDITIONER COMPRESSOR TO CONDENSER.....1830-12
2B19	GLASS, CAB FRONT WINDOW1810-16	2D16	HOSE, AIR CONDITIONER CONDENSER TO COMPRESSOR1830-12
2B11	GLASS, CAB REAR AND LEFT SIDE1810-8	2D16	HOSE, AIR CONDITIONER CONDENSOR TO TANK1830-12
2B21	GLASS, CAB RIGHT SIDE WINDOW.....1810-18	2D16	HOSE, AIR CONDITIONER TANK TO CONDENSOR1830-12
1E4	GOVERNOR LEVERS FUEL INJECTION PUMP0413-7	2D18	HOSE, AIR CONDITIONER TO COMPRESSOR1830-14
1J10	GREASE BATH COVER, SWING BEARING1740-10	2D20	HOSE, AIR CONDITIONER TO ENGINE1830-16
3C9	GRIP, CONTROL LEVER.....3315-2	2D18	HOSE, AIR CONDITIONER TO RECEIVING TANK.....1830-14
3C15	GRIP, PROPEL CONTROL LEVER3315-8	3D23	HOSE, BOOM BOTTOM TO CONTROL VALVE3360-16
1H20	GROUND STRAP1674-10	3D15	HOSE, BOOM CYLINDER TO CONTROL VALVE.....3360-8
1G3	GUARD, FAN, COOLING PACKAGE0510-6	3D17	HOSE, BOOM TO CONTROL VALVE3360-10
2G11	GUARD, LOWER FRONT WINDSHIELD1913B-2	3D21	HOSE, CENTER JOINT TO CONTROL VALVE.....3360-14
1B1	GUARD, TRACK.....0130-4	3D13	HOSE, CENTER JOINT TO RETURN PIPINGS3360-6
2E22	GUARDS, WINDOW.....1910-2	3F1	HOSE, CENTER JOINT TO SOLENOID VALVE3360-42
H		1C9	HOSE, CENTER JOINT TO TRAVEL DEVICE.....0260-20
3B8	HAMMER BRACKET3301-1	2D18	HOSE, COMPRESSOR TO AIR CONDITIONER1830-14
2B9	HAMMER, ESCAPE1810-6	3D17	HOSE, CONTROL VALVE TO BOOM3360-10
1H1	HAND PRIMER, FUEL FILTER WITH WATER SEPARATOR0560-6	3D23	HOSE, CONTROL VALVE TO BOOM BOTTOM3360-16
2F21	HANDHOLD, RIGHT SIDE.....1910-26	3D15	HOSE, CONTROL VALVE TO BOOM CYLINDER.....3360-8
2B13	HANDLE, CAB DOOR1810-10	3D21	HOSE, CONTROL VALVE TO CENTER JOINT.....3360-14
2B15	HANDLE, CAB DOOR1810-12	3F3	HOSE, CONTROL VALVE TO FLOW CONTROL VALVE3360-44
2B17	HANDLE, CAB FRONT UPPER1810-14	3F5	HOSE, CONTROL VALVE TO FLOW CONTROL VALVE3360-46
2B19	HANDLE, CAB FRONT UPPER1810-16	3D9	HOSE, CONTROL VALVE TO LOWER OIL TANK3360-2
3G13	HANDLE, PILOT DUAL CONTROL3360-78	3D11	HOSE, CONTROL VALVE TO OIL COOLER3360-4
2F1	HANDRAIL1910-6	3F17	HOSE, CONTROL VALVE TO OIL FILTER3360-58
2B13	HANDRAIL, INSIDE DOOR1810-10	3F7	HOSE, CONTROL VALVE TO OIL TANK.....3360-48
2B15	HANDRAIL, INSIDE DOOR1810-12	3F17	HOSE, CONTROL VALVE TO OIL TANK.....3360-58
2B11	HANDRAIL, LEFT SIDE1810-8	2H19	HOSE, CONTROL VALVE TO PUMP2160-18
		3E21	HOSE, CONTROL VALVE TO SOLENOID VALVE3360-38
		3F1	HOSE, CONTROL VALVE TO SOLENOID VALVE3360-42

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
3F1	HOSE, CONTROL VALVE TO SWING DEVICE 3360 - 42	3F1	HOSE, SOLENOID VALVE TO CENTER JOINT 3360 - 42
3D19	HOSE, CONTROL VALVE TO SWING MOTOR 3360 - 12	3E21	HOSE, SOLENOID VALVE TO CONTROL VALVE 3360 - 38
3D13	HOSE, CONTROL VALVE TO TOP OF SWING DEVICE 3360 - 6	3F1	HOSE, SOLENOID VALVE TO CONTROL VALVE 3360 - 42
3F9	HOSE, CONTROL VALVE TO TRAVEL PILOT VALVE 3360 - 50	3E19	HOSE, SOLENOID VALVE TO HYDRAULIC PUMP 3360 - 36
1G17	HOSE, ENGINE TO AIR CLEANER 0520 - 4	3F19	HOSE, SOLENOID VALVE TO LOCK VALVE 3360 - 60
2D20	HOSE, ENGINE TO AIR CONDITIONER 1830 - 16	3E19	HOSE, SOLENOID VALVE TO OIL TANK 3360 - 36
1G23	HOSE, ENGINE TO FUEL TANK 0560 - 4	3F1	HOSE, SOLENOID VALVE TO ROTARY MANIFOLD 3360 - 42
2D12	HOSE, ENGINE TO HEATER 1830 - 8	3E21	HOSE, SOLENOID VALVE TO SWING DEVICE 3360 - 38
1G5	HOSE, ENGINE TO RADIATOR 0510 - 8	2H17	HOSE, SUCTION 2160 - 16
1G23	HOSE, ENGINE TO WATER SEPARATOR 0560 - 4	3F1	HOSE, SWING DEVICE TO CONTROL VALVE 3360 - 42
3F3	HOSE, FLOW CONTROL VALVE TO CONTROL VALVE 3360 - 44	3D13	HOSE, SWING DEVICE TO RETURN PIPINGS 3360 - 6
3F5	HOSE, FLOW CONTROL VALVE TO CONTROL VALVE 3360 - 46	3E21	HOSE, SWING DEVICE TO SOLENOID VALVE 3360 - 38
3F13	HOSE, FLOW CONTROL VALVE TO FRONT PILOT VALVE 3360 - 54	3D19	HOSE, SWING MOTOR TO CONTROL VALVE 3360 - 12
3F15	HOSE, FLOW CONTROL VALVE TO FRONT PILOT VALVE 3360 - 56	1C9	HOSE, TRAVEL DEVICE TO CENTER JOINT 0260 - 20
3F19	HOSE, FLOW CONTROL VALVE TO LOCK VALVE 3360 - 60	1C9	HOSE, TRAVEL DEVICE TO ROTARY MANIFOLD 0260 - 20
3F13	HOSE, FRONT PILOT VALVE TO FLOW CONTROL VALVE 3360 - 54	3F9	HOSE, TRAVEL PILOT VALVE TO CONTROL VALVE 3360 - 50
3F15	HOSE, FRONT PILOT VALVE TO FLOW CONTROL VALVE 3360 - 56	3F11	HOSE, TRAVEL PILOT VALVE TO LOCK VALVE 3360 - 52
3F13	HOSE, FRONT PILOT VALVE TO LOCK VALVE 3360 - 54	1D2	HOSE, VENT (ROCKER ARM) 0402 - 5
3F15	HOSE, FRONT PILOT VALVE TO LOCK VALVE 3360 - 56	1G23	HOSE, WATER SEPARATOR 0560 - 4
1G23	HOSE, FUEL FILTER WATER SEPARATOR 0560 - 4	1G23	HOSE, WATER SEPARATOR TO ENGINE 0560 - 4
1G23	HOSE, FUEL TANK TO ENGINE 0560 - 4	1G23	HOSE, WATER SEPARATOR TO FUEL TANK 0560 - 4
1G23	HOSE, FUEL TANK TO WATER SEPARATOR 0560 - 4	1G7	HOSE, WATER TANK TO RADIATOR 0510 - 10
2D12	HOSE, HEATER TO ENGINE 1830 - 8	2B9	HOSE, WINDSHIELD WASHER 1810 - 6
3E19	HOSE, HYDRAULIC PUMP TO OIL FILTER 3360 - 36	3D13	HOSES, SWING DEVICE TOP TO CONTROL VALVE 3360 - 6
3E23	HOSE, HYDRAULIC PUMP TO OIL TANK 3360 - 40	2C7	HOURLY METER 1810 - 28
3E19	HOSE, HYDRAULIC PUMP TO SOLENOID VALVE 3360 - 36	1E3	HOUSING CONNECTORS, FUEL INJECTION PUMP 0413 - 6
3F19	HOSE, LOCK VALVE TO FLOW CONTROL VALVE 3360 - 60	1F7	HOUSING, FLYWHEEL 0433 - 2
3F13	HOSE, LOCK VALVE TO FRONT PILOT VALVE 3360 - 54	1D14	HOUSING, OIL FILTER 0407 - 4
3F15	HOSE, LOCK VALVE TO FRONT PILOT VALVE 3360 - 56	1C22	HOUSING, REAR OIL SEAL 0401 - 4
3F19	HOSE, LOCK VALVE TO OIL FILTER 3360 - 60	1E14	HOUSING, THERMOSTAT, FRONT 0418 - 2
3F19	HOSE, LOCK VALVE TO SOLENOID VALVE 3360 - 60	1H14	HP MODE INDICATOR 1674 - 4
3F11	HOSE, LOCK VALVE TO TRAVEL PILOT VALVE 3360 - 52	1E5	HYDRAULIC ANEROID ACTIVATOR 0413 - 8
3D9	HOSE, LOWER OIL TANK TO CONTROL VALVE 3360 - 2	2H21	HYDRAULIC FILTER RESTRICTION INDICATOR KIT 2160 - 20
3D11	HOSE, OIL COOLER TO CONTROL VALVE 3360 - 4	3C8	HYDRAULIC IMPACT BREAKER 3302 - 26
3D9	HOSE, OIL COOLER TO OIL TANK 3360 - 2	3C6	HYDRAULIC KIT, QUICK LATCH ASSEMBLY 3302 - 24
3F17	HOSE, OIL FILTER TO CONTROL VALVE 3360 - 58	1H14	HYDRAULIC OIL LEVEL LIGHT 1674 - 4
3E19	HOSE, OIL FILTER TO HYDRAULIC PUMP 3360 - 36	2H15	HYDRAULIC OIL TANK 2160 - 14
3F19	HOSE, OIL FILTER TO LOCK VALVE 3360 - 60	3G19	HYDRAULIC PLUMBING, AUXILIARY 3360 - 84
3F17	HOSE, OIL FILTER TO OIL TANK 3360 - 58	2H3	HYDRAULIC PUMP 2160 - 2
3F7	HOSE, OIL TANK TO CONTROL VALVE 3360 - 48	2H5	HYDRAULIC PUMP COMPONENTS 2160 - 4
3F17	HOSE, OIL TANK TO CONTROL VALVE 3360 - 58	3E19	HYDRAULIC PUMP PIPINGS TO OIL FILTER 3360 - 36
3E23	HOSE, OIL TANK TO HYDRAULIC PUMP 3360 - 40	2H13	HYDRAULIC PUMP SUPPORT 2160 - 12
3D9	HOSE, OIL TANK TO OIL COOLER 3360 - 2	2H7	HYDRAULIC PUMP UNIT (COMPONENTS) 2160 - 6
3F17	HOSE, OIL TANK TO OIL FILTER 3360 - 58	2I2	HYDRAULIC QUICK COUPLERS 2163B - 2
2H17	HOSE, OIL TANK TO PUMP 2160 - 16		
1G5	HOSE, RADIATOR TO ENGINE 0510 - 8		
1G7	HOSE, RADIATOR TO WATER TANK 0510 - 10		
2D18	HOSE, RECEIVING TANK TO AIR CONDITIONER 1830 - 14		
1G7	HOSE, RESERVE WATER TANK 0510 - 10		
3D13	HOSE, RETURN TO CENTER JOINT 3360 - 6		
3D13	HOSE, RETURN TO SWING DEVICE 3360 - 6		
3F1	HOSE, ROTARY MANIFOLD TO SOLENOID VALVE 3360 - 42		
1C9	HOSE, ROTARY MANIFOLD TO TRAVEL DEVICE 0260 - 20		
3D5	HOSE, SHORT ARM ASSEMBLY 2.66M 3340 - 2		

I

1H22	IGNITION 1674 - 12
1F3	ILDER PULLEY 0429 - 4
3C8	IMPACT BREAKER, HYDRAULIC 3302 - 26
1G15	INDICATOR, AIR RESTRICTION 0520 - 2
2H21	INDICATOR, HYDRAULIC FILTER 2160 - 20
1E1	INJ. PUMP LUBE LINES 0413 - 4
1C24	INJECTION PUMP ACCESS COVER 0402 - 2
1E12	INLET, WATER PUMP 0417 - 2
1D20	INSERTS, VALVE SEAT 0409 - 2
1E9	INTAKE MANIFOLD 0414 - 2
1E9	INTAKE MANIFOLD GASKET 0414 - 2
1D20	INTAKE VALVES 0409 - 2
1D11	INTAKE, ENGINE OIL PUMP 0407 - 1

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
J					
2E19	J HOOK.....	1801A - 2	1G7	LEVEL SWITCH, RESERVE WATER TANK.....	0510 - 10
1D5	JETS, PISTON COOLING	0404 - 2	2H15	LEVEL, OIL GAUGE, HYDRAULIC OIL	2160 - 14
1C5	JOINT, CENTER.....	0260 - 16	1G21	LEVEL, SWITCH, FUEL TANK	0560 - 2
1B16	JOINT, CENTER, ATTACHMENTS	0260 - 2	3C23	LEVER DAMPENER, PROPEL	3315 - 16
K					
2B13	KEY, CAB DOOR	1810 - 10	3C23	LEVER DAMPENER, TRAVEL	3315 - 16
2B15	KEY, CAB DOOR	1810 - 12	3C9	LEVER, CONTROL.....	3315 - 2
1C19	KEY, DAMPER	0401 - 1	3D1	LEVER, LOCK	3315 - 18
2G5	KEY, DOOR LOCK.....	1910 - 34	3C15	LEVER, PROPEL CONTROL.....	3315 - 8
1G21	KEY, FUEL TANK CAP	0560 - 2	1D22	LIFT STRAPS, ENGINE	0409 - 4
1H22	KEY, IGNITION.....	1674 - 12	2B9	LIGHT, DOME.....	1810 - 6
2E22	KEY, VANDAL PROTECTION	1910 - 2	2C5	LIGHTER.....	1810 - 26
2E22	KEY, WINDOW GUARDS	1910 - 2	1I18	LIGHTS, BOOM	1673A - 2
2E17	KIT, AIR CIRCULATION FAN	1830 - 38	1I20	LIGHTS, CAB	1673A - 4
1F21	KIT, ARCTIC START	0505 - 10	1I22	LIGHTS, HOOD, REAR	1673A - 6
1I13	KIT, ATTACHMENT MODE	1674 - 28	1G17	LINE, AIR CLEANER TO ENGINE	0520 - 4
3G21	KIT, AUXILIARY SPOOL CONTROL		2D16	LINE, AIR CONDITIONER COMPRESSOR	
	W/FLOW CONTROL	3360 - 86		TO CONDENSER.....	1830 - 12
3G21	KIT, CONTROL, W/FLOW, AUXILIARY		2D16	LINE, AIR CONDITIONER CONDENSER TO	
	SPOOL CONTROL.....	3360 - 86		COMPRESSOR	1830 - 12
2E17	KIT, DEFROSTER FAN	1830 - 38	2D16	LINE, AIR CONDITIONER CONDENSOR TO TANK	1830 - 12
1F15	KIT, D10W HEATER.....	0505 - 4	2D16	LINE, AIR CONDITIONER TANK TO CONDENSOR	1830 - 12
1D9	KIT, ENGINE OVERHAUL	0404 - 6	2D18	LINE, AIR CONDITIONER TO COMPRESSOR	1830 - 14
1D20	KIT, HEAD BOLT	0409 - 2	2D20	LINE, AIR CONDITIONER TO ENGINE	1830 - 16
2H21	KIT, HYDRAULIC FILTER RESTRICTION		2D18	LINE, AIR CONDITIONER TO RECEIVING TANK.....	1830 - 14
	INDICATOR	2160 - 20	3D23	LINE, BOOM BOTTOM TO CONTROL VALVE	3360 - 16
3C6	KIT, HYDRAULIC, QUICK LATCH ASSEMBLY	3302 - 24	3D15	LINE, BOOM CYLINDER TO CONTROL VALVE	3360 - 8
1I7	KIT, LEAD WIRE	1674 - 22	3D17	LINE, BOOM TO CONTROL VALVE.....	3360 - 10
3G23	KIT, LOAD LOWERING VALVE, BOOM CYLINDER	3360 - 88	3D21	LINE, CENTER JOINT TO CONTROL VALVE	3360 - 14
3H1	KIT, LOAD LOWERING VALVE, BOOM CYLINDER	3360 - 90	3D13	LINE, CENTER JOINT TO RETURN PIPINGS.....	3360 - 6
1H8	KIT, O-RING, METRIC	1369 - 4	3F1	LINE, CENTER JOINT TO SOLENOID VALVE	3360 - 42
3E19	KIT, OIL SAMPLING VALVE	3360 - 36	1C9	LINE, CENTER JOINT TO TRAVEL DEVICE.....	0260 - 20
1D4	KIT, PISTON/LINER	0403 - 3	2D18	LINE, COMPRESSOR TO AIR CONDITIONER	1830 - 14
2C9	KIT, RADIO.....	1810 - 30	3D17	LINE, CONTROL VALVE TO BOOM.....	3360 - 10
3G9	KIT, SEAL, ARM CYLINDER	3360 - 74	3D23	LINE, CONTROL VALVE TO BOOM BOTTOM	3360 - 16
3G11	KIT, SEAL, BUCKET CYLINDER.....	3360 - 76	3D15	LINE, CONTROL VALVE TO BOOM CYLINDER	3360 - 8
1H1	KIT, SEAL, FUEL FILTER WATER SEPARATOR	0560 - 6	3D21	LINE, CONTROL VALVE TO CENTER JOINT	3360 - 14
3G7	KIT, SEAL, LEFT BOOM CYLINDER	3360 - 72	3F3	LINE, CONTROL VALVE TO FLOW CONTROL	
2H11	KIT, SEAL, PUMP GEAR.....	2160 - 10		VALVE	3360 - 44
3G5	KIT, SEAL, RIGHT BOOM CYLINDER	3360 - 70	3F5	LINE, CONTROL VALVE TO FLOW CONTROL	
2C23	KIT, SEAT STAND KNOB	1821 - 2		VALVE	3360 - 46
3D5	KIT, SHORT ARM ASSEMBLY 2.66M	3340 - 2	3D9	LINE, CONTROL VALVE TO LOWER OIL TANK	3360 - 2
2E22	KIT, VANDAL PROTECTION.....	1910 - 2	3D11	LINE, CONTROL VALVE TO OIL COOLER	3360 - 4
1E12	KIT, WATER PUMP SEAL	0417 - 2	3F17	LINE, CONTROL VALVE TO OIL FILTER	3360 - 58
2E22	KIT, WINDOW GUARDS	1910 - 2	3F7	LINE, CONTROL VALVE TO OIL TANK.....	3360 - 48
1I9	KIT, WIRING HARNESS	1674 - 24	3F17	LINE, CONTROL VALVE TO OIL TANK.....	3360 - 58
2C23	KNOB KIT, SEAT STAND	1821 - 2	2H19	LINE, CONTROL VALVE TO PUMP	2160 - 18
2D10	KNOB, HEATER CONTROLLER	1830 - 6	3E21	LINE, CONTROL VALVE TO SOLENOID VALVE	3360 - 38
L					
3G15	LABEL, AUXILIARY CONTROL	3360 - 80	3F1	LINE, CONTROL VALVE TO SOLENOID VALVE	3360 - 42
2H21	LABEL, HYDRAULIC FILTER RESTRICTION		3F1	LINE, CONTROL VALVE TO SWING DEVICE.....	3360 - 42
	INDICATOR	2160 - 20	3D19	LINE, CONTROL VALVE TO SWING MOTOR.....	3360 - 12
1H4	LABELS.....	1320 - 2	3D13	LINE, CONTROL VALVE TO TOP OF SWING	
3C4	LATCH ASSEMBLY, QUICK	3302 - 22		DEVICE.....	3360 - 6
3C6	LATCH ASSEMBLY, QUICK, HYDRAULIC KIT	3302 - 24	3F9	LINE, CONTROL VALVE TO TRAVEL PILOT	
2G1	LATCH, DOOR LOCK, TOOL BOX.....	1910 - 30		VALVE	3360 - 50
1I7	LEAD WIRE KIT	1674 - 22	1G17	LINE, ENGINE TO AIR CLEANER	0520 - 4
3G7	LEFT BOOM CYLINDER	3360 - 72	2D20	LINE, ENGINE TO AIR CONDITIONER	1830 - 16
2G14	LEFT REAR VIEW MIRROR	2002 - 2	1G23	LINE, ENGINE TO FUEL TANK	0560 - 4
			2D12	LINE, ENGINE TO HEATER	1830 - 8
			1G5	LINE, ENGINE TO RADIATOR	0510 - 8
			1G23	LINE, ENGINE TO WATER SEPARATOR	0560 - 4
			3F3	LINE, FLOW CONTROL VALVE TO CONTROL	
				VALVE	3360 - 44
			3F5	LINE, FLOW CONTROL VALVE TO CONTROL	
				VALVE	3360 - 46
			3F13	LINE, FLOW CONTROL VALVE TO FRONT	
				PILOT VALVE.....	3360 - 54

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
3F15	LINE, FLOW CONTROL VALVE TO FRONT PILOT VALVE.....3360-56	1G23	LINE, WATER SEPARATOR0560-4
3F19	LINE, FLOW CONTROL VALVE TO LOCK VALVE3360-60	1G23	LINE, WATER SEPARATOR TO ENGINE0560-4
3F13	LINE, FRONT PILOT VALVE TO FLOW CONTROL VALVE3360-54	1G23	LINE, WATER SEPARATOR TO FUEL TANK0560-4
3F15	LINE, FRONT PILOT VALVE TO FLOW CONTROL VALVE3360-56	1G7	LINE, WATER TANK TO RADIATOR0510-10
3F13	LINE, FRONT PILOT VALVE TO LOCK VALVE3360-54	1D4	LINER O-RINGS0403-3
3F15	LINE, FRONT PILOT VALVE TO LOCK VALVE3360-56	1D4	LINER SHIM0403-3
1G23	LINE, FUEL FILTER WATER SEPARATOR0560-4	1D4	LINERS, CYLINDER0403-3
1G23	LINE, FUEL TANK TO ENGINE0560-4	1E1	LINES, FUEL CONTROL0413-4
1G23	LINE, FUEL TANK TO WATER SEPARATOR0560-4	1E18	LINES, FUEL FILTER0420-2
2D12	LINE, HEATER TO ENGINE1830-8	1E20	LINES, FUEL FILTER0422-2
3E19	LINE, HYDRAULIC PUMP TO OIL FILTER3360-36	1D24	LINES, FUEL INJ0413-2
3E23	LINE, HYDRAULIC PUMP TO OIL TANK3360-40	1D24	LINES, FUEL LEAK-OFF0413-2
3E19	LINE, HYDRAULIC PUMP TO SOLENOID VALVE3360-36	1E1	LINES, INJ. PUMP LUBE0413-4
3F19	LINE, LOCK VALVE TO FLOW CONTROL VALVE3360-60	1E10	LINES, TURBOCHARGER OIL0416-2
3F13	LINE, LOCK VALVE TO FRONT PILOT VALVE3360-54	1H24	LINK, FUSIBLE1674-14
3F15	LINE, LOCK VALVE TO FRONT PILOT VALVE3360-56	3G23	LOAD LOWERING BOOM CYLINDER VALVE KIT3360-88
3F19	LINE, LOCK VALVE TO OIL FILTER3360-60	3H1	LOAD LOWERING BOOM CYLINDER VALVE KIT3360-90
3F19	LINE, LOCK VALVE TO SOLENOID VALVE3360-60	3D1	LOCK LEVER3315-18
3F11	LINE, LOCK VALVE TO TRAVEL PILOT VALVE3360-52	3G3	LOCK VALVE3360-68
3D9	LINE, LOWER OIL TANK TO CONTROL VALVE3360-2	3F19	LOCK VALVE PIPINGS TO FLOW CONTROL VALVE3360-60
3D11	LINE, OIL COOLER TO CONTROL VALVE3360-4	3F13	LOCK VALVE PIPINGS TO FRONT PILOT VALVE3360-54
3D9	LINE, OIL COOLER TO OIL TANK3360-2	3F15	LOCK VALVE PIPINGS TO FRONT PILOT VALVE3360-56
3F17	LINE, OIL FILTER TO CONTROL VALVE3360-58	3F19	LOCK VALVE PIPINGS TO OIL FILTER3360-60
3E19	LINE, OIL FILTER TO HYDRAULIC PUMP3360-36	3F19	LOCK VALVE PIPINGS TO SOLENOID VALVE3360-60
3F19	LINE, OIL FILTER TO LOCK VALVE3360-60	3F11	LOCK VALVE PIPINGS TO TRAVEL PILOT VALVE3360-52
3F17	LINE, OIL FILTER TO OIL TANK3360-58	3F11	LOCK VALVE, PILOT PIPINGS3360-52
3F7	LINE, OIL TANK TO CONTROL VALVE3360-48	3D1	LOCK VALVE, PILOT PIPINGS, LOCATION3315-18
3F17	LINE, OIL TANK TO CONTROL VALVE3360-58	2B13	LOCK, CAB DOOR1810-10
3E23	LINE, OIL TANK TO HYDRAULIC PUMP3360-40	2B15	LOCK, CAB DOOR1810-12
3D9	LINE, OIL TANK TO OIL COOLER3360-2	2B23	LOCK, CAB TOP HATCH1810-20
3F17	LINE, OIL TANK TO OIL FILTER3360-58	2G5	LOCK, DOOR1910-34
2H17	LINE, OIL TANK TO PUMP2160-16	2E24	LOCK, LEFT FRONT SIDE COVER1910-4
3E19	LINE, OIL TANK TO SOLENOID VALVE3360-36	2F13	LOCK, SIDE SHIELD DOOR1910-18
3F9	LINE, PROPEL PILOT VALVE TO CONTROL VALVE3360-50	2G1	LOCK, TOOL BOX DOOR1910-30
2H19	LINE, PUMP TO CONTROL VALVE2160-18	2E22	LOCK, VANDAL PROTECTION1910-2
2H17	LINE, PUMP TO OIL TANK2160-16	2E22	LOCK, WINDOW COVERS1910-2
1G5	LINE, RADIATOR TO ENGINE0510-8	2G11	LOWER FRONT WINDSHIELD GUARD1913B-2
1G7	LINE, RADIATOR TO WATER TANK0510-10	2C7	LOWER MONITOR COVER1810-28
2D18	LINE, RECEIVING TANK TO AIR CONDITIONER1830-14	1B11	LOWER ROLLER0130-14
3D13	LINE, RETURN TO CENTER JOINT3360-6	1B11	LOWER ROLLER SUPPORT0130-14
3D13	LINE, RETURN TO SWING DEVICE3360-6	1E1	LUBE LINES INJ. PUMP0413-4
3F1	LINE, ROTARY MANIFOLD TO SOLENOID VALVE3360-42	1E1	LUBE LINES, FUEL INJ. PUMP0413-4
1C9	LINE, ROTARY MANIFOLD TO TRAVEL DEVICE0260-20	1H6	LUBRICANTS1369-2
3D5	LINE, SHORT ARM ASSEMBLY 2.66M3340-2	3F23	LUBRICATE PIPINGS3360-64
3F1	LINE, SOLENOID VALVE TO CENTER JOINT3360-42		
3E21	LINE, SOLENOID VALVE TO CONTROL VALVE3360-38		
3F1	LINE, SOLENOID VALVE TO CONTROL VALVE3360-42		
3E19	LINE, SOLENOID VALVE TO HYDRAULIC PUMP3360-36		
3F19	LINE, SOLENOID VALVE TO LOCK VALVE3360-60		
3E19	LINE, SOLENOID VALVE TO OIL TANK3360-36		
3F1	LINE, SOLENOID VALVE TO ROTARY MANIFOLD3360-42		
3E21	LINE, SOLENOID VALVE TO SWING DEVICE3360-38		
2H17	LINE, SUCTION2160-16		
3F1	LINE, SWING DEVICE TO CONTROL VALVE3360-42		
3D13	LINE, SWING DEVICE TO RETURN PIPINGS3360-6		
3E21	LINE, SWING DEVICE TO SOLENOID VALVE3360-38		
3D13	LINE, SWING DEVICE TOP TO CONTROL VALVE3360-6		
3D19	LINE, SWING MOTOR TO CONTROL VALVE3360-12		
1C9	LINE, TRAVEL DEVICE TO CENTER JOINT0260-20		
1C9	LINE, TRAVEL DEVICE TO ROTARY MANIFOLD0260-20		
3F9	LINE, TRAVEL PILOT VALVE TO CONTROL VALVE3360-50		
3F11	LINE, TRAVEL PILOT VALVE TO LOCK VALVE3360-52		

M

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE
2C13	MAT, CAB FLOOR1810 - 34
1H8	METRIC O-RING KIT1369 - 4
2G14	MIRROR, LEFT REAR VIEW2002 - 2
2F21	MIRROR, REAR VIEW, RIGHT1910 - 26
1I13	MODE KIT, ATTACHMENT1674 - 28
3G13	MODUAL RELAY FOR DUAL AUXILIARY CONTROL3360 - 78
3B9	MOLDBOARD, GENERAL PURPOSE BUCKET3302 - 2
3B11	MOLDBOARD, GENERAL PURPOSE BUCKET3302 - 4
1H14	MONITOR1674 - 4
2E17	MOTOR, AIR CIRCULATING FAN1830 - 38
2D24	MOTOR, AIR CONDITIONER1830 - 20
2E1	MOTOR, AIR CONDITIONER1830 - 22
2E3	MOTOR, AIR CONDITIONER BLOWER1830 - 24
2E5	MOTOR, AIR CONDITIONING BOX1830 - 26
2E17	MOTOR, DEFROSTER FAN1830 - 38
1G11	MOTOR, ENGINE CONTROL0515 - 4
1G11	MOTOR, ENGINE SPEED CONTROL0515 - 4
2D8	MOTOR, HEATER1830 - 4
1B18	MOTOR, PROPEL0260 - 4
1B24	MOTOR, PROPEL, BRAKE VALVE COMPONENTS0260 - 10
1B22	MOTOR, PROPEL, COMPONENTS0260 - 8
1E22	MOTOR, STARTING (DELCO-REMY 24V 37MT)0422 - 4
3H9	MOTOR, SWING DEVICE4360 - 2
3H13	MOTOR, SWING, COMPONENTS4360 - 6
1B18	MOTOR, TRAVEL DEVICE0260 - 4
1B24	MOTOR, TRAVEL, BRAKE VALVE COMPONENTS0260 - 10
1B22	MOTOR, TRAVEL, COMPONENTS0260 - 8
2B9	MOTOR, WINDSHIELD WIPER1810 - 6
2G19	MOUNT, DECONTAMINATION CAN2005A - 2
1C17	MOUNTS, ENGINE0400 - 2
1G19	MUFFLER0530 - 2

N

1F13	NOZZLE, COLD WEATHER STARTING AID SPRAY0505 - 2
1E8	NOZZLE, FUEL INJECTION0413 - 11
2B9	NOZZLE, WINDSHIELD WIPER1810 - 6
1D24	NOZZLES, FUEL INJECTION0413 - 2

O

1H8	O-RING KIT, METRIC1369 - 4
1E12	O-RING, WATER PUMP0417 - 2
1D4	O-RINGS, LINER0403 - 3
1F23	OIL COOLER0510 - 2
1E16	OIL COOLER ADAPTER0419 - 2
1G1	OIL COOLER ATTACHMENTS0510 - 4
1E17	OIL COOLER BYPASS ADAPTER0419 - 3
1E17	OIL COOLER BYPASS TUBES0419 - 3
1E16	OIL COOLER COVER0419 - 2
3D11	OIL COOLER PIPINGS TO CONTROL VALVE3360 - 4
3D9	OIL COOLER PIPINGS TO OIL TANK3360 - 2
1E16	OIL COOLER TUBES0419 - 2
1E16	OIL COOLER, ENGINE0419 - 2
1D14	OIL FILTER BASE0407 - 4
1D14	OIL FILTER BYPASS VALVE0407 - 4
1D14	OIL FILTER HOUSING0407 - 4
1D14	OIL FILTER HOUSING GASKET0407 - 4
3F17	OIL FILTER PIPINGS TO CONTROL VALVE3360 - 58
3E19	OIL FILTER PIPINGS TO HYDRAULIC PUMP3360 - 36
3F19	OIL FILTER PIPINGS TO LOCK VALVE3360 - 60
3F17	OIL FILTER PIPINGS TO OIL TANK3360 - 58
1D14	OIL FILTER, ENGINE0407 - 4
3E19	OIL FILTER, HYDRAULIC3360 - 36

GRID	PAGE
1D19	OIL LEVEL SENSOR0407 - 9
1E10	OIL LINES, TURBOCHARGER0416 - 2
1D16	OIL PAN0407 - 6
1D16	OIL PAN GASKET0407 - 6
1D14	OIL PRESSURE REGULATING VALVE0407 - 4
1E16	OIL PRESSURE REGULATING VALVE0419 - 2
1I10	OIL PRESSURE SWITCH1674 - 25
1C19	OIL PUMP DRIVE GEAR0401 - 1
1D12	OIL PUMP DRIVE GEAR0407 - 2
1D12	OIL PUMP GASKET0407 - 2
1D11	OIL PUMP INTAKE0407 - 1
1D11	OIL PUMP INTAKE GASKET0407 - 1
1D12	OIL PUMP, ENGINE0407 - 2
1D14	OIL SAMPLING VALVE0407 - 4
3E19	OIL SAMPLING VALVE, HYDRAULIC3360 - 36
1C24	OIL SEAL, CRANKSHAFT FRONT0402 - 2
1C22	OIL SEAL, REAR0401 - 4
2H15	OIL TANK2160 - 14
3D9	OIL TANK PIPING, LOWER, TO CONTROL VALVE3360 - 2
3F7	OIL TANK PIPINGS TO CONTROL VALVE3360 - 48
3F17	OIL TANK PIPINGS TO CONTROL VALVE3360 - 58
3E23	OIL TANK PIPINGS TO HYDRAULIC PUMP3360 - 40
3D9	OIL TANK PIPINGS TO OIL COOLER3360 - 2
3F17	OIL TANK PIPINGS TO OIL FILTER3360 - 58
2H17	OIL TANK PIPINGS TO PUMP2160 - 16
3E19	OIL TANK PIPINGS TO SOLENOID VALVE3360 - 36
1D9	OVERHAUL KIT, ENGINE0404 - 6
1H14	OVERHEAT LIGHT1674 - 4
2G17	OVERLOAD ALARM2004A - 2

P

1D16	PAN, OIL0407 - 6
1H14	PANEL, MONITOR1674 - 4
3C17	PEDALS, PROPEL3315 - 10
3G13	PILOT DUAL CONTROL HANDLE3360 - 78
3D1	PILOT LOCK LEVER3315 - 18
3F3	PILOT PIPINGS (CONTROL VALVE, PILOT PIPINGS FLOW CONTROL VALVE)3360 - 44
3F5	PILOT PIPINGS (CONTROL VALVE, PILOT PIPINGS FLOW CONTROL VALVE)3360 - 46
3F13	PILOT PIPINGS (FLOW CONTROL VALVE)3360 - 54
3F15	PILOT PIPINGS (FLOW CONTROL VALVE)3360 - 56
3F19	PILOT PIPINGS (LOCK VALVE, OIL FILTER)3360 - 60
3F7	PILOT PIPINGS (OIL TANK, CONTROL VALVE)3360 - 48
3F17	PILOT PIPINGS (OIL TANK, OIL FILTER, CONTROL VALVE)3360 - 58
3E23	PILOT PIPINGS (OIL TANK, PUMP)3360 - 40
3E19	PILOT PIPINGS (OIL TANK, SOLENOID VALVE, PUMP, FILTER)3360 - 36
3F1	PILOT PIPINGS (SOLENOID VALVE, CENTER JOINT, SWING DEVICE, CONTROL VALVE)3360 - 42
3E21	PILOT PIPINGS (SWING DEVICE, CONTROL VALVE, SOLENOID VALVE)3360 - 38
3F11	PILOT PIPINGS (TRAVEL PILOT VALVE)3360 - 52
3F9	PILOT PIPINGS (TRAVEL PILOT VALVE, CONTROL VALVE)3360 - 50
3D1	PILOT PIPINGS LOCK VALVE LOCATION3315 - 18
3C13	PILOT VALVE COMPONENTS (FRONT AND SWING)3315 - 6
3C11	PILOT VALVE, FRONT3315 - 4
3F13	PILOT VALVE, FRONT, PIPINGS TO FLOW CONTROL VALVE3360 - 54
3F15	PILOT VALVE, FRONT, PIPINGS TO FLOW CONTROL VALVE3360 - 56
3F13	PILOT VALVE, FRONT, PIPINGS TO LOCK VALVE3360 - 54

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
3F15	PILOT VALVE, FRONT, PIPINGS TO LOCK VALVE 3360 - 56	3F5	PIPING, FLOW CONTROL VALVE TO CONTROL VALVE 3360 - 46
3C19	PILOT VALVE, PROPEL 3315 - 12	3F13	PIPING, FLOW CONTROL VALVE TO FRONT PILOT VALVE 3360 - 54
3C21	PILOT VALVE, PROPEL, COMPONENTS 3315 - 14	3F15	PIPING, FLOW CONTROL VALVE TO FRONT PILOT VALVE 3360 - 56
3C11	PILOT VALVE, SWING 3315 - 4	3F19	PIPING, FLOW CONTROL VALVE TO LOCK VALVE 3360 - 60
3C19	PILOT VALVE, TRAVEL 3315 - 12	3F13	PIPING, FRONT PILOT VALVE TO FLOW CONTROL VALVE 3360 - 54
3C21	PILOT VALVE, TRAVEL, COMPONENTS 3315 - 14	3F15	PIPING, FRONT PILOT VALVE TO FLOW CONTROL VALVE 3360 - 56
3C3	PIN-UP DATA, BUCKET 3302 - 20	3F13	PIPING, FRONT PILOT VALVE TO LOCK VALVE 3360 - 56
3C5	PIN-UP DATA, BUCKET 3302 - 23	1G23	PIPING, FUEL 0560 - 4
3C7	PIN-UP DATA, BUCKET 3302 - 25	1G23	PIPING, FUEL FILTER WATER SEPARATOR 0560 - 4
1G19	PIPE, EXHAUST 0530 - 2	1G23	PIPING, FUEL TANK TO ENGINE 0560 - 4
1G17	PIPING, AIR CLEANER TO ENGINE 0520 - 4	1G23	PIPING, FUEL TANK TO WATER SEPARATOR 0560 - 4
2D16	PIPING, AIR CONDITIONER COMPRESSOR TO CONDENSER 1830 - 12	2D12	PIPING, HEATER TO ENGINE 1830 - 8
2D16	PIPING, AIR CONDITIONER CONDENSER TO COMPRESSOR 1830 - 12	3E19	PIPING, HYDRAULIC PUMP TO OIL FILTER 3360 - 36
2D16	PIPING, AIR CONDITIONER CONDENSOR TO TANK 1830 - 12	3E23	PIPING, HYDRAULIC PUMP TO OIL TANK 3360 - 40
2D16	PIPING, AIR CONDITIONER TANK TO CONDENSOR 1830 - 12	3E19	PIPING, HYDRAULIC PUMP TO SOLENOID VALVE 3360 - 36
2D18	PIPING, AIR CONDITIONER TO COMPRESSOR 1830 - 14	3F19	PIPING, LOCK VALVE TO FLOW CONTROL VALVE 3360 - 60
2D20	PIPING, AIR CONDITIONER TO ENGINE 1830 - 16	3F13	PIPING, LOCK VALVE TO FRONT PILOT VALVE 3360 - 54
2D18	PIPING, AIR CONDITIONER TO RECEIVING TANK 1830 - 14	3F15	PIPING, LOCK VALVE TO FRONT PILOT VALVE 3360 - 56
3G19	PIPING, AUXILIARY 3360 - 84	3F19	PIPING, LOCK VALVE TO OIL FILTER 3360 - 60
3F21	PIPING, BOOM 3360 - 62	3F19	PIPING, LOCK VALVE TO SOLENOID VALVE 3360 - 60
3D23	PIPING, BOOM BOTTOM 3360 - 16	3F11	PIPING, LOCK VALVE TO TRAVEL PILOT VALVE 3360 - 52
3D23	PIPING, BOOM BOTTOM TO CONTROL VALVE 3360 - 16	3D9	PIPING, LOWER OIL TANK TO CONTROL VALVE 3360 - 2
3D15	PIPING, BOOM CYLINDER TO CONTROL VALVE 3360 - 8	3D17	PIPING, MAIN 3360 - 10
3D17	PIPING, BOOM TO CONTROL VALVE 3360 - 10	3D21	PIPING, MAIN (CONTROL VALVE, CENTER JOINT) 3360 - 14
3D21	PIPING, CENTER JOINT TO CONTROL VALVE 3360 - 14	3D15	PIPING, MAIN, BOTTOM SIDE OF BOOM CYLINDER 3360 - 8
3D13	PIPING, CENTER JOINT TO RETURN PIPINGS 3360 - 6	1G19	PIPING, MUFFLER TO ENGINE 0530 - 2
3F1	PIPING, CENTER JOINT TO SOLENOID VALVE 3360 - 42	3D11	PIPING, OIL COOLER TO CONTROL VALVE 3360 - 4
1C9	PIPING, CENTER JOINT TO TRAVEL DEVICE 0260 - 20	3D9	PIPING, OIL COOLER TO OIL TANK 3360 - 2
2D18	PIPING, COMPRESSOR TO AIR CONDITIONER 1830 - 14	3F17	PIPING, OIL FILTER TO CONTROL VALVE 3360 - 58
3D17	PIPING, CONTROL VALVE TO BOOM 3360 - 10	3E19	PIPING, OIL FILTER TO HYDRAULIC PUMP 3360 - 36
3D23	PIPING, CONTROL VALVE TO BOOM BOTTOM 3360 - 16	3F19	PIPING, OIL FILTER TO LOCK VALVE 3360 - 60
3D15	PIPING, CONTROL VALVE TO BOOM CYLINDER 3360 - 8	3F17	PIPING, OIL FILTER TO OIL TANK 3360 - 58
3D21	PIPING, CONTROL VALVE TO CENTER JOINT 3360 - 14	3F7	PIPING, OIL TANK TO CONTROL VALVE 3360 - 48
3F3	PIPING, CONTROL VALVE TO FLOW CONTROL VALVE 3360 - 44	3F17	PIPING, OIL TANK TO CONTROL VALVE 3360 - 58
3F5	PIPING, CONTROL VALVE TO FLOW CONTROL VALVE 3360 - 46	3E23	PIPING, OIL TANK TO HYDRAULIC PUMP 3360 - 40
3D9	PIPING, CONTROL VALVE TO LOWER OIL TANK 3360 - 2	3D9	PIPING, OIL TANK TO OIL COOLER 3360 - 2
3D11	PIPING, CONTROL VALVE TO OIL COOLER 3360 - 4	3F17	PIPING, OIL TANK TO OIL FILTER 3360 - 58
3F17	PIPING, CONTROL VALVE TO OIL FILTER 3360 - 58	2H17	PIPING, OIL TANK TO PUMP 2160 - 16
3F7	PIPING, CONTROL VALVE TO OIL TANK 3360 - 48	3E19	PIPING, OIL TANK TO SOLENOID VALVE 3360 - 36
3F17	PIPING, CONTROL VALVE TO OIL TANK 3360 - 58	3F3	PIPING, PILOT (CONTROL VALVE, PILOT PIPINGS FLOW CONTROL VALVE) 3360 - 44
2H19	PIPING, CONTROL VALVE TO PUMP 2160 - 18	3F5	PIPING, PILOT (CONTROL VALVE, PILOT PIPINGS FLOW CONTROL VALVE) 3360 - 46
3E21	PIPING, CONTROL VALVE TO SOLENOID VALVE 3360 - 38	3F13	PIPING, PILOT (FLOW CONTROL VALVE) 3360 - 54
3F1	PIPING, CONTROL VALVE TO SOLENOID VALVE 3360 - 42	3F15	PIPING, PILOT (FLOW CONTROL VALVE) 3360 - 56
3F1	PIPING, CONTROL VALVE TO SWING DEVICE 3360 - 42	3F19	PIPING, PILOT (LOCK VALVE, OIL FILTER) 3360 - 60
3D19	PIPING, CONTROL VALVE TO SWING MOTOR 3360 - 12	3F7	PIPING, PILOT (OIL TANK, CONTROL VALVE) 3360 - 48
3D13	PIPING, CONTROL VALVE TO TOP OF SWING DEVICE 3360 - 6	3F17	PIPING, PILOT (OIL TANK, OIL FILTER, CONTROL VALVE) 3360 - 58
3F9	PIPING, CONTROL VALVE TO TRAVEL PILOT VALVE 3360 - 50	3E23	PIPING, PILOT (OIL TANK, PUMP) 3360 - 40
2H19	PIPING, DELIVERY 2160 - 18	3E19	PIPING, PILOT (OIL TANK, SOLENOID VALVE, PUMP, FILTER) 3360 - 36
1G17	PIPING, ENGINE TO AIR CLEANER 0520 - 4	3F1	PIPING, PILOT (SOLENOID VALVE, CENTER JOINT, SWING DEVICE, CONTROL VALVE) 3360 - 42
2D20	PIPING, ENGINE TO AIR CONDITIONER 1830 - 16		
1G23	PIPING, ENGINE TO FUEL TANK 0560 - 4		
2D12	PIPING, ENGINE TO HEATER 1830 - 8		
1G19	PIPING, ENGINE TO MUFFLER 0530 - 2		
1G5	PIPING, ENGINE TO RADIATOR 0510 - 8		
1G23	PIPING, ENGINE TO WATER SEPARATOR 0560 - 4		
3F3	PIPING, FLOW CONTROL VALVE TO CONTROL VALVE 3360 - 44		

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3E21	PIPING, PILOT (SWING DEVICE, CONTROL VALVE, SOLENOID VALVE)	3360 - 38	3G19	PLUMBING, HYDRAULIC AUXILIARY	3360 - 84
3F11	PIPING, PILOT (TRAVEL PILOT VALVE).....	3360 - 52	1H14	PREHEAT INDICATOR LIGHT	1674 - 4
3F9	PIPING, PILOT (TRAVEL PILOT VALVE, CONTROL VALVE)	3360 - 50	3F7	PRESSURE SENSOR, OIL TANK PILOT PIPINGS	3360 - 48
3F9	PIPING, PROPEL PILOT VALVE TO CONTROL VALVE	3360 - 50	2H7	PRESSURE SENSOR, PUMP	2160 - 6
2H19	PIPING, PUMP TO CONTROL VALVE	2160 - 18	2D24	PRESSURE SWITCH, AIR CONDITIONER	1830 - 20
2H17	PIPING, PUMP TO OIL TANK.....	2160 - 16	1H1	PRIMER, HAND FUEL FILTER	0560 - 6
1G5	PIPING, RADIATOR TO ENGINE	0510 - 8	3C15	PROPEL CONTROL LEVER	3315 - 8
1G7	PIPING, RADIATOR TO WATER TANK	0510 - 10	1B20	PROPEL DEVICE SUPPORT	0260 - 6
2D18	PIPING, RECEIVING TANK TO AIR CONDITIONER.....	1830 - 14	3C23	PROPEL LEVER DAMPENER.....	3315 - 16
1G7	PIPING, RESERVE WATER TANK	0510 - 10	1C9	PROPEL LINES,	0260 - 20
3D13	PIPING, RETURN TO CENTER JOINT.....	3360 - 6	1B18	PROPEL MOTOR	0260 - 4
3D13	PIPING, RETURN TO SWING DEVICE	3360 - 6	1B24	PROPEL MOTOR BRAKE RELIEF VALVE	0260 - 10
3F1	PIPING, ROTARY MANIFOLD TO SOLENOID VALVE	3360 - 42	1C1	PROPEL MOTOR BRAKE RELIEF VALVE COMPONENTS	0260 - 12
1C9	PIPING, ROTARY MANIFOLD TO TRAVEL DEVICE.....	0260 - 20	1B24	PROPEL MOTOR BRAKE VALVE COMPONENTS	0260 - 10
3F1	PIPING, SOLENOID VALVE TO CENTER JOINT	3360 - 42	1B22	PROPEL MOTOR COMPONENTS	0260 - 8
3E21	PIPING, SOLENOID VALVE TO CONTROL VALVE	3360 - 38	1C11	PROPEL MOTOR COVER.....	0260 - 22
3F1	PIPING, SOLENOID VALVE TO CONTROL VALVE	3360 - 42	1C3	PROPEL MOTOR SERVO PISTON COMPONENTS	0260 - 14
3E19	PIPING, SOLENOID VALVE TO HYDRAULIC PUMP	3360 - 36	3C17	PROPEL PEDALS	3315 - 10
3F19	PIPING, SOLENOID VALVE TO LOCK VALVE	3360 - 60	3C19	PROPEL PILOT VALVE	3315 - 12
3E19	PIPING, SOLENOID VALVE TO OIL TANK	3360 - 36	3C21	PROPEL PILOT VALVE COMPONENTS	3315 - 14
3F1	PIPING, SOLENOID VALVE TO ROTARY MANIFOLD	3360 - 42	3F9	PROPEL PILOT VALVE PIPINGS TO CONTROL VALVE	3360 - 50
3E21	PIPING, SOLENOID VALVE TO SWING DEVICE	3360 - 38	2G22	PROTECTION VANDAL	2013B - 2
2H17	PIPING, SUCTION	2160 - 16	2D16	PULLEY, AIR CONDITIONER COMPRESSOR	1830 - 12
3F1	PIPING, SWING DEVICE TO CONTROL VALVE.....	3360 - 42	1E23	PULLEY, ALTERNATOR AND HARDWARE.....	0423 - 1
3D13	PIPING, SWING DEVICE TO RETURN PIPINGS	3360 - 6	1F1	PULLEY, CRANKSHAFT AND DAMPERS	0429 - 2
3E21	PIPING, SWING DEVICE TO SOLENOID VALVE	3360 - 38	1F3	PULLEY, FAN ADJUSTABLE	0429 - 4
3D13	PIPING, SWING DEVICE TOP TO CONTROL VALVE	3360 - 6	1F3	PULLEY, IDLER	0429 - 4
3D19	PIPING, SWING MOTOR TO CONTROL VALVE.....	3360 - 12	2H5	PUMP COUPLING	2160 - 4
1C9	PIPING, TRAVEL	0260 - 20	2H5	PUMP DEVICE COMPONENTS	2160 - 4
1C9	PIPING, TRAVEL DEVICE TO CENTER JOINT.....	0260 - 20	2H19	PUMP PIPING TO CONTROL VALVE	2160 - 18
1C9	PIPING, TRAVEL DEVICE TO ROTARY MANIFOLD	0260 - 20	3E19	PUMP PIPINGS TO OIL FILTER.....	3360 - 36
3F9	PIPING, TRAVEL PILOT VALVE TO CONTROL VALVE	3360 - 50	2H17	PUMP PIPINGS TO OIL TANK	2160 - 16
3F11	PIPING, TRAVEL PILOT VALVE TO LOCK VALVE	3360 - 52	3E23	PUMP PIPINGS TO OIL TANK	3360 - 40
1G23	PIPING, WATER SEPARATOR	0560 - 4	3E19	PUMP PIPINGS TO SOLENOID VALVE.....	3360 - 36
1G23	PIPING, WATER SEPARATOR TO ENGINE	0560 - 4	2H7	PUMP PRESSURE SENSOR	2160 - 6
1G23	PIPING, WATER SEPARATOR TO FUEL TANK	0560 - 4	2H9	PUMP REGULATOR (COMPONENTS).....	2160 - 8
1G7	PIPING, WATER TANK TO RADIATOR	0510 - 10	2H13	PUMP SUPPORT	2160 - 12
3D13	PIPING, DRAIN	3360 - 6	2H7	PUMP UNIT, COMPONENTS	2160 - 6
3F23	PIPING, LUBRICATE	3360 - 64	1E1	PUMP, FUEL INJ.....	0413 - 4
3D19	PIPING, MAIN (CONTROL VALVE, SWING MOTOR)	3360 - 12	1E1	PUMP, FUEL TRANSFER	0413 - 4
3D11	PIPING, RETURN, CONTROL VALVE TO OIL COOLER	3360 - 4	1E6	PUMP, FUEL TRANSFER (ROBERT BOSCH).....	0413 - 9
3D9	PIPING, RETURN, OIL COOLER TO OIL TANK.....	3360 - 2	2H11	PUMP, GEAR	2160 - 10
1D5	PISTON COOLING JETS.....	0404 - 2	2H3	PUMP, HYDRAULIC.....	2160 - 2
1D4	PISTON RINGS	0403 - 3	1D12	PUMP, OIL ENGINE.....	0407 - 2
1D4	PISTON/LINER KIT	0403 - 3	1E12	PUMP, WATER.....	0417 - 2
1D4	PISTON, ENGINE.....	0403 - 3	2C11	PUMP, WINDOW WASHER.....	1810 - 32
1B22	PISTON, SERVO	0260 - 8	1D1	PUSH RODS.....	0402 - 4
1C3	PISTON, SERVO, COMPONENTS	0260 - 14			
3B23	PLATE LIP BUCKET, SEVERE DUTY, TOOTH ASSEMBLY.....	3302 - 16			
2C15	PLATE, CAB FLOOR	1810 - 36			
2C15	PLATFORM, CAB FLOOR	1810 - 36			
1G3	PLENUM, AIR COOLER	0510 - 6			

Q

2I2

QUICK COUPLERS, HYDRAULIC.....

2163B - 2

3C4

QUICK LATCH ASSEMBLY

3302 - 22

3C6

QUICK LATCH ASSEMBLY HYDRAULIC KIT

3302 - 24

R

2C3

RACK, RIFLE

1810 - 24

2G22

RACK, STORAGE, VANDAL PROTECTION

2013B - 2

1F23

RADIATOR

0510 - 2

1G3

RADIATOR ATTACHMENTS

0510 - 6

1G5

RADIATOR PIPING TO ENGINE.....

0510 - 8

1G7

RADIATOR PIPING TO WATER TANK.....

0510 - 10

Q

2I2	QUICK COUPLERS, HYDRAULIC.....	2163B - 2
3C4	QUICK LATCH ASSEMBLY	3302 - 22
3C6	QUICK LATCH ASSEMBLY HYDRAULIC KIT	3302 - 24

R

2C3	RACK, RIFLE	1810 - 24
2G22	RACK, STORAGE, VANDAL PROTECTION	2013B - 2
1F23	RADIATOR	0510 - 2
1G3	RADIATOR ATTACHMENTS	0510 - 6
1G5	RADIATOR PIPING TO ENGINE.....	0510 - 8
1G7	RADIATOR PIPING TO WATER TANK.....	0510 - 10

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
1G5	RADIATOR SUPPORT0510-8	1F23	SCREEN, RADIATOR0510-2
2D24	RADIATOR, AIR CONDITIONER1830-20	3G9	SEAL KIT, ARM CYLINDER3360-74
2C9	RADIO1810-30	3G11	SEAL KIT, BUCKET CYLINDER3360-76
2B9	RADIO ANTENNA1810-6	3G7	SEAL KIT, LEFT BOOM CYLINDER3360-72
2B9	RADIO SPEAKER1810-6	2H11	SEAL KIT, PUMP GEAR2160-10
2B9	RADIO SPEAKER WIRE HARNESS1810-6	3G5	SEAL KIT, RIGHT BOOM CYLINDER3360-70
2F1	RAIL, HAND1910-6	1C24	SEAL, FRONT OIL0402-2
1I22	REAR HOOD LIGHTS1673A-6	1C22	SEAL, REAR OIL0401-4
1C22	REAR OIL SEAL0401-4	1E12	SEAL, TUBE0417-2
1C22	REAR OIL SEAL GASKET0401-4	1E12	SEAL, WATER PUMP OIL0417-2
1C22	REAR OIL SEAL HOUSING0401-4	2C23	SEAT1821-2
2E15	REAR TRAY (FOR UNITS WITH AIR CONDITIONER)1830-36	2D3	SEAT BELT1821-6
2E13	REAR TRAY (FOR UNITS WITH HEATER)1830-34	2D5	SEAT BELT, RETRACTABLE (76MM (3") WIDE1821-9
2G14	REAR VIEW MIRROR, LEFT2002-2	2D1	SEAT STAND ADJUSTER1821-4
2F21	REAR VIEW MIRROR, RIGHT1910-26	2D1	SEAT STAND COMPONENTS1821-4
2D16	RECEIVER TANK, AIR CONDITIONER1830-12	2F23	SECURITY HASP, TOOL BOX1910-28
2D18	RECEIVING TANK PIPING TO AIR CONDITIONER1830-14	1C17	SENDER, ENGINE TEMPERATURE0400-2
1I16	RECEPTACLE, SLAVE1671A-2	1G7	SENDER, RESERVE WATER TANK0510-10
2H9	REGULATOR (COMPONENTS)2160-8	2H5	SENSOR, ENGINE SPEED2160-4
2H7	REGULATOR, PUMP2160-6	1D19	SENSOR, OIL LEVEL0407-9
2E1	RELAY, AIR CONDITIONER1830-22	3F7	SENSOR, PRESSURE, OIL TANK PILOT PIPIINGS3360-48
1H20	RELAY, BATTERY1674-10	2H7	SENSOR, PUMP PRESSURE2160-6
3G13	RELAY, MODUL FOR DUAL AUXILIARY CONTROL3360-78	1I11	SENSOR, TEMPERATURE SWITCH1674-26
1H20	RELAY, STARTER1674-10	1B22	SERVO PISTON0260-8
1H18	RELAYS1674-8	3B21	SEVERE DUTY CAST LIP BUCKET TOOTH ASSEMBLY3302-14
3G1	RELIEF VALVE3360-66	3B23	SEVERE DUTY PLATE LIP BUCKET, TOOTH ASSEMBLY3302-16
1B24	RELIEF VALVE, PROPEL MOTOR BRAKE0260-10	1D1	SHAFT, ROCKER ARM0402-4
1C1	RELIEF VALVE, PROPEL MOTOR BRAKE COMPONENTS0260-12	3B13	SHANK, GENERAL PURPOSE BUCKET3302-6
1G7	RESERVE WATER TANK0510-10	3B15	SHANK, GENERAL PURPOSE BUCKET3302-8
2H15	RESERVOIR, HYDRAULIC OIL2160-14	3B17	SHANK, HEAVY DUTY BUCKET3302-10
2C11	RESERVOIR, WINDOW WASHER1810-32	3B19	SHANK, HEAVY DUTY BUCKET3302-12
2D8	RESISTER, HEATER1830-4	3B21	SHANK, SEVERE DUTY CAST LIP BUCKET3302-14
2E3	RESISTOR, AIR CONDITIONER BLOWER1830-24	3B23	SHANK, SEVERE DUTY PLATE LIP BUCKET3302-16
2D5	RETRACTABLE SEAT BELT (76MM (3") WIDE1821-9	1D20	SHIELD, EXHAUST VALVE0409-2
3D13	RETURN PIPINGS TO CENTER JOINT3360-6	1D4	SHIM, LINER0403-3
3D13	RETURN PIPINGS TO SWING DEVICE3360-6	1B13	SHOE, TRACK0130-16
3D11	RETURN PIPINGS, CONTROL VALVE TO OIL COOLER3360-4	3D5	SHORT ARM 2.66M3340-2
3D9	RETURN PIPINGS, OIL COOLER TO OIL TANK3360-2	1D7	SHORT BLOCK0404-4
2C3	RIFLE RACK1810-24	1F8	SHORT BLOCK GASKET KIT0452-2
3G5	RIGHT BOOM CYLINDER3360-70	1G3	SHROUD, COOLING PACKAGE0510-6
1E12	RING, WATER PUMP RETAINING0417-2	3B9	SIDE CUTTERS, GENERAL PURPOSE BUCKET3302-2
1D4	RINGS, PISTON0403-3	3B11	SIDE CUTTERS, GENERAL PURPOSE BUCKET3302-4
1D2	ROCKER ARM COVER0402-5	1J4	SIDE RAIL1740-4
1D2	ROCKER ARM COVER GASKET0402-5	1I16	SLAVE RECEPTACLE1671A-2
1D1	ROCKER ARM SHAFT0402-4	2D1	SLIDER, SEAT STAND1821-4
1D1	ROCKER ARMS0402-4	3E17	SOLENOID VALVE3360-34
1D4	RODS, CONNECTING0403-3	3G13	SOLENOID VALVE DUAL CONTROL HARNESS3360-78
1D1	RODS, PUSH0402-4	3F1	SOLENOID VALVE PIPINGS TO CENTER JOINT3360-42
1B11	ROLLER, LOWER0130-14	3E21	SOLENOID VALVE PIPINGS TO CONTROL VALVE3360-38
1B9	ROLLER, UPPPER (330LC)0130-12	3F1	SOLENOID VALVE PIPINGS TO CONTROL VALVE3360-42
3F1	ROTARY MANIFOLD PIPINGS TO SOLENOID VALVE3360-42	3E19	SOLENOID VALVE PIPINGS TO HYDRAULIC PUMP3360-36
1C9	ROTARY MANIFOLD PIPINGS TO TRAVEL DEVICE0260-20	3F19	SOLENOID VALVE PIPINGS TO LOCK VALVE3360-60
1C7	ROTARY MANIFOLD SUPPORT0260-18	3E19	SOLENOID VALVE PIPINGS TO OIL TANK3360-36
2F21	RUBBER STRIP, TOOL BOX1910-26	3F1	SOLENOID VALVE PIPINGS TO ROTARY MANIFOLD3360-42
1J4	RUBRAIL1740-4	3E21	SOLENOID VALVE PIPINGS TO SWING DEVICE3360-38
		1E1	SOLENOID, ELECTRIC SHUT-OFF0413-4
		1E7	SOLENOID, ELECTRIC SHUT-OFF0413-10
		1F5	SPACER, FAN0429-6
		2B9	SPEAKER, RADIO1810-6
		2H5	SPEED SENSOR, ENGINE2160-4
		3G21	SPOOL CONTROL W/FLOW KIT3360-86
		2C17	STAND1810-38
		2C23	STAND, SEAT1821-2

S

1G15	SCREEN, AIR CLEANER0520-2
2G8	SCREEN, CAB, UPPER FRONT1913A-2
1F23	SCREEN, OIL COOLER0510-2

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
2D1	STAND, SEAT, COMPONENTS1821-4	3B23	TEETH, SEVERE DUTY PLATE LIP BUCKET3302-16
1H22	START SWITCH1674-12	1I11	TEMPERATURE SWITCH SENSOR1674-26
1F6	STARTER GEAR0433-1	1G3	TEMPERATURE SWITCH, AIR COOLER0510-6
1H20	STARTER RELAY1674-10	1E24	TENSIONER, BELT0423-2
1F13	STARTING AID, COLD WEATHER0505-2	1I5	TERMINALS, WEATHERPACK1674-20
1E22	STARTING MOTOR (DELCO-REMY 24V 37MT)0422-4	1E14	THERMOSTAT0418-2
1A23	STEP, TRACK FRAME0130-2	1E14	THERMOSTAT COVER0418-2
2G23	STORAGE BOX, VANDAL PROTECTION2013B-3	1E14	THERMOSTAT GASKET0418-2
2E19	STORAGE HOOKS,CAB1801A-2	1E14	THERMOSTAT HOUSING, FRONT0418-2
2G22	STORAGE RACK, VANDAL PROTECTION2013B-2	2D24	THERMOSTAT, AIR CONDITIONER1830-20
1G21	STRAINER, FUEL TANK0560-2	1C20	THRUST BEARING0401-2
1E24	STRAP, ALTERNATOR ADJUSTING0423-2	1C20	THRUST WASHER0401-2
1D22	STRAPS, ENGINE LIFT0409-4	1C24	TIMING GEAR COVER0402-2
2H17	SUCTION PIPINGS2160-16	1C24	TIMING GEAR COVER GASKET0402-2
1E24	SUPPORT, ALTERNATOR0423-2	2E17	TOGGLE SWITCH, AIR CIRCULATING FAN1830-38
1F13	SUPPORT, COLD WEATHER STARTING AID0505-2	2E17	TOGGLE SWITCH, DEFROSTER FAN1830-38
1G1	SURGE TANK, COOLING PACKAGE0510-4	2F21	TOOL BOX1910-26
2C23	SUSPENSION, SEAT1821-2	2F21	TOOL BOX COVER1910-26
1J8	SWING BEARING1740-8	2G1	TOOL BOX DOOR LOCK LATCH1910-30
1J10	SWING BEARING GREASE COVER1740-10	2F23	TOOL BOX SECURITY HASP1910-28
3H9	SWING DEVICE COMPONENTS4360-2	2F24	TOOL BOX SECURITY HASP1910-29
3F1	SWING DEVICE PIPINGS TO CONTROL VALVE3360-42	3C1	TOOTH, ESCO3302-18
3D13	SWING DEVICE PIPINGS TO RETURN PIPINGS3360-6	3B13	TOOTH, GENERAL PURPOSE BUCKET3302-6
3E21	SWING DEVICE PIPINGS TO SOLENOID VALVE3360-38	3B15	TOOTH, GENERAL PURPOSE BUCKET3302-8
3H11	SWING DEVICE SUPPORT4360-4	3B17	TOOTH, HEAVY DUTY BUCKET3302-10
3D13	SWING DEVICE TOP PIPINGS TO CONTROL VALVE3360-6	3B19	TOOTH, HEAVY DUTY BUCKET3302-12
3H13	SWING MOTOR COMPONENTS4360-6	3B21	TOOTH, SEVERE DUTY CAST LIP BUCKET3302-14
3D19	SWING MOTOR PIPINGS TO CONTROL VALVE3360-12	3B23	TOOTH, SEVERE DUTY PLATE LIP BUCKET3302-16
3C11	SWING PILOT VALVE3315-4	1H7	TORQ-GARD ENGINE OIL1369-3
3C13	SWING PILOT VALVE COMPONENTS3315-6	3C23	TORSIONAL DAMPENER, PROPEL LEVER3315-16
3F3	SWITCH, ARM IN PRESSURE3360-44	2C23	TORSIONAL DAMPENER, SEAT1821-2
3F3	SWITCH, BOOM UP PRESSURE3360-44	1B13	TRACK CHAIN0130-16
1G13	SWITCH, ENGINE CONTROLLER0515-6	1A23	TRACK FRAME0130-2
3G15	SWITCH, FOOT, AUXILIARY ELECTRIC3360-80	1B1	TRACK GUARD0130-4
3C9	SWITCH, HORN3315-2	1B13	TRACK LINK0130-16
1G21	SWITCH, LEVEL, FUEL TANK0560-2	1B13	TRACK SHOE0130-16
1G7	SWITCH, LEVEL, RESERVE WATER TANK0510-10	1B3	TRACK UNDER COVER0130-6
1I10	SWITCH, OIL PRESSURE1674-25	1E6	TRANSFER PUMP, FUEL (ROBERT BOSCH)0413-9
2D24	SWITCH, PRESSURE, AIR CONDITIONER1830-20	3C15	TRAVEL CONTROL LEVER3315-8
1G3	SWITCH, TEMPERATURE, AIR COOLER0510-6	1B18	TRAVEL DEVICE0260-4
2E17	SWITCH, TOGGLE, AIR CIRCULATING FAN1830-38	1C9	TRAVEL DEVICE PIPING TO CENTER JOINT0260-20
2E17	SWITCH, TOGGLE, DEFROSTER FAN1830-38	1C9	TRAVEL DEVICE PIPINGS TO ROTARY MANIFOLD0260-20
1H14	SWITCH, TRAVEL MODE1674-4	1B20	TRAVEL DEVICE SUPPORT0260-6
1H14	SWITCH, WIPER1674-4	3C23	TRAVEL LEVER DAMPENER3315-16
1H14	SWITCH, WORK LIGHT1674-4	1H14	TRAVEL MODE SWITCH1674-4
1H14	SWITCHBOARD1674-4	1I3	TRAVEL MOTION ALARM1674-18
		1B24	TRAVEL MOTOR BRAKE RELIEF VALVE0260-10
		1C1	TRAVEL MOTOR BRAKE RELIEF VALVE COMPONENTS0260-12
		1B24	TRAVEL MOTOR BRAKE VALVE COMPONENTS0260-10
		1B22	TRAVEL MOTOR COMPONENTS0260-8
		1C11	TRAVEL MOTOR COVER0260-22
		1C3	TRAVEL MOTOR SERVO PISTON COMPONENTS0260-14
		3C19	TRAVEL PILOT VALVE3315-12
		3C21	TRAVEL PILOT VALVE COMPONENTS3315-14
		3F9	TRAVEL PILOT VALVE PIPINGS TO CONTROL VALVE3360-50
		3F11	TRAVEL PILOT VALVE PIPINGS TO LOCK VALVE3360-52
		1C9	TRAVEL PIPINGS0260-20
		2E15	TRAY, REAR (FOR UNITS WITH AIR CONDITIONER)1830-36
		2E13	TRAY, REAR (FOR UNITS WITH HEATER)1830-34
		1E12	TUBE SEAL0417-2
		1D18	TUBE, ENGINE OIL DIPSTICK0407-8
		1G19	TUBE, ENGINE TO MUFFLER0530-2
		1G19	TUBE, MUFFLER TO ENGINE0530-2
		1E14	TUBE, THERMOSTAT HOUSING0418-2

T

2D16	TANK, AIR CONDITIONER1830-12
2D16	TANK, FREON1830-12
1G21	TANK, FUEL0560-2
2H15	TANK, OIL2160-14
2D16	TANK, RECEIVER, AIR CONDITIONER1830-12
1G1	TANK, SURGE, COOLING PACKAGE0510-4
1G7	TANK, WATER, RESERVE0510-10
2C11	TANK, WINDOW WASHER1810-32
3C1	TEETH, ESCO3302-18
3B13	TEETH, GENERAL PURPOSE BUCKET3302-6
3B15	TEETH, GENERAL PURPOSE BUCKET3302-8
3B17	TEETH, HEAVY DUTY BUCKET3302-10
3B19	TEETH, HEAVY DUTY BUCKET3302-12
3B21	TEETH, SEVERE DUTY CAST LIP BUCKET3302-14

ALPHABETICAL INDEX - CONTINUED

UVw

1H14	WARM UP COMPLETE INDICATOR	1674 - 4
1H14	WARNING BUZZER	1674 - 4
1C20	WASHER, THRUST	0401 - 2
1E14	WATER MANIFOLD GASKET	0418 - 2
1E14	WATER MANIFOLD, FRONT.....	0418 - 2
1E12	WATER PUMP	0417 - 2
1E12	WATER PUMP GASKET	0417 - 2
1E12	WATER PUMP INLET	0417 - 2
1E12	WATER PUMP O-RING	0417 - 2
1E12	WATER PUMP OIL SEAL	0417 - 2
1E12	WATER PUMP RETAINING RING	0417 - 2
1E12	WATER PUMP SEAL KIT	0417 - 2
1H1	WATER SEPARATOR BRACKET	0560 - 6
1G23	WATER SEPARATOR HOSE	0560 - 4
1G23	WATER SEPARATOR PIPING TO ENGINE.....	0560 - 4
1G23	WATER SEPARATOR PIPING TO FUEL TANK	0560 - 4
1G23	WATER SEPARATOR, FUEL FILTER	0560 - 4
1G7	WATER TANK PIPING TO RADIATOR.....	0510 - 10
1G7	WATER TANK, RESERVE.....	0510 - 10
3B9	WEAR BARS, GENERAL PURPOSE BUCKET	3302 - 2
3B11	WEAR BARS, GENERAL PURPOSE BUCKET	3302 - 4
1I5	WEATHERPACK TERMINALS AND CONNECTORS.....	1674 - 20
2F17	WEATHERSTRIP (SIDE SERVICE DOORS)	1910 - 22
2B13	WEATHERSTRIP, CAB DOOR	1810 - 10
2B15	WEATHERSTRIP, CAB DOOR	1810 - 12
2B17	WEATHERSTRIP, CAB FRONT	1810 - 14
2B19	WEATHERSTRIP, CAB FRONT	1810 - 16
2B11	WEATHERSTRIP, CAB REAR AND LEFT SIDE	1810 - 8
2B23	WEATHERSTRIP, CAB TOP HATCH	1810 - 20
2F21	WEATHERSTRIP, TOOL BOX.....	1910 - 26
2B21	WINDOW GUARD	1810 - 18
2E22	WINDOW GUARDS	1910 - 2
2C11	WINDOW WASHER	1810 - 32
2B13	WINDOW, CAB DOOR.....	1810 - 10
2B15	WINDOW, CAB DOOR.....	1810 - 12
2B17	WINDOW, CAB FRONT	1810 - 14
2B19	WINDOW, CAB FRONT	1810 - 16
2B11	WINDOW, CAB REAR AND LEFT SIDE	1810 - 8
2B21	WINDOW, CAB RIGHT SIDE	1810 - 18
2G11	WINDSHIELD GUARD, LOWER FRONT	1913B - 2
2C11	WINDSHIELD WASHER	1810 - 32
2B9	WINDSHIELD WASHER HOSE	1810 - 6
2B9	WINDSHIELD WASHER NOZZLE	1810 - 6
2B9	WINDSHIELD WIPER.....	1810 - 6
2B9	WINDSHIELD WIPER MOTOR	1810 - 6
2B9	WIPER MOTOR, WINDSHIELD	1810 - 6
1H14	WIPER SWITCH	1674 - 4
2B9	WIPER, WINDSHIELD	1810 - 6
1H16	WIRE HARNESS	1674 - 6
1H16	WIRE HARNESS EXTENSION	1674 - 6
2D14	WIRE HARNESS, AIR CONDITIONER	1830 - 10
2D24	WIRE HARNESS, AIR CONDITIONER	1830 - 20
2D16	WIRE HARNESS, AIR CONDITIONER COMPRESSOR	1830 - 12
1H20	WIRE HARNESS, BATTERY	1674 - 10
2E17	WIRE HARNESS, DEFROSTER FAN	1830 - 38
2B9	WIRE HARNESS, DOME LIGHT	1810 - 6
3G15	WIRE HARNESS, FOOT SWITCH	3360 - 80
2D8	WIRE HARNESS, HEATER	1830 - 4
1I1	WIRE HARNESS, HORN	1674 - 16
1H24	WIRE HARNESS, MAIN.....	1674 - 14
2C9	WIRE HARNESS, RADIO.....	1810 - 30
2B9	WIRE HARNESS, RADIO SPEAKER	1810 - 6

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID	PAGE
1H18	WIRE HARNESS, RELAYS	1674-8		
1H20	WIRE HARNESS, STARTER	1674-10		
1I7	WIRE KIT, LEAD	1674-22		
1H16	WIRING HARNESS	1674-6		
1I9	WIRING HARNESS KIT	1674-24		
1H14	WORK LIGHT SWITCH	1674-4		