

TECHNICAL MANUAL
DIRECT SUPPORT, GENERAL SUPPORT AND
DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

CRANE, SHOVEL, TRUCK MOUNTED,
20 TON, 3/4 CU YD., GED 6 X 6
NSN 3810-00-861-8088
HARNISCHFEGER MODEL M320T

HEADQUARTERS, DEPARTMENT OF THE ARMY
MAY 1985

TECHNICAL MANUAL

TM 5-3810-288-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC 28 May 1985DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS)CRANE, SHOVEL, TRUCK MOUNTED, 20 TON, 3/4 CU YD., GED 6 X 6
NSN 3810-00-861-8088
HARNISCHFEGGER MODEL M320T
CURRENT AS OF

CURRENT AS OF 23 AUGUST 1984

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

TABLE OF CONTENTS

			Page	Illus Fig
SECTION	I.	INTRODUCTION	1	
SECTION	II.	REPAIR PARTS LIST	7	
GROUP	01	ENGINE		
		0100—ENGINE ASSEMBLY	7	
		CRANE ENGINE	7	1
		CARRIER ENGINE	9	2
		0101—CRANKCASE, BLOCK, CYLINDER HEAD	11	

*This publication supersedes TM 5-3810-288-35P dated 27 October 1970 and all changes.

TABLE OF CONTENTS

	Illus Page	Fig
CRANE ENGINE CYLINDER HEAD.....	11	3
CRANE ENGINE SIDE COVERS	13	4
CRANE ENGINE CYLINDER BLOCK PLUGS	15	5
CRANE ENGINE CYLINDER BLOCK ASSEMBLY	17	6
CARRIER ENGINE BLOCK DRAIN.....	19	7
CARRIER ENGINE WATER CONNECTION FOR AIR COMPRESSOR AND HEATER	21	8
CARRIER ENGINE CYLINDER HEAD ASSEMBLY.....	23	9
CARRIER ENGINE PLUGS AND COVERS	25	10
CARRIER ENGINE BLOCK AND RELATED PARTS.....	27	11
CARRIER ENGINE CYLINDER BLOCK ASSEMBLY.....	29	12
0102—CRANKSHAFT.....	31	
CRANE ENGINE CRANKSHAFT ASSEMBLY	31	13
CARRIER ENGINE CRANKSHAFT ASSEMBLY	33	14
CARRIER ENGINE CRANKSHAFT RELATED PARTS	35	15
0103—FLYWHEEL ASSEMBLY	37	
CRANE ENGINE FLYWHEEL	37	16
CRANE ENGINE FLYWHEEL HOUSING	39	17
CARRIER ENGINE	41	18
CARRIER ENGINE FLYWHEEL HOUSING	43	19
0104—PISTONS, CONNECTING RODS	45	
CRANE ENGINE PISTONS AND RELATED PARTS.....	45	20
CARRIER ENGINE PISTONS AND RELATED PARTS	49	21
0105—VALVES, CAMSHAFT AND TIMING SYSTEM	51	
CRANE ENGINE ROCKER ARM COVER ASSEMBLY	51	22
CRANE ENGINE ROCKER ARM ASSEMBLY	53	23
CRANE ENGINE VALVES.....	55	24
CRANE ENGINE FRONT GEAR COVER	57	25
CRANE ENGINE CAMSHAFT AND IDLER GEAR ASSEMBLY	59	26
CRANE ENGINE LIFTER COVERS	61	27
CARRIER ENGINE ROCKER ARM COVER ASSEMBLY.....	63	28
CARRIER ENGINE VALVES	65	29
CARRIER ENGINE FRONT COVERS	67	30
CARRIER ENGINE CAMSHAFT AND IDLER GEAR ASSEMBLY	69	31
CARRIER ENGINE LIFTER COVERS.....	71	32
0106—ENGINE LUBRICATION SYSTEM	73	
CRANE OIL FUME EXTRACTOR	73	33
OIL FUME EXTRACTOR EXPLODED VIEW	75	34
CRANE ENGINE OIL FILTER.....	77	35
CRANE ENGINE OIL FILTER EXPLODED VIEW	79	36
CRANE ENGINE OIL COOLER ASSEMBLY	81	37
CRANE ENGINE LEVEL INDICATOR AND OIL PAN.....	83	38
CRANE ENGINE OIL PUMP.....	85	39
CRANE ENGINE OIL PUMP EXPLODED VIEW.....	87	40
CRANE ENGINE OIL FILLER TUBE	91	41
CARRIER ENGINE OIL FUME EXTRACTOR.....	93	42
CARRIER ENGINE OIL FILTER	95	43
CARRIER ENGINE OIL FILTER ASSEMBLY.....	97	44
CARRIER ENGINE OIL COOLER ASSEMBLY.....	99	45
CARRIER ENGINE OIL COOLER EXPLODED VIEW	101	46

TABLE OF CONTENTS

	Illus Page	Fig
CARRIER ENGINE OIL LEVEL GAUGE AND OIL PAN	103	47
CARRIER ENGINE OIL PUMP	105	48
CARRIER ENGINE OIL PUMP ASSEMBLY EXPLODED VIEW.....	107	49
CARRIER ENGINE OIL PRESSURE RELIEF VALVE	111	50
CARRIER ENGINE OIL FILLER	113	51
0108—MANIFOLDS	115	
CRANE ENGINE INTAKE AND EXHAUST MANIFOLD	115	52
CARRIER ENGINE INTAKE MANIFOLD	117	53
CARRIER ENGINE EXHAUST MANIFOLD	119	54
GROUP 02 CLUTCH		
0200—CLUTCH ASSEMBLY	121	
CRANE CLUTCH ASSEMBLY.....	121	55
CARRIER CLUTCH ASSEMBLY	123	56
CARRIER TRANSMISSION CLUTCH ASSEMBLY AND CLUTCH SHAFT	127	57
0202—CLUTCH RELEASE MECHANISM.....	129	
CRANE CLUTCH RELEASE LEVER	129	58
CRANE CLUTCH RELEASE FORK	131	59
CRANE CLUTCH RELEASE COMPONENTS	133	60
CARRIER CLUTCH RELEASE MECHANISM.....	135	61
GROUP 03 FUEL SYSTEM		
0301—CARBURETOR, FUEL INJECTOR	139	
CRANE ENGINE CARBURETOR.....	139	62
CRANE ENGINE CARBURETOR EXPLODED VIEW	141	63
CARRIER ENGINE CARBURETOR	145	64
CARRIER ENGINE CARBURETOR EXPLODED VIEW	147	65
CARRIER ENGINE CARBURETOR EXPLODED VIEW	151	66
0302—FUEL PUMP	155	
CRANE ENGINE FUEL PUMP	155	67
CARRIER ENGINE FUEL PUMP	157	68
0304—AIR CLEANER	159	
CRANE AIR INDUCTION SYSTEM.....	159	69
CARRIER AIR INDUCTION SYSTEM	161	70
CARRIER AIR CLEANER ASSEMBLY.....	163	71
0306—TANKS, LINES, FITTINGS, HEADERS.....	165	
CRANE ENGINE FUEL LINES AND FITTINGS	165	72
CRANE FUEL TANK ASSEMBLY	167	73
CARRIER ENGINE FUEL LINES AND FITTINGS	169	74
CARRIER FUEL TANK ASSEMBLY	171	75
CARRIER CARBURETOR LINES AND FITTINGS AND CRANE FUEL PUMP LINES AND FITTINGS.....	173	76
CARRIER FUEL PUMP LINES AND FITTINGS.....	175	77
0308—ENGINE SPEED GOVERNOR AND CONTROLS	177	
CRANE GOVERNOR.....	177	78
CRANE GOVERNOR EXPLODED VIEW.....	179	79
CARRIER ENGINE GOVERNOR VERTICLE LINKAGE.....	183	80
CARRIER ENGINE GOVERNOR AND LINKAGE	185	81
CARRIER ENGINE GOVERNOR EXPLODED VIEW	187	82
0309—FUEL FILTERS	191	

TABLE OF CONTENTS

		Page	Illus Fig
	CARRIER FUEL FILTER	191	83
0311—	ENGINE STARTING AIDS.....	193	
	CARRIER FUEL PRIMER PUMP ASSEMBLY	193	84
	CRANE FUEL PRIMER LINES AND FITTINGS.....	197	85
	CARRIER FUEL PRIMER LINES AND FITTINGS	199	86
0312—	ACCELERATOR, THROTTLE OR CHOKE CONTROLS	201	
	CRANE CHOKE CONTROL ASSEMBLY	201	87
	CRANE THROTTLE ASSEMBLY	203	88
	CRANE THROTTLE ASSEMBLY EXPLODED VIEW	205	89
	CARRIER THROTTLE CONTROLS	207	90
GROUP 04	EXHAUST SYSTEM		
0401—	MUFFLER AND PIPES.....	209	
	CRANE EXHAUST SYSTEM.....	209	91
	CARRIER EXHAUST SYSTEM	211	92
GROUP 05	COOLING SYSTEM		
0501—	RADIATOR, EVAPORATOR COOLER, OR HEAT EXCHANGER.....	213	
	CRANE SHUTTER GUARD	213	93
	CRANE RADIATOR	215	94
	CARRIER RADIATOR	217	95
0503—	WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET	219	
	CRANE ENGINE THERMOSTAT AND HOUSING	219	96
	CARRIER ENGINE WATER MANIFOLD AND THERMOSTAT	221	97
	CRANE RADIATOR HOSES	225	98
	CARRIER RADIATOR HOSES.....	227	99
0504—	WATER PUMP	229	
	CRANE ENGINE WATER PUMP ASSEMBLY	229	100
	CRANE ENGINE WATER PUMP ASSEMBLY EXPLODED VIEW	231	101
	CARRIER ENGINE WATER PUMP.....	233	102
	CARRIER ENGINE WATER PUMP ASSEMBLY EXPLODED VIEW	235	103
0505—	FAN ASSEMBLY.....	237	
	CRANE ENGINE FAN ASSEMBLY	237	104
	CARRIER ENGINE FAN AND HUB ASSEMBLY	239	105
	CARRIER ENGINE FAN HUB ASSEMBLY EXPLODED VIEW	243	106
	CARRIER ENGINE FAN BELT SHOE.....	245	107
	CARRIER ENGINE BELT ADJUSTER ASSEMBLY	247	108
	CRANE ENGINE FAN GUARD.....	249	109
GROUP 06	ELECTRICAL SYSTEM		
0601—	GENERATOR, ALTERNATOR.....	251	
	CRANE ALTERNATOR FAN GUARD	251	110
	CRANE ALTERNATOR ASSEMBLY	253	111
	CARRIER ALTERNATOR ASSEMBLY	255	112
	CRANE AND CARRIER GENERATOR EXPLODED VIEW	257	113
	CRANE AND CARRIER GENERATOR EXPLODED VIEW	261	114
0603—	STARTING MOTOR	263	
	CRANE ENGINE STARTER ASSEMBLY.....	263	115

TABLE OF CONTENTS

	Page	Illus Fig
CRANE ENGINE STARTER ASSEMBLY EXPLODED VIEW.....	267	116
CARRIER ENGINE STARTER ASSEMBLY.....	271	117
CARRIER ENGINE STARTER ASSEMBLY EXPLODED VIEW.....	275	118
CARRIER ENGINE STARTER RELAY.....	279	119
0605—IGNITION COMPONENTS.....	281	
CRANE ENGINE DISTRIBUTOR EXPLODED VIEW.....	281	120
CRANE ENGINE IGNITION COIL EXPLODED VIEW.....	285	121
CARRIER ENGINE IGNITION COMPONENTS, SPARK PLUGS AND CABLES.....	289	122
CARRIER ENGINE DISTRIBUTOR EXPLODED VIEW.....	291	123
CARRIER ENGINE IGNITION COIL EXPLODED VIEW.....	295	124
0606—ENGINE SAFETY CONTROLS.....	297	
POLARITY RELAY.....	297	125
0607—INSTRUMENT OR ENGINE CONTROL PANEL.....		299
CRANE CAB INSTRUMENT PANEL.....	299	126
CARRIER INSTRUMENT PANEL.....	301	127
0608—MISCELLANEOUS ITEMS.....	303	
CRANE TERMINAL BLOCKS, SWITCHES AND RESISTORS.....	303	128
CARRIER SIGNAL LIGHT ASSEMBLY, STOPLIGHT AND HEADLIGHT DIMMER SWITCHES.....	305	129
0609—LIGHTS.....		307
SPOTLIGHT AND FLOODLIGHT ASSEMBLY AND MOUNTING.....	307	130
CRANE CLEARANCE MARKER LIGHTS AND MOUNTING.....	309	131
CRANE CAB FLOODLIGHT AND CLEARANCE LIGHT BRACKET ASSEMBLIES.....	311	132
HEADLIGHT ASSEMBLY.....	313	133
DIRECTIONAL LIGHTS.....	315	134
SERVICE BLACKOUT LIGHTS.....	317	135
CARRIER CLEARANCE MARKER LIGHTS.....	319	136
BLACKOUT CLEARANCE LIGHT.....	321	137
BLACKOUT HEADLIGHT.....	323	138
DOME LIGHT AND MOUNTING.....	325	139
0610—SENDING UNITS AND WARNING SWITCHES.....	327	
WARNING HORN.....	327	140
SENDING UNITS.....	329	141
CARRIER FUEL GAGE SENDING UNIT.....	331	142
0611—HORN, SIREN.....	333	
ELECTRIC HORN.....	333	143
0612—BATTERIES, STORAGE.....	335	
BATTERY BOX ASSEMBLY.....	335	144
0613—HULL OR CHASSIS WIRING HARNESS.....	337	
ELECTRICAL WIRING HARNESSES.....	337	145
CARRIER CAB WIRING DIAGRAM.....	339	146
CARRIER FRAME AND PLATFORM WIRING DIAGRAM.....	341	147
CARRIER ENGINE WIRING DIAGRAM.....	345	148
GROUP 07 TRANSMISSION		
0700—TRANSMISSION ASSEMBLY.....	347	
CRANE TRANSMISSION TOP COVER.....	347	149
CRANE TRANSMISSION.....	349	150

TABLE OF CONTENTS

	Page	Illus Fig
CARRIER TRANSMISSION ASSEMBLY	353	151
CARRIER TRANSMISSION PLUGS AND COVERS.....	355	152
0701—TRANSMISSION SHAFTS	357	
CARRIER TRANSMISSION INPUT SHAFT AND COUNTERSHAFT ASSEMBLY	357	153
CARRIER TRANSMISSION REVERSE IDLER SHAFT AND COUNTERSHAFT ASSEMBLY	361	154
0703—TRANSMISSION CONTROL ASSEMBLY.....	363	
TRANSMISSION REMOTE CONTROL ASSEMBLY	363	155
CARRIER TRANSMISSION MANUAL CONTROL ASSEMBLY.....	365	156
CARRIER TRANSMISSION HIGH LOW RANGE SHIFT FORK ASSEMBLY AND AIR CYLINDER	369	157
0705- TRANSMISSION SHIFTING COMPONENTS	371	
CARRIER TRANSMISSION CONTROL ASSEMBLY.....	371	158
CARRIER TRANSMISSION SHIFT LEVER ASSEMBLY.....	375	159
CARRIER TRANSMISSION HIGH LOW RANGE SWITCH ASSEMBLY	377	160
0710—TRANSMISSION ASSEMBLY	379	
CARRIER TRANSMISSION DROP GEAR UNIT AND HOUSING	379	161
0721—COOLERS, PUMPS, MOTORS.....	383	
CARRIER TRANSMISSION HIGH AND LOW RANGE CONTROL COMPONENTS.....	383	162
GROUP 08 TRANSFER, FINAL DRIVE, PLANETARY AND DROP GEAR BOX ASSEMBLIES		
0801—POWER TRANSFER, FINAL DRIVE, PLANETARY OR DROP GEAR BOX ASSEMBLIES.....	385	
CARRIER TRANSFER CASE AND MOUNTING	385	163
CARRIER TRANSFER CASE AND RELATED COMPONENTS.....	387	164
CARRIER TRANSFER CASE MAIN IDLER SHAFT AND DRIVEN SHAFT COMPONENTS.....	391	165
GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
0900—PROPELLER SHAFTS	395	
CRANE PROPELLER SHAFT ASSEMBLY AND MOUNTING.....	395	166
CRANE PROPELLER AND WORM SHAFT ASSEMBLIES.....	397	167
CARRIER PROPELLER SHAFT AND MOUNTING	399	168
CARRIER TRANSMISSION TO TRANSFER CASE PROPELLER SHAFT	401	169
CARRIER FRONT AND REAR AXLE PROPELLER SHAFTS.....	403	170
GROUP 10 FRONT AXLE		
1000—FRONT AXLE ASSEMBLY	407	
FRONT AXLE DRIVE SHAFT AND JOINT ASSEMBLY MOUNTING.....	407	171
FRONT AXLE HOUSING ASSEMBLY	411	172
1002—DIFFERENTIAL	413	
FRONT DIFFERENTIAL ASSEMBLY AND MOUNTING.....	413	173

TABLE OF CONTENTS

	Page	Illus Fig
1004—STEERING AND LEANING WHEEL MECHANISM	417	
STEERING KNUCKLE MOUNTING	417	174
GROUP 11		
REAR AXLE		
1100—REAR AXLE ASSEMBLY.....	419	
REAR TANDEM AXLE AND HOUSING	419	175
1101—HOUSING, BEAM, HOUSING COVERS, PLUGS SEALS, ETC.....	421	
TANDEM AXLE SUSPENSION ASSEMBLY.....	421	176
1102—DIFFERENTIAL	423	
DIFFERENTIAL LOCKOUT VALVE, LINES, AND FITTINGS	423	177
DIFFERENTIAL LOCKOUT VALVE ASSEMBLY	425	178
FORWARD REAR AXLE DIFFERENTIAL ASSEMBLY	427	179
FORWARD REAR AXLE DIFFERENTIAL	431	180
REAR AXLE DIFFERENTIAL ASSEMBLY	435	181
REAR AXLE DIFFERENTIAL	439	182
GROUP 12		
BRAKES		
1202—SERVICE BRAKES.....	443	
FRONT BRAKE MOUNTING	443	183
REAR BRAKE MOUNTING	447	184
1208—AIR BRAKE SYSTEM	451	
LOW PRESSURE SWITCH HOSES AND FITTINGS	451	185
LOW PRESSURE INDICATOR FLAG, LINES AND FITTINGS	453	186
INDICATOR LOW AIR PRESSURE FLAG.....	455	187
HAND BRAKE VALVE ASSEMBLY, HOSE AND FITTINGS.....	457	188
TREADLE BRAKE VALVE ASSEMBLY, HOSES AND FITTINGS.....	459	189
THREE WAY CONTROL VALVE, LINES AND FITTINGS	461	190
TRACTOR PROTECTION CONTROL VALVE, LINES AND FITTINGS.....	463	191
PARKING BRAKE VALVE, LINES AND FITTINGS.....	465	192
DRAIN VALVE ASSEMBLY, LINES AND FITTINGS.....	467	193
PUSH PULL VALVE AND SYNCHRONIZER VALVE LINES AND FITTINGS	469	194
DOUBLE CHECK VALVE, LINES AND FITTINGS.....	471	195
AIR MANIFOLD, LINES AND FITTINGS.....	473	196
ALCOHOL EVAPORATOR, LINES AND FITTINGS	475	197
AIR RESERVOIR DRAIN LINES AND FITTINGS	477	198
AIR RESERVOIR, DRAIN, CHECK, LINES AND FITTINGS.....	481	199
DOUBLE CHECK, QUICK RELEASE LIMIT VALVES, LINES AND FITTINGS	485	200
DOUBLE CHECK, QUICK RELEASE LIMIT VALVES.....	489	201
QUICK DISCONNECT COUPLING	493	202
ELBOW ANCHORS, LINES, AND FITTINGS	497	203
DOUBLE CHECK VALVE, RELAY EMERGENCY VALVE LINES AND FITTINGS.....	499	204
FRONT BRAKE CHAMBER ASSEMBLY	503	205
REAR BRAKE CHAMBER ASSEMBLY.....	505	206
1209—AIR COMPRESSOR ASSEMBLY.....	509	
ENGINE AIR COMPRESSOR ASSEMBLY	509	207
AIR COMPRESSOR ASSEMBLY.....	510.3	207A
AIR COMPRESSOR CRANKSHAFT.....	510.7	207B
AIR COMPRESSOR PISTON ASSEMBLY	510.9	207C
AIR COMPRESSOR GOVERNOR ASSEMBLY.....	510.11	207D
1211—TRAILER BRAKE CONNECTIONS AND CONTROLS	513	

TABLE OF CONTENTS

		Page	Illus Fig
	QUICK DISCONNECT COUPLINGS, TRACTOR PROTECTION VALVE, LINES AND FITTINGS	513	208
	CHECK VALVE	517	209
	TRACTOR PROTECTION VALVE	519	210
GROUP 13	WHEELS AND TRACKS		
	1311—WHEEL ASSEMBLY	521	
	WHEELS	521	211
	FRONT WHEEL AND BRAKE DRUM MOUNTING	523	212
	REAR WHEEL AND BRAKE DRUM MOUNTING	525	213
	1313—FIRES, TUBES, TIRE CHAINS.....	529	
	TIRES AND TUBES	529	214
GROUP 14	STEERING		
	1401—MECHANICAL STEERING GEAR ASSEMBLY	531	
	STEERING COLUMN DRAG LINK AND TIE ROD ASSEMBLY	531	215
	1407—POWER STEERING GEAR ASSEMBLY	533	
	POWER STEERING ASSEMBLY, HOSES AND FITTINGS	533	216
	1410—HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	537	
	HYDRAULIC STEERING PUMP, BELT AND MOUNTING	537	217
	HYDRAULIC STEERING PUMP.....	539	218
	HYDRAULIC STEERING PUMP MOUNTING BRACKETS	543	219
	1414—STEERING SYSTEM VALVES.....	545	
	POWER STEERING GEAR SHAFT AND ADJUSTING SCREW ASSEMBLIES.....	545	220
	POWER STEERING VALVE ASSEMBLY	547	221
	ADAPTER AND RACK ASSEMBLY WORM VALVE.....	549	222
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS AND ARTICULATION SYSTEMS		
	1501—FRAME ASSEMBLY	553	
	FRAME AND FRAME BRACKETS	553	223
	CARRIER BOOM RACK AND GRILL	557	224
	1502—COUNTERWEIGHTS	559	
	COUNTERWEIGHT ASSEMBLY	559	225
	1504—SPARE WHEEL CARRIER AND TIRE LOCK	561	
	SPARE WHEEL CARRIER AND BRACKET	561	226
	1507—LANDING, GEAR, LEVELING JACKS.....	563	
	FLOAT OUTRIGGERS	563	227
	CRANE OUTRIGGER AND MOUNTING	565	228
GROUP 16	SPRINGS AND SHOCK ABSORBERS		
	1601—SPRINGS.....	569	
	SPRING ASSEMBLY.....	569	229
	1604—SHOCK ABSORBER EQUIPMENT	571	
	SHOCK ABSORBERS.....	571	230
	1605—TORQUE, RADIUS AND STABILIZER RODS	573	
	TORSION BAR	573	231
	TANDEM AXLE AND TORQUE ROD ASSEMBLY	575	232
GROUP 18	BODY, CAB, HOOD AND HULL		
	1801—BODY, CAB, HOOD, AND HULL ASSEMBLIES.....	577	

TABLE OF CONTENTS

	Page	Illus Fig
CAB ASSEMBLY LEFT SIDE	577	233
CAB ASSEMBLY CENTER.....	581	234
CAB SLIDING METAL DOOR.....	583	235
CAB SIDE PANEL LEFT SIDE	585	236
CAB REAR PANEL LEFT SIDE.....	587	237
CAB ENCLOSURE ASSEMBLY	589	238
CAB REAR SECTION ENGINE CANOPY	591	239
CAB SLIDING METAL DOOR AND RELATED PARTS	593	240
CAB OPERATOR CAB ASSEMBLY	595	241
CAB CENTER PANEL RIGHT SIDE.....	597	242
CAB REAR PANEL RIGHT SIDE	599	243
CAB PLATFORM ASSEMBLY.....	601	244
CARRIER ENGINE HOOD AND MOUNTING	603	245
CARRIER CAB AND MOUNTING	605	246
CARRIER CAB DOOR AND RELATED PARTS	607	247
CRANE CAB ASSEMBLY (RIGHT SIDE).....	611	248
CARRIER CAB ASSEMBLY	615	249
1802—FENDERS, RUNNING BOARD WITH MOUNTING, AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC.....	617	
CRANE AND CARRIER GLASS.....	617	250
REAR FENDERS AND MOUNTINGS	619	251
1805—FLOORS, SUBFLOORS AND RELATED COMPONENTS.....	621	
CRANE HEATER ASSEMBLY FLOOR PLATES	621	252
CARRIER CAB FLOOR	623	253
CARRIER CAB PLATFORM AND MOUNTING.....	625	254
1806—UPHOLSTERY, SEATS AND CARPETS	627	
CRANE OPERATOR SEAT	627	255
CARRIER CAB SEAT ASSEMBLY	631	256
1808—STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS.....	633	
TOOL BOX.....	633	257
GROUP 22 BODY, CHASSIS AND HULL ACCESSORY ITEMS		
2202—ACCESSORY ITEMS	635	
ACCESSORY ITEMS.....	635	258
CRANE HEATER ASSEMBLY LINES AND FITTINGS	637	259
CRANE HEATER ASSEMBLY.....	639	260
WINDSHIELD WIPER, LINES AND FITTINGS	641	261
WINDSHIELD WIPER ASSEMBLY	643	262
FLUID HORN, LINES AND FITTINGS.....	645	263
CAB REFLECTORS AND REAR VIEW MIRRORS.....	647	264
WINDSHIELD WASHER	649	265
2207—WINTERIZATION EQUIPMENT	651	
CAB HEATER, LINES AND FITTING	651	266
CAB HEATER ASSEMBLY.....	653	267
2210—DATA PLATES AND INSTRUCTION HOLDERS.....	655	
BOOM INFORMATION PLATES	655	268
CRANE CAB DATA PLATES.....	657	269
CRANE CAB INSTRUMENT PANEL NAME PLATES.....	659	270
CRANE ENGINE IDENTIFICATION PLATES	661	271

TABLE OF CONTENTS

		Page	Illus Fig
	CARRIER INSTRUMENT PANEL DATA PLATES	663	272
	ENGINE DATA PLATES	665	273
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2402—MANIFOLD AND OR CONTROL VALVES.....	667	
	CONTROL STAND VALVE.....	667	274
	2406—STRAINERS, FILTERS, LINES AND FITTINGS	669	
	SWIVEL JOINT	669	275
	CONTROL STAND TUBING AND FITTINGS	671	276
	HYDRAULIC SYSTEM.....	673	277
	HYDRAULIC SYSTEM LINES AND FITTINGS	677	278
	2407—HYDRAULIC CYLINDERS.....	681	
	CONTROL STAND MASTER CYLINDER	681	279
	CONTROL STAND MASTER CYLINDER EXPLODED VIEW	683	280
	SWING BRAKE MASTER CYLINDER.	685	281
	2408—LIQUID TANKS OR RESERVOIRS	687	
	HYDRAULIC TANK AND FITTINGS	687	282
GROUP 43	GAS, AIR, AND VACUUM SYSTEMS		
	4316—ASSEMBLED HOSE, FITTINGS, LINES, BREATHERS, FILTERS AND TRAPS.....	689	
	AIR RESERVOIR LINES AND FITTINGS	689	283
	4317—MANIFOLD AND/OR CONTROL VALVES.....	693	
	AIR STARTER VALVES	693	284
	AIR STARTER VALVE ASSEMBLY	695	285
	4321—TANKS OR RESERVOIRS	697	
	AIR RESERVOIRS.....	697	286
GROUP 47	GAGES (NON ELECTRICAL), WEIGHING AND MEASURING DEVICES		
	4701—INSTRUMENTS (SPEED AND DISTANCE)	699	
	CRANE TACHOMETER	699	287
	CARRIER SPEEDOMETER AND TACHOMETER	701	288
	CARRIER TACHOMETER DRIVE.....	703	289
GROUP 73	CONCRETE AND ASPHALT EQUIPMENT COMPONENTS		
	7327—MECHANICAL LEVEL INDICATOR	715	
	BOOM ANGLE INDICATOR ASSEMBLY.....	715	294
GROUP 74	CRANES, SHOVELS AND EARTH MOVING EQUIPMENT COMPONENTS		
	7402—HOIST	717	

TABLE OF CONTENTS

	Page	Illus Fig
BOOM HOIST BRAKE BUFFER ASSEMBLY	717	295
CONTROL STAND ASSEMBLY AND MOUNTING	719	296
HOIST BRAKE ASSEMBLY	721	297
DIGGING BRAKE ASSEMBLY	725	298
DIGGING SHAFT ASSEMBLY	729	299
BOOM HOIST BRAKE ASSEMBLY	733	300
BOOM HOIST PAWL ASSEMBLY	737	301
7403—SWINGER	739	
SWING BRAKE CONTROL ASSEMBLY AND MOUNTING	739	302
SWING SHAFT ASSEMBLY	743	303
SWING BRAKE ASSEMBLY	745	304
7410—SHOVEL FRONT ATTACHMENTS	749	
IDLER SPROCKET ASSEMBLY	749	305
IDLER SHAFT ASSEMBLY	751	306
7411—CRANE DRAGLINE OR CLAMSHELL ATTACHMENTS	753	
BACKSTOP ASSEMBLY AND MOUNTING	753	307
BACKSTOP ASSEMBLY	755	308
UPPER SPREADER ASSEMBLY	757	309
HOOK ASSEMBLY	759	310
BOOM ASSEMBLY	761	311
ANTI ROTATION DEVICE	765	312
7414—BASE DECK	767	
REVOLVING FRAME	767	313
7415—CLUTCH	769	
HOIST AND DIGGING CLUTCH ASSEMBLY	769	314
REVERSING AND SWING LEFT AND RIGHT HAND CLUTCH ASSEMBLY	773	315
BOOM HOIST CLUTCH ASSEMBLY	775	316
7416—SHAFTS	779	
BOOM HOIST SHAFT ASSEMBLY	779	317
SWING VERTICAL SHAFT ASSEMBLY	783	318
SWING HORIZONTAL SHAFT ASSEMBLY	785	319
REVERSING SHAFT ASSEMBLY	789	320
HOIST SHAFT ASSEMBLY	793	321
GEAR AND CHAIN HOUSING	797	322
7419—TURNTABLE	801	
SWING LOCK ASSEMBLY	801	323
ROLLER UNIT ASSEMBLY	803	324
TURRET TURNTABLE ASSEMBLY	805	325
7420—MACHINERY GEAR CASE OR FRAME	807	
FINAL UPPER ASSEMBLY	807	326
7422—MACHINERY MECHANISM CONTROLS	811	
CONTROL STAND BOOM HOIST CLUTCH AND REAR DRUM BRAKE CONTROLS	811	327
CONTROL STAND FRONT DRUM CLUTCH AND REAR DRUM CLUTCH CONTROLS	815	328
CONTROL STAND SWING CLUTCH AND FRONT DRUM BRAKE CONTROLS	817	329
HOIST AND SWING CONTROL ASSEMBLY	821	330
7423—GANTRY	825	
GANTRY ASSEMBLY	825	331

TABLE OF CONTENTS

			Page	Illus Fig
GROUP	95	GENERAL USE STANDARDIZED PARTS		
		9501—BULK MATERIEL.....	827	
		BULK MATERIEL.....	827	BULK
SECTION	III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION	IV.	NATIONAL STOCK NUMBER AND PART NUMBER INDEX	829	

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This manual lists and authorizes spares and repair parts; special tools; special Test, Measurement, and Diagnostic Equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Crane, Shovel, Truck Mounted. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the Source, Maintenance and Recoverability (SMR) codes.

2. General.

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in NSN sequence.

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National Item Identification Number (NIIN) sequence, of all National Stock Numbers (NSN) appearing in the listings, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

 
3. Explanation of Columns.

a. Illustration (Column (1)). This column is divided as follows:

(1) ((a) FIG NO.) Figure Number. Indicates the figure number illustrating an exploded view of a functional group.

(2) ((b) ITEM NO.). Indicates the number used to identify items called out in the illustration.

b. (SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

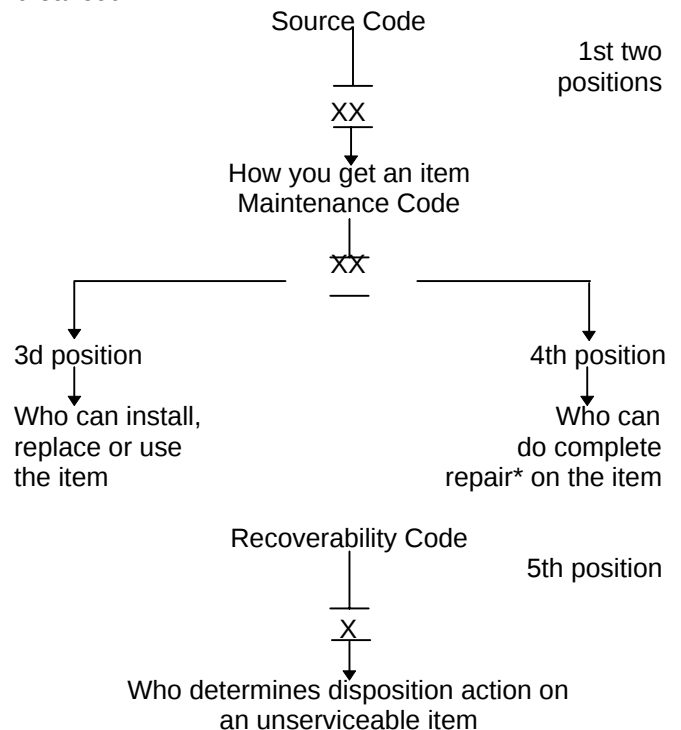

*Complete Repair: Maintenance capacity, capability, and authority to perform all the corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.


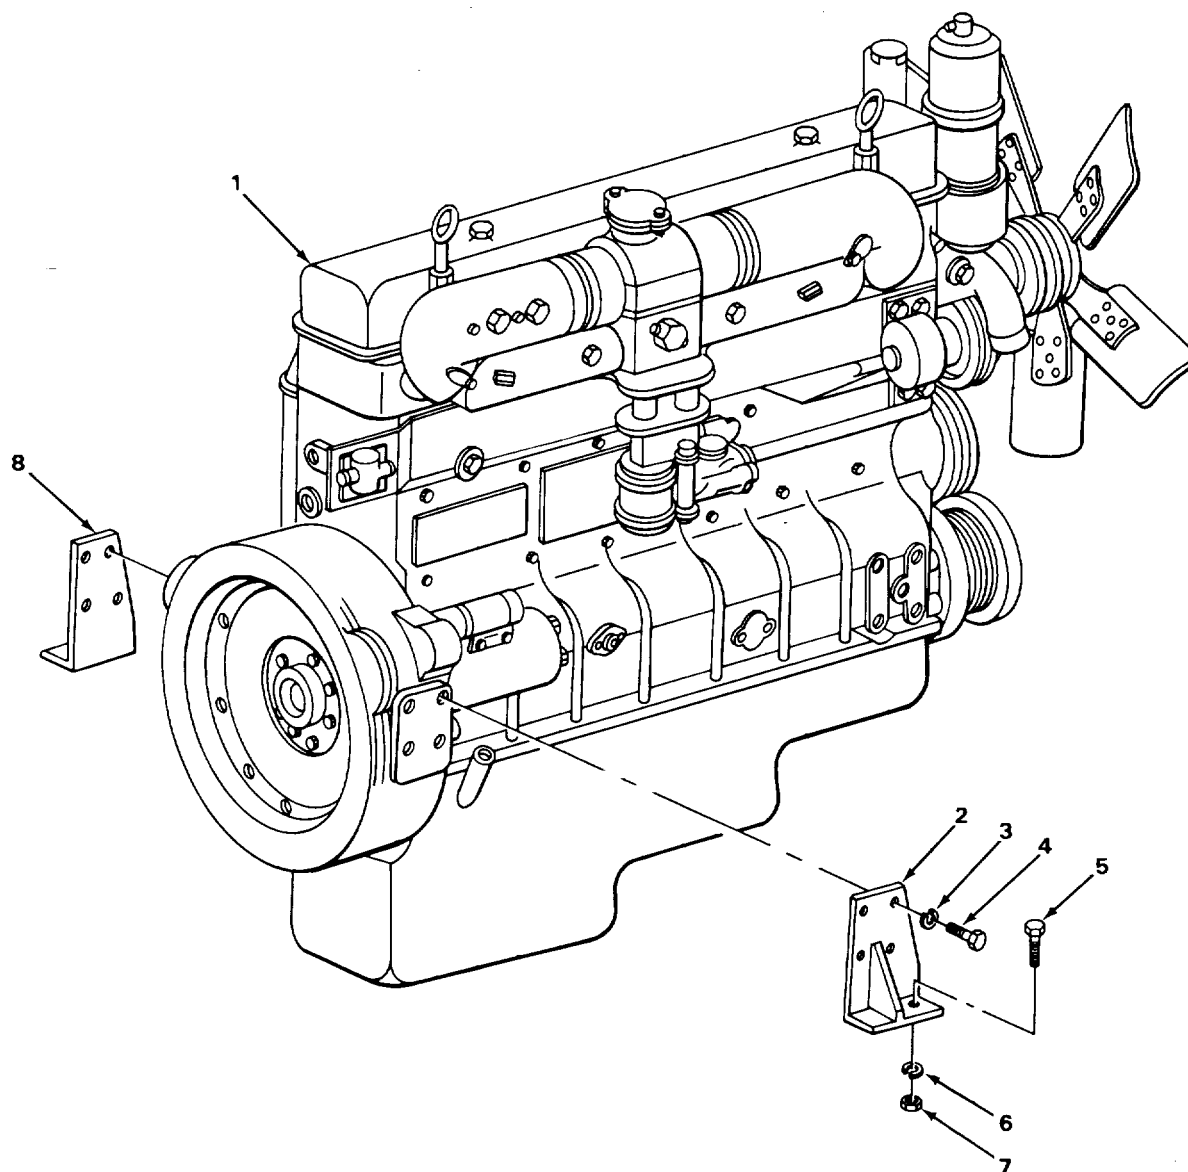 


FIGURE 1. CRANE ENGINE.

TA215651

REPAIR PARTS LIST

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 01-ENGINE 0100-ENGINE ASSEMBLY		
1	1	PAFHH	2805-00-136-4364	64104	135GKC	ENGINE, GASOLINE CRANE	EA	1
1	2	XDFZZ		27315	216P358D2	BRACKET, MOUNTING ENGINE SUPPORT	EA	1
1	3	PFFZZ	5310-00-765-2079	27315	3615V011	WASHER, LOCK BRACKET MOUNTING	EA	8
1	4	XDFZZ		27315	0626V079	SCREW, CAP HEX HD BRACKET MOUNTING	EA	8
1	5	XDFZZ		27315	0626V132	SCREW, CAP HEX HD BRACKET MOUNTING	EA	4
1	6	XDFZZ		27315	3615V015	WASHER, LOCK BRACKET MOUNTING	EA	4
1	7	PFFZZ	5310-00-007-2891	27315	2045V008	NUT, HEXAGON BRACKET MOUNTING	EA	4
1	8	XDFZZ		27315	216P358D1	BRACKET, MOUNTING ENGINE SUPPORT	EA	1

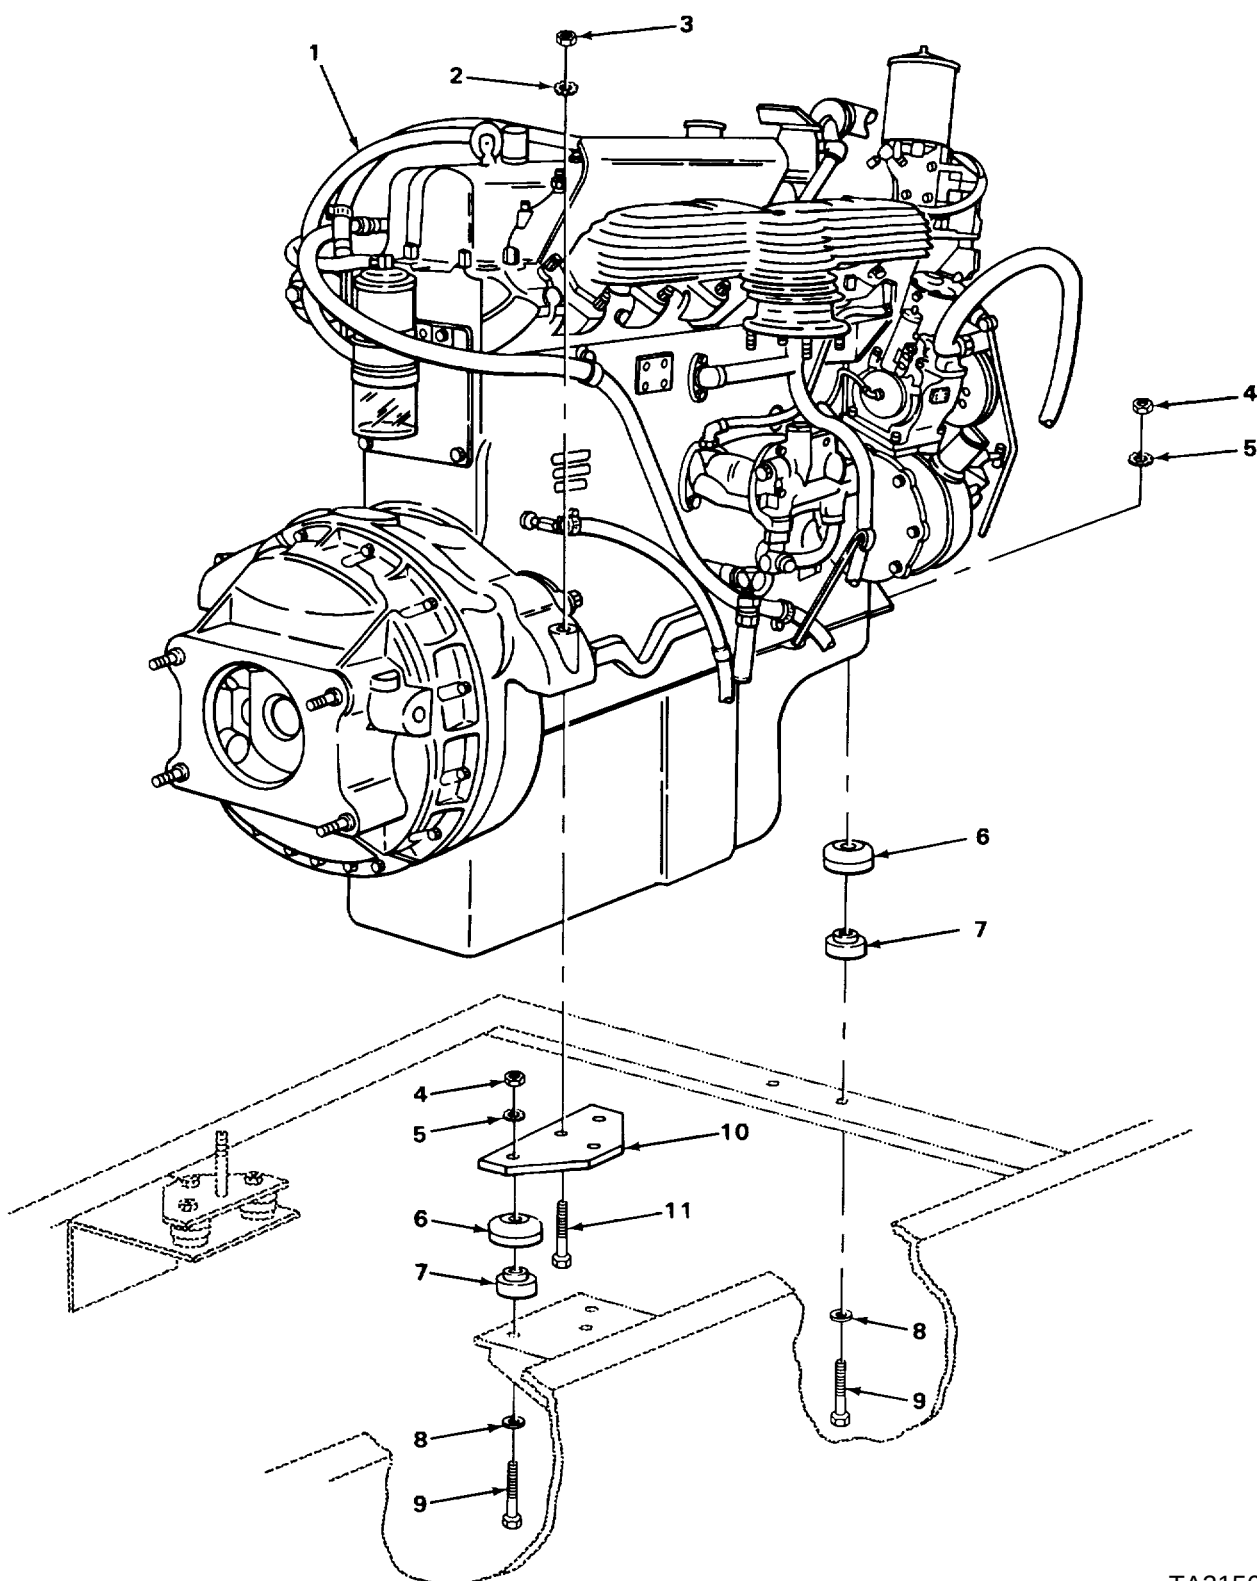 


TA215652

FIGURE 2. CARRIER ENGINE.

REPAIR PARTS LIST

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						0100(CONT)		
2	1	PBFHH	2805-00-190-7996	64104	F817G21186	ENGINE, GASOLINE CARRIER.....	EA	1
2	2	PAFZZ	5310-00-294-9891	27315	3615V013	WASHER, LOCK	EA	2
2	3	PAFZZ	5310-00-007-0076	27315	2049V007	NUT, HEXAGON.....	EA	2
2	4	XDFZZ		27315	2049V005	NUT, HEXAGON.....	EA	8
2	5	XDFZZ		27315	18H4144D12	WASHER, LOCK	EA	8
2	6	PAFZZ	5340-00-383-8816	22337	CA368-8	MOUNT, RESILIENT	EA	8
2	7	PFFZZ	5340-00-383-8815	22337	CA368-2	MOUNTING RESILIENT	EA	8
2	8	PFFZZ	5310-01-183-1365	27315	3611V011	WASHER, FLAT	EA	8
2	9	PAFZZ	5306-00-241-0195	27315	820T36	BOLT, SHOULDER.....	EA	8
2	10	XDFZZ		27315	818P110	SUPPORT, ENGINE.....	EA	2
2	11	XDFZZ		27315	Q627V120	SCREW, CAP, HEX HD.....	EA	2

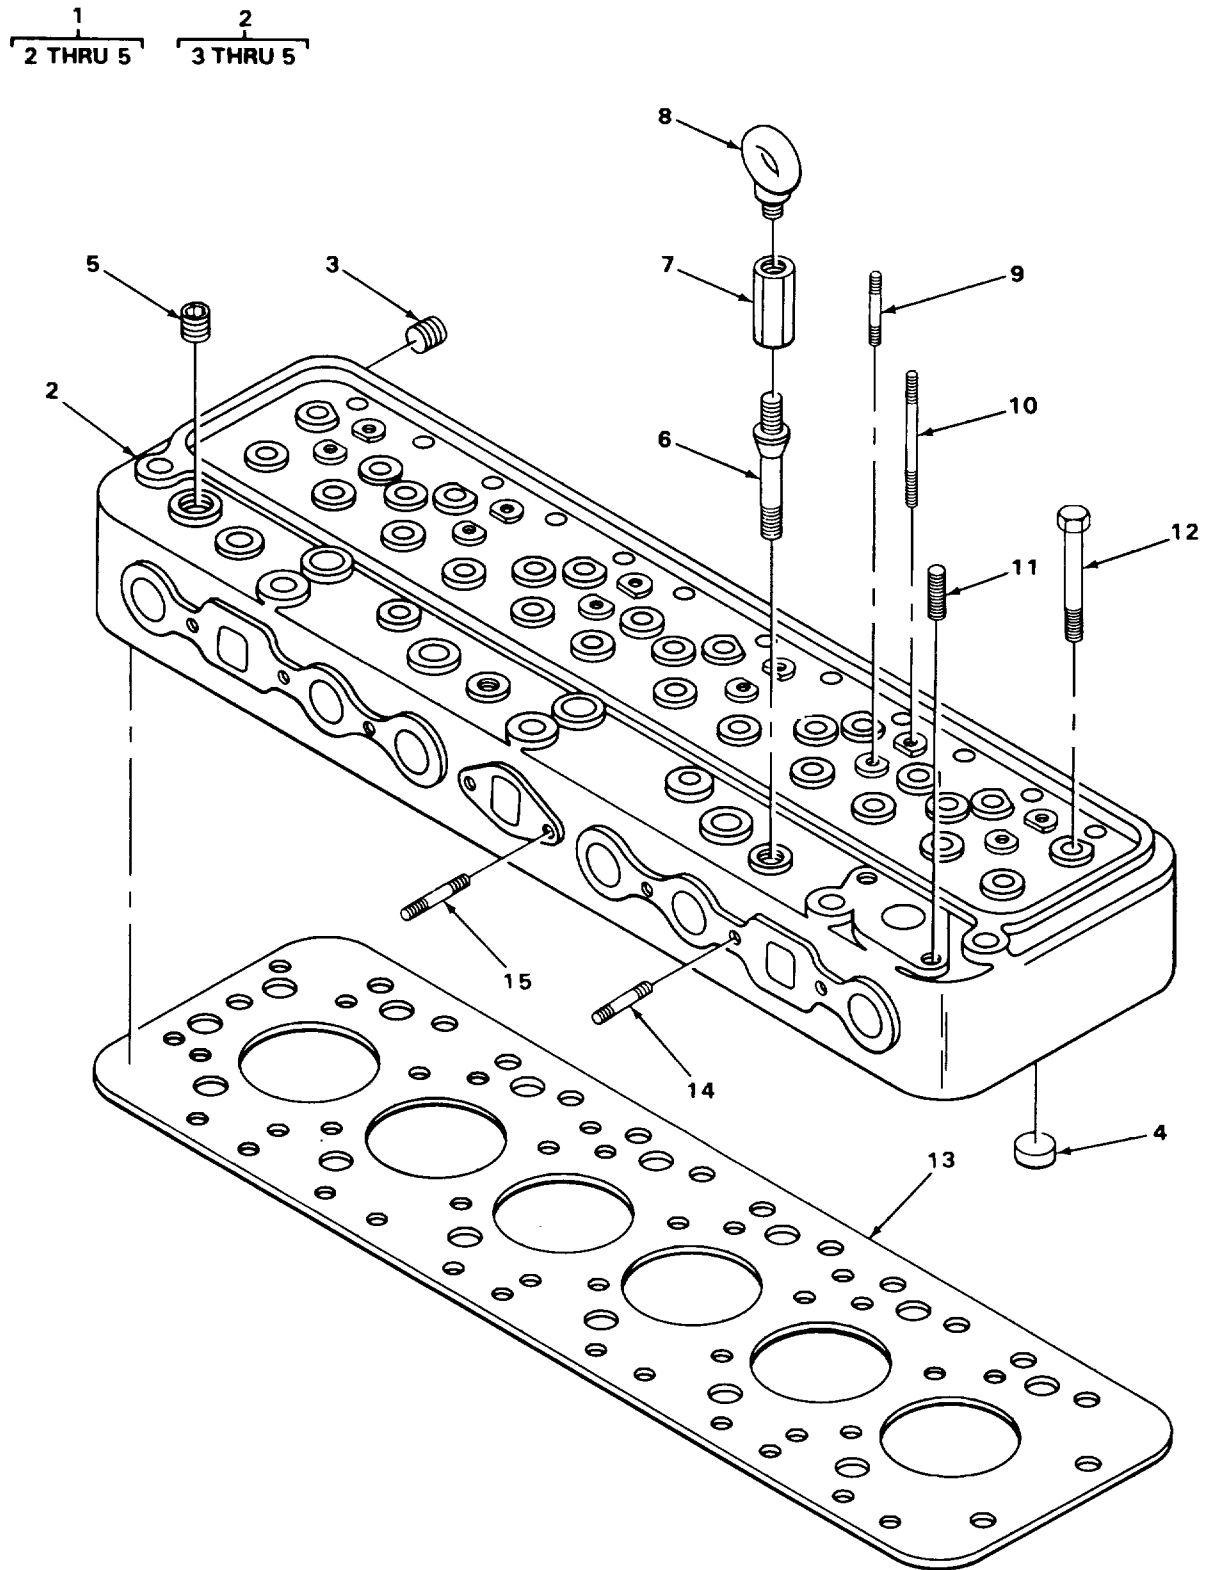 


TA215653

FIGURE 3. CRANE ENGINE CYLINDER HEAD.

SECTION II

TM 5-3810-288-34P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	USABLE ON CODE	U/M	QTY INC IN UNIT
						0101-CRANKCASE. BLOCK. CYLINDER HEAD		
3	1	PFFHH	2805-00-435-7615	64104	00135202	CYLINDER HEAD, GASOL WITH VALVES	EA	1
3	2	PFFHH	2805-00-852-5715	64104	0135202	.CYLINDER HEAD, GASOL WITHOUT VALVES	EA	1
3	3	PAHZZ	4730-00-289-5176	02951	MS49005-8	..PLUG, PIPE	EA	1
3	4	PAHZZ	5340-00-276-5823	64104	B1293	..PLUG, EXPANSION	EA	2
3	5	PAHZZ	4730-01-118-1573	64104	78283B	..PLUG, PIPE	EA	8
3	6	XDFZZ		64104	119888	SCREW LIFTING CYLINDER HEAD	EA	2
3	7	XDFZZ		64104	156075	ADAPTER	EA	2
3	8	XDFZZ		64104	A156076	EYE, LIFTING	EA	2
3	9	XDFZZ		64104	BD120	STUD ROCKER ARM SUPPORT	EA	6
3	10	XDFZZ		64104	44544	STUD ROCKER ARM AND COVER	EA	6
3	11	PFFZZ	5307-00-010-3215	64104	65254	STUD	EA	2
3	12	XDFZZ		64104	120115	SCREW, CAP, HEXAGON	EA	20
3	13	PFFZZ	5330-00-712-7742	64104	135000A	GASKET CYLINDER HEAD PART OF KIT P/N 900-267, 979-92	EA	1
3	14	PFFZZ	5307-00-272-4756	64104	B2610	STUD MANIFOLD SHORT	EA	6
3	15	PAFZZ	5307-00-443-6203	64104	157204	STUD, PLAIN LONG	EA	2

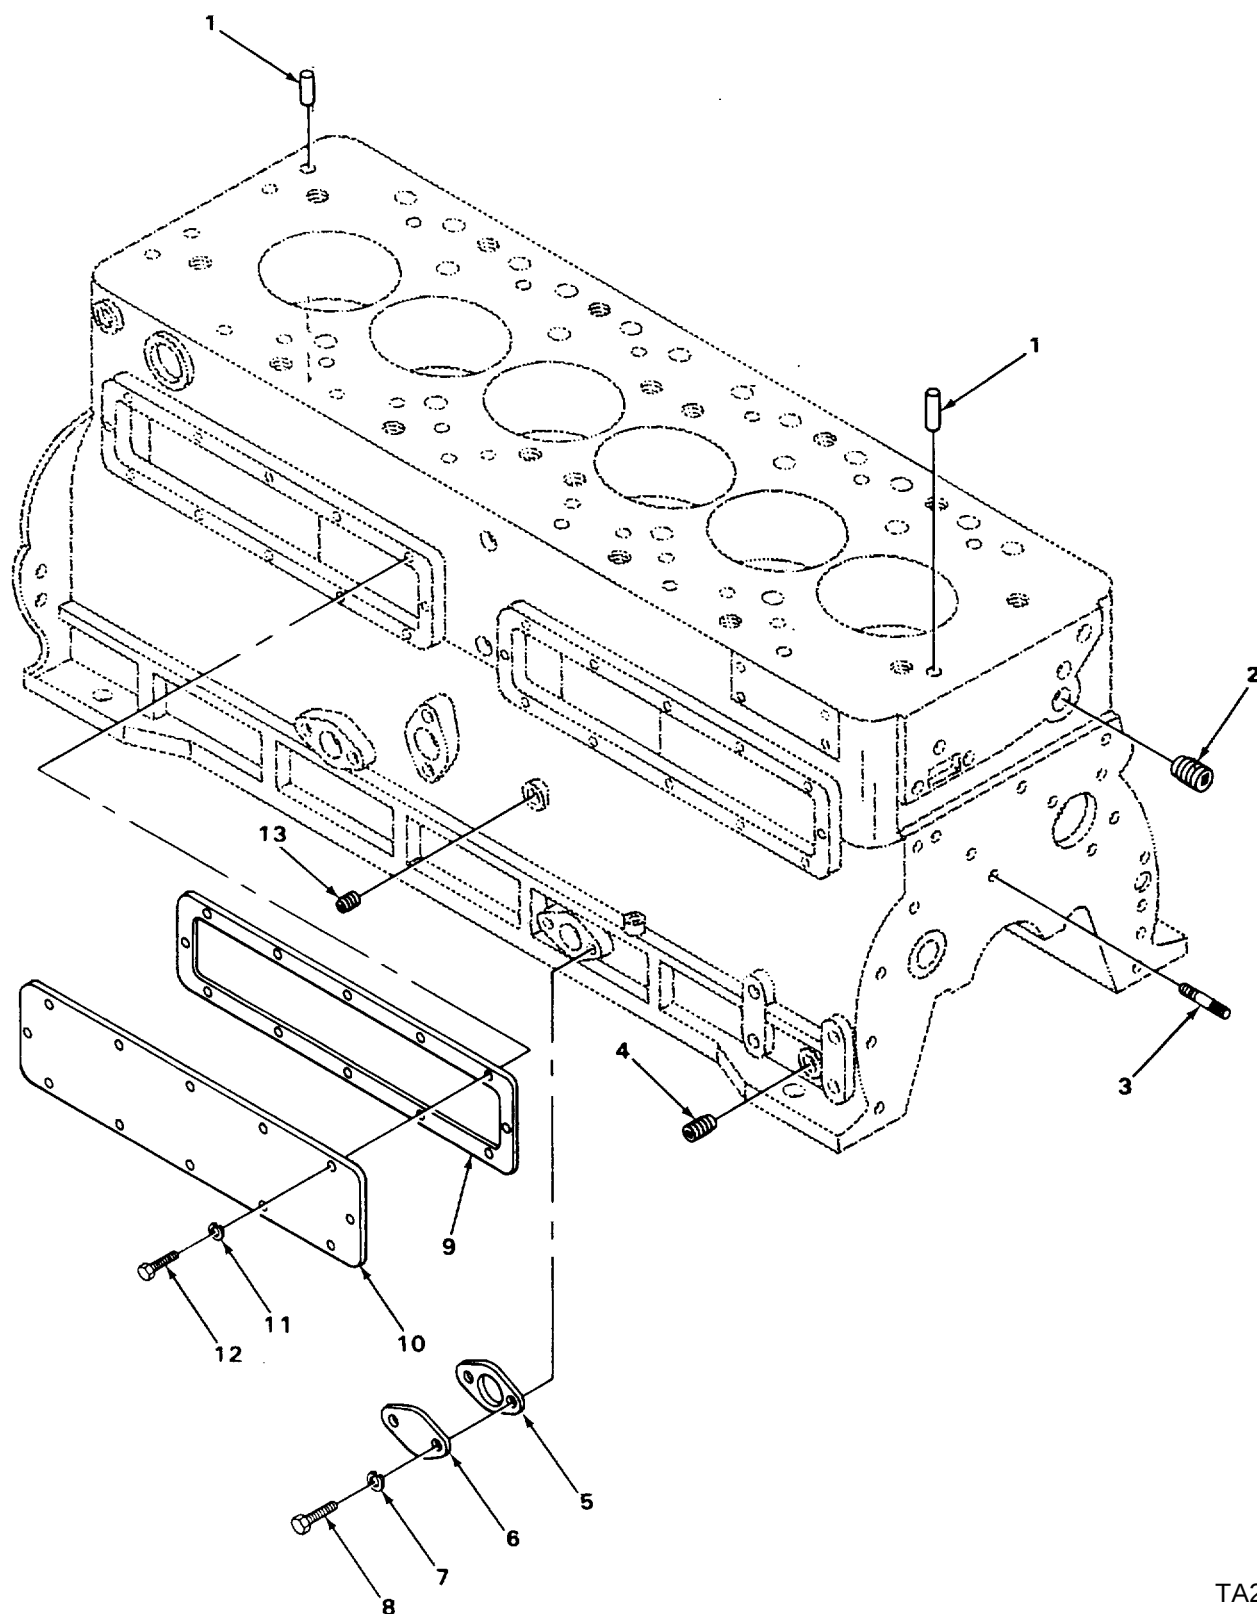 

TA215655

FIGURE 4. CRANE ENGINE SIDE COVERS.

SECTION II

TM 5-3810-288-34P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						0101(CONT)		
4	1	PFHZZ	5315-00-276-5552	64104	B3568	PIN, DOWEL	EA	2
4	2	PFHZZ	4730-01-118-1573	64104	78283B	PLUG.....	EA	1
4	3	XDHZZ		64104	118761	TUBE OIL TIMING GEAR.....	EA	1
4	4	PFHZZ	4730-01-117-6157	64104	21951	PLUG, PIPE.....	EA	3
4	5	PFFZZ	5330-00-256-6987	79150	17592	GASKET	EA	1
4	6	XDFZZ		64104	48344	PLATE	EA	1
4	7	PAFZZ	5310-00-261-7340	96906	MS35338-8	WASHER, LOCK PLATE MOUNTING	EA	2
4	8	PAFZZ	5305-00-164-0459	64104	21340	SCREW, CAP PLATE MOUNTING	EA	2
4	9	KFFZZ		64104	119949A	GASKET COVER PART OF KIT P/N 900-267	EA	1
4	10	XDFZZ		64104	135024E	COVER ACCESS.	EA	1
4	11	XDFZZ		64104	21051	WASHER, LOCK COVER MOUNTING	EA	12
4	12	PAFZZ	5305-00-451-3439	64104	26939	SCREW COVER MOUNTING	EA	12
4	13	PAFZZ	4730-00-289-5754	59501	10-17966	PLUG, PIPE.....	EA	1