

TECHNICAL MANUAL

DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS)

CRANE, TRUCK MOUNTED,
GED, 3/4 CUBIC YARD,
20 TON, WITH CLAMSHELL,
DRAGLINE AND BACKHOE
ATTACHMENTS
NSN 3810-00-151-4431

HARNISCHFEGGER CORP. MODEL M320T2

APPROVED FOR PUBLIC RELEASE; DISTRIBUTION IS UNLIMITED

THIS PUBLICATION SUPERSEDES TM 5-3810-294-34P,
DATED 9 APRIL 1985 AND ALL CHANGES

HEADQUARTERS, DEPARTMENT OF THE ARMY
APRIL 1989

TECHNICAL MANUAL

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 24 Apr 89

DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)
CRANE, TRUCK MOUNTED, GED, 3/4 CUBIC YARD,
20 TON, WITH CLAMSHELL,
DRAGLINE, AND BACKHOE ATTACHMENTS
NSN 3810-00-151-4431

HARNISCHFEGGER CORP MODEL M320T2

CURRENT AS OF 14 SEPTEMBER 1988

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren MI. 48397-5000. A reply will be furnished to you.

Approved for Public Release; Distribution Is unlimited

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG
SECTION I.	INTRODUCTION	
SECTION II.	REPAIR PARTS LIST	
GROUP 01	ENGINE	
	0100- ENGINE ASSEMBLY	
	CARRIER ENGINE AND RELATED PARTS.....	1-1 1
	CRANE ENGINE AND SUPPORTS.....	2-1 2
	0101- CRANKCASE. BLOCK, CYLINDER HEAD	
	CARRIER CRANKCASE AND RELATED PARTS.....	3-1 3
	CARRIER ENGINE CYLINDER HEAD AND RELATED PARTS	4-1 4
	CRANE CRANKCASE AND ASSOCIATED PARTS.....	5-1 5
	CRANE CYLINDER HEAD AND RELATED PARTS.....	6-1 6

*This publication supersedes TM 5810-294-34P, dated 9 April 1985 and all changes

TABLE OF CONTENTS

	PAGE FIG	ILLUS/
0102-CRANKSHAFT		
CARRIER ENGINE CRANKSHAFT	7-1	7
CARRIER ENGINE GEAR COVER.....	8-1	8
CRANE FRONT COVER AND RELATED PARTS.....	9-1	9
CRANE CRANKSHAFT	10-1	10
0103- FLYWHEEL ASSEMBLY		
CARRIER ENGINE FLYWHEEL AND HOUSING	11-1	11
CRANE FLYWHEEL ASSEMBLY.....	12-1	12
0104- PISTONS, CONNECTING RODS		
CARRIER ENGINE PISTON AND RELATED PARTS	13-1	13
CRANE ENGINE PISTON AND RELATED PARTS	14-1	14
0105- VALVES, CAMSHAFTS AND TIMING SYSTEM		
CARRIER ENGINE CAMSHAFT	15-1	15
CRANE ENGINE CAMSHAFT AND RELATED PARTS	16-1	16
CARRIER ENGINE VALVES AND RELATED PARTS	17-1	17
CRANE ENGINE ROCKER ARM AND ASSOCIATED PARTS	18-1	18
CRANE ENGINE VALVES AND RELATED PARTS	19-1	19
0106- ENGINE LUBRICATION SYSTEM		
CRANE OIL FILTER ASSEMBLY	20-1	20
CRANE OIL COOLER AND ASSOCIATED PARTS	21-1	21
CRANE OIL PAN AND OIL PUMP	22-1	22
CARRIER VENT LINES	23-1	23
CARRIER ENGINE DIPSTICK AND RELATED PARTS	24-1	24
CARRIER OIL PUMP AND OIL PAN	25-1	25
CARRIER OIL COOLER AND ASSOCIATED PARTS.....	26-1	26
CARRIER OIL FILTER ASSEMBLY	27-1	27
0108- MANIFOLDS		
CARRIER MANIFOLD INSTALLATION	28-1	28
CRANE MANIFOLD	29-1	29
GROUP 02 CLUTCH		
0200- CLUTCH ASSEMBLY		
CLUTCH ASSEMBLY, CARRIER	30-1	30
CLUTCH ASSEMBLY AND RELATED PARTS, CARRIER	31-1	31
CRANE CLUTCH ASSEMBLY	32-1	32
0202- CLUTCH RELEASE MECHANISM		
CLUTCH RELEASE ASSEMBLY	33-1	33
CARRIER CLUTCH PEDAL ASSEMBLY	34-1	34
GROUP 03 FUEL SYSTEM,		
0301- CARBURETOR, FUEL INJECTOR		
CARRIER CARBURETOR AND ASSOCIATED PARTS	35-1	35
CARRIER CARBURETOR AND ASSOCIATED PARTS	36-1	36
CRANE ENGINE CARBURETOR AND ASSOCIATED PARTS	37-1	37
0302- FUEL PUMPS		
CARRIER FUEL LINES	38-1	38
CARRIER ELECTRIC FUEL PUMP	39-1	39
CRANE FUEL PUMP ASSEMBLY	40-1	40
0304- AIR CLEANER		
CARRIER AIR CLEANER	41-1	41
CRANE AIR CLEANER AND ASSOCIATED PARTS	42-1	42
0306- TANKS, LINES, FITTINGS, HEADERS		
CARRIER FUEL TANK, GUARD AND MOUNTINGS	43-1	43
CRANE FUEL TANK AND RELATED PARTS	44-1	44

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG.
0308- ENGINE SPEED GOVERNOR AND CONTROLS		
GOVERNOR AND ASSOCIATED PARTS	45-1	45
0312- ACCELERATOR, THROTTLE OR CHOKE CONTROLS		
CRANE THROTTLE CONTROL ASSEMBLY	46-1	46
CHOKE CONTROL	47-1	47
ACCELERATOR AND ASSOCIATED PARTS	48-1	48
GROUP 04 EXHAUST SYSTEM		
0401- MUFFLER AND PIPES		
CARRIER ENGINE EXHAUST ASSEMBLY	49-1	49
CRANE EXHAUST ASSEMBLY	50-1	50
GROUP 05 COOLING SYSTEM		
0501- RADIATOR, EVAPORATIVE COOLER OR HEAT EXCHANGER		
CARRIER RADIATOR	51-1	51
CRANE RADIATOR	52-1	52
0502- COWLING, DEFLECTORS, AIR DUCTS AND SHROUDS		
CARRIER RADIATOR SHROUD	53-1	53
CRANE RADIATOR SHROUD	54-1	54
0503- WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET		
CRANE ENGINE THERMOSTAT AND HOUSING	55-1	55
0504- WATER PUMP		
CARRIER ENGINE WATER PUMP ASSEMBLY	56-1	56
CRANE ENGINE WATER PUMP	57-1	57
CARRIER RADIATOR HOSES	58-1	58
CRANE RADIATOR HOSES	59-1	59
0505- FAN ASSEMBLY		
CARRIER ENGINE FAN AND BELT	60-1	60
CRANE ENGINE FAN AND BELTS	61-1	62
GROUP 06 ELECTRICAL SYSTEM		
0601- GENERATOR, ALTERNATOR		
CRANE ALTERNATOR ASSOCIATED PARTS	62-1	62
CARRIER ALTERNATOR ASSOCIATED PARTS	63-1	63
ALTERNATOR ASSEMBLY	64-1	64
0603- STARTING MOTOR		
CRANE STARTER AND ASSOCIATED PARTS	65-1	65
CARRIER STARTER AND ASSOCIATED PARTS	66-1	66
0605- IGNITION COMPONENTS		
CRANE IGNITION WIRING	67-1	67
CRANE DISTRIBUTOR ASSOCIATED PARTS	68-1	68
CRANE DISTRIBUTOR ASSEMBLY	69-1	69
CRANE IGNITION COIL AND ASSOCIATED PARTS	70-1	70
CARRIER IGNITION COIL AND ASSOCIATED PARTS	71-1	71
CARRIER DISTRIBUTOR AND ASSOCIATED PARTS	72-1	72
CARRIER IGNITION WIRING ASSEMBLY	73-1	73
0606- ENGINE SAFETY CONTROLS		
TRANSMITTER, PRESSURE	74-1	74
CARRIER SOLENOID ASSEMBLY	75-1	75
CRANE SOLENOID ASSEMBLY	76-1	76
0607- INSTRUMENT OR ENGINE CONTROL PANEL		
CRANE PANEL ASSEMBLY	77-1	77
CARRIER INSTRUMENT PANEL	78-1	78

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG
0608- MISCELLANEOUS ITEMS		
STOP LIGHT SWITCH	79-1	79
0609- LIGHTS		
CLEARANCE AND MARKER L IGH TS	80-1	80
FLOODLIGHTS AND ASSOCIATED PARTS	81-1	81
CRANE DOME LIGHT AND MOUNTING	82-1	82
CARRIER HEADLIGHTASSEMBLY	83-1	83
CAB COMBINATION DIRECTIONAL AND PARK AND REAR PARK LIGHTS	84-1	84
BLACKOUT SERVICE STOP AND TAILLIGHT ASSEMBLY	85-1	85
CARRIER FRONT CLEARANCE MARKER LIGHT ASSEMBLY	86-1	86
BLACKOUT AND RUNNING CLEARANCE MARKER LIGHTS	87-1	87
BLACKOUT CLEARANCE LIGHT ASSEMBLY	88-1	88
BLACKOUT HEADLIGHT ASSEMBLY	89-1	89
CARRIER DOME LIGHT ASSEMBLY	90-1	90
TROUBLE LIGHT ASSEMBLY	91-1	91
0610- SENDING UNITS AND WARNING SWITCHES		
CARRIER SENDING UNITS	92-1	92
CRANE ENGINE SENDING UNITS	93-1	93
CRANE FUEL SENDING UNITS	94-1	94
CARRIER FUEL SENDING UNIT	95-1	95
0611- HORN, SIREN		
CRANE HORN AND ASSOCIATED PARTS	96-1	96
CARRIER HORN BUTTON AND RELATED PARTS	97-1	97
0612- BATTERIES, STORAGE		
BATTERY BOX AND BATTERIES	98-1	98
0613- HULL OR CHASSIS WIRING HARNESS		
CARRIER CAB WIRING DIAGRAM	99-1	99
CARRIER CAB WIRING DIAGRAM	100-1	100
CARRIER PANEL LIGHTS WIRING DIAGRAM	101-1	101
CARRIER WIRING ASSEMBLY	102-1	102
CARRIER WIRING ASSEMBLY RIGHT REAR	103-1	103
CARRIER WIRING ASSEMBLY OUTRIGGER SOCKET	104-1	104
CARRIER WIRING ASSEMBLY LEFT REAR	105-1	105
ENGINE WIRING ASSEMBLY	106-1	106
WIRING ASSEMBLY	107-1	107
CAB WIRING HARNESS.....	108-1	108
UPPER WIRING ASSEMBLY.....	109-1	109
TRANSMISSION		
0700- TRANSMISSION ASSEMBLY		
CRANE TRANSMISSION AND ASSOCIATED PARTS	110-1	110
TRANSMISSION HOUSING, CRANE	111-1	111
0701- TRANSMISSION SHAFTS		
TRANSMISSION ASSEMBLY, CRANE SHAFTS	112-1	112
TRANSMISSION ASSEMBLY, CARRIER	113-1	113
CARRIER TRANSMISSION ASSEMBLY AND RELATED PARTS...	114-1	114
CARRIER TRANSMISSION DROP GEAR	115-1	115
0704- TRANSMISSION TOP COVER ASSEMBLY		
TRANSMISSION SHIFTING HOUSING	116-1	116
0705- TRANSMISSION SHIFTING COMPONENTS		
CARRIER TRANSMISSION CONTROL ASSEMBLY	117-1	117
TRANSMISSION CONTROL ASSEMBLY	118-1	118

GROUP 07

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG.
GROUP 08	TRANSFER AND FINAL DRIVE ASSEMBLIES	
	0801- POWER TRANSFER AND FINAL DRIVE ASSEMBLIES	
	TRANSFER CASE MOUNTINGS.....	119-1 119
	TRANSFER CASE ASSEMBLY	120-1 120
	CARRIER TRANSFER CASE ASSEMBLY	121-1 121
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY	
	0900- PROPELLER SHAFTS	
	PROPELLER SHAFT ASSEMBLY	122-1 122
	PROPELLER CASE ASSEMBLY, TRANSFER CASE TO FRONT AXLE	123-1 123
	PROPELLER CASE, TRANSFER CASE TO FORWARD REAR AXLE	124-1 124
	PROPELLER CASE, FRONT REAR AXLE TO REAR REAR AXLE	125-1 125
	PROPELLER SHAFT ASSEMBLY, CRANE	126-1 126
GROUP 10	FRONT AXLE	
	1000- FRONT AXLE ASSEMBLY	
	FRONT AXLE INSTALLATION	127-1 127
	1002- DIFFERENTIAL	
	DIFFERENTIAL ASSEMBLY	128-1 128
GROUP 11	REAR AXLE	
	1100- REAR AXLE ASSEMBLY	
	REAR REAR AXLE	129-1 129
	FORWARD REAR AXLE	130-1 130
	1102- DIFFERENTIAL	
	REAR DIFFERENTIAL ASSEMBLY	131-1 131
	REAR DIFFERENTIAL ASSEMBLY	132-1 132
GROUP 12	BRAKES	
	1202- SERVICE BRAKES	
	CRANE BRAKE SYSTEM	133-1 133
	CARRIER BRAKES	134-1 134
	1206- MECHANICAL BRAKE SYSTEM	
	BRAKE SLACK ADJUSTER, FRONT	135- 1 135
	BRAKE SLACK ADJUSTER, REAR	136-1 136
	BRAKE SLACK ADJUSTER, FRONT	137-1 137
	1208- AIR BRAKE SYSTEM	
	AIR BRAKE CHAMBER.....	138-1 138
	BRAKE CHAMBER ASSEMBLY	139-1 139
	TREADLE VALVE AND CONNECTIONS	140-1 140
	THREE WAY CONTROL VALVE ASSEMBLY CONNECTIONS	141-1 141
	PARKING BRAKE VALVE AND CONNECTIONS	142-1 142
	DIFFERENTIAL LOCKOUT VALVE AND CONNECTIONS	143-1 143
	DRAIN VALVE AND CONNECTIONS	144-1 144
	SYNCHRONIZING VALVE PUSH-PULL CONTROL VALVE AND CONNECTIONS	145-1 145
	DOUBLE CHECK VALVE LINES AND FITTINGS	146-1 146
	RESERVOIR VALVE LINES AND FITTINGS.....	147-1 147
	QUICK RELEASE VALVE LINES AND FITTINGS	148-1 148
	CHECK VALVE LINES AND FITTINGS	149-1 149

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG.
QUICK DISCONNECT COUPLINGS, PRESSURE PROTECTION VALVE, LINES AND FITTINGS	150-1	150
AIR LINES AND FITTINGS	151-1	151
ELBOW-ANCHORS, LINES AND FITTINGS	152-1	152
VALVES, LINES AND FITTINGS	153-1	153
TREADLE VALVE ASSEMBLY	154-1	154
THREE WAY CONTROL VALVE	155-1	155
PARKING PROTECTION VALVE	156-1	156
DIFFERENTIAL LOCKOUT CONTROL VALVE	157-1	157
DRAIN VALVE ASSEMBLY	158-1	158
PUSH PULL CONTROL VALVE	159-1	159
SYNCHRONIZING VALVE	160-1	160
CHECK VALVE	161-1	161
CHECK VALVE ALCOHOL EVAPORATOR	162-1	162
DRAIN VALVE	163-1	163
SAFETY VALVE ASSEMBLY	164-1	164
QUICK RELEASE VALVE	165-1	165
PRESSURE PROTECTION VALVE	166-1	166
CHECK VALVE ASSEMBLY	167-1	167
RESERVOIR EXHAUST CONTROL VALVE	168-1	168
RELAY VALVE ASSEMBLY	169-1	169
ALCOHOL EVAPORATOR	170-1	170
AIR RESERVOIR TO FRAME	171-1	171
AIR RESERVOIR TO DRAIN VALVE	172-1	172
1209-AIR COMPRESSOR ASSEMBLY		
AIR COMPRESSOR	173-1	173
1211-TRAILER BRAKE CONNECTIONS AND CONTROLS		
QUICK DISCONNECT COUPLINGS TRACTOR		
PROTECTION VALVES, LINES AND FITTINGS	174-1	174
TRACTOR PROTECTION VALVE	175-1	175
HAND BRAKE VALVE AND CONNECTIONS	176-1	176
HAND BRAKE VALVE ASSEMBLY	177-1	177
TRACTOR PROTECTION CONTROL VALVE AND CONNECTIONS	178-1	178
TRACTOR PROTECTION CONTROL VALVE	179-1	179
GROUP 13 WHEELS AND TRACKS		
1311-WHEEL ASSEMBLY		
WHEEL HUB AND RELATED PARTS	180-1	180
HUB AND DRUM ASSEMBLY	181-1	181
WHEEL	182-1	182
1313-TIRES, TUBES, TIRE CHAINS		
TIRE AND TUBE	183-1	183
GROUP 14 STEERING		
1407-POWER STEERING GEAR ASSEMBLY		
CRANE STEERING LINKAGE	184-1	184
STEERING COLUMN AND RELATED PARTS	185-1	185
STEERING GEAR ASSEMBLY	186-1	186
STEERING GEAR SUB ASSEMBLY	187-1	187
1410-HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY		
HYDRAULIC PUMP ASSEMBLY, POWER STEERING	188-1	188
1411-HOSES, LINES, FITTINGS		
POWER STEERING LINES AND FITTINGS	189-1	189
1413-TANKS, RESERVOIRS		
POWER STEERING FILTER AND RESERVOIR	190-1	190

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG.
GROUP 15		
FRAME, TOWING ATTACHMENTS, DRAWBARS AND ARTICULATION SYSTEMS		
1501- FRAME ASSEMBLY		
CAB AND BODYASSEMBLY	191-1	191
1502- COUNTERWEIGHTS		
COUNTERWEIGHT ASSEMBLY	192-1	192
1503- PINTLES AND TOWING ATTACHMENTS		
HOOK ASSEMBLY, PINTLE	193-1	193
1504- SPARE WHEEL CARRIER AND TIRE LOCK		
SPARE TIRE CARRIER	194-1	194
GROUP 16		
SPRINGS AND SHOCK ABSORBERS		
1601- SPRINGS		
SPRINGS AND RELATED PARTS	195-1	195
1604- SHOCK ABSORBER EQUIPMENT		
SHOCK ABSORBERS	196-1	196
1605- TORQUE, RADIUS AND STABLIZER RODS		
REAR SUSPENSION ASSEMBLY	197-1	197
BEAM ASSEMBLY	198-1	198
TORQUE ROD ASSEMBLY	199-1	199
GROUP 18		
BODY, CAB, HOOD AND HULL		
1801- BODY, CAB, HOOD AND HULL ASSEMBLIES		
CRANE CAB, PANELS.....	200-1	200
CRANE CAB, DOOR	201-1	201
CRANE CAB ASSEMBLY	202-1	202
CRANE CAB ASSEMBLY	203-1	203
CRANE CAB, PANELS	204-1	204
CRANE CAB, DOOR AND PANELS	205-1	205
UPPER FINAL ASSEMBLY	206-1	206
CARRIER CAB ASSEMBLY	207-1	207
CAB ASSEMBLY, CARRIER, DOOR ASSEMBLY	208-1	208
CARRIER CAB	209-1	209
1802- FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD GLASS,ETC.		
CRANE OUTRIGGER ASSEMBLY	210-1	210
WINDSHIELD GLASS	211-1	211
1805- FLOORS, SUBFLOORS, AND RELATED COMPONENTS		
CAB FLOOR	212-1	212
CAB FLOOR PLATE ASSEMBLY	213-1	213
1806- UPHOLSTERY SEATS AND CARPETS		
OPERATOR'S SEAT ASSEMBLY.....	214-1	214
CRANE SEAT ASSEMBLY.....	215-1	215
GROUP 22		
BODY, CHASSIS AND HULL ACCESSORY ITEMS		
2202- ACCESSORY ITEMS		
CARRIER REFLECTORS	216-1	216
CAB MIRROR ASSEMBLY.....	217-1	217
WINDSHIELD WASHER ASSEMBLY	218-1	218
WINDSHIELD WIPER ASSEMBLY AND CONNECTIONS.....	219-1	219
WIPER MOTOR ASSEMBLY	220-1	220
WINDSHIELD WIPER CONTROL VALVES	221-1	221
2210- DATA PLATES AND INSTRUCTION HOLDERS		
IDENTIFICATION PLATES	222-1	122

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG
GROUP 24		
HYDRAULIC AND FLUID SYSTEMS		
2406- STRAINERS, FILTERS ,LINES AND FITTINGS		
CRANE HYDRAULIC SYSTEM.....	223-1	223
HYDRAULIC SWIVEL JOINT	224-1	224
2407- HYDRAULIC CYLINDERS		
HYDRAULIC CYLINDER ASSEMBLY.....	225-1	225
MASTER CYLINDER.....	226-1	226
2408- LIQUID TANKS OR RESERVOIRS		
RESERVOIR.....	227-1	227
GROUP 47		
GAGES (NON-ELECTRICAL) WEIGHING AND MEASURING DEVICES		
4701- INSTRUMENTS (SPEED AND DISTANCE)		
CARRIER SPEEDOMETER AND TACHOMETER	228-1	228
CRANE TACHOMETER AND RELATED PARTS.....	229-1	229
GROUP 50		
PNEUMATIC EQUIPMENT		
5001- CRANKCASE, BLOCK, CYLINDER HEAD		
AIR COMPRESSOR ASSEMBLY.....	230-1	230
5012- THROTTLING DEVICES		
LOW PRESSURE TRANSMITTER AND CONNECTIONS.....	231-1	231
LOW PRESSURE INDICATOR ASSEMBLY AND CONNECTIONS	232-1	232
LOW PRESSURE INDICATOR	233-1	233
5015- AIR DISCHARGE SYSTEM		
AIR MANIFOLD AND CONNECTIONS	234-1	234
AIR COMPRESSOR LINES AND FITTINGS	235-1	235
5020- GOVERNOR		
COMPRESSOR GOVERNOR ASSEMBLY	236-1	236
GROUP 74		
CRANES, SHOVELS AND EARTH MOVING EQUIPMENT COMPONENTS		
7411- CRANE DRAGLINE OR CLAMSHELL ATTACHMENTS		
PULLEY BLOCK ASSEMBLY.....	237-1	237
SPREADER ASSEMBLY.....	238-1	238
BOOM BACKSTOP ASSEMBLY.....	239-1	239
BOOM ANGLE INDICATOR.....	240-1	240
BOOM ASSEMBLY.....	241-1	241
ANTI ROTATION DEVICE.....	242-1	242
7415- CLUTCH		
HOIST CLUTCH ASSEMBLY	243-1	243
HOIST AND DIGGING BRAKE ASSEMBLY	244-1	244
LEFT AND RIGHT SWING CLUTCH ASSEMBLIES	245-1	245
BOOM HOIST CLUTCH ASSEMBLY	246-1	246
7416- SHAFTS		
HOIST SHAFT ASSEMBLY, REAR DRUM.....	247-1	247
DIGGING SHAFT ASSEMBLY	248-1	248
REVERSING SHAFT ASSEMBLY	249-1	249
HORIZONTAL SWING SHAFT ASSEMBLY	250-1	250
VERTICAL SWING SHAFTASSEMBLY	251-1	251
BOOM HOIST SHAFT ASSEMBLY.....	252-1	252
WORM SHAFT ASSEMBLY	253-1	253
7417- HOISTS		
BOOM HOIST BRAKE ASSEMBLY	254-1	254
BOOM HOIST PAWL ASSEMBLY	255-1	255
7419- TURNTABLE		
SWING BRAKE CONTROL STAND.....	256-1	256

TABLE OF CONTENTS

	PAGE	ILLUS/ FIG
DRUM AND PAWL LOCK ASSEMBLY	257-1	257
SWING BRAKE ASSEMBLY	258-1	258
SWING LOCK ASSEMBLY.....	259-1	259
7420-MACHINERY GEAR CASE OR FRAME		
GEAR AND CHAIN HOUSING ASSEMBLY	260-1	260
7422-MACHINERY MECHANISM CONTROLS		
CONTROL STAND ASSEMBLY	261-1	261
CONTROL STAND ASSEMBLY.....	262-1	262
CRANE CONTROLS	263-1	263
7423-GANTRY		
GANTRY ASSEMBLY.....	264-1	264
7424-CRAWLER BED, FRAME, AND RING GEAR		
REVOLVING FRAME ASSEMBLY	265-1	265
ROLLER CIRCLE ASSEMBLY	266-1	266
TURRET ASSEMBLY	267-1	267
GROUP 94		
REPAIR KITS		
9401-REPAIR KIT		
KITS		
KITS.....	KIT-1	
GROUP 95		
GENERAL USE STANDARDIZED PARTS		
9501-BULK MATERIEL		
BULK MATERIEL.....	BULK-1	
SECTION III		
SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV		
CROSS REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-39	
FIGURE AND ITEM INDEX	I-172	

DIRECT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Direct and General Support Maintenance of the Crane, Truck Mounted. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I., Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

 
b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, FSCM, and part numbers.


3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

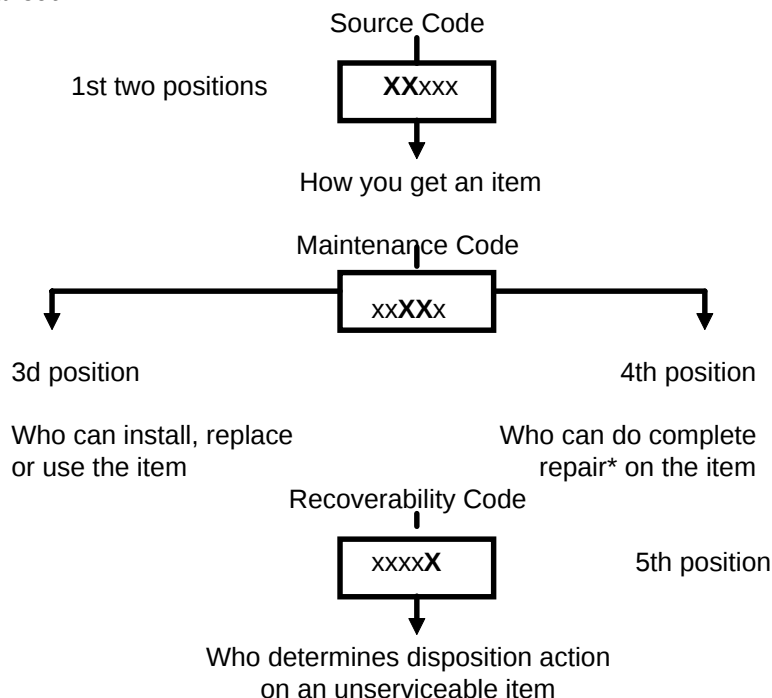

 **Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

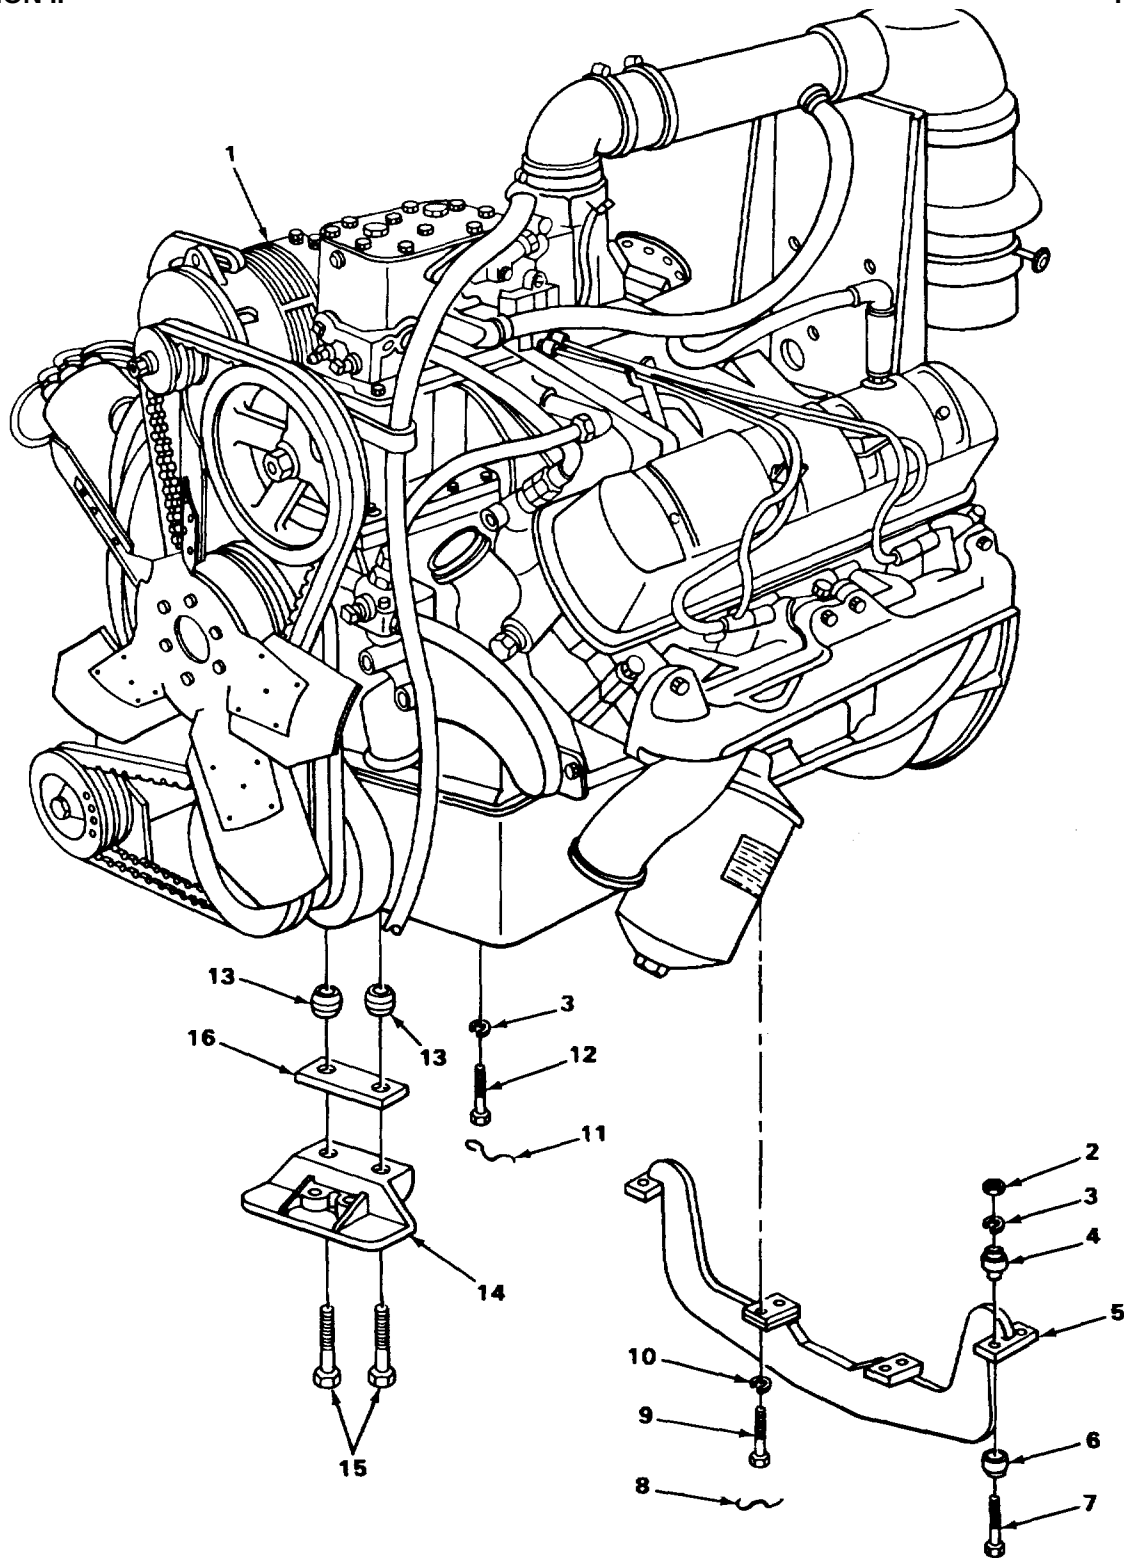

TA215140

Figure 1. Carrier Engine and Related Parts

SECTION II

TM5-3810-294-34P

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 01 ENGINE					
GROUP 0100 ENGINE ASSEMBLY					
FIG. 1 CARRIER ENGINE AND RELATED PARTS					
1	PFFFF	27315	51Q183	ENGINE,GASOLINE CARRIER	1
2	PFFZZ	96906	MS51968-14	NUT, PLAIN,HEXAGON ENGINE MOUNTING.....	4
3	PFFZZ	96906	MS35338-48	WASHER,LOCK ENGINE MOUNTING	6
4	PFFZZ	22337	CA368-2	MOUNT,RESILIENT ENGINE	4
5	PFFZZ	27315	816N129	BRACKET ENGINE,REAR	1
6	PFFZZ	22337	CA368-8	MOUNT,RESILIENT ENGINE.....	4
7	PFFZZ	27315	82CT36	BOLT,SHOULDER ENGINE NOUNTING.....	4
8	XDFZZ	27315	16-8100JO573	WIRE LOCK.....	1
9	PFFZZ	27315	20T73633174	SCREW ENGINE NOUNTING.....	4
10	PFFZZ	96906	MS35338-50	WASHER,LOCK ENGINE MOUNTING	4
11	XDFZZ	27315	60-8100JO573	WIRE LOCK.....	1
12	PFFZZ	27315	20T7363D117	SCREW ENGINE MOUNTING	2
13	PFFZZ	96906	MS21045-6	NUT,SELF-LOCKING SUPPORT.....	2
14	PFFZZ	89346	145339P1	BRACKET,ENGINE FRONT.....	1
15	PFFZZ	96906	MS90726-115	SCREW,CAP,HEXAGON SUPPORT.....	2
16	PBFZZ	16662	33-305822R1	MOUNT,RESILIENT FRONT SUPPORT.	1
CARRIER.....					

END OF FIGURE

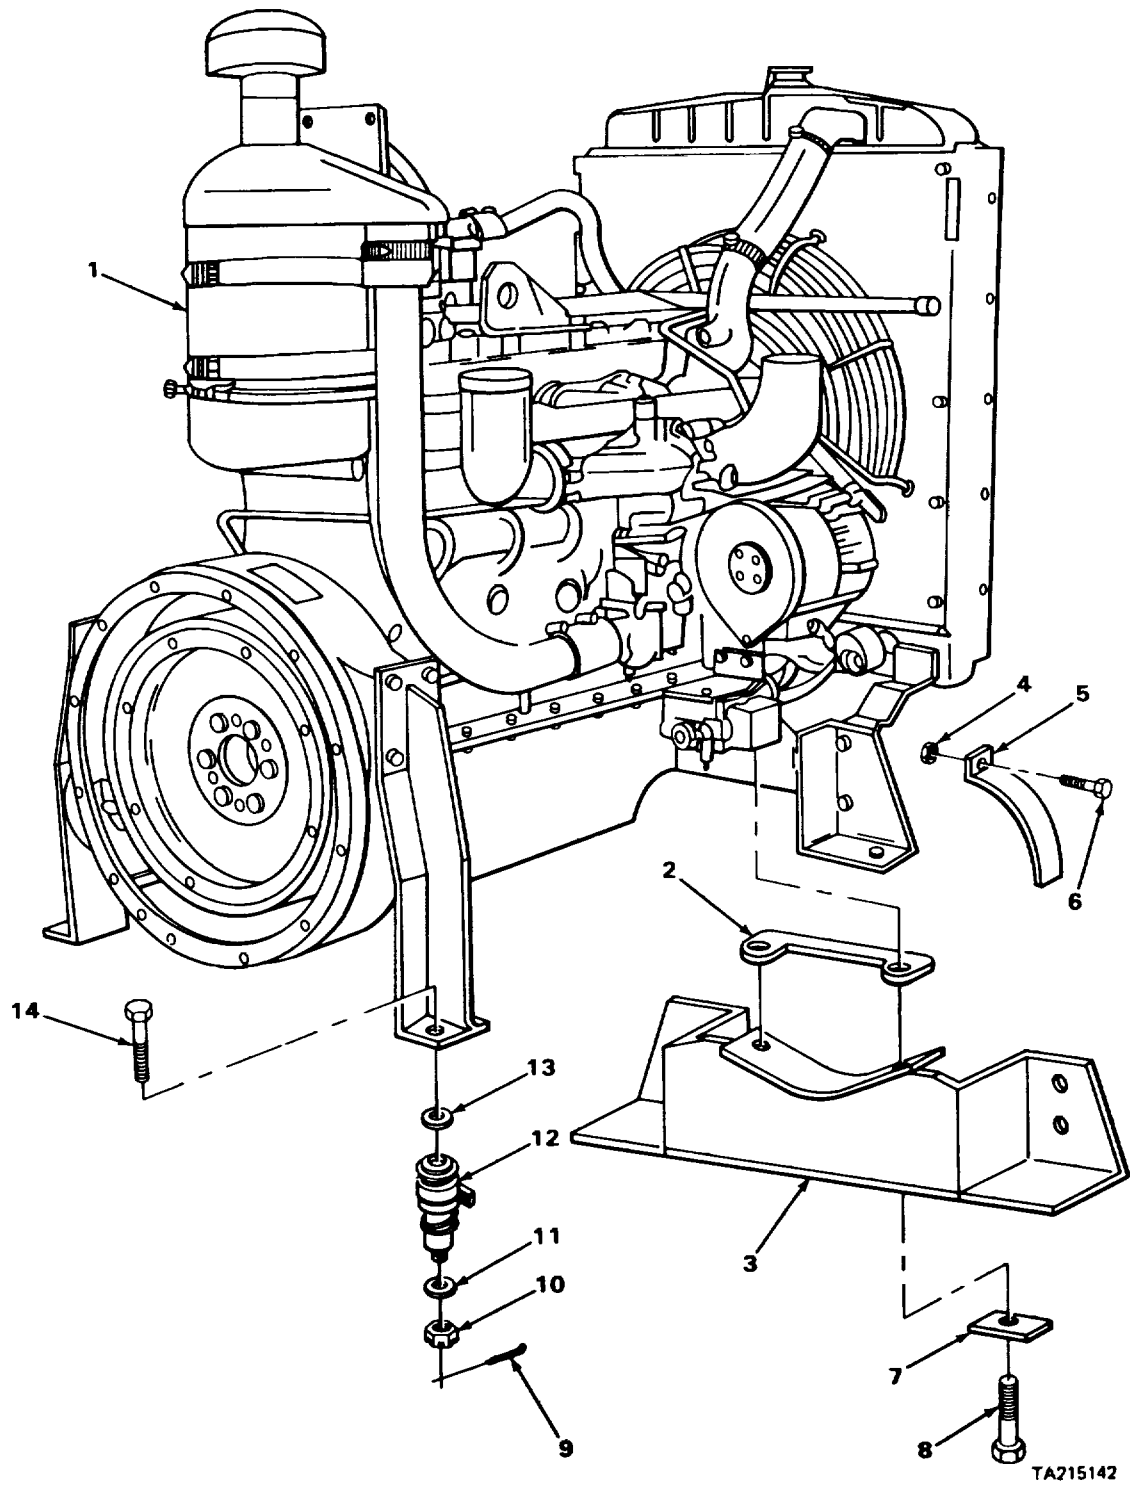 


Figure 2. Crane Engine and Supports


SECTION II

TM5-3810-294-34P

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0100 ENGINE ASSEPBLY					
FIG. 2 CRANE ENGINE AND SUPPORTS					
1	PAFFF	27315	51Q230	ENGINE, GASOLINE CRANE.....	1
2	PBFZZ	89346	83815H	INSULATOR PLATE.....	1
3	XDFZZ	31007	314351R91	SUPPORT ENGINE FRONT.....	1
4	PFOZZ	96906	MS51967-2	NUT,PLAIN HEXAGON RELAY	2
5	XDDZZ	27315	214P68	GUARD,ALTERNATOR FAN	1
6	PFOZZ	96906	M59072i-12	SCREW, CAP, HEXAGON GUARD	1
7	PFFZZ	92679	27599R1I	BOLT,LOCK.....	2
8	PFFZZ	29930	364257R1	BOLT,FRONT SUPPORT.....	2
9	PFFZZ	96906	MS24665-423	PIN,COTTER ENGINE MOUNTING.....	4
10	PFFZZ	96906	M535692-49	NUT,SLOTTED,HEXAGON ENGINE MOUNTING	4
11	PFFZZ	96906	MS27183-22	WASHER,FLAT ENGINE MOUNTING	4
12	PFFZZ	76005	J8006-1	MOUNT,RESILIENT ENGINE	4
13	PFFZZ	27315	18H38920405	WASHER ALIGNING,ENGINE	4
14	PFFZZ	27315	2CT5443D9	BOLT, MACHINE ENGINE MOUNTING	4

END OF FIGURE

 1
2 THRU 18

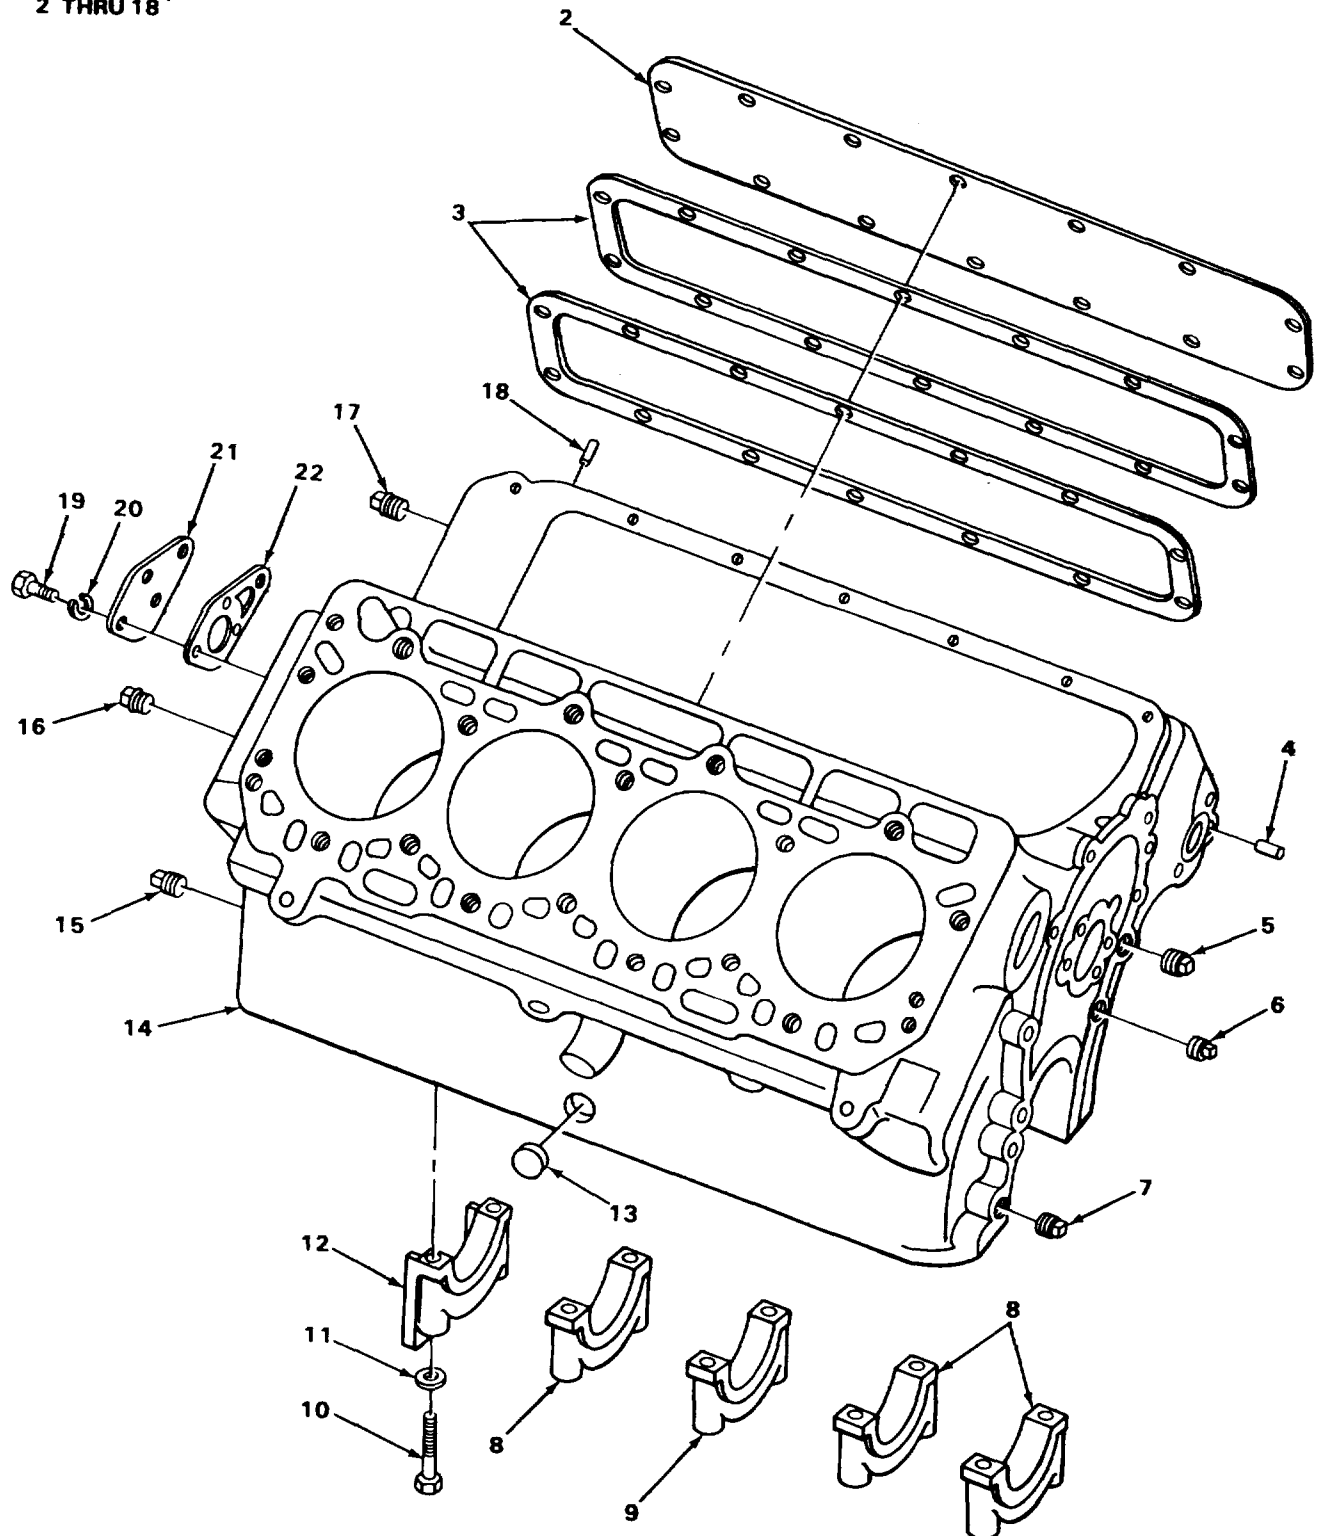

TA215144

Figure 3. Carrier Crankcase and Related Parts

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
-------------------	--------------------	-------------	-----------------------	--	------------


GROUP 0101 CRANKCASE. BLOCK,
CYLINDER HEAD

FIG. 3 CARRIER CRANKCASE AND RELATED
PARTS

1	XDHHH	89346	133466R31	ENGINE BLOCK, GASOLINE.....	1
2	XDHZZ	31007	133575R2	COVER	1
3	PFHZZ	89346	133 577 R4	GASKET	2
4	PFHZZ	89346	141260	PIN, FRONT.....	2
5	PFHZZ	76474	1-8PIPEPLUG	PLUG,PIPE	4
6	PFHZZ	70960	208-03	PLUG,PIPE CRANKCASE.....	1
7	XDHZZ	31007	16845R1	PLUG CRANKCASE.....	2
8	XDHZZ	31007	133443R1	CAP BEARING,1, 2, 4	3
9	XDHZZ	31007	133442R1	CAP BEARING, 3	1
10	XDHZZ	89346	224839R1	BOLT, SPECIAL BEARING CAP.....	10
11	PFHZZ	89345	151341R1	WASHER BRG CAP	10
12	XDHZZ	31007	133444R1	CAP BEARING,5	1
13	PAHZZ	89345	133453R1	PLUG,EXPANSI ON	7
14	XAHHH	31007	133466	CRANKCASE ENGINE	1
14	XDHHH	89346	292287C91	BLOCK,ENGINE,SHORT PART OF KIT P/N	1
				570571128	
15	PFHZZ	24617	444667	PLUG,PIPE CRANKCASE.....	2
16	XDHZZ	31007	444783	PLUG,PIPE CRANKCASE	4
17	PFHZZ	31007	13467R1	PLUG,PIPE CRANKCASE	1
18	PFHZZ	89346	133452R1	BEARINGISLEEVE ROCKER ARM DOWEL... ..	4
19	PFFZZ	96906	MSJ8154-58	SCREW,CAP,HEXAGON CAMSHAFT COVER.....	4
20	PFFZZ	96906	MS35338-46	WASHER,LOCK CAMSHAFT COVER.....	4
21	XDFZZ	31007	133461RI	COVER CANSHAFT.REAR.....	1
22	PFFZZ	89346	133462RI	GASKET PART OF KIT P/N 133476R92.....	1
22	XDOZZ	89346	304516C92	GASKET SET PART OF KIT P/N 5705728.....	1

END OF FIGURE

 4
5 THRU 7

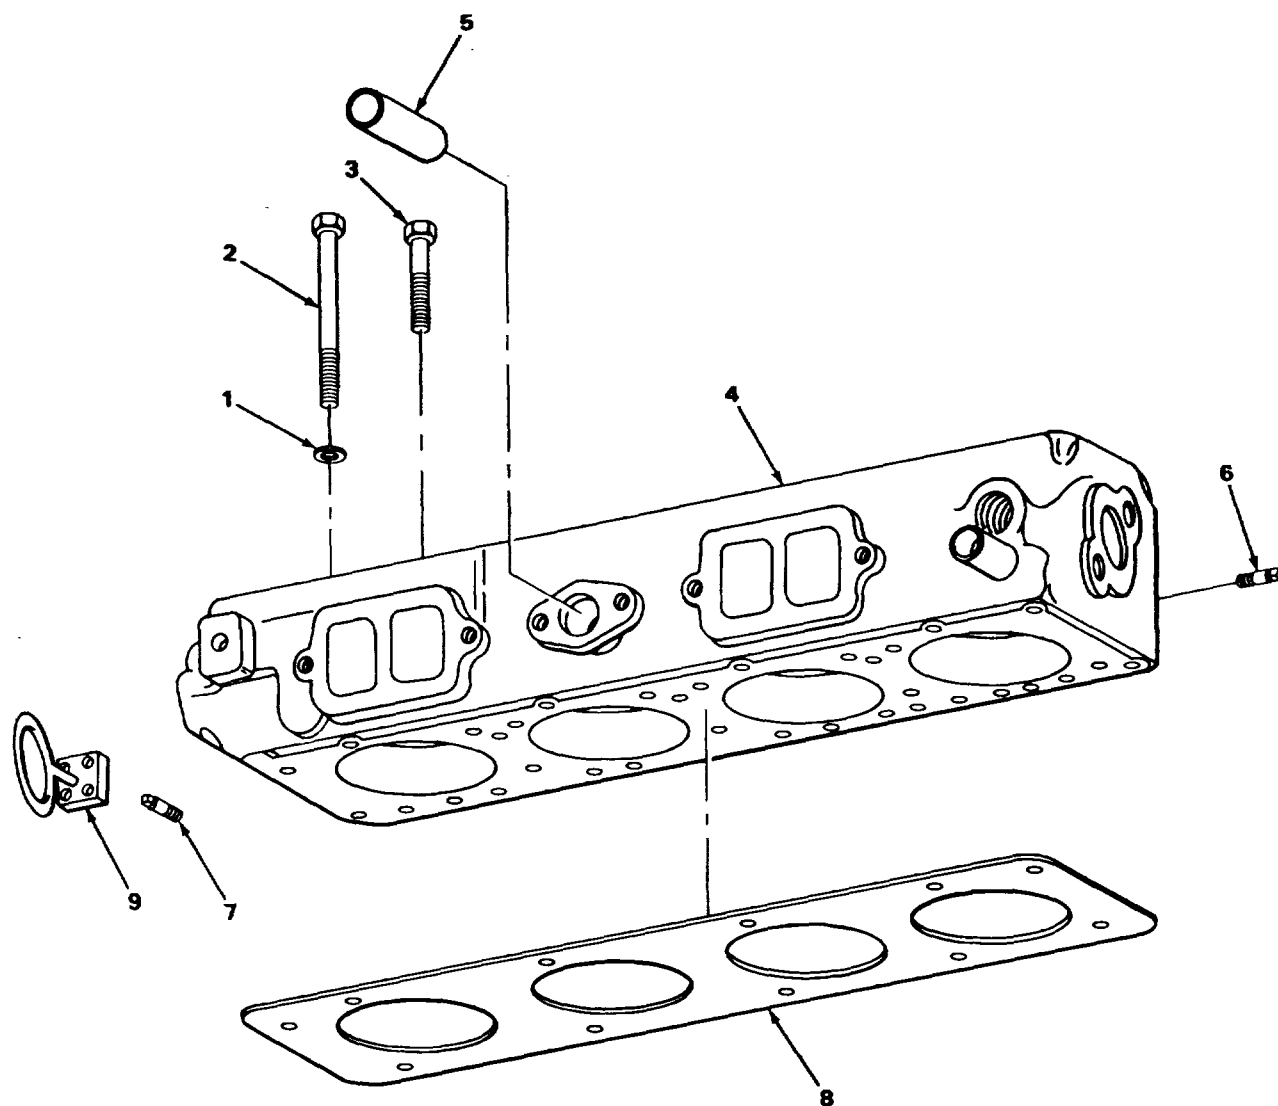

TA215145

Figure 4. Carrier Engine Cylinder Head and Related Parts

SECTION II


TM5-3810-294-34P

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD					
FIG. 4 CARRIER ENGINE CYLINDER HEAD AND RELATED PARTS					
1	PFFZZ	96906	MS27183-18	WASHER,FLAT CYLINDER HEAD	16
2	XDFZZ	31007	1141404R1	BOLT CYLINDER HEAD	16
3	XDFZZ	29930	133549R1	BOLT,SPECIAL CYLINDER HEAD	12
4	PFFHH	92679	601706C92	CYLINDER HEAD, ENGINE	2
5	XBFFZZ	89346	133818R1	TUBE EXHAUST CROSSOVER	2
6	PFFZZ	96906	NS51884-7	PLUG,PIPE CYLINDER HEAD	2
7	PFFZZ	24617	21I91	PLUG,PIPE CYLINDER HEAD	2
8	PAFZZ	89345	133514R91	GASKET CYLINDER HEAD PART OF KIT	2
				P/N 133476R92	
9	XDOZZ	31007	303639R1	EYE LIFTING	1

END OF FIGURE

1
2 THRU 25

 11
12

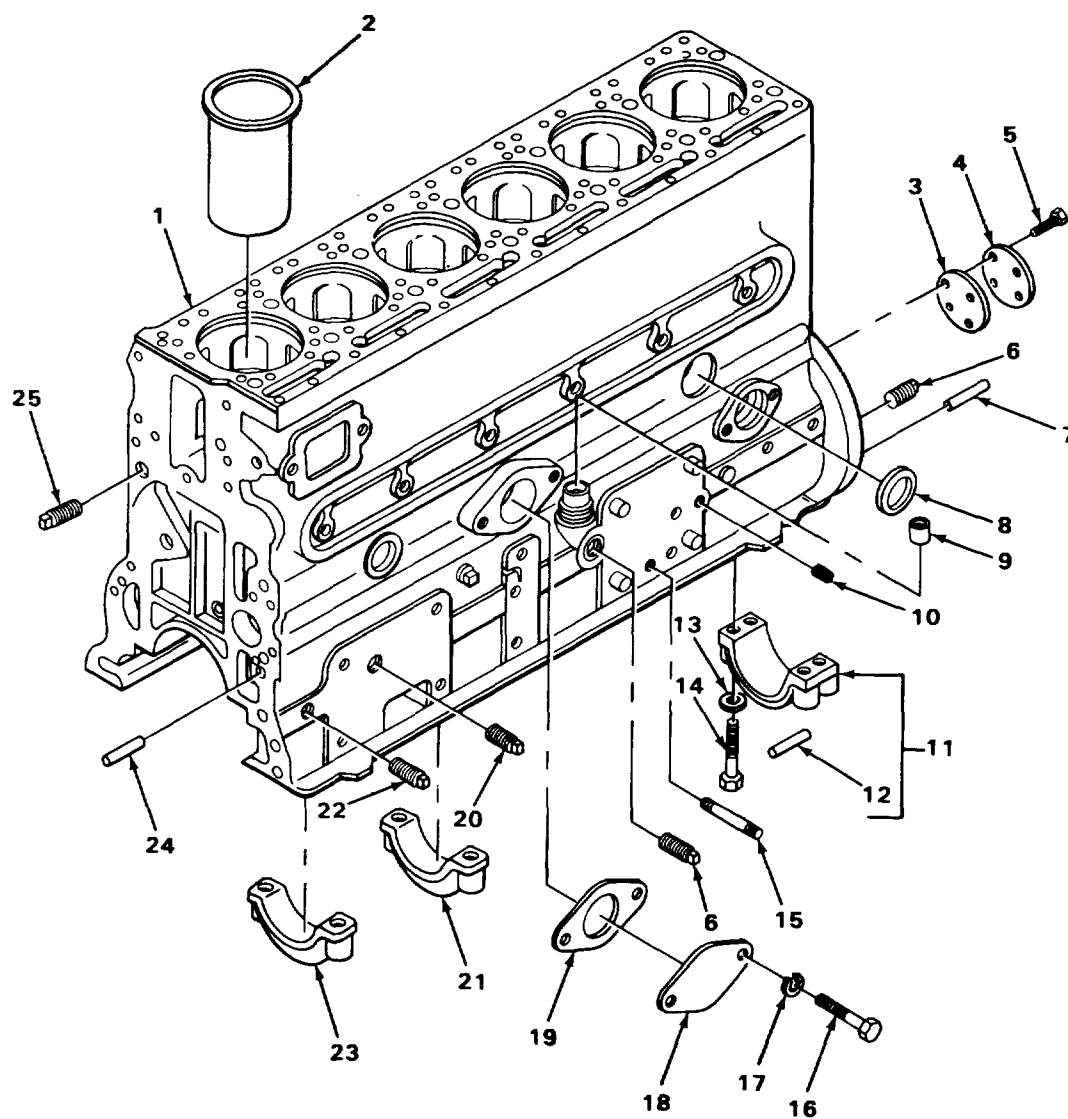

TA215146

Figure 5. Crane Crankcase and Associated Parts

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD					
FIG. 5 CRANE CRANKCASE AND ASSOCIATED PARTS					
1	XDHHH	31007	258137R95	ENGINE BLOCK	1
2	PFHZZ	89346	61440HA	CYLINDER SLEEVE CYLINDER,STANDARD.....	6
				PART OF KIT P/N 213442R91	
3	PAHZZ	79150	35020	GASKET COVER PLATE PART OF KIT P/N.....	1
				312309R9L	
4	PFHZZ	89346	62274VA	PLATE, RETAINING,BEA COVER,.....	1
				CAMSHAFT, REAR	
5	PFHZZ	96906	M590725-3	SCREW,CAP,HEXAGON COVER PLATE.....	4
6	PAFZZ	92679	126045	PLUG,PIPE	3
7	XDFZZ	31007	16C23D	PIN,DOWEL FLYWHEEL HOUSING	2
8	PFFZZ	96906	MS35648-15	PLUG,EXPANSION CRANKCASE	5
9	XDFZZ	31007	214045R1	TUBE DISTRIBUTOR BRACKET.....	1
10	PFFZZ	78500	208-03	PLUG,PIPE	2
11	XDHHH	31007	18622HBX	CAP BEARING,REAR	1
12	XOHZZ	31007	103718	PIN STRAIGHT	2
13	XDHZZ	t4170	340-8300010-9	WASHER ,FLAT BEARING CAP.....	16
14	XDHZZ	89346	118548HA	BOLT,SELF-LOCKING BEARING CAP.....	16
15	PAFZZ	92679	26893H	STUD,PLAIN.....	2
16	PFFZZ	96906	MS18154-58	SCREW,CAP,HEXAGON COVER	2
17	PFFZZ	96906	M535338-46	WASHERLOCK COVER.....	2
18	XDFZZ	31007	729a8R1	COVER COOLER MOUNTING BOSS	1
19	PFFZZ	92679	72989R1	GASKET COVER.....	1
20	PFFZZ	31007	445671	PLUG,PIPE	3
21	XDHZZ	31007	118615S	CAP BEARING,INTERMEDIATE	5
22	PFFZZ	96906	MS51884-7	PLUG,PIPE SQUARE HEAD.....	1
23	XDHZZ	31007	118608H	CAP BEARING,FRONT	1
24	PFFZL	31007	141221	PIN,DOWEL.....	2
25	XDFZZ	31007	98375H	PLUG,PIPE OIL GAGE HOLE	1

END OF FIGURE