

GRADER, ROAD MOTORIZED: DIESEL DRIVEN, 12 FT
BLADE (CATERPILLAR MODEL 12) W CATER-
PILLAR ENGINE MODEL D-333NA

Reference: LO 5-3805-209-15-1, 2, 3 and C9100-IL

Intervals are based on normal hours of operations. Reduce to compensate for abnormal operations and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing or fording.

A dotted circle indicates a drain below.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.


Drain gearcase and crankcase when hot. Fill and check level.

FOLD

FOLD

LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

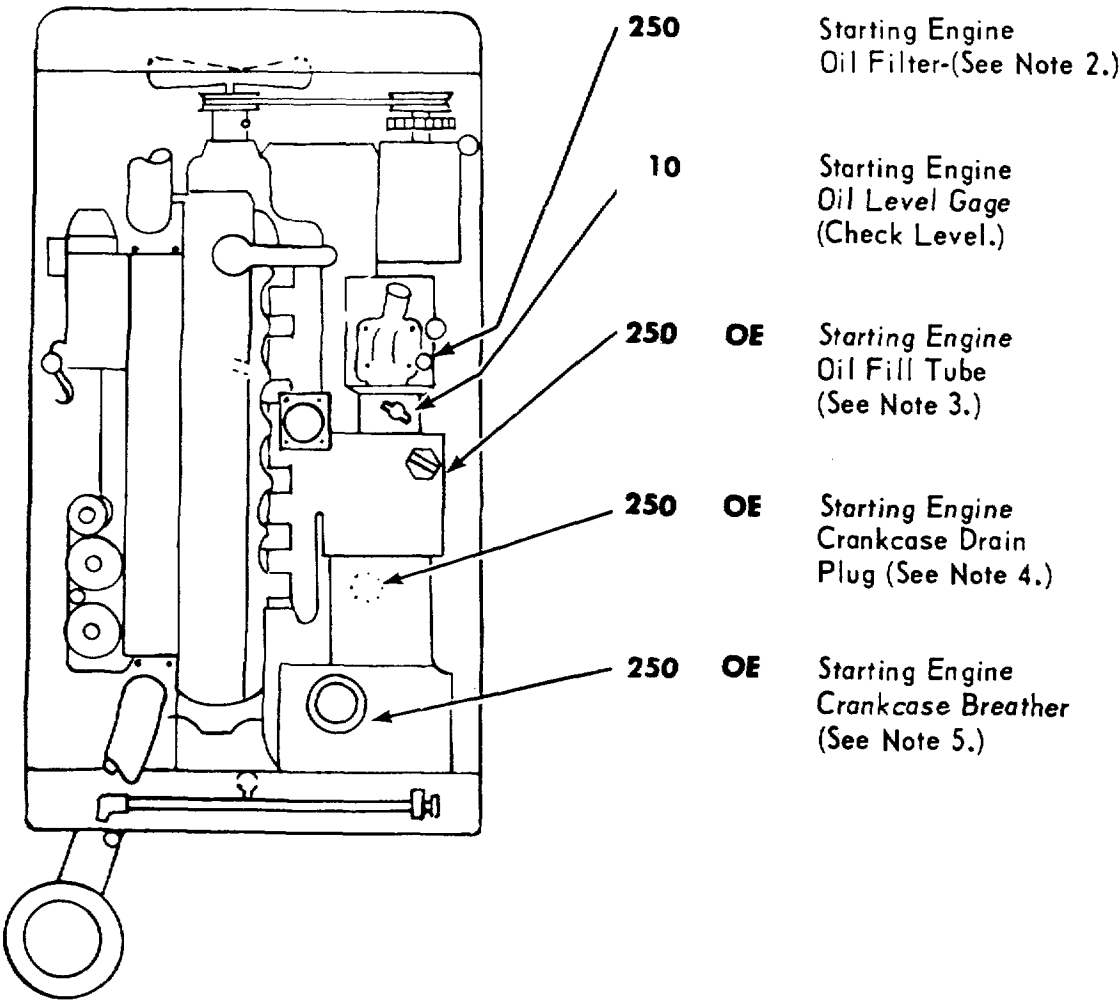

STARTING ENGINE ONLY