

GRADER, ROAD, MOTORIZED; DIESEL DRIVEN; 12,100 TO 14,300 LB
PRESSURE AT BLADE: 12 FT BLADE (HUBER-WARCO MODEL 4D)
W/GMC DIESEL ENGINE MODEL 4025

Reference: LO 5-3805-210-12-2 and C9100-IL

Intervals are based on normal operation. Adjust to compensate for abnormal operations and severe conditions. During inactive periods sufficient lubrication must be performed for adequate preservation.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Clean fittings before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Relubricate after washing or fording.

A dotted circle indicates a drain below.

Drain gearcases when hot. Fill and check level.

LUBRICANT - INTERVAL

INTERVAL - LUBRICANT

FOLD

FOLD

