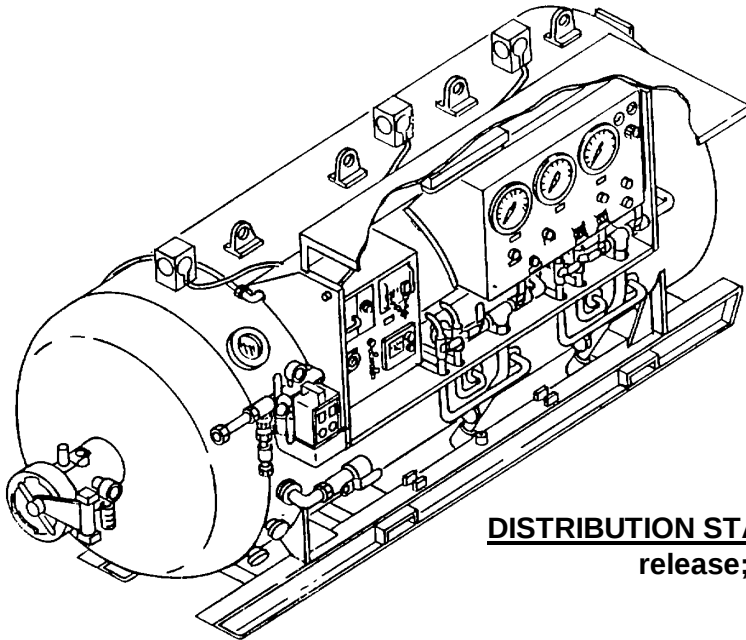


TECHNICAL MANUAL**OPERATOR, UNIT, DIRECT SUPPORT,
AND GENERAL SUPPORT
MAINTENANCE MANUAL****RECOMPRESSION CHAMBER****3-PERSON****NSN-4220-01-200-4797****MODEL RC-100-2****SERIAL NUMBERS 08-A-163****THRU 08-A-172**

Equipment Description and Data	1-3
--------------------------------	-----

Operator Preventive Maintenance Checks and Services (PMCS)	2-11
--	------

Operator Maintenance Procedures	3-2
---------------------------------	-----

Unit Preventive Maintenance Checks and Services (PMCS)	4-7
--	-----

Unit Troubleshooting Procedures	4-13
---------------------------------	------

Unit Maintenance Procedures	4-21
-----------------------------	------

Direct Support Maintenance Procedures	5-5
---------------------------------------	-----

General Support Maintenance Procedures	6-3
--	-----

DISTRIBUTION STATEMENT A: Approved for public release; Distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
30 DECEMBER 1992**

TECHNICAL MANUAL

NO. 5-4220-227-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 30 DECEMBER 1992

Operator, Unit, Direct Support, and General Support Maintenance Manual

RECOMPRESSION CHAMBER, 3-PERSON
NSN 4220-01-200-4797
(MODEL RC-100-2)
Serial Numbers 08-A-163 thru 08-A-172**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	PAGE
CHAPTER 1	INTRODUCTION1-1
	OVERVIEW1-1
Section I	General Information.....1-1
Section II	Equipment Description and Data.....1-3
Section III	Principles of Operation1-10
CHAPTER 2	OPERATING INSTRUCTIONS.....2-1
	OVERVIEW2-1
Section I	Description and Use of Operator Controls and Indicators2-1
Section II	Operator Preventive Maintenance Checks and Services (PMCS)2-11
Section III	Operation Under Usual Conditions.....2-16
CHAPTER 3	OPERATOR MAINTENANCE.....3-1
Section I	Lubrication Instructions.....3-1
Section II	Operator Troubleshooting3-2
Section III	Operator Maintenance Procedures3-2

TABLE OF CONTENTS (Cont)

	Page
CHAPTER 4	UNIT MAINTENANCE4-1
	OVERVIEW4-1
Section I	Repair Parts; Special Tools; TMDE, and Support Equipment4-1
Section II	Service Upon Receipt4-2
Section III	Unit Preventive Maintenance Checks and Services (PMCS)4-7
Section IV	Unit Troubleshooting Procedures4-13
Section V	Unit Maintenance Procedures4-21
Section VI	Cleaning Procedures for Diving Life Support Air Systems4-86
CHAPTER 5	DIRECT SUPPORT MAINTENANCE5-1
	OVERVIEW5-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment5-1
Section II	Direct Support Troubleshooting5-1
Section III	Direct Support Maintenance Procedures5-5
CHAPTER 6	GENERAL SUPPORT MAINTENANCE6-1
	OVERVIEW6-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment6-1
Section II	General Support Maintenance Procedures6-3
Section III	Preparation for Shipment or Storage6-102
APPENDIX A	REFERENCESA-1
APPENDIX B	MAINTENANCE ALLOCATION CHARTB-1
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTSC-1
APPENDIX D	ADDITIONAL AUTHORIZATION LISTD-1
APPENDIX E	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LISTE-1
APPENDIX F	TORQUE LIMITSF-1
INDEX	Index 1

LIST OF ILLUSTRATIONS

Figure Number	Title	Page
1-1	3-Person Recompression Chamber.....	1-0
1-2	Location and Description of Major Components	1-5
1-3	Flow Diagram	1-11
1-4	Electrical Diagram	1-14
2-1	Electrical Control Panel Controls and Indicators.....	2-2
2-2	Chamber Control Console Controls and Indicators	2-6
2-3	Gages, Valves, and Switches Controls and Indicators.....	2-8
2-4	Scrubber Assembly, Service	2-15
2-5	Recompression Chamber Operating Procedure Flowchart	2-17
2-6	Door Procedure Plate.....	2-18
2-7	Warning Plates	2-19
2-8	Manufacturer's Data Plates	2-20
2-9	ANSI/ASME Certification Data Plate	2-21
2-10	System Startup Checklist	2-22
2-11	Normal Operating Procedures Checklist.....	2-34
2-12	Shutdown Procedures Checklist	2-44
2-13	Modified Startup Procedures Checklist.....	2-51
2-14	Modified Shutdown Procedures Checklist.....	2-56
2-15	Emergency Procedures Checklist.....	2-62
4-1	End View	4-3
4-2	Elevation View	4-4
4-3	Service of Chamber Inner and Outer Door Seals	4-11
4-4	Service of Medical Lock Outer Door Seals.....	4-12
4-5	Service of Medical Lock Inner Door Seals.....	4-13
4-6	Depressurization Valve and Gage, Replace	4-23
4-7	Pressurization Valve (Inner Lock Door), Replace	4-25
4-8	Cot Assemblies, Replace	4-27
4-9	Deck Plates, Replace.....	4-29
4-10	Heater/Chiller Module, Replace	4-31
4-11	Pressure Relief Valve Assembly, Replace	4-33
4-12	Water Valves (3/4 in.), Replace	4-35
4-13	Heater/Chiller Fluid Valves Repair	4-37
4-14	Hoses, Replace.....	4-39
4-15	Power Supply, 28V, Replace.....	4-41
4-16	Scrubber Assembly, Replace	4-43
4-17	Portable Oxygen Analyzer (POA), Replace	4-45
4-18	Thermocoupler Meter and Temperature Probe, Replace.....	4-47
4-19	Ground Fault Interrupter, Replace.....	4-49
4-20	Six Plug Receptacle Power Strip, Replace.....	4-51
4-21	Double Light Power Supply (Inner Lock), Replace.....	4-53
4-22	Double Light Power Supply (Inner Lock) Fuse, Replace	4-55
4-23	Light Source, Replace.....	4-57
4-24	Light Source, Repair	4-59
4-25	Single Light Power Supply (Outer Lock), Replace	4-61

LIST OF ILLUSTRATIONS (Cont)

Figure Number	Title	Page
4-26	Single Light Power Supply (Outer Lock) Fuse, Replace	4-63
4-27	Fluorescent Light Assembly, Replace	4-65
4-28	Fluorescent Light Assembly, Repair	4-67
4-29	Wiring Harness, Fuse Replace	4-69
4-30	Communicator Assembly, Replace	4-71
4-31	Battery Card and Case, Fuse Replacement	4-73
4-32	Microphone, Replace	4-75
4-33	Headset, Replace	4-77
4-34	Sound Powered Phones and Bracket, Replace	4-79
4-35	Speakers, I/L and O/L, Replace	4-81
4-36	02 K Bottles and Manifold, Replace	4-83
4-37	Oxygen Inhalator Mask, Replace	4-85
5-1	Medical Lock (M/L) Outer Door Assembly, Replace	5-7
5-2	Medical Lock (M/L) Outer Door Assembly, Repair	5-9
5-3	Medical Lock (M/L) Inner Door Assembly, Replace	5-11
5-4	Medical Lock (M/L) Inner Door Assembly, Repair	5-13
5-5	Pressure Relief Valve, Replace	5-15
5-6	Ball Valve 3/4 Inch, Replace	5-17
5-7	Ball Valve 3/4 Inch, Repair	5-19
5-8	Skid Assembly Chamber, Replace	5-21
5-9	Chamber Instrument Panel and Hood Assembly Enclosure, Replace	5-23
5-10	Heater/Chiller Unit (CCU-03), Replace	5-27
5-11	Heater/Chiller Unit Motor, Replace	5-31
5-12	Scrubber Assembly Motor, Replace	5-33
5-13	Portable Oxygen Analyzer Battery, Replace	5-35
5-14	Portable Oxygen Analyzer Probe Assembly, Replace	5-37
5-15	Portable Oxygen Analyzer Probe Assembly, Repair	5-39
5-16	Flow Meter, Replace	5-41
5-17	Double Light Power Supply (Inner Lock) Switch, Replace	5-45
5-18	Double Light Power Supply (Inner Lock) Indicator Light, Replace	5-46
5-19	Double Light Power Supply (Inner Lock) Variac Unit, Replace	5-47
5-20	Double Light Power Supply (Inner Lock) Transformer, Replace	5-48
5-21	Double Light Power Supply (Inner Lock) Power and Light Cords, Replace	5-49
5-22	Light Source, Repair	5-51
5-23	Single Light Power Supply (Outer Lock) Switch, Replace	5-55
5-24	Single Light Power Supply (Outer Lock) Indicator Light, Replace	5-56
5-25	Single Light Power Supply (Outer Lock) Variac Unit, Replace	5-57
5-26	Single Light Power Supply (Outer Lock) Transformer, Replace	5-58
5-27	Single Light Power Supply (Outer Lock) Power and Light Cords, Replace	5-59
5-28	Fluorescent Light, Repair	5-61
5-29	Wiring Harness, Test	5-63
5-30	Wiring Harness, Replace	5-65
5-31	Front Chassis Assembly, Replace	5-71
5-32	Front Panel Chassis Assembly Switch, Replace	5-72

LIST OF ILLUSTRATIONS (Cont)

Figure Number	Title	Page
5-33	Front Panel Chassis Assembly Potentiometer and Rheostat, Replace.....	5-73
5-34	Front Panel Chassis Assembly Indicator Light, Replace.....	5-74
5-35	Front Panel Chassis Assembly Banana Jack, Replace.....	5-75
5-36	Front Panel Chassis Assembly Phone Jack, Replace.....	5-76
5-37	Front Panel Chassis Assembly Microphone Holder, Replace.....	5-77
5-38	Front Panel Chassis Assembly Power Speaker Assembly, Replace	5-79
5-39	Circuit Card, Replace.....	5-81
5-40	Battery Sense Card Assembly, Replace.....	5-83
5-41	Battery Card and Case, Replace	5-85
5-42	Battery Card and Case, Repair	5-86
5-43	Battery Card and Case Battery Contact P.C. Card, Replace.....	5-87
5-44	Battery Card and Case Fuse Holder, Replace	5-88
5-45	Battery Card and Case Power Transformer, Replace	5-89
5-46	Battery Card and Case Battery Charger P.C. Card Assembly, Replace	5-91
5-47	02 "K" Bottles/Manifold, Repair	5-93
5-48	Gage (02 "K" Bottles/Manifold), Replace.....	5-97
5-49	Oxygen Pressure Gages, Replace	5-99
5-50	Pressure Regulator, Replace	5-103
5-51	Back Pressure Regulators, Replace.....	5-107
5-52	Shutoff Valve (Oxygen), Replace.....	5-111
5-53	Isolator Valves, Repair.....	5-115
5-54	Dump Valves and Silencers, Replace	5-119
5-55	Dump Valves, Repair.....	5-121
5-56	Oxygen BIBS Manifold, Replace.....	5-123
5-57	Inhalator Mask Assembly, Repair.....	5-125
5-58	Inhalator Mask Demand/Exhaust Regulators, Replace	5-127
5-59	Dual Hose Assembly, Replace	5-129
5-60	Dual Hose Assembly, Repair.....	5-131
5-61	02 and Air Piping, Removal	5-133
5-62	02 and Air Piping, Installation.....	5-137
5-63	Air Supply Manifold, Replace	5-141
5-64	Ball Valve 3/4 Inch, Replace	5-145
5-65	Ball Valve 3/4 Inch, Repair.....	5-147
5-66	Ball Valve 1 Inch, Replace	5-151
5-67	Ball Valve 1 Inch, Repair	5-153
5-68	Air Exhaust Manifold, Replace	5-155
5-69	Ball Valve 1 1/4 Inch, Replace	5-157
5-70	Ball Valve 1 1/4 Inch, Repair.....	5-159
5-71	Depth Gages, Replace.....	5-161
5-72	Caisson Gages, Replace.....	5-165
6-1	Inner/Outer Lock Door Assembly, Replace.....	6-5
6-2	Inner/Outer Lock Door Assembly, Repair	6-7
6-3	Medical Lock Assembly, Repair	6-9
6-4	View Port Assembly, Replace	6-13

LIST OF ILLUSTRATIONS (Cont)

Figure Number	Title	Page
6-5	View Port Assembly, Repair	6-15
6-6	Electrical and Water Penetrator, Replace	6-17
6-7	Oxygen Penetrator, Replace	6-19
6-8	Electrical/O ₂ Penetrator, Replace	6-21
6-9	Blank Penetrator, Replace	6-23
6-10	Electrical and Water Penetrators, Repair	6-24
6-11	Oxygen Penetrator, Repair	6-25
6-12	Electrical/O ₂ Penetrator, Repair.....	6-26
6-13	Blank Penetrator, Repair.....	6-27
6-14	Pressure Relief Valve, Repair	6-29
6-15	Skid, Repair	6-33
6-16	Heater/Chiller Module Flow Diagram.....	6-36
6-17	Heater/Chiller Module Electrical Schematic	6-37
6-18	Heater/Chiller Module, Repair	6-39
6-19	Condensing Unit Hermetic, Replace	6-43
6-20	Condensing Unit Hermetic Fan Motor, Replace.....	6-45
6-21	Condensing Unit Hermetic Condenser, Replace.....	6-46
6-22	Condensing Unit Hermetic Receiver Tank, Replace	6-47
6-23	Condensing Unit Hermetic Compressor, Replace.....	6-48
6-24	Condensing Unit Hermetic Filter and Sight Glass Line, Replace	6-49
6-25	Low Pressure Control, Replace	6-51
6-26	Control Box, Replace	6-55
6-27	Control Box Electrical, Schematic	6-57
6-28	Control Box, Repair	6-59
6-29	Shroud Assembly, Replace	6-63
6-30	Pump Assembly, Replace	6-65
6-31	Pump Assembly, Repair.....	6-67
6-32	High Temperature Control Unit, Replace.....	6-69
6-33	High Temperature Control Unit, Repair	6-71
6-34	Low Temperature Control Unit, Replace.....	6-73
6-35	Low Temperature Control Unit, Repair	6-75
6-36	Motor, Repair	6-77
6-37	Portable Oxygen Analyzer, Repair	6-81
6-38	Portable Oxygen Analyzer, Schematic.....	6-85
6-39	Pressure Regulator, Repair	6-87
6-40	Back Pressure Regulators, Repair.....	6-91
6-41	Oxygen Shutoff Valve, Repair.....	6-95
6-42	Isolator Valve, Repair	6-99
6-43	Demand and Exhaust Regulators, Repair.....	6-101

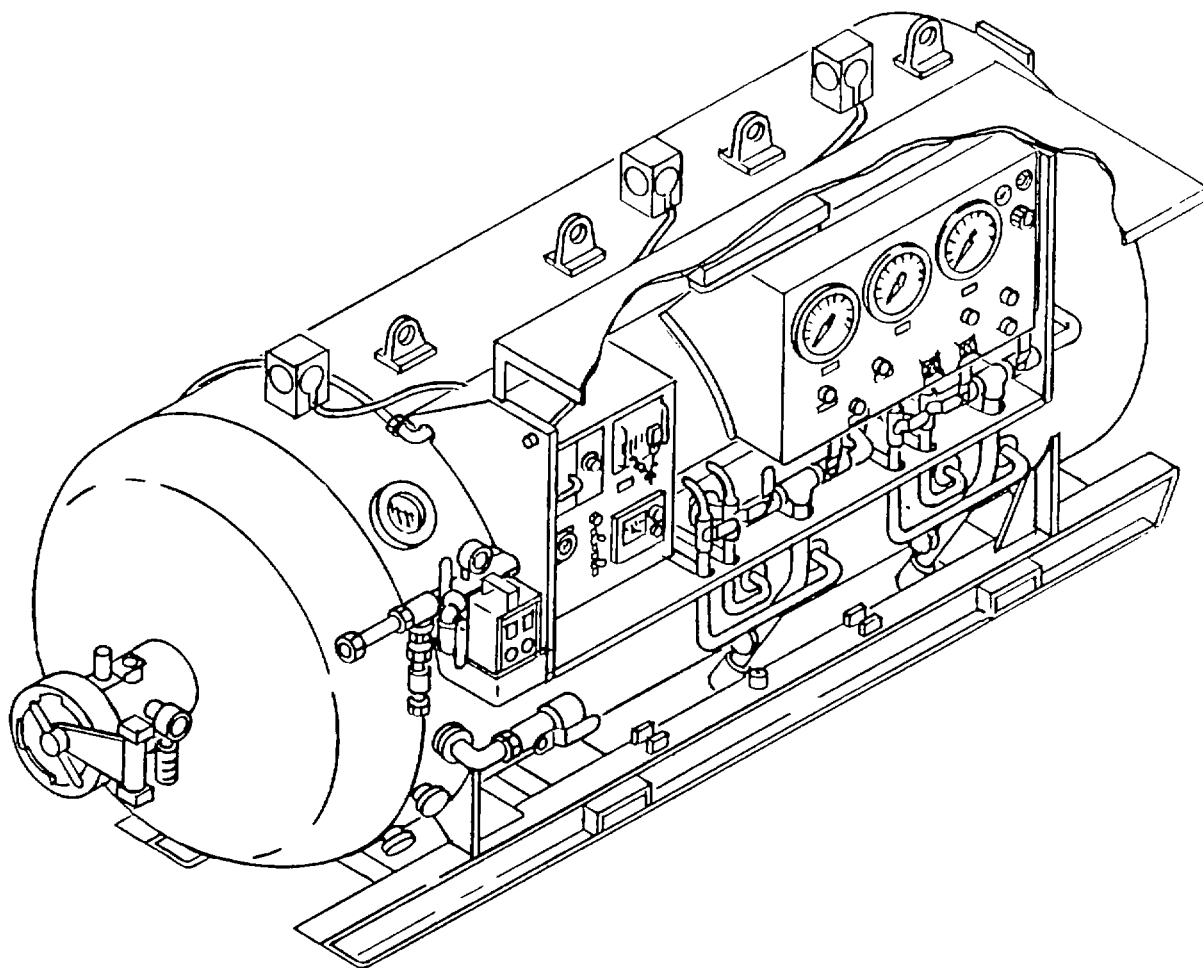


Figure 1-1. 3-Person Recompression Chamber.

CHAPTER 1

INTRODUCTION

	Page
OVERVIEW	1-1
Section I. General Information.....	1-1
Section II. Equipment Description and Data.....	1-3
Section III. Principles of Operation	1-10

OVERVIEW

This chapter contains general information pertaining to Recompression Chamber 3-Person, Model RC-100-2, and its components.

Section I. GENERAL INFORMATION

Paragraph	Page
1-1 Scope	1-1
1-2 Maintenance Forms, Records and Reports.....	1-1
1-3 Destruction of Army Materiel to Prevent Enemy Use.....	1-1
1-4 Preparation for Storage or Shipment	1-1
1-5 Reporting Equipment Improvement Recommendations (EIR's)	1-1
1-6 List of Abbreviations.....	1-2

1-1. **Scope.** This manual contains operator's, unit, direct support and general support maintenance for Recompression Chamber 3-Person, Model RC-100-2 (figure 1-1).

1-2. **Maintenance Forms, Records and Reports.** Department of the Army forms and procedures used for equipment maintenance will be those prescribed in DA PAM 738-750, The Army Maintenance Management System (TAMMS).

1-3. **Destruction of Army Materiel to Prevent Enemy Use.** Refer to TM 750-244-3 for procedures to destroy Recompression Chamber to prevent enemy use.

1-4. **Preparation for Storage or Shipment.** Refer to Chapter 6, Section III, and TM 38-230 for procedures to place the equipment into storage and prepare equipment for shipment.

1-5. **Reporting Equipment Improvement Recommendations (EIR).** If your 3-Person Recompression Chamber needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF 368 (Product Quality Deficiency Report). Mail it to us at: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT-I-MDO, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. We will send you a reply.