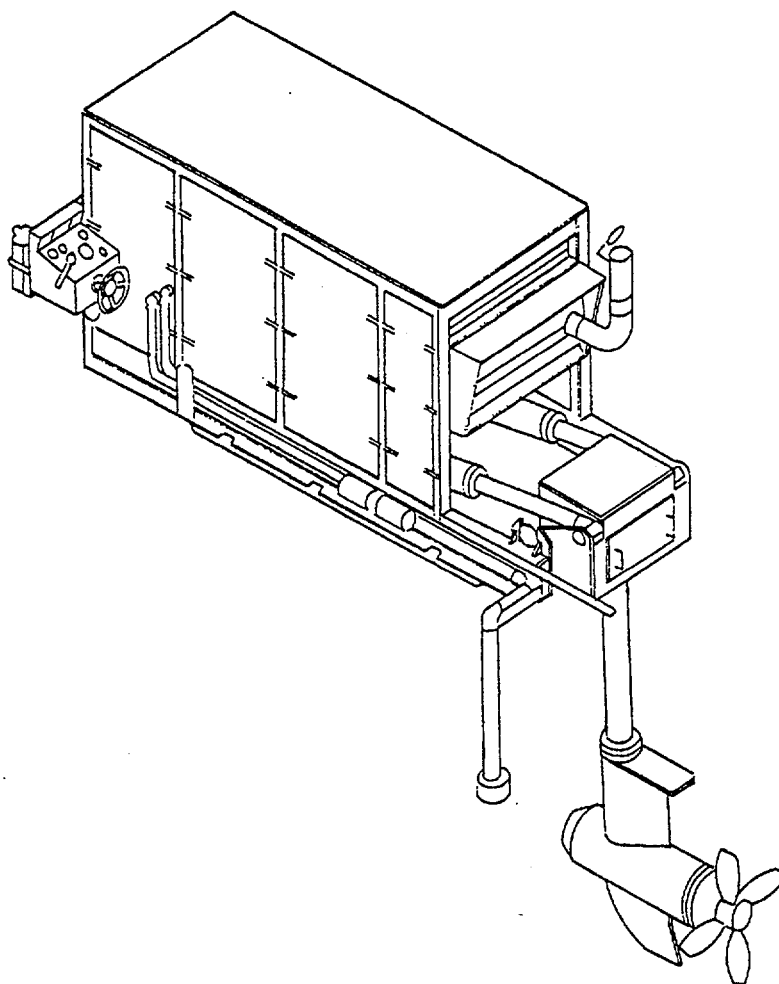

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
for

PROPELLING UNIT, OUTBOARD, 165 HP
(MODEL TMOT-OD-250A)
NSN 2010-01-251-2227



Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
31 JANUARY 1992

TECHNICAL MANUAL

NO. 5-2010-205-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 31 JANUARY 1992

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
for
PROPELLING UNIT, OUTBOARD, 165 HP
(MODEL TMOT-OD-250A)
NSN 201 0-01-251-2227**

CURRENT AS OF 30 DECEMBER 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MMTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST	1-1	
GROUP 00.	Propelling Unit Assembly	1-1	1
GROUP 01.	POWER UNIT		
	Framework Assembly	2-1	2
	Engine Assembly	3-1	3
	Cooler Assembly	4-1	4
	Oil Pump Assembly	5-1	5
	Turbocharger Assembly	6-1	6
	Manifold Assembly	7-1	7
	Expansion Tank Assembly	8-1	8
	Fuel Prime Pump Assembly	9-1	9
	Oil Pan Assembly	10-1	10
	Oil Level Gauge Assembly	11-1	11
	Governor Control Assembly	12-1	12
	Flywheel Housing Assembly	13-1	13
	Fuel Lines, Gauge, and Filter Assembly	14-1	14

TABLE OF CONTENTS - Continued

		Page	Illus/ Figure
Group 01. (cont)	Governor Drive Assembly	15-1	15
	Seawater Exchanger	16-1	16
	Water Lines Assembly	17-1	17
	Connection Assembly	18-1	18
	Auxiliary Lines	19-1	19
	Governor Pump Assembly.....	20-1	20
	Flywheel Assembly	21-1	21
	Fuel Injection Lines	22-1	22
	Front Housing Assembly	23-1	23
	Mechanical Cover Assembly	24-1	24
	Air Lines Assembly	25-1	25
	Oil Filter Assembly	26-1	26
	PCV Lines Assembly.....	27-1	27
	Lifting Assembly	28-1	28
	Turbocharger Lines Assembly	29-1	29
	Engine Oil Lines Assembly	30-1	30
	Fastener Assembly	31-1	31
	Crankshaft Seal Assembly	32-1	32
	Camshaft Assembly	33-1	33
	Cylinder Head Assembly	34-1	34
	Valve Mechanism Assembly	35-1	35
	Manifold Assembly	36-1	36
	Water Pump Assembly	37-1	37
	Engine Support Assembly	38-1	38
	Pulley and Damper Assembly	39-1	39
	Crankshaft Assembly	40-1	40
	Cylinder Block Assembly	41-1	41
	Piston and Rod Assembly	42-1	42
	Starter Motor Assembly	43-1	43
	Wiring Assembly	44-1	44
	Alternator Assembly	45-1	45
	Auxiliary Pump Assembly.....	46-1	46
	Guard Assembly	47-1	47
	Air Cleaner Assembly.....	48-1	48
	Muffler and Pipe Assembly	49-1	49
	Hydraulic Pump Assembly.....	50-1	50
	Control Panel Assembly	51-1	51
	Heat Exchanger Assembly	52-1	52
	Electrical Wiring Assembly.....	53-1	53
	Hydraulic Hose and Valve Assembly	54-1	54
	Hydraulic Reservoir Assembly.....	55-1	55
	Seawater Cooling Assembly	56-1	56

TABLE OF CONTENTS - Continued

		Page	Illus/ Figure
Group 01. (cont)	Battery Assembly	57-1	57
	Squirrel Cage Fan Assembly	58-1	58
	Hand Pump Assembly	59-1	59
Group 02.	OUTDRIVE ASSEMBLY		
	Upper Housing Assembly	60-1	60
	Steering Motor Assembly	61-1	61
	Direction Indicator	62-1	62
	Lower Unit Assembly	63-1	63
Group 03.	LIFT CYLINDER ASSEMBLY		
	Lift Cylinder Assembly	64-1	64
Group 04.	CONNECTING ELECTRICAL ASSEMBLY		
	Connecting Electrical Assembly	65-1	65
Group 05.	CONNECTING HYDRAULIC HOSE ASSEMBLY		
	Connecting Hydraulic Hose Assembly	66-1	66
Section III	SPECIAL TOOLS		
Group 06.	Special Tools	67-1	67
Section IV	CROSS REFERENCES INDEXES		
	National Stock Number Index	I-1	
	Part Number Index	I-7	
	Figure and item Number index	I-30	

UNIT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the 165 hp Outboard Propelling Unit. It authorizes the requisitioning issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3 EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

