

TECHNICAL MANUAL

**OPERATOR'S, UNIT, INTERMEDIATE
(DS) AND INTERMEDIATE (GS)
MAINTENANCE MANUAL**

FOR

**ENGINE, DIESEL,
CATERPILLAR, MODEL 3508
NSN 2815-01-216-0938**

HEADQUARTERS, DEPARTMENT OF THE ARMY

25 JULY 1986

Table of Contents

WHERE TITLE SHOWS DELETED TEXT DOES NOT PERTAIN TO THE 3508 ENGINE.

	Page		Page
Specifications for Engine Attachments, 3500 Industrial	1	Cooling System	
General Tightening Torque for Bolts, Nuts, and Taperlock Studs	3	Water Pump	31
Torque for Flared and O-Ring Fittings⁴ Engine Design	5	Aftercooler	32
Fuel System		Water Connection Group - Outlet	32
Fuel Injection	8	Water Temperature Regulators	33
Fuel Pressure Regulator (Earlier).....	8	V-Belt Tension Chart.....	33
Fuel Pressure Regulator (Later).....	9	Basic Engine Components	
Manual Shutoff Group	9	Cylinder Block	34
Fuel Injection Control Group	10	Cylinder Liners	35
Governor Fastener Group	11	Cylinder Liner Projection.....	35
Governor Drive	11	Pistons and Rings	36
Air Induction and Exhaust System		Connecting Rods	37
Camshafts	12	Connecting Rod and Main Bearing Journals	38
Valves	14	Crankshaft	39
Valve Covers	15	Crankshaft Wear Sleeves and Seals	40
Valve Rocker Arms, Lifters and Bridges	15	Front Balancer Group (3508)	41
Cylinder Heads.....	16	Lower Front Gear Group	42
Turbocharger Impeller Installation.....	17	Upper Front Gear Group (7N4871).....	44
Turbochargers	18	Rear Gear Group	45
Exhaust Manifolds	22	Flywheel	47
Air Intake Shutoff.....	23	Flywheel Runout	48
Lubrication System		Flywheel Housing.....	50
Oil Pump	26	Flywheel Housing Bore	52
Oil Filter Bypass Valve (Earlier).....	28	Flywheel Housing Runout.....	53
Oil Filter Bypass Valve (Later).....	29	Alternators and Regulators	Deleted
Oil Cooler Bypass and Cooling Jet Sequence Valves.....	30	Electrical System	
		Electric Starter Motors	Deleted
		Starter Solenoids	Deleted

Table of Contents (Continued)

	Page		Page
Air Starter Motors	Deleted	Troubleshooting	91
Pressure Regulating Valve for Air Starter Motor	Deleted	Fuel System	107
Systems Operation, 3500 Industrial Engines	61	Fuel System Inspection.....	107
Engine Design	63	Checking Engine Cylinders Separately.....	107
Fuel System	65	Fuel Injector Testing	107
Fuel Injection Control Linkage.....	67	Injector Tester Preparation	108
Fuel Injector.....	68	Operation of the Tester	108
Woodward UG8 Lever Governors	71	Leak Test for Injector Tester.....	109
Air Fuel Ratio Control	73	Injector Test Sequence	110
Air Inlet and Exhaust System	75	Fuel Pressure	116
Aftercooler	77	Engine Rotation	117
Turbochargers	78	Finding Top Center Position for No. 1 Piston	117
Valve System Components	78	Camshaft Timing.....	118
Lubrication System	80	Startup Procedure.....	120
Cooling System	82	Crankshaft Positions for Fuel Timing.....	121
Basic Block	84	Fuel Timing	122
Cylinder Block, Liners and Heads	84	Injector Synchronization.....	123
Pistons, Rings and Connecting Rods..	84	Fuel Setting	125
Crankshaft	84	Fuel Setting Adjustment.....	126
Camshafts	85	Engine Speed Measurement	127
Air Starting System	86	Woodward UG8 Lever Governor	128
Electrical System.....	88	Compensating Adjustment.....	128
Alternator	88	Low and High Idle Speed Adjustment.....	129
Starter Motor	88	Speed Droop Adjustment.....	129
Starter Solenoid.....	89	Air Fuel Ratio Control	132
Circuit Breaker.....	89	Air Inlet and Exhaust System.....	133
Contactor Switch (Water Temperature)	90	Restriction of Air Inlet and Exhaust.....	133
Testing and Adjusting	91	Measurement of Pressure in Inlet Manifold	133

Table of Contents (Continued)

	Page		Page
Exhaust Temperature.....	134	Projection of Cylinder Liners.....	145
Crankcase (Crankshaft Compartment)		Flywheel and Flywheel Housing.....	146
Pressure	134	Checking Crankshaft Deflection (Bend)....	148
Compression	134	Vibration Damper	149
Cylinder Heads.....	134	Electrical System	150
Valves	134	Test Tools for Electrical System	150
Bridge Adjustment.....	135	Battery	151
Crankshaft Positions for Valve		Charging System	151
Clearance Setting	136	Starting System.....	152
Valve Clearance	137	Air Starting System	Deleted
Lubrication System	139	Caterpillar, 3161 Governor.....	155
Too Much Oil Consumption.....	139	Governor Types	157
Measuring Engine Oil Pressure.....	139	Basic Governor	159
Oil Pressure is Low	140	Governor Components	159
Oil Pressure is High.....	140	Operation of the 3161 Governor	161
Too Much Bearing Wear	140	Auxiliary Controls	164
Increased Oil Temperature	140	Manual Shutdown	164
Cooling System	141	Pressure Shutdown.....	164
Visual Inspection of the Cooling System..	141	Electric Shutdown	164
Testing the Cooling System	141	Manual Mechanical Speed Control	164
Test Tools for Cooling System	141	Pneumatic Speed Control	165
Pressure Cap Test	142	Air Fuel Ratio Control.....	167
Radiator and Cooling System Leak Tests	143	Speed Adjusting Motor Governor Head....	169
Water Temperature Gauge Test	143	Manual Speed Setting Control	169
Water Temperature Regulator Test	144	Pneumatic Mid Speed Control	170
Basic Block	145	Troubleshooting	172
Connecting Rod Bearings	145	Governor Troubleshooting	172
Main Bearings	145	Air Fuel Ratio Control Troubleshooting.....	176
Cylinder Block	145		

Table of Contents (Continued)

	Page		Page
Pneumatic Speed Setting		System Checks	243
Control Troubleshooting	178	System Tests	245
Testing and Adjusting	180	Shutoff Speed Setting Adjustment	245
Governor Oil Pump	180	Wiring Diagrams	247
Governor Preparation	181		
Governor Installation	182	3500 Industrial Engines	253
Governor Adjustments	187	Disassembly and Assembly	
Auxiliary Controls	192	Manual Shutoff	257
Hydramechanical Protective System,		Gauge Panel	259
3500 Series Engines	197	Air Intake Shutoff	262
Specifications		Tachometer Drive	269
Shutoff Control Group	199	Crankcase Breather	270
Thermostatic Pilot Valve	202	Water Temperature Regulators	272
Accessory (Shutoff) Drive Group	202	Water Pump	275
Air Intake Shutoff	206	Fuel Filter Housing	279
Tachometer and Service Meter Drive	209	Fuel Priming Pump, Fuel Transfer Pump .	283
Remote Shutoff Valve Group	209	Oil Pump	288
Electrical Switches	210	Oil Filter Housing	293
Systems Operation		Oil Pan	300
Overspeed	211	Oil Sequence Valves	304
Low Engine Oil Pressure	211	Oil Cooler	305
High Coolant Temperature	211	Turbochargers	312
System Components	211	Exhaust Manifolds	321
System Hydraulics	214	Aftercooler	322
Hydraulic Circuits (Earlier)	214	Governor	326
Hydraulic Circuits (Later)	228	Governor Drive	328
Hydraulic Circuits, Later with an		Hydramechanical Shutoff Control	332
Alarm System	232	Hydramechanical Shutoff Drive	345
Testing and Adjusting		Accessory Drive (Front)	347
Troubleshooting	239		

Table of Contents (Continued)

 
 
	Page		Page
Oil and Water Pump Drive	350	Oil Pans	421
Crankshaft Vibration Damper	353	Oil Filter Bypass Valve	422
Crankshaft Front Seal and Wear Sleeve .	354	Duplex Oil Filter	423
Crankshaft Rear Seal and Wear Sleeve ..	356	Oil Scavenge Pump	424
Front Drive Housing	358	Exhaust Manifolds	426
Flywheel	362	Turbochargers.....	427
Flywheel Housing	363	Air Intake Shutoff.....	436
Valve Covers	365	Front Gear Groups.....	437
Rocker Shafts and Push Rods	366	Auxiliary Drive	440
Fuel Injectors.....	369	Tachometer Drive	441
Fuel Injection Control Linkage	371	Trunnion (Front).....	443
Cylinder Heads.....	377	Engine Front Support Group (Wide)	443
Valves	381	Vibration Damper Group	444
Bridge Dowels	382	Front Mounting Group.....	447
Connecting Rod Bearings	384	Stub Shafts	447
Front Balancer Group.....	385	Time Delay Relay	449
Rear Gear Group	387	Heaters, Jacket Water	449
Spacer Plates.....	391	Magnetic Pickup	449
Crankshaft Main Bearings.....	393	Tachometer, Digital	450
Pistons	396	Contactors	451
Cylinder Liners	398	Pressure Switches	452
Camshafts	400	Temperature Switches	453
Crankshaft	407	Sending Units, Oil Pressure	454
Specifications for Engine Attachments		Tachometer, Electric	454
49Y1-UP, 95Y1-UP, 27Z1-UP, 65Z1-UP,		Gauges, Ammeter/Oil Pressure/ Water Temperature	455
68Z1-UP, 71Z1-UP	411	Air Shutoff Solenoids	456
Ether Starting Aid	416	Air Compressor Group	457
Primary Fuel Filter	416	Air Control Valve Group	458
Fuel Filter Change Indicator Group	416		
Governor	417		

Table of Contents (Continued)

	Page		Page
Electric Protective System for Engines Equipped with Reversal Protection	459	Step Oil Pressure, Chart C	492
Components	460	Reversal Detection, Chart D	494
Individual Circuit Description	462	Troubleshooting Procedures	496
Engine Stopped	462	Overspeed Setting Calibration,	
Starting Engine	Deleted	Procedure A	496
Engine Starts to Run: No Faults	Deleted	Crank Terminate, Speed Adjustment,	
Engine Runs at Rated Speed:		Procedure B	497
No Faults	Deleted	Oil Step Calibration, Procedure C	498
Pressure (At Engine Speeds above Oil Step		Overspeed Verify Test, Procedure D	499
Speed Setting)	Deleted	Reversal Detection, Procedure E	500
Engine Shutdown Due to Fault:		Sensor Assembly Verify, Procedure F	501
Loss of Engine Oil	Deleted	On/Off Time Delay (Relay), Procedure G .	503
Engine Running Below Oil Step		Wiring Diagrams	504
Speed Setting: No Faults (or Just		Electric Protective System Schematic	505
Accelerating through Step Speed)	Deleted	Engine Wiring Diagram	506
Engine Shutdown Due to Fault: Low Oil		Typical Junction Box Wiring Diagram	507
Pressure (At Engine Speeds Below Oil		Customer Wiring with Electric	
Step Speed Setting)	Deleted	Protective System	510
Engine Shutdown Due to Fault:		Electrical Protective System for Generator Set,	
Coolant Overheating	Deleted	Industrial and Marine Engines	513
Engine Shutdown Due to Fault:		Components	514
Engine Overspeed	Deleted	Individual Circuit Description	516
Engine Shutdown Due to Fault:		Engine Stopped	516
Engine Reversal	Deleted	Starting Engine	518
Shutdown System with 2301 Electric		Engine Starts to Run: No Faults	520
Governor Control: No Faults	Deleted	Engine Runs at Rated Speed: No Faults	522
Troubleshooting	484	Engine Shutdown Due to Fault:	
Functional Test	485	Loss of Engine Oil Pressure (At Engine	
System Problem Index	486	Speeds Above Oil Step Speed Setting)	524
System Troubleshooting Charts,		Engine Shutdown Due to Fault: Low Oil	
Preliminary Checks	487	Pressure (At Engine Speeds Below Oil	
Overspeed, Chart A	488	Step Speed Setting)	528
Crank Terminate, Chart B	490		

Table of Contents (Continued)

	Page		Page
Engine Shutdown Due to Fault:		Operation and Maintenance, 3508 Industrial Engine	
Coolant Overheating	530	Safety	565
Engine Shutdown Due to Fault:		Operation Section	568
Engine Overspeed	532	Model Views.....	569
Shutdown System with 2301 Electric		Gauges	571
Governor Control: No Faults.....	534	Shutoff and Alarm System Components...	573
Electric Protective System		Engine Controls	575
Functional Tests	536	Before Starting the Engine	578
Speed Specification Chart	537	Starting the Engine	579
Troubleshooting	538	After Starting the Engine.....	582
Problem Identification Index	539	Stopping the Engine.....	583
System Troubleshooting Charts,		After Stopping the Engine	584
Preliminary Checks	540	Lifting Engine and Attachment.....	584
System Arming, Chart A.....	541	Engine Storage	585
Overspeed, Chart B.....	542	Maintenance Section	586
Crank Terminate, Chart C	544	Serial Number Location	587
Step Oil Pressure, Chart D.....	546	Maintenance Recommendations	587
Troubleshooting Procedures		Fuel, Coolant and Lubricant	
Overspeed Setting Calibration,		Specifications	590
Procedure A	548	Refill Capacities	592
Crank Terminate Speed Adjustment,		Engine Specifications.....	592
Procedure B	549	Recommended Lubricant Viscosities.....	593
Oil Step Calibration, Procedure C	550	Lubrication and Maintenance Chart	594
Overspeed Verify Test, Procedure D	551	When Required	596
Magnetic Pickup Verify, Procedure E.....	552	Every 10 Service Hours or Daily	597
On/Off Delay (Relay), Procedure F	553	Every 50 Service Hours or Weekly	609
Wiring Diagrams	554	Every 100 Service Hours or 2 Weeks	611
Electric Protective System Schematic.....	555	Every 250 Service Hours or Monthly.....	612
Engine Wiring Diagram	556	Every 500 Service Hours or 3 Months	617
Typical Junction Box Wiring Diagram	557	Every 1000 Service Hours or 6 Months	618
Customer Wiring with Electric		Every 2000 Service Hours or 1 Year.....	624
Protective System	560	Troubleshooting Section	628

GENERAL TIGHTENING TORQUE FOR BOLTS, NUTS AND TAPERLOCK STUDS			
The following charts give the standard torque values for bolts, nuts and taperlock studs of SAE Grade 5 or better quality. Exceptions are given in other sections of the Service Manual where needed. 			
THREAD DIAMETER		STANDARD TORQUE	
inches	millimeters	lb. ft.	N·m*
Standard thread 		Use these torques for bolts and nuts with standard threads (conversions are approximate).	
1/4	6.35	9 ± 3	12 ± 4
5/16	7.94	18 ± 5	25 ± 7
3/8	9.53	32 ± 5	45 ± 7
7/16	11.11	50 ± 10	70 ± 15
1/2	12.70	75 ± 10	100 ± 15
9/16	14.29	110 ± 15	150 ± 20
5/8	15.88	150 ± 20	200 ± 25
3/4	19.05	265 ± 35	360 ± 50
7/8	22.23	420 ± 60	570 ± 80
1	25.40	640 ± 80	875 ± 100
1 1/8	28.58	800 ± 100	1100 ± 150
1 1/4	31.75	1000 ± 120	1350 ± 175
1 3/8	34.93	1200 ± 150	1600 ± 200
1 1/2	38.10	1500 ± 200	2000 ± 275
Use these torques for bolts and nuts on hydraulic valve bodies.			
5/16	7.94	13 ± 2	20 ± 3
3/8	9.53	24 ± 2	35 ± 3
7/16	11.11	39 ± 2	50 ± 3
1/2	12.70	60 ± 3	80 ± 4
5/8	15.88	118 ± 4	160 ± 6
Taperlock stud 		Use these torques for studs with Taperlock threads.	
1/4	6.35	5 ± 2	7 ± 3
5/16	7.94	10 ± 3	15 ± 5
3/8	9.53	20 ± 3	30 ± 5
7/16	11.11	30 ± 5	40 ± 10
1/2	12.70	40 ± 5	55 ± 10
9/16	14.29	60 ± 10	80 ± 15
5/8	15.88	75 ± 10	100 ± 15
3/4	19.05	110 ± 15	150 ± 20
7/8	22.23	170 ± 20	230 ± 30
1	25.40	260 ± 30	350 ± 40
1 1/8	28.58	320 ± 30	400 ± 40
1 1/4	31.75	400 ± 40	550 ± 50
1 3/8	34.93	480 ± 40	650 ± 50
1 1/2	38.10	550 ± 50	750 ± 70

*1 newton meter (N·m) is approximately the same as 0.1 mkg.

T95416-7