

***TM 9-2815-200-35**

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

**DIRECT SUPPORT, GENERAL SUPPORT
AND DEPOT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS
AND SPECIAL TOOLS LISTS
FOR
ENGINE, WITH CONTAINER:
TURBOSUPERCHARGED, DIESEL,
FUEL INJECTION,
90-DEGREE "V" TYPE, AIR-COOLED,
12-CYLINDER, ASSEMBLY;
MODELS AVDS-1790-2M (2815-856-4996),
AVDS-1790-2A AND AVDS-1790-2AM
(2815-856-9005)**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
15 OCTOBER 1970**

TECHNICAL MANUAL

No. 9-2815-200-35

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D. C. 20025, **15 October 1970**

*DIRECT SUPPORT, GENERAL SUPPORT,
AND DEPOT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR*

**ENGINE, WITH CONTAINER: TURBOSUPERCHARGED, DIESEL,
FUEL INJECTION, 90-DEGRE "V"TYPE, AIR COOLED, 12 CYLINDER,
ASSEMBLY; MODELS AVDS-1790-2M (2815-856-4996),
AVDS-1790-2A AND AVDS-1790-2AM (2815-856-9005)**

	Paragraphs	Pages
CHAPTER 1. INTRODUCTION		
Section I. General	1-1-1-5	1-1
Section II. Description	1-6-1-25	1-2
CHAPTER 2. PARTS, SPECIAL TOOLS AND EQUIPMENT, IMPROVISED TOOLS AND SHOP LAYOUT		
Section I. Repair and replacement parts	2-1-2-3	2-1
Section II. Special tools and equipment for direct support, general support and depot maintenance	2-4-2-6	2-1
Section III. Shop layout	2-7-2-8	2-7
CHAPTER 3. TROUBLESHOOTING		
Section I. General	3-1-3-2	3-1
Section II. Troubleshooting procedures	3-3-3-11	3-1
CHAPTER 4. REPLACEMENT OF ENGINE ACCESSORIES, COMPONENTS AND RELATED SERVICE OPERATIONS		
Section I. General	4-1—4-2	4-1
Section II. Removal or installation of engine accessories	4-3—4-4	4-2

This manual supersedes TM 9-2815-200-34 dated February 1963, TM 9-2815-200-35 dated August 1960 and TM 9-2815-200-35P dated November 1962 and all published changes thereto.

		Paragraphs	
Section III.	Replacement of main and auxiliary oil filter by pass valve, oil pressure regulator valve and fuel/water separator filter	4-5-4-6	4-44
Section IV.	Replacement of cooling fan clutch assembly and fan drive housing outer flange bearing	4-7-4-8	4-50
Section V.	Replacement of intake manifold tubes and intake manifold assembly	4-9-4-11	4-53
Section VI.	Replacement of engine oil pan	4-12-4-13	4-58
Section VII.	Replacement of valve rocker arms, rocker arm shafts, and valve clearance adjusting screws	4-14-4-15	4-62
Section VIII.	Overhaul of fuel injector nozzle and holder assembly . . .	4-16-4-18	4-80
Section IX.	Replacement of flywheel and crankshaft oil seal	4-19-4-20	4-88
Section X.	Service operations	4-21-4-23	4-93

CHAPTER 5. DISASSEMBLY OF ENGINE

Section I.	Preparation of engine for disassembly	5-1-5-3	5-1
Section II.	Installation of engine on overhaul stand for dis-assembly into subassemblies	5-4-5-15	5-3

CHAPTER 6. OVERHAUL OF ENGINE COMPONENTS

Section I.	General cleaning, inspection, repair, and assembly procedures	6-1-6-7	6-1
Section II.	Overhaul of crankcase assembly, transmission adapter, and starter and generator drive components	6-8-6-13	6-10
Section III.	Overhaul of connecting rod, crankshaft, and associated parts	6-14-6-18	6-33
Section IV.	Overhaul of torsional vibration damper, flywheel, accessory drive gear, and transmission drive gear-shaft	6-19-6-21	6-42
Section V.	Overhaul of pistons, rings, and piston pins	6-22-6-27	6-47
Section VI.	Overhaul of cylinder assembly	6-28-6-34	6-51
Section VII.	Overhaul of oil pump, oil pan, damper and oil filter housing and associated parts.... .	6-35-6-38	6-75
Section VIII.	Overhaul of front fan drive housing and clutch assembly	6-39-6-40	6-108
Section IX.	Overhaul of rear fan drive housing and clutch assembly and accessory drive housing	6-41-6-42	6-134
Section X.	Overhaul of camshaft and throttle control cross shaft and fuel injection pump linkage	6-43-6-45	6-173
Section XI.	Overhaul of engine and transmission oil coolers and engine cooling fan	6-46-6-48	6-184
Section XII.	Overhaul of engine shrouding and associated parts . . .	6-49-6-50	6-191
Section XIII.	Overhaul of intake manifolds, exhaust manifolds and tubes, cylinder head oil drain tubes, and oil filler and indicator tubes	6-51-6-53	6-193
Section XIV.	Overhaul of generator and starter supports, fuel check valve, primary and secondary fuel filters, and fuel /water separator	6-54-6-58	6-201
Section XV.	Overhaul of fuel injection pump fuel tubes, fuel injector nozzle fuel return tubes, injection pump and turbosuper-charger oil hoses, and generator air intake and exhaust tubes and associated parts	6-59-6-62	6-209

	Paragraphs	Pages
Section XVI. Overhaul of crankcase breather tubes, fire extinguisher tube, injection pump electrical lead, and manifold heater fuel tubes, filter, and electrical components	6-63—6-65	6-213
Section XVII. Overhaul of fuel injection pump drive couplers, fuel injector nozzles, piston oiler nozzles, and time totalizing meter .	6-66-6-70	6-214
 CHAPTER 7. ASSEMBLY OF ENGINE		
Section I. General	7-1-7-3	7-1
Section II. Assembly of engine from subassemblies	7-4-7-17	7-2
 CHAPTER 8. ENGINE TEST AND ENGINE CONTAINER		
Section I. Engine test and adjustments	8-1-8-7	8-1
Section II. Engine and container	8-8-8-11	8-13
INDEX		9-1
APPENDIX A. REFERENCES		A-1
 APPENDIX B. DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST		
Section I. Introduction		B-1
Section II. Repair parts		B-5
01 -Engine		B-5
0100 - Engine assembly		B-5
0101 - Crankcase, cylinder head		B-12
0102 - Crankshaft		B-15
0103 - Flywheel assembly		B-18
0104 - Pistons, connecting rods		B-18
0105 - Valves, camshafts and timing system		B-20
0106 - Engine lubrication system		B-27
0108 - Manifolds and connecting parts		B-53
0109 - Accessory driving mechanisms and related pa;		B-57
03 -Fuel system		B-68
0301 - Fuel injector		B-68
0302 - Fuel pumps, lines and fittings		B-74
0305 - Turbosupercharger		B-78
0308 - Engine speed governor and controls		B-81
0309 - Fuel filters		B-84
0311 - Engine starting aids		B-89
05 - Cooling system		B-94
0502 -Deflectors and shrouds		B-94
0505 - Fanassembly		B-103
06 -Electrical system		B-113
0601 - Generator		B-113
0603 - Starting mater		B-116
0610 - Sending units and warning switches		B-117
33 -Special purpose kits		B-118
3301 - Reusable shipping containers		B-118

	Paragraphs	Pages
	42 - Electrical equipment	B-119
	4210 - Instruments	B-119
Section III.	Special tools	B-120
	26 - Tools and test equipment	B-120
	2604 . Special tools	B-120
Section IV.	General use standardized parts	B-125
Section V.	Federal stock number and ordnance part number indexes	B-145

LIST OF ILLUSTRATIONS

Figure Number	Title	Page
1-1	AVDS-1790-2M, AVDS-1790-2AM, and AVDS-1790-2A engine assembly without time totalizing meter-right front view.	xxviii
1-2	AVDS-1790-2M, AVDS-1790-2AM, and AVDS-1790-2A engine assembly with secondary fuel filter-left front view.	xxix
1-3	AVDS-1790-2M, AVDS-1790-2AM, and AVDS-1790-2A engine assembly with secondary fuel filter-front view.	xxx
1-4	AVDS-1790-2A engine assembly with time totalizing meter-right front view.	xxxi
1-5	AVDS-1790-2A engine assembly with fuel/ water separator filter-left front view.	xxxii
1-6	AVDS-1790-2A engine assembly with fuel/ water separator filter-front view.	xxxiii
1-7	AVDS-1790-2A engine assembly with relocated oil filler tube-rear view.	xxxiv
1-8	Engine major working parts-schematic diagram.	1-5
1-9	Engine lubrication system.	1-9
1-10	Engine oil flow control-schematic diagram.	1-11
1-11	Main fuel system-schematic diagram.	1-13
1-12	Manifold air induction heater system-schematic diagram.	1-15
1-13	Piston actuated cooling fan clutch-sectional view.	1-17
1-14	Mechanical cooling fan clutch-sectional view.	1-18
1-15	Early crankcase breather and fire extinguisher system.	1-19
1-16	Late crankcase breather and fire extinguisher system.	1-20
2-1	Improvised tools-ring compressor, and lifting tool.	2-2
2-2	Improvised tool-coupling puller.	2-3
2-3	Improvised tool-valve sleeve remover.	2-4
2-4	Typical shop layout.	2-7
4-1	Disconnecting or connecting fuel hose at fuel pump outlet adapter and fuel pump inlet tube at fuel pump.	4-2
4-2	Disconnecting or connecting fuel pump.	4-3
4-3	Removing or installing fuel pump.	4-3
4-4	Removing or installing starter solenoid jumper lead.	4-3
4-5	Removing starter retaining "U" bolt.	4-4
4-6	Removing starter support and cradle.	4-4
4-7	Removing or installing starter mounting nuts using open end wrench-5120-678-5288.	4-4
4-8	Removing or installing starter assembly.	4-5
4-9	Installing starter support, cradle, and "U" bolt,	4-5
4-10	Disconnecting or connecting time totalizing meter electrical lead at generator.	4-6
4-11	Removing or installing generator air intake tube.	4-6
4-12	Removing generator support, cradle, and "U" bolt.	4-7
4-13	Disconnecting or connecting cylinder head right rear oil drain tube and generator boot hose clamps.	4-7
4-14	Loosening or tightening generator mounting nuts using box wrench-5120-789-4881.	4-8
4-15	Removing or installing generator and boot.	4-8
4-16	Removing or installing generator gasket.	4-9
4-17	Installing generator support, cradle, and "U" bolt.	4-9

Figure Number	Title	Page
4-18	Loosening or tightening oil filler upper and lower tube hose connection (relocated oil filler tube installation).	4-10
4-19	Removing or installing upper oil filler tube (relocated oil filler tube installation).	4-10
4-20	Removing or installing crankcase rear breather tube and lower left rear shroud plate.	4-11
4-21	Removing or installing upper oil filler tube support bracket and turbosupercharger end shroud.	4-12
4-22	Disconnecting or connecting turbosupercharger oil inlet hose elbow from nipple using open end wrench-5120-448-0404.	4-12
4-23	Removing or installing turbosupercharger outer shroud plate.	4-13
4-24	Removing or installing oil inlet hose, elbow, and nipple.	4-13
4-25	Removing or installing generator exhaust tube cap (right side only).	4-14
4-26	Removing or installing generator exhaust tube support clamp (right side only).	4-14
4-27	Removing or installing generator exhaust tube (right side only).	4-15
4-28	Disconnecting or connecting inner shroud plate (rear view).	4-15
4-29	Removing or installing transmission oil cooler end shroud and inner shroud plate.	4-16
4-30	Disconnecting or connecting turbosupercharger oil drain tube at turbosupercharger.	4-16
4-31	Disconnecting or connecting turbosupercharger air outlet elbow.	4-16
4-32	Disconnecting or connecting turbosupercharger at mounting base.	4-17
4-33	Disconnecting or connecting exhaust pipes at turbine housing and removing or installing turbosupercharger.	4-17
4-34	Removing or installing cooling fan vanes.	4-18
4-35	Removing or installing cooling fans.	4-18
4-36	Disconnecting or connecting front end of cooling fan shroud.	4-19
4-37	Disconnecting or connecting cooling fan shroud on top frame.	4-20
4-38	Disconnecting or connecting rear end of cooling fan shroud and removing or installing cooling fan shroud and fan housings.	4-20
4-39	Fuel injection pump-installed view.	4-21
4-40	Removing or installing left rear upper cover.	4-21
4-41	Removing or installing fuel injector left tube clamps.	4-22
4-42	Removing or installing fuel injector right tube clamps.	4-23
4-43	Fuel injector tubes-installed view.	4-24
4-44	Disconnecting fuel injector tubes from fuel injection pump.	4-24
4-45	Disconnecting or connecting crankcase breather tube, electrical lead, throttle control, and fuel return hose-engines prior to relocated crankcase breather tube.	4-25
4-46	Disconnecting or connecting throttle control, fuel return hose, and electrical lead-engines with relocated crankcase breather tube.	4-25
4-47	Disconnecting or connecting crankcase breather tube at front of engine.	4-26
4-48	Disconnecting or connecting rear intermediate crankcase breather tube at tube tee-engines prior to relocated crankcase breather tube.	4-26
4-49	Removing or installing angle bracket from fuel injection pump.	4-26
4-50	Disconnecting or connecting fuel injection pump oil and fuel inlet hoses	4-26
4-51	Positioning fuel injection pump coupler by turning flywheel using splined wrench - 5120-793-7895.	4-27

<i>Figure Number</i>	<i>Title</i>	<i>Page</i>
4-52	Removing fuel injection pump splined coupler bolts.	4-27
4-53	Separating fuel injection pump coupler sleeves.	4-27
4-54	Removing fuel injection pump diaphragm coupler bolts.	4-28
4-55	Removing or installing fuel injection pump mounting bolts and breather tube bracket-engines with breather tube routed around injection pump.	4-29
4-56	Separating fuel injection pump diaphragm coupler and removing or installing fuel injection pump mounting bolts	4-30
4-57	Removing fuel injection pump and preformed packing-splined coupler.	4-30
4-58	Removing fuel injection pump and preformed packing-diaphragm coupler.	4-31
4-59	Removing fuel injection pump front splined coupler sleeve nut and lock washer.	4-31
4-60	Removing fuel injection pump diaphragm coupler nut and lock washer.	4-32
4-61	Removing fuel injection pump splined coupler sleeve and hub.	4-32
4-62	Removing fuel injection pump diaphragm coupler.	4-33
4-63	Installing coupler half and torque tightening fuel injection pump splined coupler nut.	4-34
4-64	Installing coupler half and torque tightening fuel injection pump diaphragm coupler nut.	4-34
4-65	Removing or installing fuel injection pump timing hole plug.	4-35
4-66	Fuel injection pump timing hole cover removed showing marked gear tooth in timed position.	4-35
4-67	Timing marks on fuel injection bearing retaining plate and splined coupler hub alined.	4-35
4-68	Timing marks on fuel injection pump bearing retaining plate and diaphragm coupler hub alined.	4-36
4-69	Disconnecting or connecting primary fuel filter drain line.	4-36
4-70	Removing or installing primary fuel filter bracket and throttle linkage,	4-36
4-71	Flywheel in position for fuel injection pump timing (Models AVDS-1790-2M and AVDS-1790-2AM only).	4-37
4-72	Flywheel in position for fuel injection pump timing (Model AVDS-1790-2A only)	4-37
4-73	Position of camshaft lobes for injection pump timing..	4-38
4-74	Installing preformed packing (B) on mounting base oil transfer tube .	4-38
4-75	Correct position of fuel injection pump drive coupler on hub before pump installation.	4-38
4-76	Fuel injection pump diaphragm coupling and pilot ring on hub before pump installation.	4-39
4-77	Installing fuel injection pump assembly on engine.	4-39
4-78	Positioning fuel injection pump coupler sleeves-splined coupler.	4-39
4-79	Removing fuel injection pump drive gear train backlash and setting advanced unit retard position-splined coupler.	4-40
4-80	Fuel injection pump splined drive coupler with lubrication fitting installed.	4-40
4-81	Checking diaphragm coupler assembly clearance.	4-40
4-82	Removing fuel injection pump drive gear train backlash and setting advance unit retard position—diaphragm coupler.	4-41
4-83	Installing gasket on cylinder 1 R before installing primary fuel filter and throttle linkage.	4-41
4-84	Checking throttle linkage for free movement.	4-41
4-85	Throttle linkage adjustment-schematic diagram.	4-42
4-86	Connecting fuel injector tubes-schematic diagram.	4-43

Figure Number	Title	Page
4-87	Front fan drive housing fan rotor hub sleeve spacer-4910-795-7952 installed for leakage test.	4-44
4-88	Checking cooling fan blade clearance.	4-44
4-89	Removing or installing main oil filter bypass valve plug, gasket and spring.	4-45
4-90	Removing or installing main oil filter bypass valve.	4-45
4-91	Removing or installing auxiliary oil filter bypass valve plug, gasket, and spring.	4-46
4-92	Removing or installing auxiliary oil filter bypass valve.	4-46
4-93	Removing or installing engine oil pressure regulating valve.	4-47
4-94	Disconnecting or connecting fuel/ water separator filter inlet hose at fuel pump.	4-48
4-95	Disconnecting or connecting fuel hoses and drain line at fuel/ water separator filter.	4-48
4-96	Removing or installing fuel/ water separator filter assembly.	4-49
4-97	Removing or installing fuel/ water separator filter cover bolts.	4-49
4-98	Removing or installing fuel/ water separator filter cover.	4-49
4-99	Removing or installing rear fan drive housing cover attaching parts.	4-50
4-100	Removing or installing rear fan drive housing cover and clutch assembly.	4-50
4-101	Removing or installing fan drive housing cover preformed packing.	4-51
4-102	Comparison between piston actuated and mechanical fan drive housing and cover assemblies.	4-51
4-103	Removing housing cover and bearing from vertical drive shaft.	4-52
4-104	Removing fan drive clutch upper ball bearing from housing cover.	4-52
4-105	Pressing fan drive clutch upper ball bearing into housing cover.	4-52
4-106	Disconnecting or connecting cylinder head oil drain tube hoses-cylinders 1 L and 2L.	4-53
4-107	Disconnecting or connecting intermediate cylinder head oil drain tubes-cylinder 2L.	4-53
4-108	Removing or installing intermediate cylinder head oil drain tube-cylinder 2L.	4-53
4-109	Disconnecting or connecting intake manifold tube from intake manifold and cylinder 2L.	4-54
4-110	Removing or installing intake manifold tube-cylinder 2L.	4-54
4-111	Left intake manifold-installed view.	4-55
4-112	Disconnecting or connecting manifold heater fuel inlet tube.	4-55
4-113	Disconnecting or connecting cylinder head oil drain tube-left front.	4-56
4-114	Disconnecting or connecting cylinder head oil drain tube-left rear.	4-56
4-115	Disconnecting or connecting heater fuel inlet and outlet tubes from intake manifold heater	4-56
4-116	Disconnecting or connecting turbosupercharger air outlet elbow and heater tube.	4-57
4-117	Removing or installing intake manifold assembly-left side.	4-57
4-118	Disassembling or assembling intake manifold assembly.	4-58
4-119	Disconnecting or connecting right front cylinder head oil drain tube.	4-59
4-120	Disconnecting or connecting left rear cylinder head oil drain tube.	4-59
4-121	Disconnecting or connecting right rear cylinder head oil drain tube.	4-60
4-122	Disconnecting or connecting oil filler and oil level indicator tubes from oil pan.	4-60
4-123	Removing or installing oil pan rear bolts,	4-61
4-124	Removing or installing engine oil pan.	4-61

Figure Number	Title	Page
4-125	Removing or installing oil pan sealing thread.	4-62
4-126	Removing or installing right front upper cover.	4-63
4-127	Removing or installing right rear upper cover.	4-63
4-128	Removing or installing oil filler and oil level indicator tube shroud plates-one piece type oil filler and indicator tubes installation.	4-63
4-129	Removing or installing oil level indicator tube shroud plate-modified shroud plate installation.	4-64
4-130	Removing or installing left front upper cover-modified upper cover installation.	4-64
4-131	Disconnecting or connecting oil filler and oil level indicator tube retaining straps-one piece type oil filler and indicator tubes installation shown.	4-64
4-132	Oil level indicator and oil filler tube upper shroud-tubes with splash pan installation installed view.	4-65
4-133	Disconnecting or connecting fuel drain tubes-tubes with splash pan installation.	4-65
4-134	Removing or installing oil level indicator and oil filler and oil level indicator tube shroud plate bolts-tubes with splash pan installation.	4-66
4-135	Removing or installing oil level indicator and oil filter tube upper cover-with splash pan installation.	4-66
4-136	Oil level indicator tube upper cover plate-relocated oil filler tube modified installed view.	4-66
4-137	Oil level indicator tube upper cover plate-relocated oil filler tube installed view.	4-67
4-138	Disconnecting or connecting fuel drain tubes-relocated oil filler tube installation.	4-67
4-139	Removing or installing oil level indicator tube upper cover plate-located oil filler tube installation.	4-68
4-140	Removing or installing oil level indicator upper cover plate-relocated oil filler tube installation.	4-68
4-141	Removing or installing left rear upper cover.	4-68
4-142	Disconnecting or connecting oil cooler hoses-left side.	4-69
4-143	Removing or installing manifold heater ignition unit-right side.	4-69
4-144	Disconnecting or connecting oil cooler support beam-right side.	4-69
4-145	Disconnecting or connecting shroud from top frame-right front side.	4-70
4-146	Disconnecting or connecting right oil cooler end shroud and upper transmission shroud.	4-70
4-147	Disconnecting or connecting right rear shroud from top frame.	4-70
4-148	Removing or installing oil coolers and top frame as an assembly.	4-71
4-149	Removing or installing top frame retaining brackets.	4-72
4-150	Disconnecting or connecting fuel injector nozzle holder fuel inlet and return tubes.	4-73
4-151	Removing or installing fuel injector nozzle fuel tube adapters.	4-73
4-152	Loosening fuel injector nozzle and holder retainer using wrench-5120-871-7198.	4-74
4-153	Removing or installing fuel injector nozzle and holder assembly.	4-74
4-154	Removing or installing cylinder head shroud plate.	4-75
4-155	Disconnecting or connecting inner cylinder air deflector,	4-75
4-156	Disconnecting or connecting inter cylinder connector flange and valve adjusting screw covers.	4-76

Figure Number	Title	Page
4-157	Removing or installing valve rocker arm cover bolts and removing valve rocker arm cover.	4-77
4-158	Removing or installing valve adjusting screw.	4-78
4-159	Removing or installing valve rocker arm shaft plugs.	4-78
4-160	Removing valve rocker arm shafts and valve rocker arms.	4-78
4-161	Installing valve rocker arms and valve rocker arm shafts.	4-78
4-162	Installing valve rocker arm cover.	4-79
4-163	Positioning lip of intercylinder preformed hose.	4-79
4-164	Positioning valve adjusting screw pad on end of valve stem.	4-80
4-165	Torque tightening fuel injector nozzle.	4-80
4-166	Fuel injector nozzle and holder assembly,	4-81
4-167	Fuel injector nozzle and holder assembly—sectional view.	4-82
4-168	Testing fuel injector nozzle and holder assembly.	4-83
4-169	Partial disassembly or assembling fuel injector nozzle and holder assembly.	4-84
4-170	Disassembling or assembling fuel injector nozzle components.	4-85
4-171	Removing or installing transmission drive gearshaft and flywheel mounting bolts.	4-88
4-172	Removing transmission drive gearshaft using bolts as puller screws.	4-88
4-173	Installing eye bolt - 5306-050-0348.	4-89
4-174	Removing or installing flywheel.	4-89
4-175	Removing or installing crankshaft oil seal retainer.	4-90
4-176	Removing or installing oil seal cap and oil seal housing mounting bolts.	4-90
4-177	Removing oil seal housing using mechanical pullers - 5120-473-7222.	4-91
4-178	Removing or installing oil seal housing cap and housing.	4-91
4-179	Removing or installing crankshaft oil seal,	4-91
4-180	Removing crankshaft oil seal spring.	4-91
4-181	Installing crankshaft oil seal spring.	4-92
4-182	Correct position for crankshaft oil seal split line before installing seal retainer.	4-92
4-183	Installing flywheel, rising bolts to draw flywheel against crankshaft.	4-93
4-184	Installing or removing compression adapter - 4910-795-7961 (cylinder compression test).	4-94
4-185	Checking cylinder compression using gage assembly - 4910-870-6283 and compression adapter - 4910-795-7961.	4-95
4-186	Removing or installing valve adjusting screw cover plates - right side,	4-96
4-187	Removing or installing valve adjusting screw cover plates - left side.	4-97
4-188	Setting exhaust valve clearance using thickness gage blade -5210-793-7899.	4-98
4-189	Setting intake valve clearance using thickness gage blade -5210-793-7898,	4-98
4-190	Flywheel timing mark locations.	4-98
4-191	Disconnecting or connecting oil cooler inlet and outlet hoses.	4-99
4-192	Removing or installing engine and transmission oil coolers.	4-99
4-193	Removing or installing oil cooler end shroud.	4-100
4-194	Removing or installing intake valve cover plate.	4-100
4-195	Cross section of cylinder 6R showing position of camshaft lobes for valve timing.	4-100
4-196	Flywheel timing marks aligned with pointer for valve timing - right bank of cylinders.	4-101
4-197	Setting intake valve clearance for cylinders 6R using thickness gage blade - 5120-793-7897.	4-101
4-198	Removing or installing camshaft gear housing cover.	4-102

Figure Number	Title	Page
4-199	Removing or installing camshaft drive gearshaft plug retaining ring.	4-102
4-200	Removing or installing camshaft drive gearshaft plug using mechanical puller -5120-678-5282,	4-102
4-201	Removing or installing camshaft drive shaft using mechanical puller -5120-678-5282.	4-102
5-1	Lifting engine using multiple leg sling - 4910-919-2884.	5-1
5-2	Removing or installing oil pan drain plugs (Model AVDS-1790-2-M).	5-2
5-3	Removing or installing oil pan drain plugs (Models AVDS-1790-2AM and AVDS-1790-2A).	5-2
5-4	Disconnecting or connecting time totalizing meter electrical lead clamps.	5-3
5-5	Removing or installing time totalizing meter.	5-3
5-6	Engine on maintenance and overhaul stand - 4910-856-4137.	5-4
5-7	Removing or installing oil filler and oil level indicator tube shroud plate oil drain hose - engines with oil filler and indicator with splash pan drain,	5-5
5-8	Removing or installing oil filler and oil level indicator tube shroud plate and oil drain hose - engines with oil filler and indicator with splash pan drain	5-5
5-9	Oil filler and oil level indicator tube shroud plate oil drain hose grommet - installed view - engines with oil filler and indicator with splash pan drain.	5-6
5-10	Removing or installing manifold heater ignition unit - right side.	5-6
5-11	Removing or installing right oil cooler screens.	5-7
5-12	Disconnecting or connecting right oil cooler hose and primary fuel filter drain tubes.	5-8
5-13	Removing or installing oil cooler to support bolts.	5-8
5-14	Removing or installing right engine oil cooler.	5-9
5-15	Removing or installing right transmission oil cooler.	5-9
5-16	Disconnecting or connecting upper cover frame - right front view.	5-9
5-17	Disconnecting or connecting upper cover frame - right rear view.	5-10
5-18	Removing or installing oil indicator and oil filler tube to upper frame retaining strap - left side engines without relocated oil filler tube.	5-10
5-19	Removing or installing right oil cooler end shroud.	5-11
5-20	Removing or installing right oil cooler support beam.	5-11
5-21	Removing or installing upper cover frame support brackets - right side.	5-12
5-22	Removing or installing right turbosupercharger oil inlet hose and transmission shroud.	5-13
5-23	Removing or installing right manifold heater fuel return tube.	5-13
5-24	Disconnecting or connecting manifold heater fuel inlet tube at manifold heater and cylinder head oil drain manifolds.	5-14
5-25	Removing or installing fuel check valve.	5-14
5-26	Removing or installing manifold heater fuel inlet solenoid valve and fuel filter.	5-15
5-27	Removing or installing manifold heater fuel return solenoid valve and bracket.	5-15
5-28	Removing or installing right rear cylinder head oil drain tube and turbosupercharger oil drain tube.	5-16
5-29	Disconnecting or connecting right front cylinder head oil drain tube.	5-16
5-30	Disconnecting or connecting left front cylinder head oil drain tube.	5-16
5-31	Disconnecting or connecting left rear cylinder head oil drain tube.	5-17
5-32	Removing or installing right cylinder head oil drain manifold tubes.	5-17
5-33	Removing or installing right intake manifold.	5-18
5-34	Removing or installing primary fuel filter drain tube.	5-19

Figure Number	Title	Page
5-35	Removing or installing primary fuel filter.	5-19
5-36	Removing or installing secondary fuel filter.	5-20
5-37	Disconnecting or connecting fuel/ water separator fuel outlet hose from bulkhead elbow.	5-20
5-38	Removing or installing fuel/ water separator filter.	5-21
5-39	Removing or installing primary fuel filter bracket, throttle linkage cross shaft, and camshaft end plate.	5-21
5-40	Removing or installing secondary fuel filter mounting bracket, camshaft cover plate, and tachometer drive cover.	5-22
5-41	Removing or installing fuel/ water separator filter mounting bracket.	5-22
5-42	Removing or installing cylinder barrel shroud - cylinder No. 1R.	5-23
5-43	Removing or installing right front shroud.	5-23
5-44	Removing or installing cylinder baffle - cylinder No. 1R.	5-24
5-45	Disconnecting or connecting fire extinguisher and fuel inlet tubes - front shroud.	5-24
5-46	Removing or installing top and side filler plates - cylinder No. 1L.	5-25
5-47	Removing or installing left front shroud.	5-25
5-48	Disconnecting or connecting fuel and oil tubes - rear center shrouds.	5-26
5-49	Removing or installing exhaust manifold left and right rear center shrouds.	5-26
5-50	Removing or installing right rear shroud.	5-27
5-51	Removing or installing cylinder head plates - right side.	5-28
5-52	Removing or installing oil filler and oil level indicator tube plates - engines with one piece oil filler tube.	5-28
5-53	Removing or installing oil filler and oil level indicator tubes - engines with one piece oil filler tube.	5-29
5-54	Removing or installing cylinder head plates at oil filler and oil level indicator tubes - engines without splash pan installation.	5-29
5-55	Removing or installing oil filler and oil level indicator tubes - engines with splash pan installation.	5-30
5-56	Removing or installing oil filler and oil level indicator tube plates - engines with splash pan installation.	5-30
5-57	Removing or installing cylinder head plates at oil filler and oil level indicator tubes - engines with splash pan installation.	5-31
5-58	Removing or installing oil level indicator tube plate - engines with relocated oil filler tube installation.	5-31
5-59	Removing or installing oil filler and oil level indicator tubes - engines with relocated oil filler tube installation.	5-32
5-60	Removing or installing oil level indicator tube cylinder plate - engines with relocated oil filler tube installation.	5-33
5-61	Removing or installing fuel injector nozzle fuel return tubes - engines with metallic tubes.	5-34
5-62	Removing or installing fuel injector nozzle fuel return tubes - engines with flexible tubes.	5-35
5-63	Removing or installing fuel injector nozzle fuel tube connectors and elbow connector - right side.	5-36
5-64	Removing fuel injector clamps - engines without additional clamps.	5-37
5-65	Removing or installing fuel injector tube clamps - engines with additional clamps.	5-38
5-66	Disconnecting or connecting fuel injector tubes - at fuel injector nozzle and holder assemblies.	5-39

Figure Number	Title	Page
5-67	Removing or installing fuel injector tubes at fuel injection pump.	5-40
5-68	Removing or installing exhaust manifold and exhaust pipe retaining straps.	5-40
5-69	Removing or installing exhaust manifolds and exhaust pipes - cylinder Nos. 1R, 2R, and 3R and cylinder Nos. 1L, 2L, and 3L - engines prior to rerouting of crankcase breather tube.	5-41
5-70	Removing or installing manifolds and exhaust pipes - cylinder Nos. 1R, 2R, and 3R and cylinder Nos. 1L, 2L, and 3L, - engines with rerouted crankcase breather tube.	5-42
5-71	Removing or installing fuel return hose and crankcase breather tube tee - engines prior to rerouting of fuel return hose.	5-43
5-72	Disconnecting or connecting intermediate crankcase breather tubes at fuel injection pump clamp.	5-43
5-73	Removing or installing fuel return hose - engines with rerouted fuel return hose.	5-44
5-74	Removing or installing crankcase breather tube tee - engines with rerouted crankcase breather tube.	5-44
5-75	Removing or installing breather tube cushioned clamp at rear fan drive housing - engines with rerouted crankcase breather tube.	5-45
5-76	Removing or installing fuel inlet hose and crankcase breather tube.	5-45
5-77	Removing fan drive control valve - engines with fan control valve.	5-46
5-78	Removing or installing exhaust manifolds and exhaust pipes - cylinder Nos. 4R, 5R, and 6R and cylinder Nos. 4L, 5L, and 6L.	5-47
5-79	Removing or installing right turbosupercharger mounting base.	5-48
5-80	Removing or installing right and left turbosupercharger mounting base tie rod.	5-48
5-81	Removing or installing right turbosupercharger mounting base support.	5-49
5-82	Disconnecting or connecting throttle rods at intermediate throttle lever.	5-50
5-83	Removing or installing intermediate throttle lever support.	5-50
5-84	Removing or installing fuel injector tube angle brackets.	5-51
5-85	Disconnecting or connecting fuel injection pump oil inlet hose - engines prior to rerouting of hose and clamps.	5-51
5-86	Disconnecting fan clutch oil transfer hose - engines with transfer hose.	5-51
5-87	Disconnecting or connecting fuel injection pump oil inlet hose - engines with relocated hose clamps.	5-52
5-88	Disconnecting or connecting turbosupercharger oil inlet hose - engines prior to rerouting of hoses and clamps.	5-53
5-89	Removing or installing fire extinguisher tube - engines prior to new tube and clamps.	5-54
5-90	Removing or installing turbosupercharger oil inlet hose and fire extinguisher tube - engines with new tube and relocated clamps.	5-55
5-91	Positioning injection pump coupler by turning flywheel using splined wrench -5120-793-7895.	5-56
5-92	Removing fuel injection pump splined coupler bolts.	5-56
5-93	Separating fuel injection pump splined coupler sleeves.	5-57
5-94	Removing fuel injection pump diaphragm coupler bolts.	5-57
5-95	Separating fuel injection pump diaphragm coupler.	5-57
5-96	Removing fuel injection pump.	5-57
5-97	Removing or installing camshaft drive shrouds - right side.	5-58
5-98	Disconnecting or connecting lower right engine shroud - top view.	5-58

Figure Number	Title	Page
5-99	Removing or installing lower right rear engine shroud - side view.	5-59
5-100	Removing or installing intercylinder head deflectors - right side.	5-59
5-101	Disconnecting or connecting right intercylinder deflector hooks.	5-60
5-102	Removing or installing right intercylinder deflectors.	5-60
5-103	Removing or installing fuel injector nozzle and holder assembly.	5-61
5-104	Removing or installing valve adjusting screw cover plates.	5-62
5-105	Location of valve rocker arm cover and cylinder identifying marks.	5-63
5-106	Disconnecting or connecting right front lifting eye and inter-cylinder hose flanges.	5-63
5-107	Disconnecting or connecting right camshaft gear housing at cylinder 6R rocker arm cover,	5-64
5-108	Removing or installing rocker arm cover bolts and cap screws.	5-64
5-109	Checking valve clearance before removing valve rocker arm covers and removing or installing cover bolts.	5-65
5-110	Removing valve rocker arm covers.	5-65
5-111	Removing or installing right camshaft gear housing cover.	5-65
5-112	Removing or installing camshaft drive gearshaft oil transfer plug retaining ring.	5-66
5-113	Removing camshaft drive gearshaft oil transfer plug using mechanical puller - 5120-678-5282.	5-66
5-114	Removing camshaft drive shaft using mechanical puller - 5120-678-5282.	5-66
5-115	Disconnecting or connecting right camshaft gear housing at cylinder 6R.	5-66
5-116	Removing or installing right camshaft.	5-67
5-117	Disconnecting or connecting horizontal fan drive shaft front and rear cover adapters.	5-67
5-118	Front and rear fan drive shaft covers disconnected showing location of preformed packings.	5-67
5-119	Removing or installing horizontal fan drive shaft retaining ring using retaining ring pliers -5120-752-9755.	5-68
5-120	Positioning horizontal fan drive shaft in rear fan drive housing.	5-68
5-121	Horizontal fan drive shaft positioned for removal of front fan drive housing.	5-68
5-122	Removing or installing front fan drive housing attaching parts.	5-68
5-123	Removing or installing front fan drive housing attaching parts.	5-69
5-124	Removing front fan drive housing and clutch assembly using improvised lifting tool.	5-70
5-125	Removing or installing front fan drive housing mounting base assembly from crankcase assembly.	5-71
5-126	Location of preformed packing at oil transfer boss in crankcase assembly.	5-71
5-127	Removing or installing fuel injection pump mounting base.	5-71
5-128	Location of preformed packing at oil transfer tube for fuel injection pump mounting base.	5-71
5-129	Removing or installing attaching parts for rear fan and accessory drive housing assemblies - right side.	5-72
5-130	Removing or installing attaching parts for rear fan and accessory drive housing assemblies - left side.	5-72
5-131	Installing or removing rear fan drive housing using fan and advance unit housing sling - 4910-795-7954.	5-73
5-132	Removing rear fan and accessory drive housing assemblies.	5-73
5-133	Removing or installing rear fan and accessory drive housing mounting base.	5-74

Figure Number	Title	Page
5-134	Location of preformed packings at oil transfer tubes in crankcase assembly - rear fan and accessory drive housing mounting base.	5-74
5-135	Removing or installing oil pan rear bolts.	5-75
5-136	Removing or installing oil pan bolts - right front view.	5-75
5-137	Removing or installing oil pan.	5-76
5-138	Removing or installing crankshaft damper and oil filter housing attaching parts.	5-76
5-139	Removing or installing crankshaft damper and oil filter housing.	5-77
5-140	Front end of crankcase assembly showing locations of oil transfer tube preformed packings.	5-78
5-141	Disconnecting or connecting cylinder deflectors at cylinders.	5-78
5-142	Removing or installing lower cylinder deflector straps and deflectors - right side.	5-79
5-143	Checking breaking torque of cylinder base nuts, using box wrench - 5120-678-5287.	5-80
5-144	Right bank cylinders in vertical position for removing or installing cylinders from crankcase.	5-80
5-145	Removing cylinder No. 1R.	5-81
5-146	Removing piston pin and piston - cylinder No. 1R.	5-82
5-147	Engine with cylinder assemblies and pistons removed showing crankcase protectors - 4910-795-7951 installed.	5-83
5-148	Removing or installing scavenge oil pickup, oil pan pressure relief tube, and oil spill tube.	5-84
5-149	Removing or installing oil pump assembly.	5-85
5-150	Removing or installing oil pressure sending unit, oil pressure warning switch and generator air intake tube support brackets.	5-86
5-151	Removing or installing fuel pump drive coupling adapter and coupling.	5-87
5-152	Removing crankshaft torsional vibration damper using mechanical pullers - 5120-473-7222.	5-87
5-153	Removing or installing starter drive adapter.	5-88
5-154	Removing or installing starter driven gear attaching parts.	5-88
5-155	Removing starter driven gear.	5-89
5-156	Removing or installing generator drive adapter attaching parts - engines with mounting nuts.	5-89
5-157	Removing or installing generator drive adapter attaching parts - engines with mounting studs.	5-90
5-158	Removing or installing generator drive adapter and associated parts.	5-90
5-159	Removing or installing transmission drive gearshaft attaching parts.	5-91
5-160	Removing transmission drive gearshaft assembly using mounting bolts as puller screws.	5-91
5-161	Preparing flywheel for removal.	5-92
5-162	Removing flywheel using eye bolt - 5306-050-0348.	5-92
5-163	Removing or installing transmission adapter attaching parts.	5-93
5-164	Removing or installing transmission adapter.	5-94
5-165	Removing or installing crankshaft oil seal retainers.	5-94
5-166	Removing or installing crankshaft oil seal cap and housing attaching parts.	5-95
5-167	Removing or installing oil seal cap and housing.	5-95
5-168	Removing or installing oil seal housing support.	5-96
5-169	Removing or installing accessory drive gear attaching parts.	5-97

Figure Number	Title	Page
5-170	Removing accessory drive gear using mounting bolts as puller screws.	5-97
5-171	Removing or installing crankcase tie rod attaching parts - right front view.	5-98
5-172	Removing or installing tie rods and attaching parts - left side view.	5-99
5-173	Removing or installing main bearing attaching parts.	5-100
5-174	Removing main bearing cap using crankcase spreading tool - 5120-575-7767, mechanical adapter -5120-837-5091, and mechanical puller -5120-310-4668.	5-101
5-175	Crankshaft with main bearing caps removed showing correct position of crankshaft counterweights before removal or after installation of crankshaft.	5-102
5-176	Installing or removing crankshaft and connecting rod sling -4910-795-7955 at crankshaft flywheel flange.	5-103
5-177	Installing or removing crankshaft and connecting rod sling - 4910-795-7955 at crankshaft torsional vibration damper flange.	5-103
5-178	Removing or installing crankshaft and connecting rod assemblies using crankshaft and connecting rod sling - 4910-795-7955.	5-104
5-179	Removing or installing upper main sleeve bearing halves.	5-105
5-180	Removing or installing piston oiler nozzle assemblies.	5-105
5-181	Removing or installing starter and generator idler gearshaft flange nuts.	5-106
5-182	Removing starter and /or generator idler gearshaft.	5-106
5-183	Removing or installing starter driven gearshaft bearing cage attaching parts.	5-106
5-184	Removing or installing starter gearshaft bearing cage.	5-107
6-1	Standard and oversize stud identification.	6-7
6-2	Removing helical-coil threaded insert from cylinder assembly using screw thread extractor -5120-251-1527.	6-8
6-3	Installing helical-coil threaded insert in cylinder assembly using screw thread inserter -5120-797-2407.	6-9
6-4	Engine name plate.	6-11
6-5	Removing or installing pipe plugs and fuel pump driven gearshaft replacement cover.	6-12
6-6	Removing or installing pipe plugs and fuel supply pump adapter replacement cover.	6-12
6-7	Removing or installing crankcase oil gallery pipe plugs.	6-13
6-8	Removing or installing crankcase from engine overhaul stand using improvised rope sling.	6-14
6-9	Crankcase oil passages - schematic diagram.	6-15
6-10	Checking torque of main bearing cap studs.	6-16
6-11	Checking clearance between upper main thrust bearing flange and crankcase.	6-16
6-12	Checking inside diameter of main bearings.	6-17
6-13	Crankcase restricted welding areas,	6-19
6-14	Points of measurement for checking crankcase.	6-20
6-15	Crankcase studding - $\frac{3}{4}$ right rear exposed view.	6-21
6-16	Crankcase studding - $\frac{3}{4}$ left rear view.	6-21
6-17	Crankcase studding - bottom view.	6-22
6-18	Removing or installing transmission adapter lifting eye and timing pointer.	6-24
6-19	Pressing starter driven gearshaft and bearings from bearing cage.	6-25
6-20	Pressing starter driven gearshaft from ball bearings.	6-25
6-21	Starter drive gear - rework.	6-26
6-22	Pressing ball bearings on starter driven gearshaft.	6-27

Figure Number	Title	Page
6-23	Pressing oil seal into bearing cage.	6-28
6-24	Removing generator adapter oil seal.	6-28
6-25	Pressing generator drive gearshaft from ball bearings.	6-29
6-26	Pressing ball bearings on generator drive gearshaft.	6-30
6-27	Pressing oil seal into generator drive gearshaft adapter.	6-31
6-28	Removing generator idler gear retaining ring and ball bearing.	6-31
6-29	Pressing ball bearing into generator idler gear.	6-32
6-30	Removing or installing connecting rod assemblies.	6-34
6-31	Connecting rod and bearing identification marks.	6-35
6-32	Removing or installing crankshaft oil seal.	6-35
6-33	Removing or installing crankshaft oil retaining plugs.	6-36
6-34	Checking connecting rod bearing bore using dial bore indicator.	6-37
6-35	Break and polish sharp edges of connecting rod counterbore and rod contour.	6-40
6-36	Connecting rod bore center dimensions.	6-41
6-37	Checking connecting rod side clearance.	6-41
6-38	Torsional vibration damper warning plate.	6-42
6-39	Torsional vibration damper name plate.	6-42
6-40	Original production engine flywheel fuel injection pump timing mark location.	6-43
6-41	Improved design engine flywheel fuel injection pump timing mark location.	6-44
6-42	Pressing bushing-type bearing from transmission drive gearshaft.	6-46
6-43	Pressing bushing-type bearing into transmission drive gearshaft.	6-46
6-44	Removing or installing piston compression rings using remover and replacer - 5120-795-0177.	6-47
6-45	Removing or installing oil control piston ring expander spring.	6-47
6-46	Checking piston ring side clearance.	6-50
6-47	Cylinder showing position of valve lifter assembly - 5120-678-5285 and removing and inserting valve stand - 4910-554-1317.	6-52
6-48	Compressing exhaust valve springs to remove or install upper valve spring retainer and locks.	6-52
6-49	Removing or installing valve springs, upper retainers, and exhaust valve rotor.	6-53
6-50	Cleaning carbon deposits from fuel injector nozzle seal using nozzle carbon cutter - 4910-795-7958.	6-54
6-51	Cylinder identifying groove.	6-55
6-52	Cylinder barrel tester - 4910-937-4261.	6-60
6-53	Reflectoscope wave forms.	6-62
6-54	Ultrasonic search fixture installed on master checking cylinder.	6-63
6-55	Installing plug - 10935522 in cylinder bore.	6-65
6-56	Positioning ultrasonic search fixture in cylinder bore.	6-65
6-57	Ultrasonic search fixture installed in cylinder barrel mounting flange.	6-66
6-58	Removing intake valve guide using mechanical puller -5120-448-0400.	6-66
6-59	Positioning intake valve guide on valve guide replacer -5120-448-0402.	6-67
6-60	Installing intake valve guide using valve guide replacer -5120-448-0402.	6-67
6-61	Intake valve guide hand reamer - 5110-708-3698 or 5110-708-3699 and reamer bushing - 4910-795-7950 positioned in cylinder head - sectional view.	6-68
6-62	Reaming intake valve guide, using hand reamer - 5110-708-3698 or 5110-708-3699 and reamer bushing - 4910-795-7950.	6-69
6-63	Valve and valve seat insert grinding diagram.	6-70

Figure Number	Title	Page
6-64	Valve rocker arm cover welding standards.	6-73
6-65	Compressing valve springs using valve lifter assembly -5120-678-5285.	6-74
6-66	FSN 2815-895-6430 oil pump assembly as removed from engine.	6-76
6-67	Removing or installing locking wire securing oil pump pressure relief valve and piston cooling control valve bodies.	6-76
6-68	Removing or installing oil pump pressure relief valve.	6-76
6-69	Removing or installing piston cooling control valve.	6-76
6-70	Removing or installing oil pump driven gear attaching parts and preformed packing.	6-77
6-71	Removing or installing oil pump drive shaft lock plate (FSN 2815-895-6430 oil pump).	6-77
6-72	Removing or installing oil pump drive shaft lock nut.	6-78
6-73	Removing or installing oil pump drive shaft and cluster gear (FSN 2815-895-6430 oil pump).	6-78
6-74	Removing oil pump driven gear from impeller drive shaft using suitable puller.	6-78
6-75	Removing or installing scavenge housing cover and oil pickup elbow (FSN 2815-679-4965 oil pump).	6-79
6-76	Removing or installing scavenge housing cover and oil pickup elbow (FSN 2815-895-6430 oil pump).	6-80
6-77	Removing or installing oil pump scavenge driven impellers, driven impeller shaft, and scavenge housing.	6-80
6-78	Removing or installing oil pump driven impeller and shaft.	6-81
6-79	Removing or installing pressure housing cover (FSN 2815-679-4965 oil pump).	6-81
6-80	Removing or installing pressure housing cover (FSN 2815-895-6430 oil pump).	6-82
6-81	Removing or installing oil pump piston cooling drive and driven impellers.	6-82
6-82	Removing or installing scavenge oil pump inlet scoop (FSN 2815-679-4965 oil pump).	6-82
6-83	Removing or installing scavenge oil pump oil inlet scoop (FSN 2815-895-6430 oil pump).	6-83
6-84	Pressing impeller drive shaft from ball bearings in drive cluster gear.	6-83
6-85	Drive cluster gear - exploded view.	6-84
6-86	Disassembling or assembling piston oil cooling valve assembly.	6-84
6-87	Pressing ball bearing into drive cluster gear.	6-88
6-88	Removing or installing oil pan baffles.	6-89
6-89	Removing or installing oil separator drain and oil level replacement covers.	6-90
6-90	Removing or installing pressure oil pump elbow adapter and oil pickup screen assembly attaching parts (M60 series vehicle application engines).	6-91
6-91	Removing or installing pressure oil pickup screen assembly (M60 series vehicle application engines).	6-92
6-92	Removing or installing pressure oil pump elbow adapter and oil pickup screen assembly attaching parts (universal vehicle application engines).	6-93
6-93	Removing or installing pressure oil pickup screen assembly (universal vehicle application engines).	6-94
6-94	Removing or installing oil pump elbow adapter.	6-94
6-95	Removing or installing oil pickup funnel assembly and magnetic drain plugs (M60 series vehicle application engines).	6-95

Figure Nu-<i>m</i>ber	Title	Page
6-96	Removing or installing oil pickup funnel assembly and drain plugs (universal vehicle application engines).	6-95
6-97	Removing or installing pressure oil pickup cover.	6-96
6-98	Crankshaft damper and oil filter housing as removed from engine.	6-97
6-99	Removing or installing main oil cooler bypass valve plug, gasket, and spring.	6-98
6-100	Removing or installing main oil cooler bypass valve.	6-98
6-101	Removing or installing auxiliary and main oil filter attaching parts.	6-99
6-102	Removing or installing main and auxiliary oil filters.	6-100
6-103	Removing or installing oil pressure regulator valve cover and gasket.	6-100
6-104	Disassembling or assembling oil pressure regulator valve.	6-101
6-105	Removing or installing fuel pump adapter using mechanical pullers - 5120-473-7222.	6-101
6-106	Removing or installing damper and oil filter housing switches, bushings, and pipe plugs - front view.	6-102
6-107	Removing or installing damper and oil filter housing pipe plugs - rear view.	6-102
6-108	Disassembling or assembling main oil filter body and filter element pack.	6-103
6-109	Removing or installing filter element pack from tube.	6-103
6-110	Disconnecting or connecting auxiliary oil filter element retainer and bushing.	6-104
6-111	Removing or installing auxiliary oil filter element.	6-104
6-112	Crankshaft damper and oil filter housing oil passages.	6-105
6-113	Crankshaft damper and oil filter housing studs.	6-107
6-114	Removing or installing fan drive oil seal housing,	6-109
6-115	Removing or installing fan drive housing cover.	6-110
6-116	Removing clutch cover and fan drive vertical shaft bearing using puller.	6-110
6-117	Remove fan drive clutch upper ball bearing from housing cover.	6-110
6-118	Removing fan vertical drive shaft oil seal from housing.	6-111
6-119	Removing or installing fan drive bevel gearshaft and associated parts.	6-111
6-120	Removing or installing lower driven gearshaft ball bearing lock plate.	6-112
6-121	Removing or installing fan driven gearshaft and bearings.	6-112
6-122	Removing or installing fan drive bevel gearshaft bearing retaining ring.	6-113
6-123	Removing fan drive bevel gearshaft ball bearings.	6-113
6-124	Removing or installing fan driven gearshaft bearing retaining ring.	6-113
6-125	Pressing fan driven gearshaft from upper gearshaft ball bearing.	6-114
6-126	Pressing fan driven gearshaft from lower driven gearshaft ball bearing.	6-114
6-127	Removing or installing front fan drive housing oil restrictor (engines have oil restrictors).	6-114
6-128	Piston actuated clutch assembly - sectional view.	6-115
6-129	Mechanical clutch assembly - sectional view.	6-116
6-130	Removing or installing fan drive housing cover preformed packing.	6-117
6-131	Removing or installing fan drive hub attaching parts.	6-117
6-132	Separating or positioning fan drive hub and vertical drive shaft (piston actuated clutch).	6-118
6-133	Separating or positioning fan drive hub and vertical drive shaft (mechanical clutch).	6-118
6-134	Removing or installing fan drive vertical shaft from fan drive hub (piston actuated clutch).	6-119
6-135	Removing or installing clutch discs from fan drive hub (mechanical clutch).	6-119
6-136	Removing or installing fan drive vertical drive shaft, balls, and springs from fan drive hub (mechanical clutch).	6-120
6-137	Removing or installing fan drive disc (piston actuated clutch).	6-120

Figure Number	Title	Page
6-138	Fan drive shaft oil distributor location.	6-121
6-139	Removing or installing fan drive bottom clutch disc (piston actuated clutch).	6-121
6-140	Straightening or bending tabs on key washer securing actuating clutch piston spanner nut (piston actuated clutch).	6-121
6-141	Removing or installing actuating clutch piston spanner nut using face wrench socket -5120-795-7896.	6-121
6-142	Removing or installing clutch pressure plate, clutch springs, and balls (piston actuated clutch).	6-122
6-1'43	Removing actuating clutch piston and piston rings (piston actuated clutch).	6-122
6-144	Removing or installing ball bearing from drive hub.	6-123
6-145	Removing or installing intermediate clutch and drive discs.	6-123
6-146	Separating or positioning vertical drive shaft, top clutch disc, and housing assembly (piston actuated clutch).	6-124
6-147	Separating or positioning vertical drive shaft and disc housing (mechanical clutch).	6-125
6-148	Front fan drive housing and mounting base - studding assembly.	6-126
6-149	Installing outer piston ring on actuating piston (piston actuated clutch).	6-129
6-150	Determining shim thickness for front fan drive gearshaft and drive bevel gearshaft.	6-130
6-151	Pressing fan driven gearshaft into lower drive gearshaft ball bearing.	6-131
6-152	Pressing fan driven gearshaft into upper driven gearshaft ball bearing.	6-131
6-153	Pressing front bevel gearshaft ball bearing on gearshaft.	6-132
6-154	Pressing oil seal into fan drive oil seal housing.	6-132
6-155	Pressing clutch upper ball bearing into fan drive housing cover.	6-133
6-156	Removing or installing rear fan drive housing cover.	6-135
6-157	Removing or installing bearing cap and bearing support attaching parts.	6-136
6-158	Removing or installing injection pump advance assembly,	6-137
6-159	Removing or installing left and right camshaft drive inner support attaching parts.	6-137
6-160	Removing or installing right and left camshaft drive inner supports and preformed packing.	6-138
6-161	Removing or installing fan driven gearshaft and ball bearings as a unit.	6-138
6-162	Removing or installing fuel injection pump splined drive coupler attaching parts.	6-139
6-163	Removing fuel injection pump splined drive coupler half.	6-139
6-164	Removing or installing fuel injection pump diaphragm drive coupler half.	6-140
6-165	Removing fuel injection pump diaphragm drive coupler half.	6-140
6-166	Separating or attaching rear fan and accessory drive housings (housings equipped with control covers).	6-141
6-167	Separating or attaching rear fan and accessory drive housing (housings equipped with oil restrictors).	6-142
6-168	Removing or installing fuel injection pump spur gear shaft and bearing.	6-143
6-169	Removing or installing oil seal.	6-143
6-170	Removing or installing needle roller bearing retaining ring and bearing.	6-143
6-171	Removing fuel injection pump spur gearshaft ball bearing.	6-144
6-172	Removing or installing oil transfer plug from camshaft drive gearshafts.	6-144
6-173	Removing or installing fan drive gearshaft, bearing, and support.	6-145
6-174	Removing or installing rear fan drive shaft.	6-145

Figure Number	Title	Page
6-175	Removing advance flyweight adjusting ring and injection pump drive gearshaft attaching parts (adjusting ring secured with nuts and washers).	6-146
6-176	Removing advance flyweight adjusting ring and injection pump drive gearshaft attaching parts (adjusting ring secured with bolts).	6-146
6-177	Removing injection pump drive gearshaft.	6-147
6-178	Removing advance flyweight adjusting ring and flyweight.	6-147
6-179	Removing flyweight housing.	6-148
6-180	Removing advance vane housing and vane.	6-148
6-181	Removing or installing injection pump drive gearshaft ball bearing retaining ring.	6-149
6-182	Removing injection pump drive gearshaft ball bearing.	6-149
6-183	Removing or installing automatic advance vane, housing, seals, and springs.	6-150
6-184	Removing rear bearing support using suitable gear puller.	6-150
6-185	Removing accessory drive bevel gearshaft ball bearing using suitable gear puller.	6-150
6-186	Removing advance vane housing cover, gearshaft plug, and retaining ring.	6-151
6-187	Rear fan and accessory drive housing and base studding assembly.	6-153
6-188	Determining shim thickness for rear fan driven gearshaft and rear fan drive bevel gearshaft.	6-158
6-189	Determining shim thickness for accessory drive bevel gearshaft bearing.	6-159
6-190	Pressing bevel gearshaft ball bearing on gearshaft,	6-160
6-191	Installing advance vane housing cover on accessory drive bevel gearshaft.	6-160
6-192	Pressing drive gearshaft ball bearing on drive gearshaft.	6-161
6-193	Installing advance vane housing and vane.	6-161
6-194	Installing flyweight housing.	6-162
6-195	Installing advance flyweight adjusting ring and flyweight.	6-162
6-196	Installing injection pump drive gearshaft.	6-163
6-197	Installing advance flyweight adjusting ring and injection pump drive gearshaft attaching parts (adjusting ring secured with nuts).	6-163
6-198	Installing advance flyweight adjusting ring and injection pump drive gearshaft attaching parts (adjusting ring secured with bolts).	6-164
6-199a	Test stand assembly - FSN -4910-986-9873.	6-165
6-199b	Test stand with coupling guard and housing cover removed.	6-166
6-199c	Test stand heater control and supply tanks.	6-167
6-200	Fuel injector advance unit curve.	6-168
6-201	Fuel injection pump advance assembly adjusting ring.	6-169
6-202	Pressing driven gearshaft ball bearing on spur gearshaft.	6-170
6-203	Assembling rear fan and accessory drive housing.	6-171
6-204	Installing fuel injection pump splined drive coupler half.	6-172
6-205	Installing fuel injection pump diaphragm drive coupler half.	6-172
6-206	Installing fuel injection advance bearing cap.	6-173
6-207	Removing or installing lifting eye, intercylinder hose flanges, and hoses.	6-174
6-208	Removing or installing camshaft drive adapter and associated parts.	6-175
6-209	Disassembling or assembling camshaft drive adapter and associated parts	6-175
6-210	Removing or installing right camshaft assembly.	6-176
6-211	Disassembling or assembling camshaft assembly.	6-176
6-212	Removing or installing right camshaft end plate.	6-177
6-213	Disassembling or assembling right camshaft cover plate.	6-178
6-214	Improvised camshaft trueing device.	6-179

Figure Number	Title	Page
6-215	Removing or installing camshaft end plate ball bearing retaining ring and ball bearing.	6-181
6-216	Removing camshaft end plate ball bearing.	6-181
6-217	Removing or installing cross shaft levers and bracket.	6-181
6-218	Removing or installing cross shaft shock spring and control lever.	6-182
6-219	Disassembling or assembling intermediate throttle lever support.	6-182
6-220	Disassembling or assembling cross shaft lever, bracket, and adjustable control rod.	6-183
6-221	Removing or installing transmission oil cooler bypass valve and shroud plate.	6-185
6-222	Removing or installing engine right oil cooler hose connector elbows.	6-186
6-223	Removing or installing engine right oil cooler thermostatic bypass valve.	6-186
6-224	Oil cooler cleaning equipment setup - schematic diagram.	6-187
6-225	Disassembling or assembling cooling fan and cooling fan hub.	6-190
6-226	Removing or installing front and rear cooling fan housings.	6-191
6-227	Removing or installing cooling fan shroud rails and cover plates.	6-192
6-228	Removing or installing manifold heater assembly.	6-194
6-229	Disassembling or assembling manifold heater assembly.	6-195
6-230	Removing or installing air outlet tube and associated parts.	6-195
6-231	Removing or installing heater tube.	6-196
6-232	Removing or installing intake manifold tube attaching parts.	6-196
6-233	Removing or installing flanges and associated parts from cylinder Nos. 5R and 6R intake manifold tubes.	6-196
6-234	Removing or installing intake manifold tubes for cylinder Nos. 3R and 4R.	6-197
6-235	Removing or installing right intake manifold elbow.	6-197
6-236	Right and left intake manifold - stud identification.	6-198
6-237	Disassembling or assembling oil filler and oil level indicator tubes (one piece oil filler and indicator tubes without splash pan drain).	6-199
6-238	Disassembling or assembling oil filler and oil level indicator tubes (improved oil filler indicator tubes with splash pan drain).	6-200
6-239	Disassembling or assembling oil level indicator tube cap (relocated oil filler tube),	6-200
6-240	Disassembling generator cradle, support, and "U" bolt.	6-201
6-241	Removing or installing fuel check valve tubes and fittings.	6-203
6-242	Deleted	6-204
6-243	Fuel check valve flow diaphragm.	6-204
6-244	Disassembling or assembling primary fuel filter.	6-205
6-245	Disassembling or assembling secondary fuel filter.	6-206
6-246	Disassembling or assembling fuel/ water separator.	6-207
6-247	Disassembling or assembling secondary fuel filter and fuel / water separator drain valves.	6-208
6-248	Comparison of serviceable original production and improvised design sleeves - fuel injection pump tube ends.	6-210
6-249	Comparison of serviceable sleeves - injector nozzle tube ends.	6-211
6-250	Disassembling or assembling generator air intake tube assembly.	6-212
6-251	Disassembling or assembling manifold heater fuel filter.	6-214
6-252	Disassembling or assembling fuel injection pump drive splined coupler.	6-215
6-253	Disassembling or assembling fuel injection pump drive diaphragm coupler.	6-216
6-254	Piston oiler nozzle and holder assembly.	6-216
6-255	Time totalizing meter.	6-217
6-256	Time totalizing meter electric reset device - 6645-179-2712.	6-218

Figure Number	Title	Page
7-1	Installing starter idler gear.	7-2
7-2	Installing main bearing caps using crankcase spreading tool - 5120-575-7767.	7-3
7-3	Checking crankshaft end play.	7-3
7-4	Measuring main bearing stud stretch using dial indicator.	7-4
7-5	Checking accessory drive gear and starter idler gear backlash.	7-5
7-6	Installing candlewick packing between crankcase and oil seal housing support.	7-5
7-7	Correct position of crankshaft oil seal split line before installing seal retainer.	7-5
7-8	Installing flywheel using eye bolt - 5306-017-6143.	7-6
7-9	Checking flywheel runout using dial indicator.	7-6
7-10	Oil pump mounting flange oil discharge locations.	7-7
7-11	Piston installation position marks.	7-8
7-12	Installing piston in cylinder assembly using compressor and gage - 4910-795-7956.	7-9
7-13	Installing cylinder assemblies on crankcase.	7-10
7-14	Early oil pan (10865039) drain plug location - limited to M60 series vehicles.	7-11
7-15	Late oil pan (10912261) drain plug location for universal vehicle application.	7-11
7-16	Protecting openings to prevent entrance of dust and foreign objects.	7-12
7-17	Installing rear fan and accessory drivehousing using fan and advance unit housing sling - 4910-795-7954.	7-13
7-18	Installing front fan drive housing assembly using improvised lifting tool.	7-14
7-19	Engine with cylinders, front fan drive housing, and rear fan and accessory drive housing assemblies installed.	7-15
7-20	Flywheel timing mark locations.	7-16
7-21	Positioning engine flywheel using splined wrench - 5120-793-7895.	7-17
7-22	Installing valve rocker arm cover and adjusting intake valve clearance (cylinder No. 6R).	7-18
7-23	Adjusting exhaust valve clearance.	7-18
7-24	Determining closing point of No. 6 intake valve.	7-19
7-25	Installing camshaft drive shaft.	7-19
7-26	Installing right camshaft oiltransfer plug.	7-20
7-27	Correct position of cylinder 1 R camshaft lobes (cams) for fuel injection pump installation - installed view.	7-20
7-28	Correct position of camshaft lobes (cams) for fuel injection pump installation · sectional view.	7-21
7-29	Removing fuel injection pump drive gear train backlash and setting advance unit retard position - diaphragm coupling.	7-21
7-30	Installing camshaft intercylinder hose flange bolts.	7-22
7-31	Fuel injector clamps, supports and tubes - installed view.	7-25
7-32	Fuel injector nozzle fuel return tube between cylinder numbers 6L and 5L - engines with tubes.	7-25
7-33	Fuel injector nozzle fuel return hose between cylinder numbers 6L and 5L - engines with hoses.	7-26
7-34	Overall view of engine showing progress of engine assembly at this point.	7-28
7-35	Assembling generator cradle, support, and “U” bolt.	7-29
8-1	Engine connection points - right front view.	8-4
8-2	Engine connection points - left rear view.	8-5
8-3	Mean perform ante curve.	8-6

Figure Number	Title	Page
8-4	Borescope instrument.	8-9
8-5	Checking piston position with brass rod.	8-9
8-6	Borescope instrument in position for cylinder bore inspection.	8-9
8-7	Pressure relief valve, humidity indicator, and pneumatic valve - installed view.	8-14
8-8	Engine mounting bracket - installed view.	8-14
8-9	Interior of lower section of engine container.	8-15
8-10	Transmission adapter - installed view.	8-17
B-1	Engine shipping and storage container.	B-168B
B-2	Crankcase and associated parts - partially exploded view.	B-169B
B-3	Crankshaft assembly, flywheel damper, bearings and associated parts - exploded view.	B-170B
B-4	Cylinder and head assembly, piston, connecting rod and associated parts - exploded view.	B-171B
B-5	Camshaft and drive gears - exploded view.	B-172B
B-6	Damper Housing, oil filters and associated parts - exploded view.	B-173B
B-7	Oil pan, tubes, brackets, and associated parts - exploded view.	B-174B
B-8	Oil pan, baffles, studs, inserts and associated parts - exploded view.	B-175B
B-9	Oil pump, tubes and associated parts - exploded view.	B-176B
B-10	Cylinder head oil drain tubes and associated parts - exploded view.	B-177B
B-11	Breather tube, fire extinguisher tube, electrical lead, oil lines and associated parts - exploded view.	B-178B
B-12	Exhaust manifolds and associated parts - exploded view.	B-179B
B-13	Intake manifold, tubes, turbosupercharger tie rod and support and associated parts - exploded view.	B-180B
B-14	Generator and starter idler and driven gears and shafts - exploded view.	B-181B
B-15	Engine and accessories - exploded view.	B-182B
B-16	Fuel injection pump coupler assembly and nozzle and holder assembly - exploded view.	B-183B
B-17	Fuel injection pump lines, injector nozzle lines and associated parts - exploded view.	B-184B
B-18	Throttle linkage - exploded view.	B-185B
B-19	Primary and secondary pressure fluid filters, water separator, brackets, hoses and associated parts - exploded view.	B-186B
B-20	Secondary pressure fluid filter, primary pressure fluid filter, water separator and pressure fluid filter assemblies - exploded view.	B-187B
B-21	Induction heater system - exploded view.	B-188B
B-22	Engine shroud - exploded view.	B-189B
B-23	Cylinder deflectors and plates - exploded view.	B-190B
B-24	Radiators, Shrouds and associated parts - exploded view.	B-191B
B-25	Engine cooling fans - exploded view.	B-192B
B-26	Front and rear fan drive housing and base assemblies and associated parts - exploded view.	B-193B
B-27	Automatic injection advance assembly, fan drive clutch assembly and associated parts - exploded view.	B-194B
B-28	Generator exhaust tube, boot and associated parts - exploded view.	B-195B
B-29	Special tools	B-196B
B-30	Special tools.	B-197B
B-31	Test equipment	B-198B
B-32	Reusable shipping container - exploded view.	B-199B

List of Tables

Table Number	Title	Page
2-1	Special Tools and Equipment for Direct Support, General Support and Depot Maintenance	2-4
4-1	Engine Accessories	4-2
4-2	Main and Auxiliary Oil Filter Bypass Valves, Oil Pressure Regulating Valve, and Fuel / Water Separator Filter Assembly	4-45
4-3	Cooling Fan Clutch Assembly	4-50
4-4	Intake Manifold Tubes and Intake Manifold Assembly	4-53
4-5	Engine Oil Pan	4-58
4-6	Valve Rocker Arms, Rocker Arm Shafts and Valve Clearance Adjusting Screws	4-62
4-7	Fuel Injector Nozzle and Holder Assembly	4-80
4-8	Flywheel and Crankshaft Oil Seal	4-88
4-9	Service Operations	4-94
5-1	Draining Engine Oil and Removing Engine Accessories	5-1
5-2	Shrouding, Cooling Fans, Oil Coolers, Beams, and Associated Parts	5-4
5-3	Manifold Heater Tubes, Solenoids and Filter, Cylinder Head Oil Drain Lines, and Intake Manifold Assemblies	5-13
5-4	Fuel Filters, Throttle Linkage, Front and Rear Shrouds, and Oil Filler and Indicator Tubes	5-18
5-5	Fuel Injector Tubes, Supports, and Clamps, Exhaust Pipes and Manifold, Fuel Inlet and Return Hoses, Crankcase Breather Tubes, and Turbosupercharger Base, Supports and Tie Rods	5-33
5-6	Throttle Control Rods and Lever, Fuel Injection Pump Oil Inlet Hose, Turbosupercharger Oil Inlet Hose and Fire Extinguisher Tube, and Fuel Injection Pump	5-49
5-7	Shrouds, Cylinder Deflectors, and Nozzle Holder Assemblies	5-58
5-8	Camshafts, Fan Drives, Housings, and Bases	5-61
5-9	Oil Pan, Crankshaft Damper and Oil Filter Housing, Cylinder Air Deflectors, Cylinder Assemblies, and Pistons and Pins	5-74
5-10	Oil Pump, Oil Tubes, Vibration Damper, Starter and Generator Drive Adapters	5-83
5-11	Flywheel, Transmission Adapter, Crankshaft Oil Seal, and Accessory Drive Gear	5-91
5-12	Crankshaft and Connecting Rod Assembly, Piston Oiler Nozzles, Generator and Starter Idler Gears, and Starter Driven Shaft	5-97
6-1	Crankcase Assembly, Transmission Adapter, and Starter and Generator Drive Components	6-11
6-2	Crankcase Assembly Overhaul Standards	6-18
6-3	Crankcase Standard and Oversize Stud Identification	6-22
6-4	Starter Driven Gearshaft Overhaul Standards	6-27
6-5	Generator Drive Overhaul Standards	6-29
6-6	Generator Adapter Standard and Oversize Stud Identification	6-30
6-7	Generator and Starter Idler Gears Overhaul Standards	6-32
6-8	Connecting Rods, Crankshaft and Associated Parts	6-33
6-9	Connecting Rods, Crankshaft and Associated Parts Overhaul Standards	6-37
6-10	Torsional Vibration Damper, Flywheel, Accessory Drive Gear, and Transmission Drive- GearShaft	6-42

Table Number	Title	Page
6-11	Torsional Vibration Damper, Flywheel, Accessory Drive Gear, and Transmission Drive Gearshaft Overhaul Standards	6-45
6-12	Pistons, Rings, and Piston Pins	6-47
6-13	Pistons, Piston Rings, and Piston Pins Overhaul Standards	6-49
6-14	Cylinder Assembly	6-51
6-15	Cylinder Assembly Overhaul Standards	6-57
6-16	Cylinder Standard and Oversize Stud Identification	6-72
6-17	Oil Pump, Oil Pan, Damper and Oil Filter Housing and Associated Parts	6-75
6-18	Visual Oil Pump Identification Characteristics	6-75
6-19	Oil Pump Overhaul Standards	6-85
6-20	Oil Pump Standard and Oversize Stud Identification	6-87
6-21	Oil Pan Standard and Oversize Stud Identification	6-96
6-22	Crankshaft Damper and Oil Filter Housing Control Valves - Overhaul Standards	6-106
6-23	Crankshaft Damper and Oil Filter Housing Standard and Oversize Stud Identification	6-108
6-24	Front Fan Drive Housing and Clutch Assembly	6-109
6-25	Front Fan Drive Housing Assembly Overhaul Standards	6-127
6-26	Early Cooling Fan Clutch Overhaul Standards	6-128
6-27	Late Cooling Fan Clutch Overhaul Standards	6-128
6-28	Front Fan Drive Housing Standard and Oversize Stud Identification	6-129
6-29	Rear Fan Drive Housing and Clutch Assembly and Accessory Drive Housing	6-134
6-30	Rear Fan and Accessory Drive Housing Assembly Overhaul Standards	6-154
6-31	Fuel Injection Pump Advance Unit Assembly Overhaul Standards	6-155
6-32	Rear Fan and Accessory Drive Housings Standard and Oversize Stud Identification	6-156
6-33	Camshaft and Throttle Control Cross Shaft and Fuel Injection Pump Linkage	6-174
6-34	Camshafts and Drives Overhaul Standards	6-180
6-35	Camshaft Drive Housing and Cover Plate Standard and Oversize Stud Identification	6-180
6-36	Throttle Control Cross Shaft and Fuel Injection Pump Linkage Overhaul Standards	6-184
6-37	Engine and Transmission Oil Coolers and Engine Cooling Fan	6-185
6-38	Engine Oil Cooler Standard and Oversize Stud Identification	6-189
6-39	Engine Shrouding and Associated Components	6-191
6-40	Intake Manifolds, Exhaust Manifolds and Tubes, Cylinder Head Oil Drain Tubes, and Oil Filler and Indicator Tubes	6-193
6-41	Manifold Heater Induction and Intake Manifold Standard and Oversize Stud Identification	6-198
6-42	Generator and Starter Supports, Fuel Check Valve, Primary and Secondary Fuel Filters, and Fuel / Water Separator	6-201
6-43	Generator and Starter Support Standard and Oversize Stud Identification	6-202
6-44	Fuel Injection Pump Fuel Tubes, Fuel Injector Nozzle Fuel Return Tubes, Injection Pump and Turbosupercharger Oil Hoses, and Generator Air Intake and Exhaust Tubes and Associated Parts	6-209
6-45	Crankcase Breather Tubes, Fire Extinguisher Tube, Injection Pump Electrical Lead, and Manifold Heater Fuel Tubes, Filter, and Electrical Components	6-213

Table Number	Title	Page
6-46	Fuel Injection Pump Drive Couplers, Fuel Injector Nozzles, Piston Oiler Nozzles and Time Totalizing Meter	6-215
7-1	Starter Drive Gearshaft, Generator and Idler Gears, Piston Oiler Nozzles, and Crankshaft and Connecting Rod Assembly	7-2
7-2	Accessory Drive Gear, Crankshaft Oil Seal, Transmission Adapter, and Flywheel	7-4
7-3	Starter and Generator Drive Adapters, Vibration Damper, Sending Units, Oil Pump, and Oil Tubes	7-7
7-4	Pistons and Pins, Cylinder Assemblies, Cylinder Air Deflectors, Crankshaft Damper and Oil Filter Housing, and Oil Pan	7-8
7-5	Fan Drives, Housings, and Bases	7-12
7-6	Cam shafts, Fuel Injection Pump, and Rocker Arm Covers	7-16
7-7	Nozzle and Holder Assemblies, Cylinder De-Flectors, and Shrouds	7-23
7-8	Turbosupercharger Oil Inlet Hose and Fire Extinguisher Tube, Fuel Injection Pump Oil Inlet Hose, and Throttle Control Rods and Lever	7-23
7-9	Turbosupercharger Base, Supports, and Tie Rods, Fuel Inlet and Return Hoses, Crankcase Breather Tubes, Exhaust Pipes and Manifolds, and Fuel Injector Clamps, Supports, and Tubes	7-23
7-10	Oil Filler and Indicator Tubes, Rear and Front Shrouds, Throttle Linkage, and Fuel Filters	7-26
7-11	Intake Manifold Assemblies, Cylinder Head Oil Drain Lines, and Manifold Heater Tubes, Solenoids, and Filter	7-27
7-12	Oil Coolers, Beams, Cooling Fans, Shrouding, and Associated Parts	7-27
7-13	Installing Engine Accessories	7-28
8-1	Overhaul Test Schedule - Beam Length 1.75 Ft. (or 21.008 in.)	8-7
8-2	Air Entrance Temperature Correction	8-10
8-3	Air Entrance Pressure Correction	8-10
8-4	Fuel Temperature Correction	8-11
8-5	Fan Horsepower to be Used for Correcting Engine Gross Horsepower	8-11
8-6	50 Hour Quality Control Test	8-13

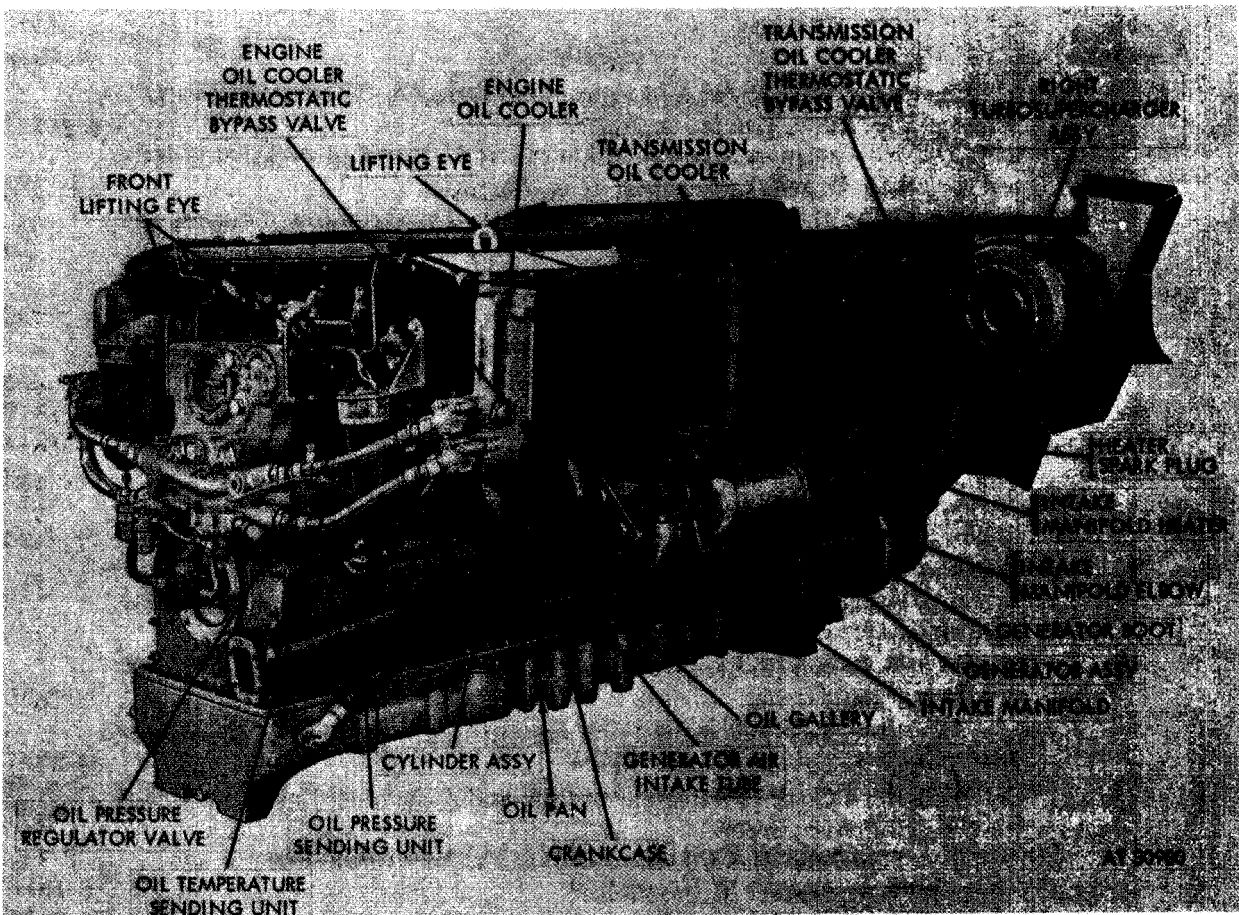
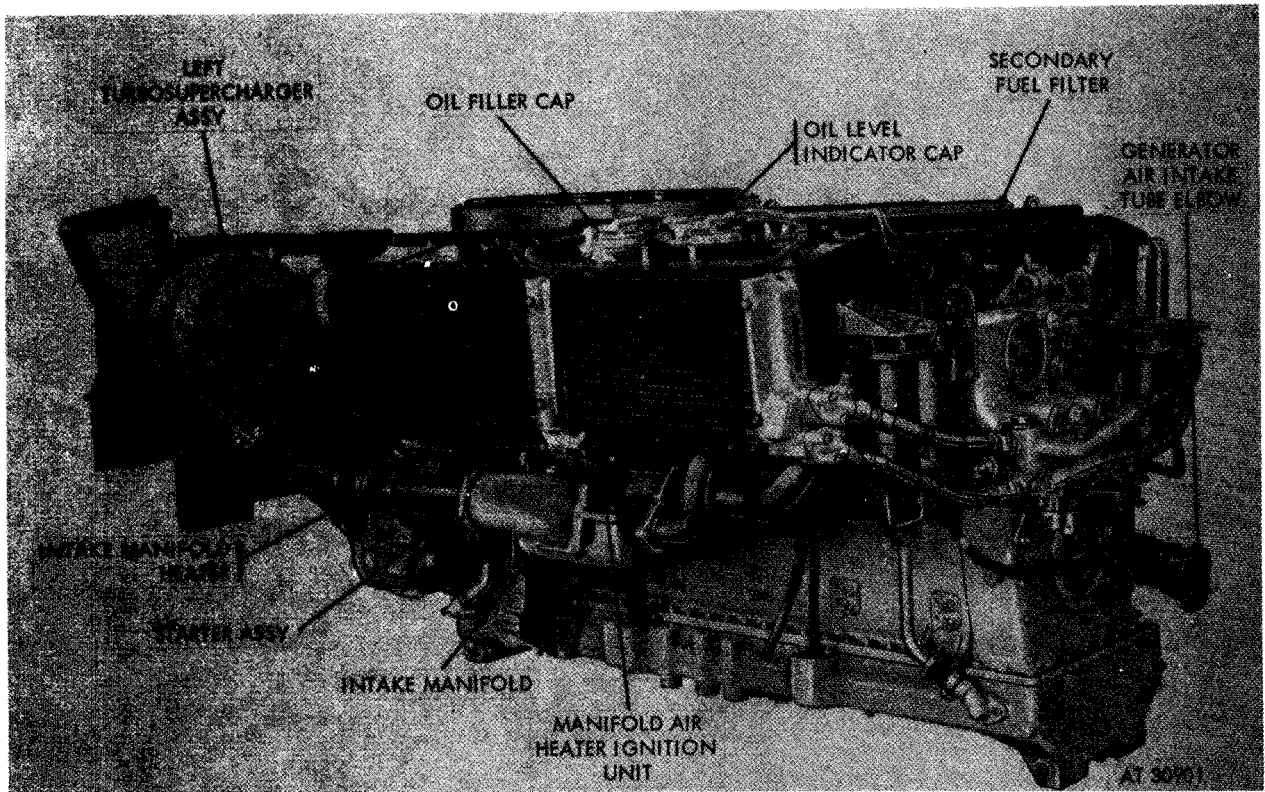


Figure 1-1. AVDS-1790-2-M, AVDS-1790-2-AM, and AVDS-1790-2A engine assembly without time totalizing meter-right front view.



***Figure 1-2. AVDS-1790-2-M, AVDS-1790-2-AM,
and AVDS-1790-2A engine assembly with
secondary fuel filter-left front view.***