

TECHNICAL MANUAL

**DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS)**

ENGINE W/CONTAINER:

**MODEL 5063-5299 (2815-00-124-5390)
(2815-01-295-7458)
MODEL 5063-5392 (2815-01-246-0903)
MODEL 5063-5393 (2815-01-248-7644)
MODEL 5063-5395 (2815-01-031-6154)
MODEL 5063-5398 (2815-00-909-5949)
MODEL 5063-539F (2815-01-316-6617)
MODEL 5063-539L (2815-01-412-2715)**

DISTRIBUTION STATEMENTS Approved for public release. Distribution is unlimited.

This manual supersedes TM 9-2815-205-34P, dated 21 August, 1992, including all changes .

HEADQUARTERS, DEPARTMENT OF THE ARMY

24 AUGUST 1995

TECHNICAL MANUAL

'No. 9-2815-205-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 24 AUGUST 1995

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS)
FOR

ENGINE WITH CONTAINER

MODEL 5063-5299 NSN 2815-00-124-5390
NSN 2815-01-295-7458
MODEL 5062-5392 NSN 2815-01-246-0903
MODEL 5063-5393 NSN 2815-01-248-7644
MODEL 5063-5395 NSN 2815-01-031-6154
MODEL 5063-5398 NSN 2815-00-909-5949
MODEL 5063-539F NSN 2815-01-316-6617
MODEL 5063-539L NSN 2815-01-412-2715

CURRENT AS OF 5 April 1995

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual by calling attention to errors and by recommending improvements and stating your reasons for the recommendations. Mail your letter or DA Form 2020 (Recommended Changes to Publications and Blank Forms, or OA Form 2028-2 located in the back of this manual directly to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-IM-MMAA, Warren, MI 48397-5000. A reply will be furnished to you.

You may also provide DA Form 202812028-2 information to TACOM via E-mail or datatax. Our fax number is DSN 786-6323. Our E-mail address is: amsta-mmaa@cc.tacom.army.mil

DISTRIBUTION STATEMENT: Approved for public release. Distribution is unlimited.

TABLE OF CONTENTS

			PAGE	ILLUS/ FIGURE
SECTION	I	INTRODUCTION	1	
SECTION	II	REPAIR PARTS LIST	1-1	
GROUP	01	ENGINE	1-1	
		0100 ENGINE ASSEMBLY	1-1	
		ENGINE AND CONTAINER ASSEMBLY	1-1	1

*This manual supersedes TM 9-2815-205-34P, dated 21 August 1992, including all changes.

TABLE OF CONTENTS (CONTINUED)

	PAGE	ILLUS/ FIGURE
0101 CRANKCASE, BLOCK, CYLINDER HEAD.....	2-1	
CYLINDER BLOCK ASSEMBLY, END PLATE, AND RELATED PARTS (CAST IRON BLOCK)	2-1	2
CYLINDER BLOCK ASSEMBLY, END PLATE, AND RELATED PARTS (ALUMINUM BLOCK)	3-1	3
AIR BOX DRAIN AND RELATED PARTS	4-1	4
ENGINE FRONT SUPPORT (TRUNNION)	5-1	5
CYLINDER HEAD ASSEMBLY AND LIFTING BRACKETS.....	6-1	6
0102 CRANKSHAFT	7-1	
CRANKSHAFT, MAIN BEARINGS, AND TIMING GEAR.....	7-1	7
0103 FLYWHEEL ASSEMBLY.....	8-1	
DRIVE PLATE, FLYWHEEL, AND HOUSING	8-1	8
0104 PISTONS, CONNECTING RODS.....	9-1	
PISTON AND ROD ASSEMBLY (TRUNK TYPE) WITH LINER.....	9-1	9
PISTON AND ROD ASSEMBLY (CROSSHEAD TYPE) WITH LINER	10-1	10
0105 VALVES, CAMSHAFTS, TIMING SYSTEM.....	11-1	
ROCKER ARM COVERS (MODELS 5063-5299 AND 5063-5398)	11-1	11
ROCKER ARM COVERS (MODELS 5063-5392, 5063-5393, 5063-539F, AND 5063-539L)	12-1	12
ROCKER ARM COVERS (MODEL 5063-5395)	13-1	13
CAMSHAFTS, IDLER GEAR, AND BALANCE GEARS	14-1	14
ROCKER ARM ASSEMBLIES, VALVES, AND CAM FOLLOWERS.....	15-1	15
UPPER FRONT COVER.....	16-1	16
0106 ENGINE LUBRICATION SYSTEM	17-1	
OIL COOLER ASSEMBLY (MODEL 5063-5299).....	17-1	17
OIL COOLER ASSEMBLY (MODEL 5063-5392).....	18-1	18
OIL COOLER ASSEMBLY (MODELS 5063-5393 AND 5063-539L)	19-1	19
OIL COOLER ASSEMBLY (MODELS 5063-5395, 5063-5398, AND 5063-539F)	20-1	20
OIL INLET PIPE, SCREEN, AND SUPPORTS.....	21-1	21
OIL PAN AND OIL GAGE ASSEMBLY	22-1	22
OIL FILTER ASSEMBLY AND ADAPTER (MODELS 5063-5299 AND 5063-5398).....	23-1	23
OIL FILTER ASSEMBLY, ADAPTER, AND RELATED PARTS (MODEL 5063-5392)	24-1	24
OIL FILTER ASSEMBLY, ADAPTER, AND RELATED PARTS (MODELS 5063-5393 AND 5063-539L)	25-1	25
OIL FILTER ASSEMBLY, ADAPTER, AND RELATED PARTS (MODELS 5063-5395 AND 5063-539F)	26-1	26
LOWER FRONT COVER, OIL PRESSURE REGULATOR, AND OIL PUMP ASSEMBLY	27-1	27
0108 MANIFOLDS	28-1	
EXHAUST MANIFOLD.....	28-1	28

TABLE OF CONTENTS (CONTINUED)

		PAGE	ILLUS/ FIGURE
	0109	ACCESSORY DRIVING MECHANISMS	29-1
		TACHOMETER DRIVE ASSEMBLY.....	29-1 29
		HYDRAULIC PUMP DRIVE (MODEL 5063-5393).....	30-1 30
GROUP 03		FUEL SYSTEM	31-1
	0301	CARBURETOR FUEL INJECTOR.....	31-1
		FUEL INJECTOR ASSEMBLY AND RELATED PARTS	31-1 31
	0302	FUEL PUMPS	32-1
		FUEL PUMP ASSEMBLY AND DRIVE.....	32-1 32
		FUEL LINES AND FITTINGS (MODEL 5063-5299)	33-1 33
		FUEL LINES AND FITTINGS (MODEL 5063-5392)	34-1 34
		FUEL LINES AND FITTINGS (MODELS 5063-5393 AND 5063-539L)	35-1 35
		FUEL LINES AND FITTINGS (MODELS 5063-5395 AND 5063-539F)	36-1 36
		FUEL LINES AND FITTINGS (MODEL 5063-5398)	37-1 37
	0305	SUPERCHARGER, BLOWER, TURBOCHARGER, OR ALTITUDE COMPENSATOR.....	38-1
		BLOWER ASSEMBLY	38-1 38
		TURBOCHARGER AND RELATED PARTS (MODEL 5063-5392)	39-1 39
		TURBOCHARGER AND RELATED PARTS (MODELS 5063-5393 AND 5063-539L).....	40-1 40
		TURBOCHARGER (MODELS 5063-5392, 5063-5393 AND 5063-539L - EXPLODED VIEW)	41-1 41
		TURBOCHARGER AND RELATED PARTS (MODELS 5063-5395, 5063-5398, AND 5063-539F)	42-1 42
		TURBOCHARGER (MODELS 5063-5395, 5063-5398, AND 5063-539F - EXPLODED VIEW)	43-1 43
		TURBOCHARGER (MODEL 5063-5398) - EXPLODED VIEW	44-1 44
		BLOWER DRIVE GEAR AND RELATED PARTS	45-1 45
		AIR INLET HOUSING AND RELATED PARTS	46-1 46
	0308	ENGINE SPEED GOVERNOR AND CONTROLS.....	47-1
		GOVERNOR AND COVER ASSEMBLY.....	47-1 47
		GOVERNOR HOUSING ASSEMBLY AND COMPONENTS.....	48-1 48
		GOVERNOR SHAFT AND LOWER BEARING	49-1 49
		GOVERNOR HIGH SPEED SPRING PACK AND RELATED PARTS.....	50-1 50
		FUEL INJECTOR CONTROL TUBES AND LINKAGE	51-1 51
		THROTTLE DELAY, CHECK VALVE, AND LINKAGE (MODELS 5063-5392, 5063-5393, 5063-5395, 5063-5398, 5063-539F, AND 5063-539L).....	52-1 52
	0309	FUEL FILTERS	53-1
		FUEL FILTER AND STRAINER ASSEMBLIES (MODELS 5063-5299, 5063-5392, 5063-5395, 5063-5398, AND 5063-539F)	53-1 53
		FUEL FILTER AND STRAINER ASSEMBLIES (MODELS 5063-5393 AND 5063-539L).....	54-1 54

TABLE OF CONTENTS

	PAGE	ILLUS FIG
0311-ENGINE STARTING AIDS.....	55-1	
AIR BOX HEATER RELATED PARTS (5063-5299, 5063-5395, 5063-5398, AND 5063-539F)	55-1	55
AIR BOX HEATER RELATED PARTS (5063-5392).....	56-1	56
AIR BOX HEATER RELATED PARTS (5063-5393).....	57-1	57
GLOW PLUG CONTROLLER AND RELATED PARTS (5063-539L).....	58-1	58
AIR BOX HEATER ASSEMBLY - EXPLODED VIEW.....	59-1	59
AIR PUMP IGNITION COIL AND RELATED PARTS	60-1	60
 GROUP 05		
COOLING SYSTEM		
0503-WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET	61-1	
THERMOSTAT, HOUSING, LINES, AND FITTINGS (5063-5299, 5063-5392, 5063-5395, 5063-5398, AND 5063-539F).....	61-1	61
THERMOSTAT, HOUSING, LINES, AND FITTINGS (5063-5393)	62-1	62
0504-WATER PUMPS	63-1	
COOLER PUMP ASSEMBLY, IDLER PULLEY AND BELTSET	63-1	63
 GROUP 06		
ELECTRICAL SYSTEM		
0603-STARTING MOTOR	64-1	
STARTER AND MOUNTING HARDWARE	64-1	64
 GROUP 33		
SPECIAL PURPOSE KITS		
3301-REUSEABLE SHIPPING CONTAINERS.....	65-1	
SHIPPING AND STORAGE CONTAINER ASSEMBLY (5063-5299, 5063-5392, 5063-5393, AND 5063-539L).....	65-1	65
SHIPPING AND STORAGE CONTAINER ASSEMBLY (5063-5299)	66-1	66
SHIPPING AND STORAGE CONTAINER ASSEMBLY (5063-5395, 5063-5398, 5063-539F).....	67-1	67
 GROUP 94		
REPAIR KITS		
9401-REPAIR KITS.....	KIT-1	
KIT	KIT-1	KIT
 GROUP 95		
GENERAL USE STANDARDIZED PARTS		
9501-BULK MATERIEL.....	BULK-1	
BULK	BULK-1	BULK

	TABLE OF CONTENTS	PAGE	ILLUS FIG
SECTION III. SPECIAL TOOLS LIST			
GROUP 06	TOOLS AND TEST EQUIPMENT		
	2604-SPECIAL TOOLS.....	68-1	
	SPECIAL TOOLS EQUIPMENT (ORGANIZATIONAL SUPPORT TOOLS).....	68-1	68
	SPECIAL TOOLS EQUIPMENT (DIRECT SUPPORT TOOLS).....	69-1	69
	SPECIAL TOOLS EQUIPMENT (DIRECT SUPPORT TOOLS).....	70-1	70
	SPECIAL TOOLS EQUIPMENT (GENERAL SUPPORT TOOLS).....	71-1	71
	SPECIAL TOOLS EQUIPMENT (GENERAL SUPPORT TOOLS).....	72-1	72
	SPECIAL TOOLS EQUIPMENT (GENERAL SUPPORT TOOLS).....	73-1	73
	SPECIAL TOOLS EQUIPMENT (GENERAL SUPPORT TOOLS).....	74-1	74
	SPECIAL TOOLS EQUIPMENT (GENERAL SUPPORT TOOLS).....	75-1	75
	SPECIAL TOOLS EQUIPMENT (GENERAL SUPPORT TOOLS).....	76-1	76
	SPECIAL TOOLS EQUIPMENT (GENERAL SUPPORT TOOLS).....	77-1	77
SECTION III. CROSS REFERENCE INDEXES			
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-21	
	FIGURE AND ITEM INDEX	I-61	

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and other diagnostic equipment (TMDE); and other special support equipment required for performance of Direct Support and General Support Maintenance of the Engine w/Container (Models 5063-5299, 5063-5392, 5063-5393, 5063-5395, 5063-5398, 5063-539F, and 5063-539L). It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materiel is listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration (s)/figure(s).


b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE (UOC) column) for the performance of maintenance.

c. *Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National Stock Numbers (NSN) appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

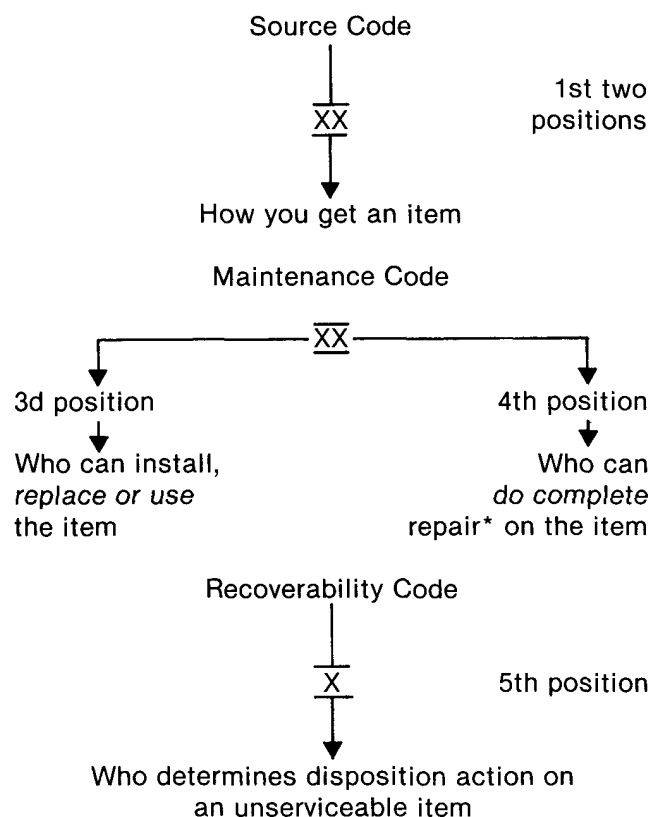

* *Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: