

TECHNICAL MANUAL

**DIRECT SUPPORT
AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS**

**ENGINE WITH CONTAINER; TURBOSUPERCHARGED,
DIESEL, FUEL INJECTION, 90-DEGREE "V" TYPE,
AIR-COOLED, 12-CYLINDER, ASSEMBLY;
MODELS AVDS-1790-2DR, 2815-00-124-5387,
AVDS-1790-2CA, 2815-01-149-1353 AND
AVDS-1790-2DA, 2815-01-166-2051**

This manual supersedes TM9-2815-220-34P, dated 29 December 1977 and all changes

Approved for Public Release; Distribution is Unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY

22 JULY 1993

TECHNICAL MANUAL

*TM 9-2815-220-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D. C., 22 July 1993

**DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)**

FOR

**ENGINE WITH CONTAINER; TURBOSUPERCHARGED,
DIESEL, FUEL INJECTION, 90-DEGREE "V" TYPE,
AIR-COOLED, 12-CYLINDER, ASSEMBLY;
MODELS AVDS-1790-2DR, 2815-00-124-5387,
AVDS-1790-2CA, 2815-01-149-1353 AND
AVDS-1790-2DA, 2815-01-166-2051**

CURRENT AS OF 1 April 1993

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	PAGE	ILLUS FIG
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	

***This publication supersedes TM 9-2815-220-34P, dated 29 December 1977 and all changes.**

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 01 ENGINE		
0100-ENGINE ASSEMBLY	1-1	
TRANSMISSION ADAPTERS, ENGINE LIFTING EYE, AND INSTALLATION GUIDES	1-1	1
0101-CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
ENGINE BLOCK	2-1	2
CRANKCASE AND CRANKSHAFT STUDS	3-1	3
CRANKCASE AND DRIVE STUDS	4-1	4
CYLINDER HEAD ASSEMBLY	5-1	5
0102-CRANKSHAFT	6-1	
CRANKSHAFT ASSEMBLY AND BEARINGS	6-1	6
0103-FLYWHEEL ASSEMBLY	7-1	
FLYWHEEL AND ASSOCIATED PARTS	7-1	7
0104-PISTONS, CONNECTING RODS.. . . .	8-1	
PISTON, RINGS, CONNECTING ROD AND OIL SPRAYER	8-1	8
0105-VALVES, CAMSHAFTS, AND TIMING SYSTEM	9-1	
VALVES AND ASSOCIATED PARTS	9-1	9
CAMSHAFT AND DRIVE GEARS (LEFT BANK)	10-1	10
CAMSHAFT AND DRIVE GEARS (RIGHT BANK)	11-1	11
0106-ENGINE LUBRICATION SYSTEM	12-1	
CRANKSHAFT DAMPER	12-1	12
OIL FILTER HOUSING	13-1	13
FLUID FILTER HOUSING	14-1	14
OIL GAGE ROD TUBE AND OIL FILLER TUBE	15-1	15
OIL PAN, COVER, AND ASSOCIATED PARTS	16-1	16
OIL PAN AND ASSOCIATED PARTS.	17-1	17
OIL PRESSURE COMPARTMENT BAFFLE, OIL PUMP AND LEVELING TUBE	18-1	18
OIL PUMP ASSEMBLY	19-1	19
CYLINDER HEAD OIL DRAIN TUBES	20-1	20
BREATHER TUBES, OIL SUPPLY HOSES AND OIL COOLER VENT HOSES	21-1	21
OIL COOLER FRAMES AND SHROUDS	22-1	22
OIL COOLERS AND OIL COOLER SCREENS	23-1	23
OIL SAMPLING SYSTEM (MODELS AVDS-1790-2CA AND AVDS-1790-2DA)	24-1	24
0108-MANIFOLDS	25-1	
EXHAUST MANIFOLDS (LEFT BANK)	25-1	25
EXHAUST MANIFOLDS (RIGHT BANK)	26-1	26
INTAKE MANIFOLD AND TUBES	27-1	27
0109-ACCESSORY DRIVING MECHANISMS	28-1	
GENERATOR AND STARTER DRIVEN IDLER GEARS AND SHAFTS	28-1	28
ACCESSORY DRIVE HOUSING	29-1	29
ACCESSORY DRIVE BASE AND GEARSHAFT ASSEMBLIES. . . .	30-1	30
AUTOMATIC INJECTION ADVANCE ASSEMBLY	31-1	31
FUEL PUMP DRIVE HOUSING	32-1	32

SECTION I

TM 9-2815-220-34P

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 03 FUEL SYSTEM		
0301-CARBURETOR, FUEL INJECTOR	33-1	
FUEL INJECTOR NOZZLE AND HOLDER ASSEMBLY	33-1	33
0302-FUEL PUMPS	34-1	
FUEL INJECTION PUMP, BASE, AND COUPLING ASSEMBLY	34-1	34
FUEL INJECTOR TUBES AND BRACKETS	35-1	35
FUEL INJECTOR NOZZLE FUEL RETURN HOSES	36-1	36
FUEL PUMP AND FUEL BACK FLOW VALVE	37-1	37
FUEL BACK FLOW VALVE	38-1	38
SMOKE GENERATING SYSTEM	39-1	39
0305-TURBOCHARGER	40-1	
TURBOSUPERCHARGER, TIE ROD AND BASE	40-1	40
DUST DETECTOR SYSTEM	41-1	41
0306-TANKS, LINES, FITTINGS, HEADERS	42-1	
FUEL SUPPLY HOSE (MODEL AVDS-1790-2DR)	42-1	42
0309-FUEL FILTERS	43-1	
WATER SEPARATOR, PRIMARY AND MANIFOLD FUEL FILTERS AND AUTOMATIC DRAIN CONTROL	43-1	43
PRIMARY AND WATER SEPARATOR FUEL FILTER ASSEMBLIES	44-1	44
0311-ENGINE STARTING AIDS	45-1	
MANIFOLD HEATER ASSEMBLY (LEFT BANK)	45-1	45
MANIFOLD HEATER ASSEMBLY (RIGHT BANK)	46-1	46
0312-ACCELERATOR, THROTTLE OR CHOKE CONTROL	47-1	
THROTTLE LINKAGE, SOLENOID CONTROL ASSEMBLY AND MANUAL SHUT-OFF	47-1	47
GROUP 04 EXHAUST SYSTEM		
0401-MUFFLER AND PIPES	48-1	
DUST EJECTOR SYSTEM (MODELS AVDS-1790-2CA AND AVDS-1790-2DA)	48-1	48
GROUP 05 COOLING SYSTEM		
0502-COWLING, Deflectors, AIR DUSTS, SHROUDS, ETC.	49-1	
ENGINE SHROUDS	49-1	49
TURBOSUPERCHARGER AND TRANSMISSION SHROUDS (MODELS AVDS-1790-2CA AND AVDS-1790-2DA).	50-1	50
CYLINDER DEFLECTORS AND SHROUDS	51-1	51
0505-FAN ASSEMBLY	52-1	
ENGINE COOLING FAN AND HOUSING	52-1	52
REAR FAN DRIVE	53-1	53
FRONT FAN DRIVE	54-1	54
FAN DRIVE CLUTCH ASSEMBLY	55-1	55

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 06 ELECTRICAL SYSTEM		
0601 -GENERATOR, ALTERNATOR	56-1	
ENGINE GENERATOR, CRADLE, AND BRACKET	56-1	56
GENERATOR OIL HOSES (MODEL AVDS-1790-2CA)	57-1	57
GENERATOR AIR DUCT (MODELS AVDS-1790-2DR AND AVDS-1790-2DA)	58-1	58
0603-STARTING MOTOR	59-1	
ENGINE STARTER, CRADLE, AND BRACKET	59-1	59
0606-ENGINE SAFETY CONTROLS	60-1	
FUEL INJECTION PUMP FUEL SHUT-OFF ELECTRICAL LEAD.	60-1	60
0610-SENDING UNITS AND WARNING SWITCHES	61-1	
STARTER MODULE, OIL PRESSURE AND TEMPERATURE SWITCHES AND TRANSMITTER	61-1	61
0613-HULL OR CHASSIS WIRING HARNESS	62-1	
ENGINE WIRING HARNESS BRACKETS AND CLAMPS (GENERATOR) (MODELS AVDS-1790-2CA AND AVDS-1790-2DA)	62-1	62
ENGINE WIRING HARNESS BRACKETS AND CLAMPS (STARTER) (MODELS AVDS-1790-2CA AND AVDS-1790-2DA)	63-1	63
ENGINE WIRING HARNESS BRACKETS AND CLAMPS (TRANSMISSION) (MODELS AVDS-1790-2CA AND AVDS-1790-2DA)	64-1	64
ENGINE WIRING HARNESS BRACKET AND CLAMPS (MODEL AVDS-1790-2DR)	65-1	65
ENGINE WIRING HARNESS CLAMPS (MODEL AVDS-1790-2DR)	66-1	66
ENGINE WIRING HARNESS CONNECTORS AND TERMINALS (MODEL AVDS-1790-2CA)	67-1	67
ENGINE WIRING HARNESS CONNECTORS AND TERMINALS (MODEL AVDS-1790-2DA)	68-1	68
ENGINE WIRING HARNESS CONNECTORS AND TERMINALS (MODEL AVDS-1790-2DR)	69-1	69
STARTER WIRING HARNESS (STARTER GROUND) (MODEL AVDS-1790-2DR)	70-1	70
STARTER WIRING HARNESS (STARTER SOLENOID) (MODEL AVDS-1790-2DR)	71-1	71
STARTER/SMOKE GENERATOR AND DUST DETECTOR WIRING HARNESS (MODELS AVDS-1790-2CA AND AVDS-1790-2DA)	72-1	72
TRANSMISSION WIRING HARNESS CONNECTORS AND TERMINALS (MODELS AVDS-1790-2CA AND AVDS-1790-2DA)	73-1	73
GENERATOR ELECTRICAL LEADS (MODEL AVDS-1790-2CA)	74-1	74

SECTION I

TM 9-2815-220-34P

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GENERATOR ELECTRICAL LEADS (MODEL AVDS-1790-2DA)	75-1	75
GENERATOR ELECTRICAL LEAD (MODEL AVDS-1790-2DR)	76-1	76
GROUP 22 BODY CHASSIS OR HULL, AND ACCESSORY ITEMS		
2210-DATA PLATES AND INSTRUCTION HOLDERS	77-1	
IDENTIFICATION PLATES	77-1	77
GROUP 33 SPECIAL PURPOSE KITS		
3301-REUSABLE SHIPPING CONTAINERS	78-1	
ENGINE SHIPPING AND STORAGE CONTAINER	78-1	78
GROUP 42 ELECTRICAL EQUIPMENT		
4210-INSTRUMENTS	79-1	
ENGINE TIME METER	79-1	79
GROUP 76 FIRE FIGHTING EQUIPMENT COMPONENTS		
7639-FIXED FIRE FIGHTING EQUIPMENT (VEHICULAR)	80-1	
FIRE EXTINGUISHER TUBE	80-1	80
GROUP 94 REPAIR PARTS KITS		
9401 -REPAIR PARTS KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501-BULK MATERIEL	BULK-1	
BULK	BULK-1	BULK
SECTION III. SPECIAL TOOLS LIST		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604-SPECIAL TOOLS	81-1	
SPECIAL TOOLS AND EQUIPMENT	81-1	81
SPECIAL TOOLS AND EQUIPMENT	82-1	82
SPECIAL TOOLS AND EQUIPMENT	83-1	83
SPECIAL TOOLS AND EQUIPMENT	84-1	84
SECTION IV. CROSS-REFERENCE INDEXES	I-1	
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-23	
FIGURE AND ITEM NUMBER INDEX	I-72	

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Direct Support and General Support Maintenance of the Engine, Diesel. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration, figure and item number appearance. The

figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instructions, as shown in the following breakout:

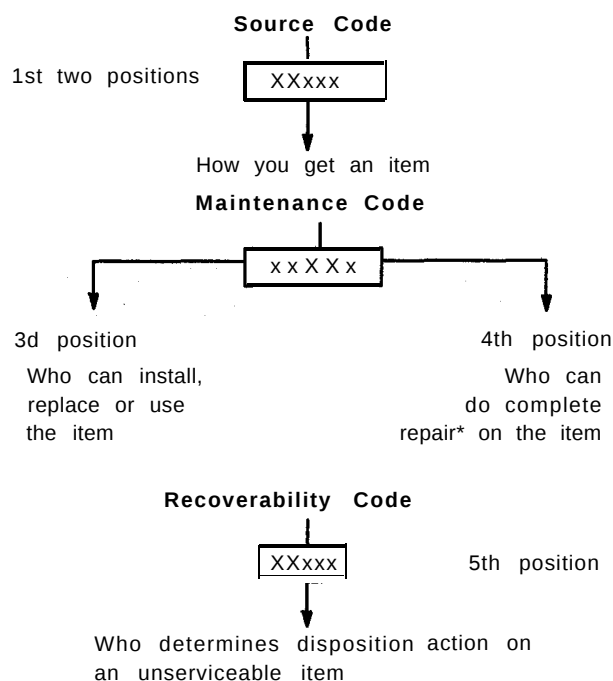

**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.