

TECHNICAL MANUAL

**OPERATOR'S, ORGANIZATIONAL,
DIRECT SUPPORT, and GENERAL SUPPORT
MAINTENANCE MANUAL**

(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)

for

TWIN AGENT 4x4 FIREFIGHTING TRUCK

MODEL NO. CM-KFT-8

NSN: 4210-00-484-5729

Approved for public release; distribution is unlimited

**HEADQUARTERS, DEPARTMENT OF THE ARMY
17 JUNE 1987**

Technical Manual
No. 5-4210-229-14&P

Headquarters
Department of the Army
Washington, D.C. 17 June 1987

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)
for
TWIN AGENT 4x4 FIREFIGHTING TRUCK
MODEL NO.: CM-KFT-8
NSN: 4210-00-484-5729**

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished to you.

Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	Page
CHAPTER 1 INTRODUCTION	1-1
Section I General Information.....	1-1
Section II Equipment Description.....	1-3
CHAPTER 2 OPERATING INSTRUCTIONS	2-1
Section I Description and Use of Operator's Controls and Indicators.....	2-1
Section II Operator Preventive Maintenance Checks and Services (PMCS)	2-46
Section III Operation Under Usual Conditions.....	2-55
Section IV Operation Under Unusual Conditions	2-76
CHAPTER 3 OPERATOR MAINTENANCE INSTRUCTIONS	3-1
Section I Operator Troubleshooting Procedures.....	3-1
Section II Maintenance of Tire Rim Assembly.....	3-3
CHAPTER 4 ORGANIZATIONAL MAINTENANCE INSTRUCTIONS.....	4-1
Section I Repair Parts, Special Tools, TMDE, and Support Equipment	4-2
Section II Service Upon Receipt	4-2
Section III Organizational Preventive Maintenance Checks and Services (PMCS).....	4-5
Section IV Lubrication Instructions.....	4-13
Section V Organizational Troubleshooting Procedures.....	4-16
Section VI Maintenance of Accessories.....	4-30
Section VII Maintenance of Auxiliary Firefighting Equipment	4-32
Section VIII Maintenance of Twin Agent Firefighting System.....	4-37
Section IX Maintenance of Remote Manual Twin Agent Turret Assembly.....	4-46
Section X Maintenance of Hose Reel Assembly.....	4-51

CHAPTER 4	ORGANIZATIONAL MAINTENANCE INSTRUCTIONS (Continued)	Page
Section XI	Maintenance of Fire Body Assembly	4-59
Section XII	Maintenance of Engine Cooling System	4-72
Section XIII	Maintenance of Engine Fuel System	4-81
Section XIV	Maintenance of Diesel Fuel Injection System	4-86
Section XV	Maintenance of Engine Exhaust System	4-93
Section XVI	Maintenance of Engine and Accessories	4-95
Section XVII	Maintenance of Cab Assembly, Lights, Switches, Gauges, Controls and Indicators.....	4-106
Section XVIII	Maintenance of Electrical System	4-158
Section XIX	Maintenance of Propeller Shaft Assembly	4-160
Section XX	Maintenance of Transmission Assembly	4-164
Section XXI	Maintenance of Transfer Case Assembly	4-168
Section XXII	Maintenance of Tire Rim Assembly.....	4-171
Section XXIII	Maintenance of Air Brake System	4-174
Section XXIV	Maintenance of Steering Assembly	4-186
Section XXV	Maintenance of Power Steering System	4-189
Section XXVI	Maintenance of Front Suspension Assembly	4-193
Section XXVII	Maintenance of Rear Suspension Assembly.....	4-202
Section XXVIII	Maintenance of Rear Axle Assembly.....	4-204
Section XXIX	Maintenance of Front Axle Assembly.....	4-210
Section XXX	Maintenance of Frame Assembly.....	4-214
Section XXXI	Preparation for Shipment or Storage.....	4-217
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment	5-1
Section II	Direct Support Troubleshooting Procedures	5-1
Section III	Maintenance of Auxiliary Firefighting Equipment	5-8
Section IV	Maintenance of Diesel Fuel Injection System	5-24
Section V	Maintenance of Engine and Accessories	5-25
Section VI	Maintenance of Cab Assembly, Lights, Switches, Gauges, Controls and Indicators.....	5-38
Section VII	Maintenance of Air Brake System	5-43
Section VIII	Maintenance of Power Steering System.....	5-54
Section IX	Maintenance of Frame Assembly.....	5-59
CHAPTER 6	GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment	6-1
Section II	Maintenance of Engine and Accessories	6-1
Section III	Maintenance of Transmission Assembly.	6-43
Section IV	Maintenance of Transfer Case Assembly	6-95
APPENDIX A	REFERENCES	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-1
Section I	Introduction.....	B-1
Section II	Maintenance Allocation Chart	B-4
Section III	Tool and Equipment Requirements	B-13
Section IV	Remarks	B-16
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LIST	C-1
Section I	Items List	C-1
Section II	Components of End Item	C-2
APPENDIX D	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST	D-1
Section I	Introduction.....	D-1
Section II	Expendable/Durable Supplies and Materials List.....	D-2

	Page
APPENDIX E REPAIR PARTS AND SPECIAL TOOLS LIST	E-1
Section I Introduction	E-1
Section II Repair Parts List	E-6
Group 00 Twin Agent 4x4 Firefighting Truck	E-6
Group 01 Accessories	E-6
Group 02 Auxiliary Firefighting Equipment	E-8
Group 03 Twin Agent Firefighting System	E-34
Group 04 Remote Manual Twin Agent Turret Assembly	E-50
Group 05 Hose Reel Assembly	E-64
Group 06 Fire Body Assembly	E-68
Group 07 Engine Cooling System	E-84
Group 08 Engine Fuel System	E-98
Group 09 Diesel Fuel Injection System	E-112
Group 10 Engine Exhaust System	E-142
Group 11 Engine and Accessories	E-144
Group 12 Cab Assembly, Lights, Switches, Gauges, Controls and Indicators	E-206
Group 13 Electrical System	E-311
Group 14 Propeller Shaft Assembly	E-328
Group 15 Transmission Assembly	E-332
Group 16 Transfer Case Assembly	E-378
Group 17 Tire Rim Assembly	E-399
Group 18 Air Brake System	E-412
Group 19 Steering Assembly	E-430
Group 20 Power Steering System	E-432
Group 21 Front Suspension Assembly	E-440
Group 22 Rear Suspension Assembly	E-448
Group 23 Rear Axle Assembly	E-452
Group 24 Front Axle Assembly	E-458
Group 25 Frame Assembly	E-466
APPENDIX F TORQUE LIMITS	F-1
APPENDIX G STOWAGE GUIDE	G-1
INDEX	I-1

LIST OF ILLUSTRATIONS

Figure	Page
1-1 Twin Agent 4x4 Firefighting Truck	1-0
1-2 Cab	1-5
1-3 Chassis	1-5
1-4 Service Brakes	1-6
1-5 Body	1-6
1-6 Twin Agent System	1-7
1-7 Hose Reel	1-7
1-8 Engine	1-8
1-9 Transmission	1-8
1-10 Front and Rear Axles	1-9
1-11 Suspension	1-9
1-12 Wheels and Tires	1-10
1-13 Steering System	1-10

Figure	LIST OF ILLUSTRATIONS (Continued).	Page
1-14	Exhaust System	1-11
1-15	Electrical System.....	1-11
1-16	Information Plate	1-12
2-1	Twin Agent Controls and Indicators	2-2
2-2	Remove Turret Controls and Indicators	2-9
2-3	Cab Controls and Instruments	2-13
2-4	Instrument Panel and Controls	2-17
2-5	Electronic Siren Controls.....	2-28
2-6	Inverter Controls.....	2-31
2-7	Power Saw Controls	2-34
2-8	Hydraulic Rescue Tool Control	2-39
2-9	Hydraulic Rescue Tool Power Unit Controls.....	2-41
2-10	10 Ton Hydraulic Rescue Kit Controls	2-43
2-11	Lighting and Vision Equipment	2-57
4-1	Chassis Lubrication Schematic.....	4-13
E-1	Accessories	E-6
E-2	Hydraulic Rescue Tool	E-8
E-3	Hydraulic Rescue Tool Power Unit	E-12
E-4	Aircraft Crash Rescue Tool Kit	E-16
E-5	10 Ton Hydraulic Rescue Kit	E-16
E-6	Rescue Saw	E-20
E-7	Inverter.....	E-32
E-8	Twin Agent Firefighting System.....	E-34
E-9	Piping, Valves, Fittings, and Regulator	E-38
E-10	Pressure Regulation and Manifold	E-44
E-11	Handrails	E-48
E-12	Remote Manual Twin Agent Turret Assembly	E-50
E-13	Monitor Assembly.....	E-52
E-14	Turret Box	E-56
E-15	Turret Piping, Controls and Gauges.....	E-60
E-16	Hose Reel Assembly	E-64
E-17	Fire Body Assembly	E-68
E-18	Deck	E-72
E-19	Inverter Receptacle	E-72
E-20	Rear Quartz Spotlight	E-74
E-21	Back-Up Light	E-78
E-22	Turn and Stop Light	E-78
E-23	Back-Up	E-82
E-24	Compartment Light.....	E-82
E-25	Deaeration Tank.....	E-84
E-26	Fan, Water Pump and Thermostat	E-86
E-27	Radiator Hoses and Piping	E-90
E-28	Radiator and Shroud	E-92
E-29	Radiator Collar and Stay Rod	E-94
E-30	Air Cleaner	E-98
E-31	Fuel Filter	E-100
E-32	Fuel Tank and Lines.....	E-102
E-33	Accelerator Pedal and Control Assembly.....	E-106
E-34	Engine Shutdown Control and Linkage	E-110
E-35	Injection Lines	E-112
E-36	Injection Pump	E-118
E-37	Injection Pump Governor Assembly.....	E-124


Figure	LIST OF ILLUSTRATIONS (Continued).	Page
E-38	Injection Pump Solenoid.....	E-132
E-39	Injection Pump Aneroid	E-132
E-40	Fuel Supply Pump	E-136
E-41	Injection Pump Linkage	E-136
E-42	Injection Nozzle.....	E-140
E-43	Engine Exhaust System	E-142
E-44	Batteries and Cables	E-144
E-45	Alternator Mounting	E-146
E-46	Alternator Assembly	E-148
E-47	Starter Mounting and Wiring.....	E-154
E-48	Starter Assembly	E-160
E-49	Turbocharger	E-166
E-50	Intake and Exhaust Manifolds.....	E-170
E-51	Valve Cover, Rocker Arms, Shafts, Pushrods, Cylinder Head and Valves	E-172
E-52	Front Cover	E-176
E-53	Camshaft and Gear Train	E-180
E-54	Dipstick, Tube, and Crankcase	E-182
E-55	Oil Pump and Filters.....	E-186
E-56	Oil Cooler Assembly.....	E-190
E-57	Oil Pan	E-194
E-58	Crankcase Vent Assembly.....	E-194
E-59	Pistons, Connecting Rods, Flywheel, Crankshaft, and Main Bearings	E-198
E-60	Front Engine Mounting	E-202
E-61	Rear Engine Mounting.....	E-204
E-62	Headlights	E-206
E-63	Front Clearance Lights	E-206
E-64	Front Turn Signal Lights	E-208
E-65	Cab Dome Lights.....	E-208
E-66	Cab Spotlights.....	E-212
E-67	Quartz Light, Front Bumper and Grille	E-216
E-68	Engine Compartment Light.....	E-220
E-69	Roof Warning Light	E-222
E-70	Air Horns	E-224
E-71	Windshield Wipers and Motor.....	E-228
E-72	Windshield Washer	E-232
E-73	Speedometer Cable Assembly	E-234
E-74	Instrument Panel Assembly	E-236
E-75	Instrument Cluster	E-240
E-76	Siren/PA System	E-244
E-77	External Speaker Installation.....	E-244
E-78	Heater Control Assembly.....	E-248
E-79	Heater Assembly	E-250
E-80	Heater Duct Assembly.....	E-254
E-81	Steering Wheel and Column.....	E-258
E-82	Hood Assembly	E-262
E-83	Splash Guard and Stone Deflector	E-266
E-84	Hood Cable and Emblem	E-270
E-85	Mirror Assembly	E-272
E-86	Door Installation	E-276
E-87	Door Assembly.....	E-278
E-88	Seats and Seatbelts	E-284
E-89	Cab Glass	E-288

Figure	LIST OF ILLUSTRATIONS (Continued).	Page
E-90	Sun Visor and Product Graphic	E-292
E-91	Engine and Transmission Cover	E-294
E-92	Floor Mat.....	E-298
E-93	Front Sheet Metal.....	E-300
E-94	Cab Underbody and Side Panel.....	E-302
E-95	Roof Panel	E-306
E-96	Cab Stay Rods and Mounting	E-308
E-97	Cab Electrical System	E-312
E-98	Body Electrical System.....	E-321
E-99	Propeller Shaft Assembly	E-328
E-100	Transmission Installation	E-332
E-101	Torque Converter and Cover Assembly	E-334
E-102	Oil Pump and Front Support.....	E-338
E-103	Forward Clutch and Turbine Shaft	E-342
E-104	Fourth Clutch	E-346
E-105	Third Clutch, Center Support, and Second Clutch.....	E-348
E-106	Gear Unit and Main Shaft.....	E-352
E-107	Transmission Housing, Oil Filter and Oil Pan	E-356
E-108	First Clutch.....	E-360
E-109	Rear Cover	E-362
E-110	Control Valve	E-366
E-111	Modulated Lockup Valve	E-370
E-112	Oil Cooler Piping and Oil Level Gauge	E-372
E-113	Transmission Shift Control	E-376
E-114	Transfer Case Installation.....	E-378
E-115	Front Output Shaft.....	E-382
E-116	Rear Output Shaft	E-382
E-117	Intermediate Shaft.....	E-386
E-118	Input Shaft.....	E-386
E-119	Manual Shift.....	E-390
E-120	Manual Front Drive Declutch	E-392
E-121	Transfer Case Housing	E-394
E-122	Transfer Case Shift Lever and Linkage.....	E-396
E-123	Tires and Rims	E-399
E-124	Slack Adjuster	E-400
E-125	Air Brake Chamber.....	E-400
E-126	Air Compressor Assembly and Filter.....	E-404
E-127	Air Compressor Governor.....	E-408
E-128	Air Dryer	E-408
E-129	Front Service Brakes.....	E-412
E-130	Rear Service Brake	E-416
E-131	Limiting Valve and Quick Release Valve	E-420
E-132	Parking Brake Control Valve	E-422
E-133	Brake Pedal and Control Valve.....	E-422
E-134	Air Tank	E-426
E-135	Drag Link.....	E-430
E-136	Power Steering Gear	E-432
E-137	Power Steering Pump.....	E-436
E-138	Front Shock Absorber.....	E-440
E-139	Front Wheel Assembly	E-440
E-140	Leaf Springs and Bushings	E-444
E-141	Leaf Springs and Bushings	E-448


Figure	LIST OF ILLUSTRATIONS (Continued).	Page
E-142	Wheel Assembly	E-452
E-143	Rear Axle	E-454
E-144	Front Axle	E-458
E-145	Crossmembers and Frame Rails	E-466

LIST OF TABLES

Figure		Page
2-1	Twin Agent System Controls and Indicators	2-3
2-2	Remote Turret Controls	2-10
2-3	Cab Controls and Instruments	2-14
2-4	Instrument Panel and Controls	2-18
2-5	Electronic Siren Controls	2-29
2-6	Inverter Controls	2-32
2-7	Power Saw Controls	2-35
2-8	Hydraulic Rescue Tool Controls	2-40
2-9	Hydraulic Rescue Tool Power Unit Controls	2-42
2-10	10 Ton Hydraulic Rescue Kit Controls	2-44
2-11	Operator/Crew Preventive Maintenance Checks and Services (PMCS)	2-49
2-12	AFFF Vessel Fill Readings	2-74
3-1	Operator Troubleshooting Chart	3-2
4-1	Inspection Prior To Use	4-3
4-2	Organizational Preventive Maintenance Checks and Services (PMCS)	4-6
4-3	SAE Oil Viscosity Recommendations	4-15
4-4	Organizational Troubleshooting Chart	4-19
5-1	Direct Support Troubleshooting Chart	5-3
5-2	Compressor Component Tolerances	5-46

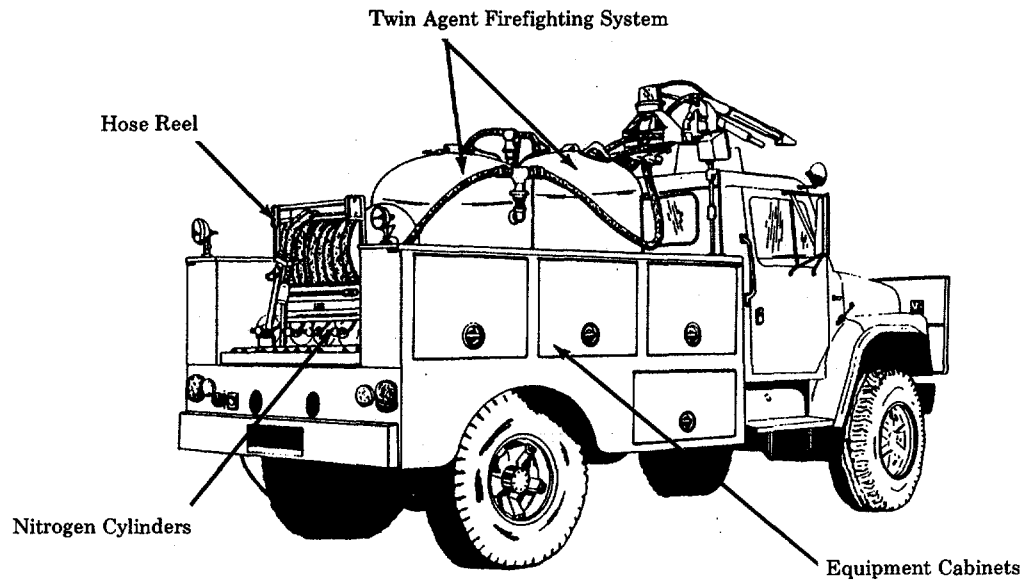

CURB SIDE

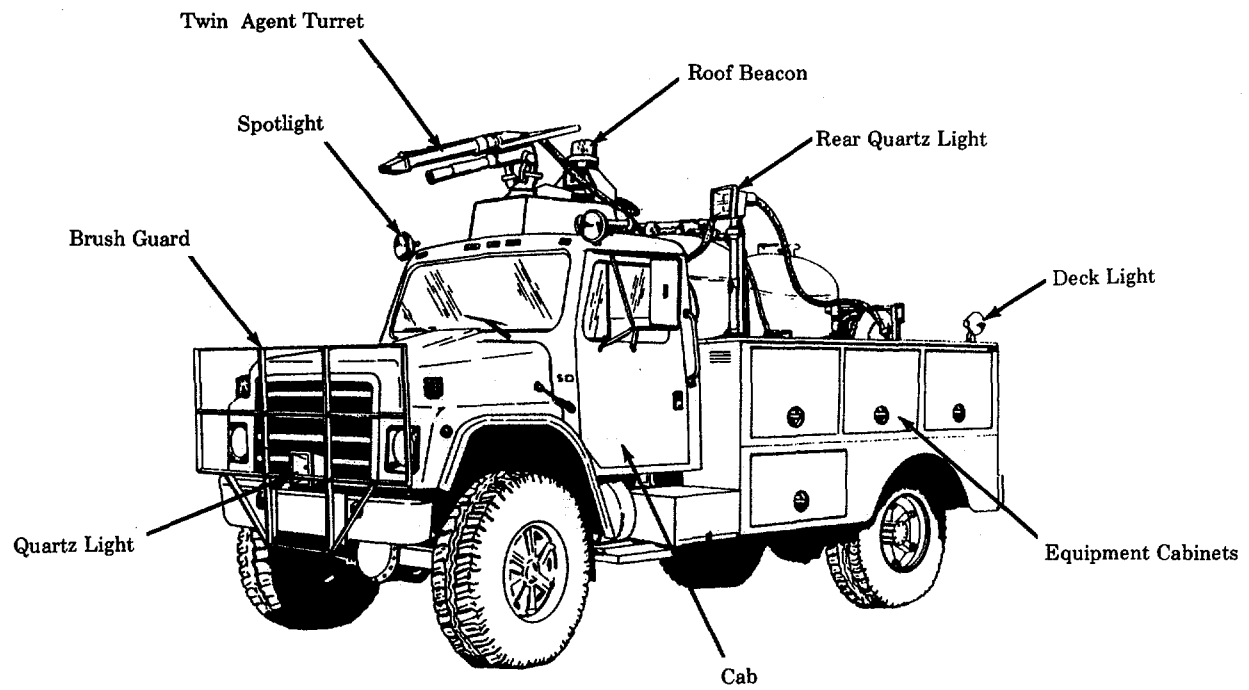

STREET SIDE

FIGURE 1-1. TWIN AGENT 4X4 FIREFIGHTING TRUCK

CHAPTER 1 INTRODUCTION

Section I	GENERAL INFORMATION
Section II	EQUIPMENT DESCRIPTION

Section I. GENERAL INFORMATION

	Para.		Para.
Destruction of Army Material To Prevent Enemy Use	1-6	Reporting of Equipment Improvement Recommendations	1-3
List of Abbreviations	1-5	Scope	1-1
Maintenance Forms and Records	1-2	Warranty Information	1-4
Preparation for Storage or Shipment	1-7		

1-1. SCOPE.

- a. *Type of Manual.* Operator's, Organizational, Direct Support and General Support Maintenance Manual, including Repair Parts and Special Tools List.
- b. *Model Number and Equipment Name.* Model CM-KFT-8, Twin Agent 4x4 Firefighting Truck.
- c. *Purpose of Equipment.* The CM-KFT-8 Firefighting Truck is designed to combat aircraft and automotive fires. The truck will accomplish the firefighting mission by providing aqueous film forming foam (AFFF) and dry chemical (P-K-P) from a self-contained agent system.
- d. *Special Limitations of Equipment.* There are no special limitations on this firetruck.

1-2. MAINTENANCE FORMS AND RECORDS.

Department of the Army forms and procedures used for equipment will be those prescribed by DA PAM 738-750, The Army Maintenance Management System (TAMMS).

1-3. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR's).

If your Twin Agent 4x4 Firefighting Truck needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Put it on an SF 368 (Quality Deficiency Report). Mail it to us at: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-QX, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. We'll send you a reply.

1-4. WARRANTY INFORMATION.

The Twin Agent 4x4 Firefighting Truck is warranted for one year after date of acceptance by the Government. Report all defects in material or workmanship to your supervisor, who will take appropriate action through your organizational maintenance shop.