

LUBRICATION ORDER

L05-4110-235-12

28 MAY 1982

REFRIGERATION UNIT, MECHANICAL, PANEL TYPE, 5,000 BTU/HR GASOLINE ENGINE DRIVEN (GED) MGR EQUIPMENT COPR. MODEL ERU-5G (NSN 4110-01-076-1991)

Reference C9100-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions or contaminated lubricants. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.


Clean parts with SOLVENT, dry cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Drain crankcase when hot. Fill and check level.

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) direct to Commander, US Army Troop Support and Aviation Materiel Readiness Command, ATTN: DRSTS-MPSD, 4300 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished to you.

LUBRICANT • INTERVAL

LUBRICANT • INTERVAL

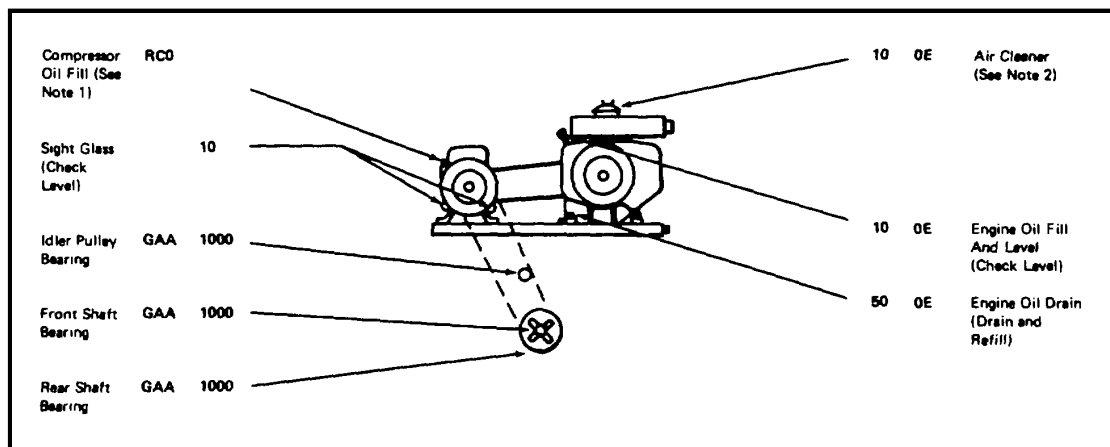

TOTAL MAN-HR		TOTAL MAN-HR	
INTERVAL	MAN-HR	INTERVAL	MAN-HR
10	0.2	1000	0.2