


TECHNICAL MANUAL

OPERATOR'S, UNIT, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE
MANUAL

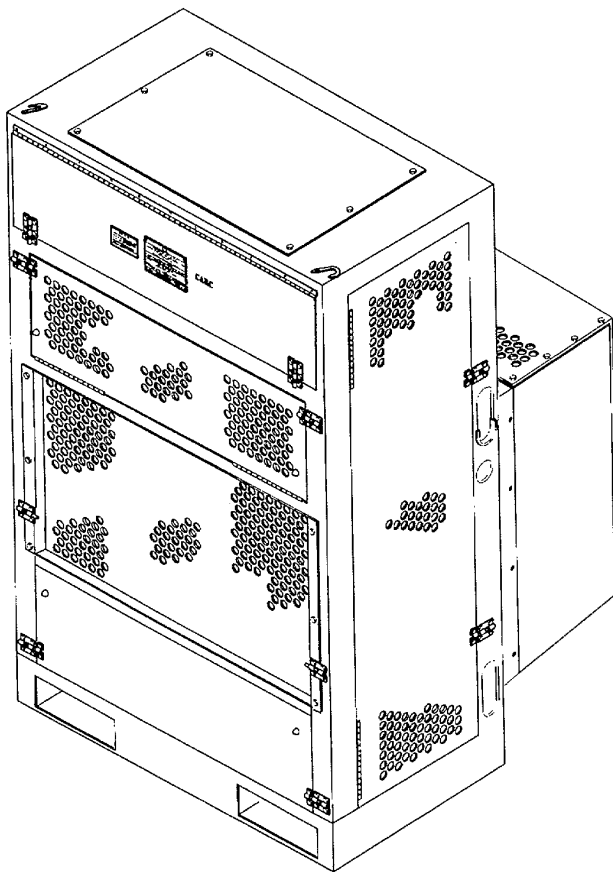

REFRIGERATION UNIT, MECHANICAL,
5K BTU, ELECTRIC
MODEL F5000RE

(4110-01-389-9180)

OPERATING INSTRUCTIONS	2-1
OPERATOR PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)	2-6
UNIT MAINTENANCE INSTRUCTIONS	4-1
UNIT PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)	4-10
UNIT TROUBLESHOOTING	4-24
DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
MAINTENANCE ALLOCATION CHART	B-1

DISTRIBUTION STATEMENT A: Approved for public release, distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY
23 MAY 1996

TECHNICAL MANUAL

NO 9-4110-254-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 23 MAY 1996

**OPERATOR'S, UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE MANUAL
FOR
REFRIGERATION UNIT, MECHANICAL,
5K BTU, ELECTRIC
MODEL F5000RE
4110-01-389-9180**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798 You may also submit your recommended changes by E-mail directly to <mpmto/oavma28@st-louis-emh7 army mil> A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual Immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release, distribution is unlimited

TABLE OF CONTENTS

		Page
CHAPTER 1	INTRODUCTION.....	1-1
Section I	General Information	1-1
Section II	Equipment Description	1-3
Section III	Principles of Operation.....	1-6
CHAPTER 2	OPERATING INSTRUCTIONS	2-1
Section I	Description and Use of Operator's Controls and Indicators.....	2-1
Section II	Preventive Maintenance Checks and Services (PMCS)	2-6
Section III	Operation Under Usual Conditions	2-17
Section IV	Operation Under Unusual Conditions	2-22

TABLE OF CONTENTS - Continued

CHAPTER 3	OPERATOR MAINTENANCE INSTRUCTIONS.....	3-1
Section I	Lubrication	3-1
Section II	Troubleshooting Procedures	3-2
Section III	Operator's Maintenance Procedures	3-5
CHAPTER 4	UNIT MAINTENANCE INSTRUCTIONS	4-1
Section I	Repair Parts, Tools, Special Tools, Test, Measurement, and Diagnostic Equipment (TMDE), and Support Equipment	4-1
Section II	Service Upon Receipt	4-1
Section III	Unit Preventive Maintenance Checks and Services (PMCS)	4-10
Section IV	Unit Troubleshooting Instructions	4-24
Section V	Unit Maintenance Procedures	4-29
Section VI	Preparation for Storage or Shipment.....	4-113
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
Section I	Direct Support Troubleshooting Instructions	5-1
Section II	Direct Support Maintenance Procedures	5-3
CHAPTER 6	GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
APPENDIX A	REFERENCES	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-1
Section I	Introduction.....	B-1
Section II	Maintenance Allocation Chart for Refrigeration Unit.....	B-5
Section III	Tool and Test Equipment Requirements for Refrigeration Unit.....	B-9
Section IV	Remarks for Refrigeration Unit.....	B-9
APPENDIX C	COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE ITEMS LIST	C-1
Section I	Introduction.....	C-1
Section II	Components of End Item	C-1
Section III	Basic Issue Items List	C-2

TABLE OF CONTENTS - Continued

APPENDIX D	ADDITIONAL AUTHORIZATION LIST	D-1
APPENDIX E	EXPENDABLE AND DURABLE ITEMS LIST	E-1
Section I	Introduction	E-1
Section II	Expendable and Durable Items List	E-2
APPENDIX F	ILLUSTRATED LIST OF MANUFACTURED ITEMS	F-1
Section I		F-1
Section II		F-1
APPENDIX G	MANDATORY REPLACEMENT PARTS	G-1
ALPHABETICAL INDEX.....		Index-1

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-0	Refrigeration Unit	1-0
1-1	Major Components	1-4
1-2	Electrical System	1-6
1-3	Electrical Schematic	1-7
1-4	Electrical Wiring Diagram (Sheet 1 of 2)	1-8
1-4	Electrical Wiring Diagram (Sheet 2 of 2)	1-9
1-5	Refrigeration System	1-10
1-6	Refrigeration Schematic	1-11
1-7	Air Flow	1-12
2-1	Operating Controls and Indicators	2-3
2-2	Fault Controls and Indicators	2-5
2-3	Operator's PMCS Routing Diagram	2-7
2-4	Operating Controls and Indicators	2-18
2-5	Decals and Instruction Plates (Sheet 1 of 2)	2-20
2-5	Decals and Instruction Plates (Sheet 2 of 2)	2-21
4-1	Wall Opening Dimensions	4-2
4-2	Installation	4-3
4-3	Input Power Connection	4-5
4-4	Refrigeration Valve Settings for Normal Operation	4-6
4-5	Compressor Mount	4-7
4-6	Preliminary Adjustment	4-8
4-7	Lubrication	4-11
4-8	Barrel Bolts	4-30
4-9	Top Panel	4-31
4-10	Access Panel	4-32
4-11	Cover Panel (Coil Guard Rear)	4-33
4-12	Coil Guard Front Panel	4-34
4-13	Unit Mounting Bolt Assembly	4-36
4-14	Control Box Assembly	4-38
4-15	Wires, Cables and Harnesses	4-41
4-16	Circuit Breaker	4-47
4-17	Resistor R1 Assembly	4-49
4-18	Lamp DS1 Assembly	4-51
4-19	Fuses	4-53
4-20	Motor Starter	4-55
4-21	Contractor	4-58
4-22	Control Relays	4-61
4-23	Hourmeter	4-63
4-24	Toggle Switch	4-65
4-25	Repeat Cycle Timer	4-67
4-26	Remote Bulb Thermostat (Temperature Control)	4-70
4-27	Terminal Board TB1	4-74
4-28	Ground Strap (Control Panel)	4-76
4-29	Dummy Stowage Connector and Cover	4-77

LIST OF ILLUSTRATIONS - Continued

Figure	Title	Page
4-30	Reset Button	4-79
4-31	Power Distribution Block	4-82
4-32	Push (Door) Switches.....	4-84
4-33	V-Belt	4-86
4-34	Pulley.....	4-87
4-35	Ground Strap (Motor)....	4-88
4-36	AC Motor.....	4-90
4-37	Condenser Fan	4-93
4-38	Evaporator Fan.	4-94
4-39	Sheave	4-95
4-40	Flange Bearing (Evaporator Fan)	4-97
4-41	Flange Bearing (Condenser Fan)	4-98
4-42	Solenoid Valve (Liquid Line).....	4-100
4-43	Solenoid Valve L2 (Defrost Line).....	4-102
4-44	Refrigeration Temperature Gage (Thermometer)	4-104
4-45	Grease Fitting Extension.....	4-106
4-46	Defrost Temperature Switch.....	4-108
4-47	Ground Strap (Compressor)	4-110
4-48	Heat Shield Gaskets.....	4-112
4-49	Refrigeration System Pump Down.....	4-114
4-50	Compress or Mount.....	4-115
5-1	Circuit Breaker Cover.....	5-4
5-2	Control Panel and Operating Instruction Plate	5-6
5-3	Fan Drive Shaft.....	5-7
5-4	Service Manifold Installation	5-9
5-5	Discharging Refrigerant.....	5-13
5-6	Nitrogen Tank Connection.....	5-15
5-7	Evacuation of Refrigerant System	5-20
5-8	Refrigerant Charging (Total System)	5-23
5-9	Refrigerant Charging (Partial System /Small Quantity Charge).....	5-25
5-10	Dehydrator	5-30
5-11	Strainer	5-32
5-12	Isolation Valves.....	5-34
5-13	Receiver	5-37
5-14	Condenser Coil	5-39
5-15	Pressure Regulator Valve.....	5-40
5-16	Metal Hose Assembly	5-42
5-17	Pressure Regulator Valve.....	5-43
5-18	Metal Hose Assembly.....	5-45
5-19	Accumulator.....	5-48

LIST OF ILLUSTRATIONS - Continued

Figure	Title	Page
5-20	Solenoid Valve.....	5-49
5-21	Solenoid Valve.....	5-51
5-22	Stop Valve.....	5-53
5-23	Stop Valve.....	5-55
5-24	Sight Indicator.....	5-57
5-25	Differential Oil Pressure Switch S5.....	5-59
5-26	Dual Pressure Control Switch.....	5-62
5-27	Dual Pressure Control Switch Settings.....	5-63
5-28	Compound Gage (Suction Pressure).....	5-64
5-29	Pressure Gage (Discharge Pressure).....	5-66
5-30	Heat Exchanger.....	5-68
5-31	Expansion Valve.....	5-70
5-32	Evaporator Coil.....	5-74
5-33	Compressor (Sheet 1 of 2).....	5-76
5-33	Compressor (Sheet 2 of 2).....	5-77
5-34	Tubing And Fittings.....	5-83
5-35	Left and Right Side Doors.....	5-87
5-36	Front Bottom Door.....	5-89
5-37	Front Top Door.....	5-91
5-38	Control Box Cover.....	5-93
C-1	Basic Issue Items.....	C-2
F-1	Tube, Copper Straight, Various.....	F-4
F-2	Tubing-Copper, Straight Flared, Various.....	F-4
F-3	Insulation Sleeving.....	F-5
F-4	Grommet, Part Number 500K1662-3-3 36.....	F-5
F-5	Gasket, Various.....	F-6
F-6	Chain, Sash, Part Number 12290-8-8000.....	F-6
F-7	Gasket, Top/Bottom, Part Number 148K0143.....	F-7
F-8	Gasket, Right/Left, Part Number 148K0144.....	F-7
F-9	Tube, Coil to Heat Exchanger, Part Number 148K0168.....	F-8
F-10	Tube Expansion, Valve to Heat Exchanger, Part Number 148K0169-1/T.....	F-8
F-11	Tube, Expansion, Valve Bypass, Part Number 148K0171.....	F-9
F-12	Tube, 0 375 Tee to Defrost Coil, Part Number 148K0173.....	F-9
F-13	Tube, Heat Exchanger to 0 375 Elbow, Part Number 148K0174.....	F-10
F-14	Tubing, Insulation, Part Number 149K000-1/99.....	F-10
F-15	Insulation Sound and Temperature, Part Number 149K0000-1/162.....	F-11
F-16	Gasket, Control Box, Top, Part Number 149K0032.....	F-11
F-17	Tube Assembly Inlet, Receiver, Part Number 149K0052-1/T.....	F-12
F-18	Tube Assembly, Outlet Receiver, Part Number 149K0053-1/T.....	F-12
F-19	Tube, Elbow to Elbow, Sight Glass Outlet, Part Number 149K0074.....	F-13

LIST OF ILLUSTRATIONS - Continued

Figure	Title	Page
F-20	Tube, Outlet, Accumulator, Part Number 149K0057	F-13
F-21	Tube, Outlet, Suction Pressure Regulator Valve, Part Number 149K0058	F-14
F-22	Tube, Outlet, Compressor, Part Number 149K0059-1/T	F-14
F-23	Tube, Outlet, Condenser Coil, Part Number 149K0075	F-15
F-24	Tube, Outlet, Discharge Pressure Regulator Valve, Part Number 149K0061	F-15
F-25	Tube Assembly, Outlet Strainer, Part Number 149K0063-1/T	F-16
F-26	Tube Assembly, Outlet, Solenoid Valve, Part Number 149K0064-1/T	F-16
	Tube, Inlet, Shut-Off Valve, Part Number 149K0065	F-17
F-28	Gasket, Cover, Control Box, Part Number 149K0072-1	F-17
F-29	Gasket, Circuit Breaker Panel, Part Number 151K0031	F-18
F-30	Contact Cradle, Sensing Bulb, Part Number 152K0194	F-18

LIST OF TABLES

Table	Title	Page
2-1	Operator Preventive Maintenance Checks and Services	2-8
4-1	Unit Preventive Maintenance Checks and Services	4-13
4-2	Monthly Mandatory Replacement Parts	4-23
4-3	Semi-Annually Mandatory Replacement Parts	4-23
4-4	Annual Mandatory Replacement Parts	4-23
5-1	Pressure Temperature Relationship of Saturated Refrigerant R-134a	5-27
5-2	Nominal Operating Pressure at Suction and Discharge Shut Off Valves	5-29

HOW TO USE THIS MANUAL

Be sure to read all Warnings before using this equipment.

This manual contains instructions for operation and maintenance of the Refrigeration Unit.

The front cover index of this manual lists the areas of the manual used most often and guides you to those sections. Follow the black mark on the cover index edge through the pages to the edge mark on the section you want. The subjects on the front cover index are also boxed in the table of contents. A detailed alphabetical index is located at the back of the manual.

Chapter 1 - Introduces you to the equipment and gives you information such as weight and dimensions used and general theory of operation including principles of operation.

Chapter 2 - Provides the operator with information necessary to identify and service the equipment. Operating instructions for usual and unusual conditions.

Chapter 3 - Provides operator lubrication tasks, and troubleshooting procedures for identifying common equipment malfunctions. Maintenance procedures for performing operator maintenance tasks.

Chapter 4 - Provides unit maintenance personnel with procedures for lubrication and service upon receipt of equipment and instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Chapter 5 - Provides direct support maintenance personnel with instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Chapter 6 - Provides general support maintenance personnel with instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Appendix A - Provides a list of frequently used forms and publications referenced or used in this manual.

Appendix B - The maintenance allocation chart identifies repairable components and the maintenance level authorized to perform the repairs.

Appendix C - List of components of end item and basic issue items to help you inventory the equipment.

Appendix D - List additional items that you are authorized for the support of the refrigeration unit.

Appendix E - List expendable and durable items needed to operate and maintain the refrigeration unit.

Appendix F - Provides you with instructions for making items authorized to be manufactured or fabricated at unit, direct support or general support maintenance.

Appendix G - List all mandatory replacement parts.

Alphabetical Index - Lists subject matter contained in manual in alphabetical order with the paragraph number.

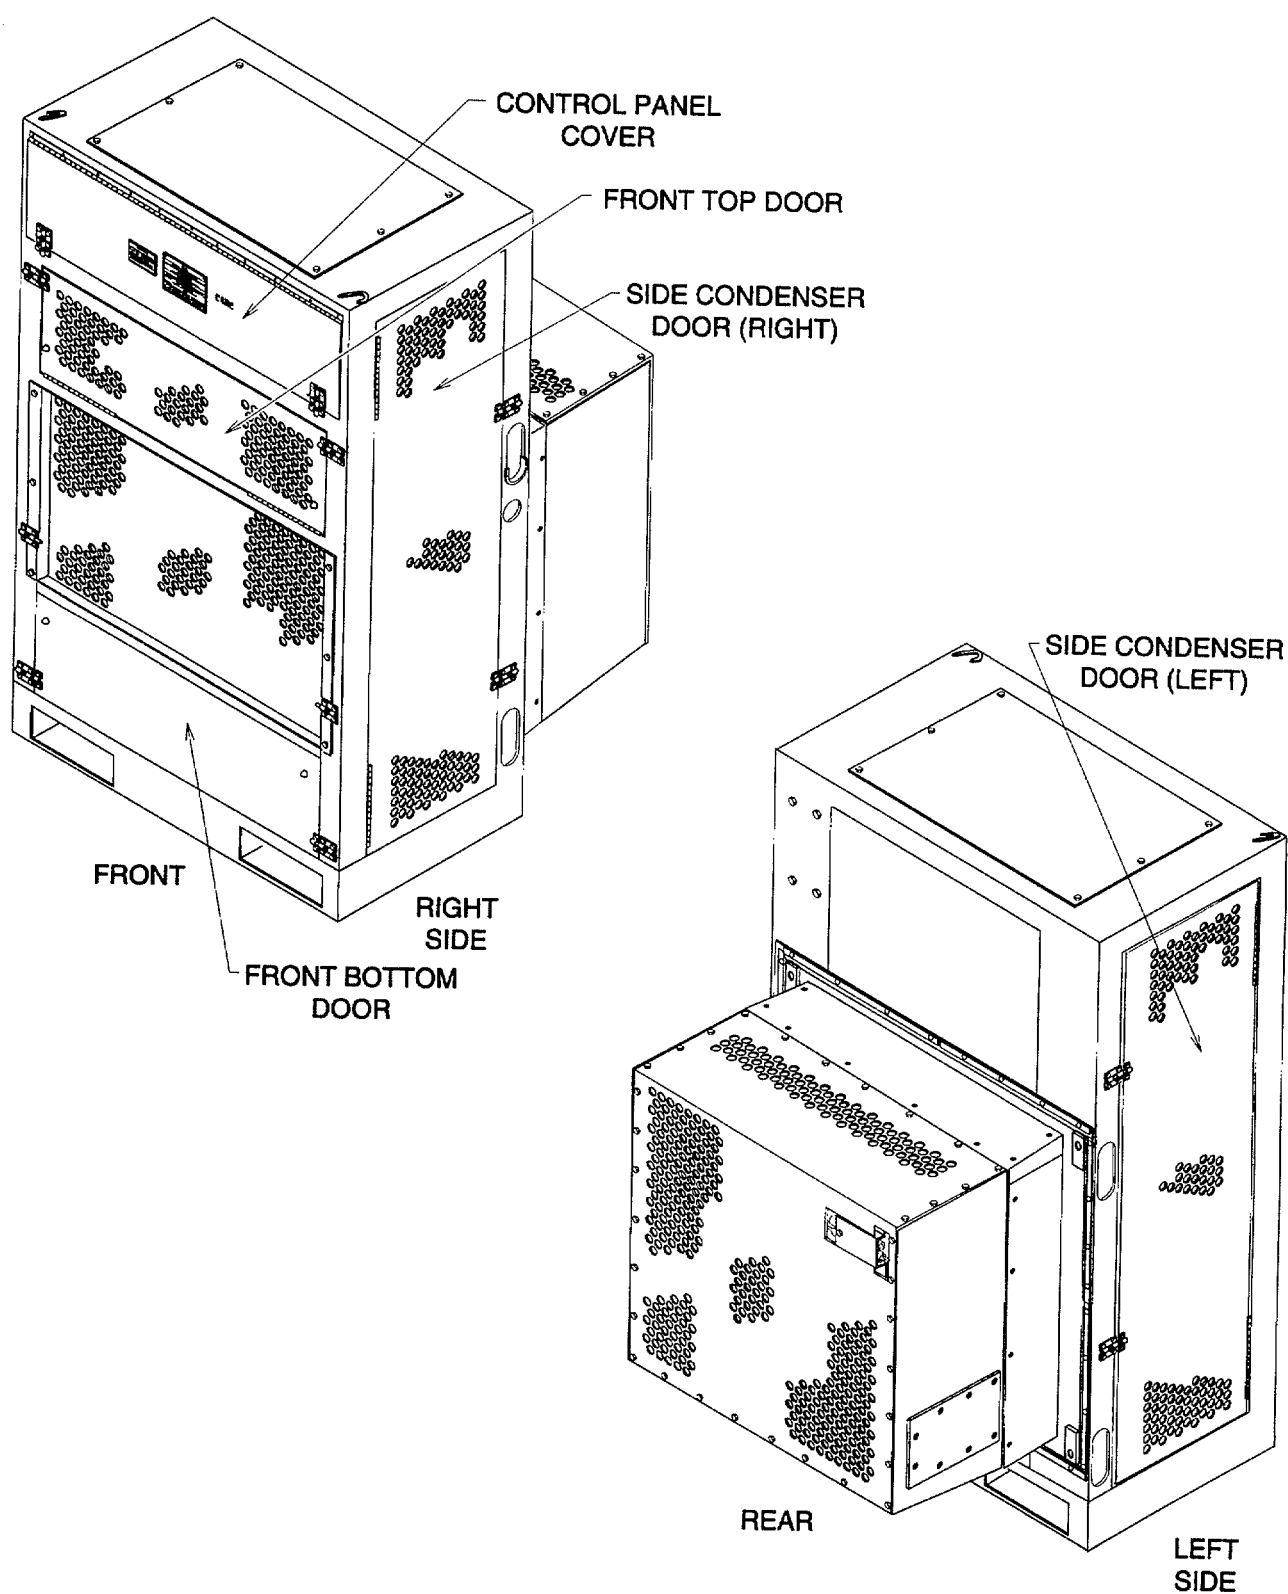


Figure 1-0. Refrigeration Unit

CHAPTER 1

INTRODUCTION

SECTION I GENERAL INFORMATION

1-1. SCOPE.

- a. Type of Manual. Operator's, Unit, Direct Support and General Support Maintenance Manual.
- b. Model Number and Equipment Name. The Model F5000RE, Mechanical, Electric motor driven, 5,000 btu per hour Refrigeration Unit.
- c. Purpose of Equipment. The portable, field use refrigeration unit is intended to be used with a 150 cubic foot refrigerator covered by MIL-R-12571 and a 70 cubic foot refrigerator covered by MIL-R-43024.

1-2. MAINTENANCE FORMS, RECORDS AND REPORTS.

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, The Army Maintenance Management System.

1-3. DESTRUCTION OF ARMY MATERIAL TO PREVENT ENEMY USE.

Refer to TM 750-244-3 for specific instructions on the destruction of army material to prevent enemy use.

1-4. PREPARATION FOR STORAGE OR SHIPMENT.

Refer to Chapter 4 for specific information under the same heading.

1-5. QUALITY ASSURANCE.

Requirement for specific quality assurance steps are not applicable to this equipment.