


TECHNICAL MANUAL

OPERATOR'S, UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE MANUAL

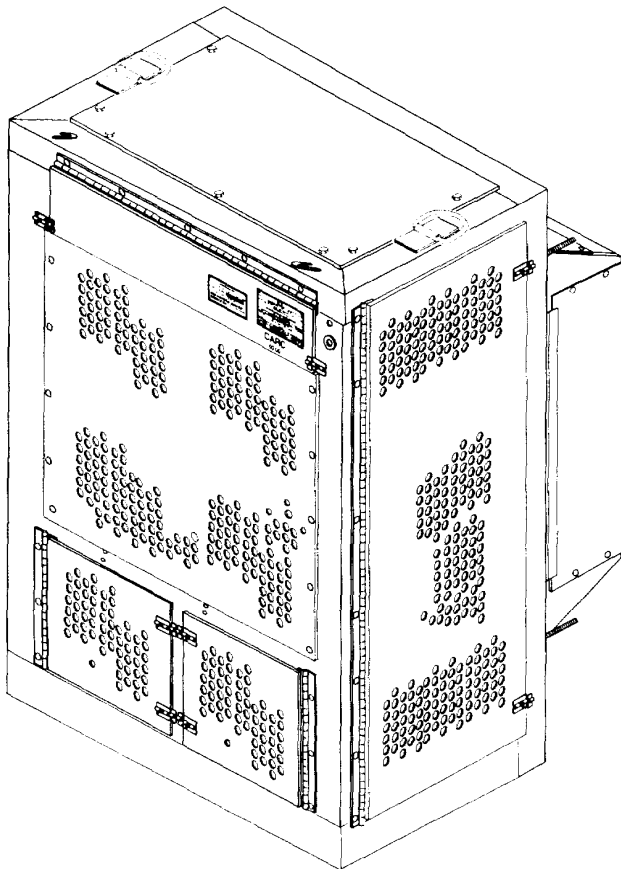

REFRIGERATION UNIT, MECHANICAL,
10K BTU, ELECTRIC
MODEL F10000RE

(4110-01-389-9182)

OPERATING INSTRUCTIONS	2-1
OPERATOR PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)	2-6
UNIT MAINTENANCE INSTRUCTIONS	4-1
UNIT PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)	4-9
UNIT TROUBLESHOOTING	4-21
DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
MAINTENANCE ALLOCATION CHART	B-1

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

5 JANUARY 1996

TECHNICAL MANUAL

NO. 9-4110-256-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 5 January 1996

OPERATOR'S, UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE MANUAL
FOR
REFRIGERATION UNIT, MECHANICAL,
10K BTU ELECTRIC, MODEL F10000RE
4110-01-389-9182

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-1-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	Page
CHAPTER 1	INTRODUCTION 1-1
Section I	General Information 1-1
Section II	Equipment Description 1-3
Section III	Principles of Operation 1-6
CHAPTER 2	<u>OPERATING INSTRUCTIONS</u> 2-1
Section I	Description and Use of Operator's Controls and Indicators 2-2
Section II	<u>Preventive Maintenance Checks and Services (PMCS)</u> 2-6
Section III	Operation Under Usual Conditions 2-19
Section IV	Operation Under Unusual Conditions 2-24
CHAPTER 3	OPERATOR MAINTENANCE INSTRUCTIONS 3-1
Section I	Lubrication 3-1
Section II	Troubleshooting Procedures 3-2
Section III	Operator's Maintenance Procedures 3-5

TABLE OF CONTENTS - Continued

CHAPTER 4	<u>UNIT MAINTENANCE INSTRUCTIONS</u>	4-1
Section I	Repair Parts, Tools, Special Tools, Test, Measurement, and Diagnostic Equipment (TMDE), and Support Equipment.....	4-1
Section II	Service Upon Receipt.....	4-1
Section III	<u>Unit Preventive Maintenance Checks and Services (PMCS)</u>	4-9
Section IV	<u>Troubleshooting Instructions</u>	4-21
Section V	Unit Maintenance Instructions	4-25
Section VI	Preparation for Storage or Shipment	4-95
CHAPTER 5	<u>DIRECT SUPPORT MAINTENANCE INSTRUCTIONS</u>	5-1
Section I	Direct Support Troubleshooting Instructions	5-1
Section II	Direct Support Maintenance Procedures	5-3
CHAPTER 6	<u>GENERAL SUPPORT MAINTENANCE INSTRUCTIONS</u>	6-1
APPENDIX A	REFERENCES	A-1
APPENDIX B	<u>MAINTENANCE ALLOCATION CHART (MAC)</u>	B-1
Section I	Introduction	B-1
Section II	Maintenance Allocation Chart for Refrigeration Unit	B-5
Section III	Tool and Test Equipment Requirements for Refrigeration Unit.....	B-10
Section IV	Remarks for Refrigeration Unit.....	B-10
APPENDIX C	COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE ITEMS LIST	C-1
Section I	Introduction	C-1
Section II	Components Of End Item	C-1
Section III	Basic Issue Items List	C-2
APPENDIX D	ADDITIONAL AUTHORIZATION LIST	D-1
APPENDIX E	EXPENDABLE AND DURABLE ITEMS LIST	E-1
Section I	Introduction	E-1
Section II	Expendable and Durable Items List.....	E-2
APPENDIX F	ILLUSTRATED LIST OF MANUFACTURED ITEMS	F-1
Section I		F-1
Section II		F-1
APPENDIX G	MANDATORY REPLACEMENT PARTS.....	G-1

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-0	Refrigeration Unit	1-0
1-1	Major Components	1-5
1-2	Electrical System	1-7
1-3	Electrical Schematic	1-8
1-4	Electrical Wiring Diagram	1-9
1-5	Refrigeration System	1-11
1-6	Refrigeration Schematic	1-12
1-7	Air Handling System	1-13
2-1	Operating Controls and Indicators	2-3
2-2	Fault Controls and Indicators	2-5
2-3	Operator PMCS Routing Diagram	2-7
2-4	Operating Controls and Indicators	2-20
2-5	Decals and Instruction Plates (Sheet 1 of 2)	2-22
2-5	Decals and Instruction Plates (Sheet 2 of 2)	2-23
4-1	Wall Opening Dimensions	4-2
4-2	Installation	4-3
4-3	Input Power Connection	4-5
4-4	Refrigeration Valve Settings for Normal Operation	4-6
4-5	Compressor Mount	4-7
4-6	Repeat Cycle Timer Adjustment	4-8
4-7	Lubrication	4-10
4-8	Top Panel	4-25
4-9	Condenser Side Doors and Barrel Bolts	4-27
4-10	Front Bottom Doors and Barrel Bolts	4-29
4-11	Control Panel Cover, Barrel Bolts, and Door Holder Clips	4-31
4-12	Evaporator Air Outlet Guard	4-32
4-13	Evaporator Coil Guard	4-33
4-14	Condenser Guard	4-34
4-15	Wires Cables and Harnesses	4-36
4-16	Circuit Breaker	4-42
4-17	Indicator (LIGHT)	4-44
4-18	Fuses	4-46
4-19	Motor Starter	4-48
4-20	Contactors	4-51
4-21	Control Relays	4-53
4-22	Hourmeter	4-55
4-23	Toggle Switch	4-57
4-24	Repeat Cycle Timer	4-59
4-25	Remote Bulb Thermostat (Temperature Control)	4-62
4-26	Refrigeration Temperature Gage (Thermometer)	4-66
4-27	Defrost Temperature Switch	4-69
4-28	Power Distribution Block	4-71
4-29	Push (Door) Switches	4-73

LIST OF ILLUSTRATIONS - Continued

4-30	AC Motor	4-75
4-31	V Belt	4-78
4-32	Condenser Fan	4-80
4-33	Evaporator Fan	4-81
4-34	Flange Bearings	4-83
4-34	Flange Bearings	4-83
4-35	Pulley	4-85
4-36	Sheave.....	4-87
4-37	Solenoid Valve (Liquid Line)	4-89
4-38	Solenoid Valve (Defrost Line).....	4-90
4-39	Gasket (Heat Shield)	4-93
4-40	Refrigeration System Pump Down.....	4-96
4-41	Compressor Mount	4-97
5-1	Control Panel Cover	5-3
5-2	Circuit Breaker Cover	5-5
5-3	Control Box Cover	5-8
5-4	Fan Drive Shaft	5-9
5-5	Service Manifold Installation	5-11
5-6	Discharging Refrigerant.....	5-14
5-7	Nitrogen Tank Connection	5-16
5-8	Evacuation of Refrigerant System	5-22
5-9	Refrigerant Charging (Total System)	5-25
5-10	Refrigerant Charging (Partial System /Small Quantity Charge)	5-27
5-11	Dehydrator	5-32
5-12	Compound Gage	5-34
5-13	Pressure Gage	5-36
5-14	Strainer	5-38
5-15	Receiver.....	5-39
5-16	Condenser Coil	5-42
5-17	Pressure Regulator Valve	5-43
5-18	Pressure Regulator Valve.....	5-45
5-19	Metal Hose Assembly.....	5-46
5-20	Metal Hose Assembly.....	5-47
5-21	Stop Valve	5-48
5-22	Stop Valve	5-49
5-23	Sight Indicator	5-50
5-24	Solenoid Valve.....	5-51
5-25	Solenoid Valve.....	5-53
5-26	Isolation Valves.....	5-55
5-27	Accumulator	5-57
5-28	Tubing And Fittings	5-60
5-29	Heat Exchanger	5-62
5-30	Expansion Valve	5-63
5-31	Evaporator Coil	5-65
5-32	Differential Oil Pressure Switch	5-67
5-33	Dual Pressure Control Switch	5-70
5-34	Compressor (Sheet 1 of 2)	5-73
5-34	Compressor (Sheet 2 of 2)	5-74
5-35	Condenser Frame.....	5-79

LIST OF ILLUSTRATIONS - Continued

C-1	Basic Issue Items	C-2
F-1	Tubing-Copper, Straight Flared, Part Number 12076-3-1000	F-3
F-2	Tubing, Plastic, Part Number 13218E0001-305	F-3
F-3	Gasket, Various	F-3
F-4	Tube Distributor to Tee, Part Number 150K0145	F-4
F-5	Tube, Distributor to Street Elbow, Part Number 150K0146	F-4
F-6	Tube, Copper, Straight, Part Number 150K0159	F-5
F-7	Tube, Heat Exchanger to Accumulator, Part Number 150K0160	F-5
F-8	Tube Copper Straight, Part Number 150K0161	F-6
F-9	Gasket, Side, Part Number 150K0169	F-6
F-10	Gasket, Side, Part Number 150K0170	F-7
F-11	Gasket, Top & Bottom, Part Number 150K0171	F-7
F-12	Gasket, Top & Bottom, Part Number 150K0172	F-7
F-13	Tube, Reducer to Expansion Valve, Part Number 150K0187	F-8
F-14	Tube, Accumulator Inlet, Part Number 150K0196	F-8
F-15	Tube, Reducer to Half Union Flare, Part Number 150K0197.....	F-9
F-16	Tube, Straight Flare One End, Part Number 150K0198-3, -5, -7, and -13	F-9
F-17	Tube, Interchanger to Expansion Valve, Part Number 150K0200	F-10
F-18	Braid, Wire, Tubular, Part Number 150K0201-1 //	F-10
F-19	Insulation Sleeving	F-11
F-20	Tube, Elbow to Interchanger, Part Number 150K0202	F-11
F-21	Tube, Expansion Valve Equalizer, Part Number 150K0203	F-12
F-22	Capillary, Lines, Part Number 150K0206-1/3 & -5/3	F-12
F-23	Insulation Tubing	F-13
F-24	Gasket, Control Box, Top, Part Number 150K0028	F-13
F-25	Gasket, Circuit Breaker Panel, Part Number 150K0031	F-13
F-26	Tube Accumulator to Regulator, Part Number 150K0043	F-14
F-27	Tube, Condenser to Regulator, Part Number 150K0044	F-14
F-28	Tube, Street Elbow to Vibration Absorber, Part Number 150K0045	F-15
F-29	Tube, Receiver Inlet, Part Number 150K0046-1/T	F-15
F-30	Tube, Tee to Hand Valve, Part Number 150K0047	F-16
F-31	Tube, Straight Flare One End, Part Number 150K0048	F-17
F-32	Tube, Sight Glass to Elbow, Part Number 150K0049	F-18
F-33	Tube, Strainer to Solenoid Valve, Part Number 150K0050	F-19
F-34	Tube, Filter Drier Outlet, Part Number 150K0051	F-20
F-35	Tube, Receiver to Filter Drier, Part Number 150K0052	F-21

LIST OF TABLES

Table	Title	Page
2-1	Preventive Maintenance Checks and Services for Model F1000RE	2-8
4-1	Preventive Maintenance Checks and Services for Model F1000RE	4-12
4-2	Semi-Annually Mandatory Replacement Parts.....	4-20
4-3	Wire List	4-38
5-1	Pressure Temperature Relationship of Saturated Refrigerant R-134a	5-29
5-2	Nominal Operating Pressure at Suction and Discharge Shut Off Valves	5-31

HOW TO USE THIS MANUAL

Be sure to read all Warnings before using this equipment.

This manual contains instructions for operation and maintenance of the Refrigeration Unit.

The front cover index of this manual lists the areas of the manual used most often and guides you to those sections.

Follow the black mark on the cover index edge through the pages to the edge mark on the section you want. The subjects on the front cover index are also boxed in the table of content. A detailed alphabetical index is located at the back of the manual.

Chapter 1 - Introduces you to the equipment and gives you information such as weight and dimensions used and general theory of operation including principles of operation.

Chapter 2 - Provides the operator with information necessary to identify and service the equipment. Operating instructions for usual and unusual conditions.

Chapter 3 - Provides operator lubrication tasks, and troubleshooting procedures for identifying common equipment malfunctions. Maintenance procedures for performing operator maintenance tasks.

Chapter 4 - Provides unit maintenance personnel with procedures for lubrication and service upon receipt of equipment and instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Chapter 5 - Provides direct support maintenance personnel with instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Chapter 6 - Provides general support maintenance personnel with instructions for performing repairs on equipment ,_J as authorized by the maintenance allocation chart.

Appendix A - Provides a list of frequently used forms and publications referenced or used in this manual.

Appendix B - The maintenance allocation chart identifies repairable components and the maintenance level authorized to perform the repairs.

Appendix C - List of components of end item and basic issue items to help you inventory the equipment.

Appendix D - List additional items that you are authorized for the support of the refrigeration unit.

Appendix E - List expendable and durable items needed to operate and maintain the refrigeration unit.

Appendix F - Provides you with instructions for making items authorized to be manufactured or fabricated at unit, direct support or general support maintenance.

Appendix G - List all mandatory replacement parts.

Glossary - List terms and abbreviations used in this manual and their definitions.

Alphabetical Index - Lists subject matter contained in manual in alphabetical order with the paragraph number.

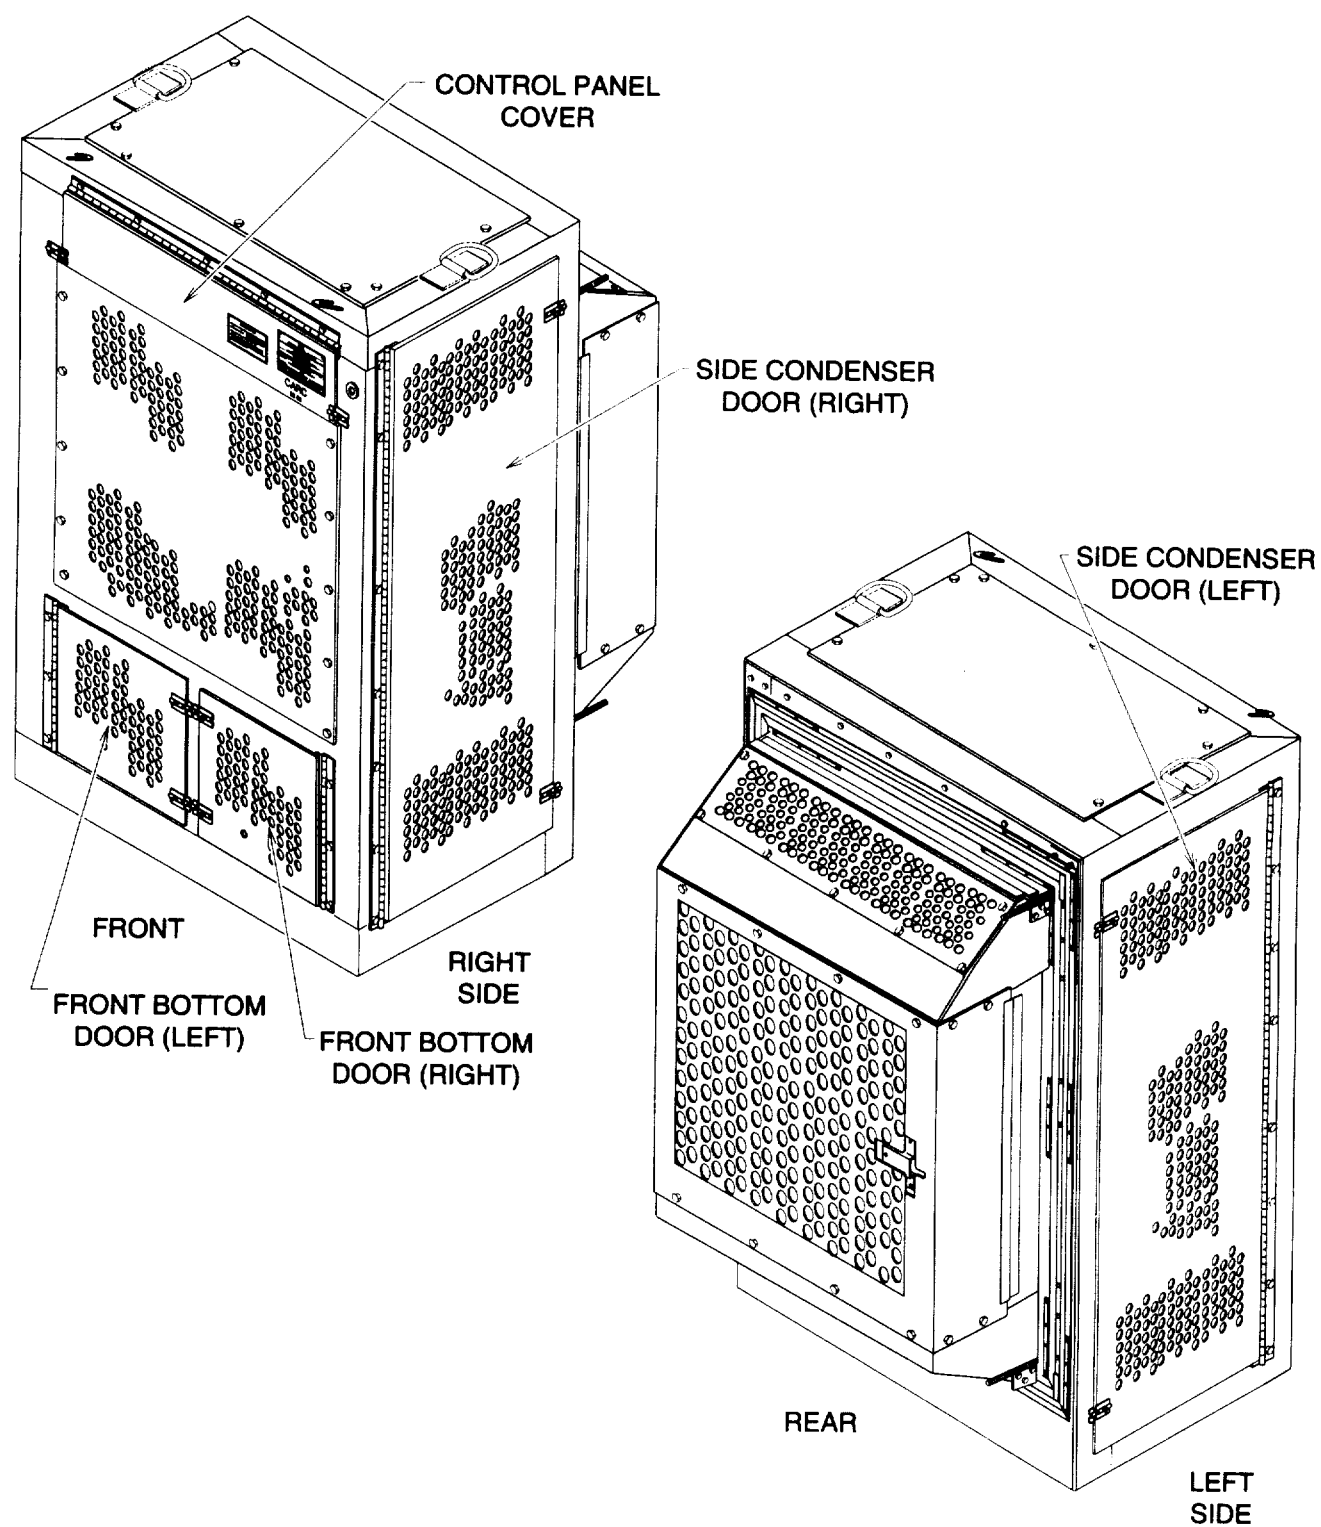


Figure 1-0. Refrigeration Unit

CHAPTER 1

INTRODUCTION

SECTION I GENERAL INFORMATION

1-1. SCOPE.

- a. Type of Manual. Operator's, Unit, Direct Support and General Support Maintenance Manual.
- b. Model Number and Equipment Name. The Model F1000RE, Mechanical, Electric motor driven, 10,000 btu per hour Refrigeration Unit.
- c. Purpose of Equipment. The refrigeration unit is intended for world-wide Military field use under adverse climatic and operating conditions without added protection from the elements. In use, the units are mounted with evaporator section extending into the opening provided in prefabricated panel type refrigerators conforming to MIL-R-10932.

1-2. MAINTENANCE FORMS. RECORDS AND REPORTS.

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, The Army Maintenance Management System.

1-3. DESTRUCTION OF ARMY MATERIAL TO PREVENT ENEMY USE.

Refer to TM 750-244-3 for specific instructions on the destruction of army material to prevent enemy use.

1-4. PREPARATION FOR STORAGE OR SHIPMENT.

Refer to Chapter 4 for specific information under the same heading.

1-5. QUALITY ASSURANCE.

Requirement for specific quality assurance steps are not applicable to this equipment.