

LUBRICATION

ORDER

L05-6115-440-12

1 JULY 1968

GENERATOR SET, GASOLINE ENGINE 7.5 KW, DC, 28 V; TWO-WIRE;
AIR COOLED; WHEEL MOUNTED,(JOHN R HOLLINGSWORTH CO.
MODEL JHGV7.5A) W/ WISCONSIN ENGINE MODEL MVH4D

Reference: C9100-IL

Intervals are based on normal hours of operations. Adjust to compensate for abnormal operations and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Drain crankcase when hot. Fill and check level.

FOLD

FOLD


LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

Air Cleaner OE 10
(See key.) (Refill oil reservoir to level mark. Every 100 hours, disassemble entire unit, clean, reoil, and reassemble.)

Starter Generator
(Sealed Bearings; No Lubrication Required)

Wheel Bearings GAA 1000
(Remove wheel, clean, inspect and lubricate bearings and reassemble)
(See note 4)

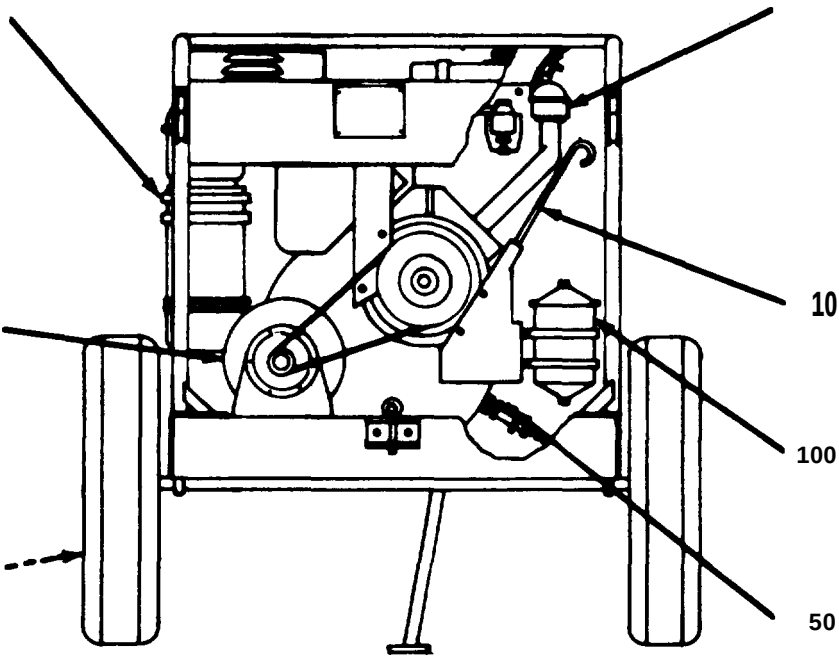

OE Crankcase Fill Cap
(See key)
CAUTION: When OES Oil is used the level will be checked more often.

Crankcase Level Gage
(Check level.)

Oil Filter
(see note 3)

Crankcase Drain Plug
(Drain and refill.)