

LUBRICATION ORDER

L05-6115-584-12

15 June 1990

(Supersedes L05-6115-584-12, 22 August 1977)

Approved for public release; distribution is unlimited.

GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 5KW

Reference TM 5-6115-584-12

Intervals and the related man-hour times are based on normal operation. The man-hour time specified is the time required to perform all the services prescribed for a particular interval. The interval shall be changed to compensate for abnormal operation and severe operating conditions or contaminated lubricants. The interval may be extended during periods of low level activity, commensurate with adequate preservation precautions.

Refer to TM to open acoustic suppression kit (ASK) access doors or remove cover for lubing.

Relubricate after washing or fording.


Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel Diesel. Dry before lubricating.

Drain crankcase when hot. Fill and check level.

Reporting errors and recommending improvements. You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 [Recommended Changes to Publications and Blank Forms] direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO. 63120-1798. A reply will be furnished to you.

LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

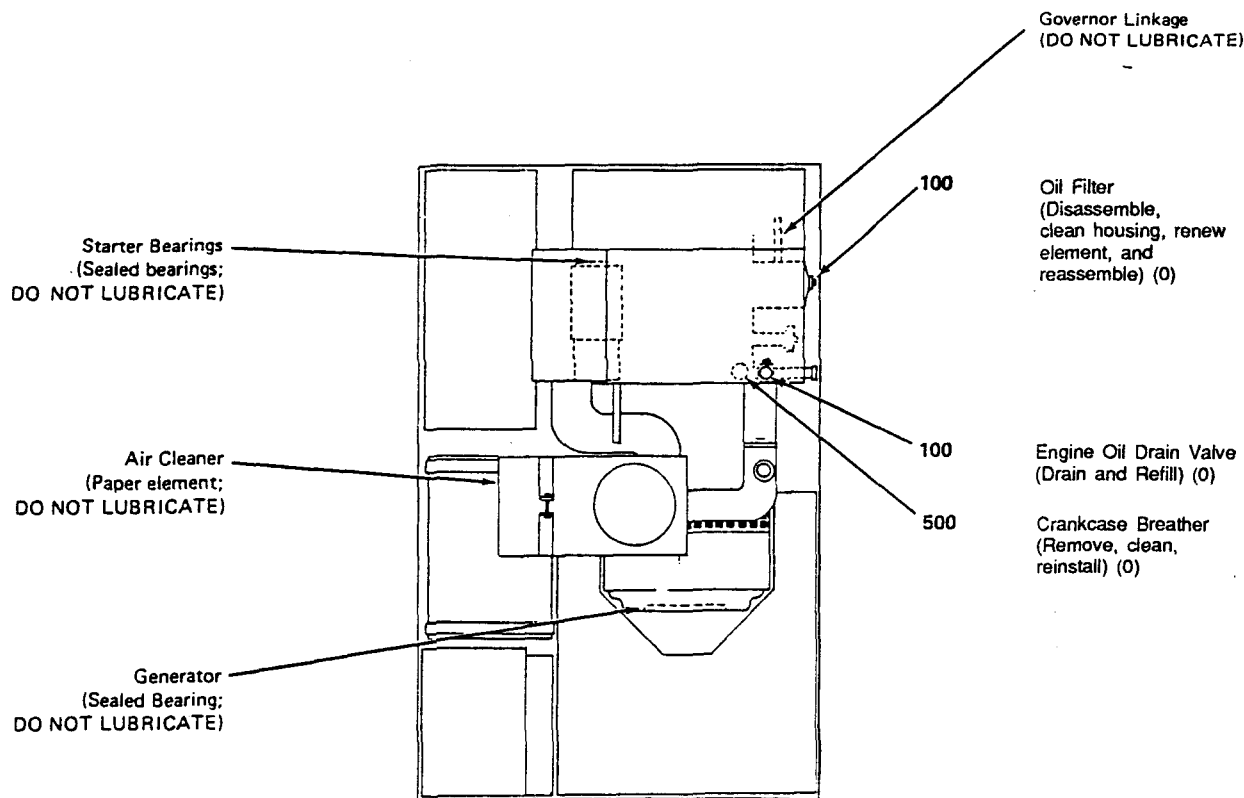

TOTAL TASK HOURS		TOTAL TASK HOURS	
INTERVAL	TASK HOURS	INTERVAL	TASK HOURS
50	0.5	500	0.3
100	0.4		