

LUBRICATION ORDER

LO 5-6115-593-12

17 AUGUST 1987

GENERATOR SET, DIESEL DRIVEN, 500KW, 120/208-240/416V, 3 PHASE, 4 WIRE,
50-60 HERTZ, SKID MOUNTED, (TACTICAL UTILITY) NSN 6115-01-030-6085

Reference: C1900-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions. During inactive periods sufficient lubrication must be performed for adequate preservation.

Level of maintenance is indicated at Note reference by (c) for Crew/Operator, and (o) for Organizational maintenance. Clean fittings before lubricating. Clean parts with SOLVENT, dry-cleaning, or OIL, fuel diesel. Dry before lubricating.

Drain crankcase when hot. Fill and check level.


LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

Hydraulic Sump
(Check level) (c)
(Fill and drain) (o)
(See Key)

Engine Oil
Drain Plug and
Valve (Drain and
refill) (o)
(See Key)

Motors (2)
Potentiometer-
Motor Operated
(See Note 2) (o)

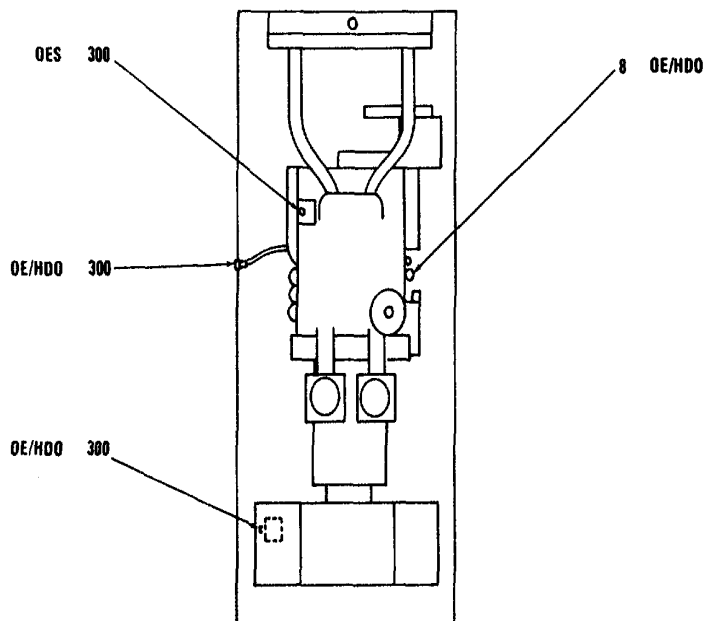

Crankcase
(Check level) (c)
(See Key)

KEY

LUBRICANTS	CAP.	EXPECTED TEMPERATURES			INTER- VALS
		ABOVE +32°F (0°C)	+40° to -10°F (4.4° to -23°C)	0 to -25°F (18 to -32°C) (With Housing Kit)	
OE/HDO-LUBRICATING oil MIL-L-2104, internal combustion engine or MIL-L-2104D	18 gal. (68 l)	OE/HDO 30 or OE/HDO 15W-40	OE/HDO 10 or OE/HDO 15W-40	OES	Intervals given are in hours of normal operation.
OES - OIL, engine		All Temperatures			

TS 6115-593-12/3-1(1)