

27 MARCH 1987

LI-6115-12/9

(SUPERSEDES LO 5-6115-604-12, 29 MAY 1985)

GENERATOR SET, DIESEL ENGINE DRIVEN,
AIR TRANSPORTABLE SKID MOUNTED, 750 KW,
3 PHASE, 4 WIRE, 2400/4160 AND 2200/3800 VOLTS
DOD MODEL MEP208A; CLASS PRIME UTILITY;;
HERTZ 50/60 NSN 6115-00-450-5881

Reference: TM 5-6115-604-12, Federal Supply Catalog C9100-IL

Intervals and the related task-hour times are based on normal operation. The task-hour time specified is the time you need to do all the services prescribed for a particular interval. Change the interval if your lubricants are contaminated or if you are operating the equipment under adverse operating conditions, including longer than usual operating hours. You may extend the interval during periods of low activity, but you must take adequate preservation precautions.


Clean all linings before lubricating. Clean pans with SOLVENT. DRY CLEANING, or OIL, FUEL DIESEL Dry

before lubricating

Relubricate after washing

The lowest level of maintenance authorized to lubricate a point is indicated by one of the following symbols as appropriate: Operator Crew (C), Organizational Maintenance (O), and Field Maintenance (F).

Drain crankcase when hot. Fill and check oil

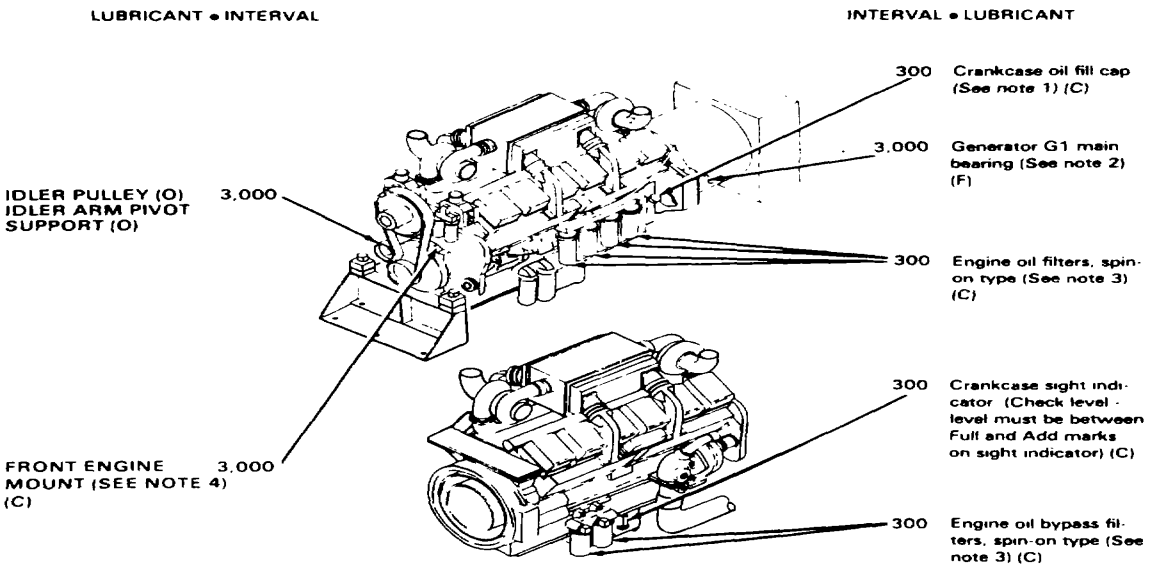

TOTAL TASK-HR			TOTAL TASK-HR		
INTERVAL	TASK-HR		INTERVAL	TASK-HR	
300	0.3		3,000	4.0	