

ARMY TECHNICAL MANUAL

TM 5-6115-323-24P

AIR FORCE TECHNICAL ORDER

T.O.35C2-3-385-4

MARINE CORPS STOCK LIST

SL4-07609A/07610A

TECHNICAL MANUAL

**ORGANIZATIONAL, INTERMEDIATE (FIELD)
(DIRECT SUPPORT AND GENERAL SUPPORT)
AND DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST**

**GENERATOR SET, GASOLINE ENGINE DRIVEN,
SKID MOUNTED, TUBULAR FRAME, 1.5 KW,
SINGLE PHASE, AC, 120/240 VOLTS,
28 VDC (LESS ENGINE)**

DOD MODELS

Hertz

NSN

MEP-015A

60

6115-00-889-1446

MEP-025A

28 VDC

6115-00-017-8236

*This manual supersedes TM 5-6115-323-24P, 30 September 1975, including all changes.

**PUBLISHED UNDER THE AUTHORITY OF THE DEPARTMENTS OF THE
ARMY, AIR FORCE, AND U.S. MARINE CORPS**

1 MAY 1986

TECHNICAL MANUAL

NO. 5-6115-323-24P

HEADQUARTERS
DEPARTMENTS OF THE ARMY, AIR FORCE
AND U.S. MARINE CORPS
WASHINGTON, D.C., 1 May 1986

ORGANIZATIONAL, INTERMEDIATE (FIELD) (DIRECT SUPPORT, AND GENERAL SUPPORT)
AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

**GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID
MOUNTED, TUBULAR FRAME, 1.5 KW, SINGLE PHASE,
AC, 120/240 VOLTS, 28 VDC (LESS ENGINE)**

DOD MODELS
MEP-01 5A
MEP-025A

HERTZ
60
28 VDC

NSN
6115-00-889-1446
6115-00-017-8236

Current as of 30 OCTOBER 1984

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Good fellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmtYoavma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus. Figure
Section VI.	Introduction	iii	
VII.	Repair Parts	3	
Group 01.	Engine assembly	3	1
02	Frame assembly	5	2
03	Fuel system.....	7	3
04	Control box assembly.....	11	
	Control box mounting.....	10	4
	Box assembly, 60 Hz	12	5
	Wiring Harness, 60 Hz	16	6
	Box assembly, 28 Volt, DC	20	7
	Wiring harness, 28 Volt DC.....	24	8
Group 05	Generator assembly, 60 Hz	29	9
	Generator assembly, 28 Volts, DC.....	32	10
06	Bulk material	33	
Section VIII.	Special tools list (Not applicable)		
Section IX.	National stock number and part number index	34	
Section X.	Reference designator index (not applicable)		

Change 4 i/(ii blank)

SECTION I INTRODUCTION

1. SCOPE.

This joint Army, Air Force and Marine Corps manual lists repair parts and special tools, required for the performance of organizational, intermediate (field), direct and general support and depot maintenance of the Generator set. The following paragraphs are keyed to applicable users. All users should read paragraph 4, Special Information prior to using this manual.

2. GENERAL

This Repair Parts and Special Tools List is divided into the following sections:

a. (ALL) Repair Parts - Section II. A list of repair parts is authorized for the performance of maintenance at the organizational, intermediate (field), direct support, general support and depot level in figure and item number sequence.

b. (ALL) Special Tools, Test and Support Equipment - Section III (Not applicable).

c. National Stock Number and Reference Number Index - Section IV. A list of National Stock Numbers in ascending numerical sequence followed by a list of reference numbers appearing in all the listings, in ascending alpha-numeric sequence, cross-referenced to the illustration figure number and items number.

d. Reference Designators Index - Section V (Not applicable).

3. EXPLANATION OF COLUMNS

The following provides an explanation of columns in the tabular lists in Sections II and III.

a. (ALL) Illustration. (Column 1) this column is divided as follows:

(1) Figure number. (Column 1a) indicates the figure number of the illustration on which the item is shown.

(2) Item number. (Column 1b) indicates the number used to identify the item on the illustration.

b. (ALL) **Source, Maintenance, and Recoverability Codes (SMR), (Column 2).**

(1) Uniform Source Codes applicable to all Military Services. GENERAL:
Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature. Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.