

ARMY TECHNICAL MANUAL
MARINE CORPS TECHNICAL MANUAL
AIR FORCE TECHNICAL ORDER
NAVY PUBLICATION

*TM5-6115-612-24P
TM6115-24P/1
TO35C2-3-471-4
AG-320BO-IPE-000

TECHNICAL MANUAL

UNIT, INTERMEDIATE (FIELD)
(DIRECT SUPPORT AND GENERAL SUPPORT)
AND DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

GENERATOR SET, AVIATION, GAS TURBINE ENGINE DRIVEN,
INTEGRAL TRAILER MOUNTED, 10KW, 28 VOLTS

<u>DOD MODEL</u>	<u>CLASS</u>	<u>MODE</u>	<u>NSN</u>
MEP 362A	PRECISE	DC	6115-01-161-3992

Approved for public release. Distribution is unlimited.

*This manual supersedes TM 5-6115-612-24P/TM6115-24P/1/TO35C2-3-471-1/AG-320BO-IPE-000, 28 July 1986.

PUBLISHED UNDER THE AUTHORITY OF THE DEPARTMENTS OF THE ARMY,
AIR FORCE, NAVY AND HEADQUARTERS U.S. MARINE CORPS

29 AUGUST 1988

TECHNICAL MANUAL
NO. 5-6115-612-24P

HEADQUARTERS
DEPARTMENTS OF THE ARMY AND NAVY
WASHINGTON, D.C., 29 AUGUST 1988

ORGANIZATIONAL, INTERMEDIATE (FIELD), (DIRECT AND GENERAL SUPPORT)
AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

**GENERATOR SET, AVIATION, GAS TURBINE ENGINE DRIVEN,
ITEGRAL TRAILER MOUNTED, 10KW, 28 VOLTS**

DOD MODEL
MEP 362A

CLASS
PRECISE

MODE
DC

NSN
6115-01-161-3992

Current as of 31 January 1997

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to Improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 20282 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSATIMP, 4300 Goodfellow Blvd., St. Louis, MO 631201798. You may also submit your recommended changes by Email directly to <mpmt%avma28)stlouisemh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	PAGE	FIGURE
Section I		
INTRODUCTION.....	1-1	
Scope	1-1	
General.....	1-1	
Explanation of Columns	1-1	
Special Information.....	1-9	
How to Locate Repair Parts	1-10	

*This manual supersedes TM 5-6115-612-24P/TM6115-24P/1/TfO35C2-3-471-1/ AG-320BO-IPE-000, 28 JULY 1986.

TABLE OF CONTENTS (Continued)

	Page	Figure
Section I INTRODUCTION (cont)		
Use of Reference Designator Index Section	1-10	
Abbreviations	1-10	
Federal Supply Codes for Manufacturers	1-13	
Recommendations for Maintenance Publications Improvements.	1-17	
Section II REPAIR PARTS		
Group 01 FRAME AND HOUSING		
Identification and Instruction Plates	2-2	1
Access Covers and Doors.	2-6	2
Cable Support	2-14	3
Support Assembly, Cable"(NOT USED)	2-17	4
Exhaust Door.	2-18	5
Control Panel Door Assembly.	2-22	6
Air Filter Muffler and Air Baffle	2-26	7
Air Inlet Filter.	2-32	7A
Trailer Body (Covers and Insulation)	2-36	8
Floor Panel and Tiedown Rings	2-42	9
Engine Support Assembly	2-44	10
Fuel Can Support Assembly (NOT USED)	2-47	11
Trailer Body Assembly	2-48	12
Group 02 DC ELECTRICAL AND CONTROL SYSTEM		
Battery Cable and Battery	2-54	13
Generator Controller (GECM) and Starter	2-58	14
Wiring Harness Assembly (Generator to GECM)	2-62	15
Generator Electronic Control Module (GECM) Assembly.	2-64	16
Circuit Card Assembly (GECM)	2-68	17
GECM Circuit Card Assembly (Section A)	2-72	17A
GECM Circuit Card Assembly (Section B)	2-76	17B
GECM Circuit Card Assembly (Section C)	2-84	17C
GECM Circuit Card Assembly (Section D)	2-92	17D
Branched Wiring Harness Assembly (Internal to GECM).	2-100	18
GECM Components (Capacitors, Diodes, etc.)	2-104	19
GECM Components (Terminal Board, Transformers, etc.)	2-110	19A
Electrical Engine Starter Assembly	2-116	20
Slave Receptacle.	2-124	21
Group 03 ELECTRICAL POWER GENERATION AND CONTROL SYSTEM		
Generator Assembly	2-128	22
10kH Generator Assembly	2-130	23
Rectifier Assembly	2-136	23A

TABLE OF CONTENTS (Continued)

	Page	Figure
Section II REPAIR PARTS (cont)		
Inductor Installation	2-140	24
Generator Filter Left Side Assembly	2-144	24A
Generator Filter Right Side Assembly . . , . . . , . .	2-148	24B
Group 04 FUEL SYSTEM		
Engine Fuel Tank.	2-154	25
Fuel Drum Adapter Assembly (NOT USED).	2-157	26
Fuel Manifold and Fuel Injection Nozzles , . .	2-158	27
Fuel Housing Components	2-162	28
Electrical High Pressure Fuel Pump Assembly	2-170	29
Solenoid Valve Assembly	2-174	30
Fuel System (Fuel Panel Components) (NOT USED	2-177	31
Fuel System Support Slide Assembly (NOT USED).	2-179	32
Secondary Fuel (Fluid) Filter Assembly	2-180	33
Engine Fuel Tank (Day Tank) (NOT USED)	2-183	34
Electrical Fuel Transfer Pump Assembly	2-184	35
Primary Fuel (Fluid) Filter Assembly	2-188	36
Group 05 IGNITION SYSTEM		
Ignition System ,	2-192	37
Group 06 LUBRICATION SYSTEM		
Oil Filler/Breather Assembly	2-196	38
Lubrication System . . . ,	2-200	39
Safety Relief Valve Assembly . ,	2-206	40
Oil Pump Assembly ,	2-208	41
Group 07 ENGINE		
Gas Turbine Assembly	2-212	42
Gas Turbine Engine (Power Section)	2-214	43
Gas Turbine Engine (Gearbox Fittings)	2-220	44
Gas Turbine Engine (Gearbox)	2-222	45
Group 08 ENGINE EXHAUST		
Exhaust Duct. ,	2-228	46
Group 09 ENGINE AND GENERATOR CONTROLS AND INSTRUMENTS		
Gas Turbine Engine Controls and Instruments	2-232	47
Wiring Harness-Assembly (Engine)	2-238	48
Control Panel Assembly	2-242	49

ARMY	TM 5-6115-612-24P
MARINE CORPS	TM 6115-24P/1
AIR FORCE	TO 35C2-3-471-4
NAVY	AG-320B0-IPE-000

TABLE OF CONTENTS (Continued)

	Page	Figure
Section II REPAIR PARTS (cont)		
Wiring Harness Assembly (Control Panel)	2-248	50
EECM Board and Component Assemblies	2-252	51
EECM Component Assemblies	2-258	51A
Circuit Card Assembly (MPU)	2-264	52
Circuit Card Assembly (Switch)	2-270	53
Circuit Card Assembly (Power Supply)	2-276	54
Group 10 LOAD CONNECTION		
Load Connection (Wiring)	2-284	55
Load Connection Component Wiring	2-288	56
Power Cable Assembly	2-300	57
Component Mounting Panel Assembly	2-304	58
Group 11 RUNNING GEAR		
Chassis Assembly (NOT USED).	2-311	59
Handbrake and Cable Assembly	2-312	60
Trailer Chassis Assembly	2-316	61
Running Gear Assembly	2-322	61A
Swivel Caster and Wheel Assembly	2-326	62
Wheel Assembly.	2-330	63
Hub Assembly.	2-332	64
Brake Assembly.	2-336	65
Section III SPECIAL TOOLS, TEST, AND SUPPORT EQUIPMENT		
Special Tools and Test Fixtures	3-2	66
Section IV NATIONAL STOCK NUMBER AND REFERENCE NUMBER INDEX , . .	4-1	
Section V REFERENCE DESIGNATOR INDEX	5-1	

Section I. INTRODUCTION

1. SCOPE . This joint Army, Navy, Air Force, and Marine Corps manual lists repair parts and special tools required for performance of unit, intermediate (field) (direct support and general support), and depot maintenance of the MEP 362A generator set. The following paragraphs are keyed to applicable users. All users should read paragraph 4, Special Information, prior to using this manual.

2. GENERAL. This Repair Parts and Special Tools List Is divided into the following sections:

a. (ALL) Repair Parts List - Section II. A list of repair parts authorized for the performance of maintenance at the unit, intermediate (field) (direct support and general support), and depot level in figure and item number sequence.

b. (ALL) Special Tools. Test and Support Equipment - Section III. A list of special tools, test, and support equipment authorized for the performance of maintenance at the organizational, intermediate (field) (direct and general support), and depot level.

c. National Stock Number and Reference Number Index - Section IV. A list of national stock numbers in numerical sequence, followed by a list of reference numbers appearing in all the listings, in alphanumeric sequence, cross-referenced to the illustration figure number and item number.

d. Reference Designator Index - Section V. The reference designator column includes all assigned reference designators arranged first in alphabetical order. second in numeric order. Opposite each symbol is listed the figure and item number of the part in Section II and the reference number.

3. EXPLANATION OF COLUMNS. The following provides an explanation of columns in the tabular lists in Sections II and III.

a. (ALL) Illustrations (Column 1). This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. Indicates the number used to identify the item on the illustration.

b. (ALL) Source. Maintenance. and Recoverability Codes (SMR) (Column 2).

(1) Uniform source codes applicable to all military services. Source Codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Codes format as follows: