

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

SEMITRAILER, LOWBED: HEAVY EQUIPMENT TRANSPORTER, 60-TON, M747 (NSN 2330-00-089-7265)

This manual supersedes TM 9-2330-294-24P dated 7 May 1976, and all changes.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY JUNE 1993

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**SEMITRAILER, LOWBED: HEAVY
EQUIPMENT TRANSPORTER,
60-TON, M747
(NSN 2330-00-089-7265)**

Current as Of 5 March 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	
GROUP 06 ELECTRICAL SYSTEM		
0608 MISCELLANEOUS ITEMS	1-1	
UTILITY OUTLETS	1-1	1
INTERVEHICULAR POWER RECEPTACLE	2-1	2
0609 LIGHTS	3-1	
COMPOSITE TAILLIGHT INSTALLATION	3-1	3
COMPOSITE TAILLIGHT ASSEMBLY	4-1	4
RETRACTABLE CLEARANCE LIGHTS	5-1	5
SERVICE AND BLACKOUT CLEARANCE LIGHT WIRING HARNESS (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	6-1	6
SERVICE CLEARANCE LIGHTS WIRING HARNESS (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	7-1	7
SIDE STATIONARY CLEARANCE LIGHT	8-1	8
REAR RED CLEARANCE LIGHT	9-1	9

* This manual supersedes TM 9-2330-294-24P, dated 7 May 1976, and all changes.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0609- LIGHTS (Con't)		
CLEARANCE LIGHT COMPONENT PARTS	10-1	10
ROTATING WARNING LIGHT	11-1	11
0613- HULL OR CHASSIS WIRING HARNESS	12-1	
MAIN WIRING HARNESS (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	12-1	12
MAIN WIRING HARNESS (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	13-1	13
ELECTRICAL SYSTEM CLAMPS, GROMMETS, AND RELATED PARTS	14-1	14
GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY	15-1	
REAR AXLE	15-1	15
GUIDE WEAR PAD AND MOUNTING PARTS (AXLES 7 AND 8)	16-1	16
1108 - WALKING BEAMS, STUB AXLES, AND PARTS	17-1	
EQUALIZER BEAMS, TORQUE RODS, AND RELATED PARTS (AXLES 5 AND 6)	17-1	17
EQUALIZER BEAM ASSEMBLY (AXLES 5 AND 6)	18-1	18
EQUALIZING BEAMS, AXLE CENTERING GUIDE, AND RELATED PARTS (AXLES 7 AND 8)	19-1	19
GROUP 12 BRAKES		
1202 - SERVICE BRAKES	20-1	
BRAKESHOES, SHIELDS, AND ACTUATING COMPONENTS	20-1	20
1208 - AIRBRAKE SYSTEM	21-1	
AIRBRAKE CHAMBER ASSEMBLY	21-1	21
BRAKE FAIL-SAFE CHAMBER ASSEMBLY	22-1	22
FAIL-SAFE HOUSING ASSEMBLY	23-1	23
FAIL-SAFE CAP ASSEMBLY	24-1	24
BRAKE WEDGE ASSEMBLY	25-1	25
PLUNGER HOUSING ASSEMBLY	26-1	26
TRACTOR-TO-TRAILER AIR COUPLINGS	27-1	27
AIRBRAKE SYSTEM TUBE CLAMPS (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	28-1	28
AIRBRAKE SYSTEM LINES (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	29-1	29
AIRBRAKE SYSTEM TUBES (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	30-1	30
AIRBRAKE SYSTEM TUBE FITTINGS (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	31-1	31
AIRBRAKE SYSTEM LINES, CLAMPS, AND FITTINGS (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	32-1	32
AIRBRAKE SYSTEM TUBES, CLAMPS, AND FITTINGS (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	33-1	33
FAIL-SAFE RELEASE VALVE ASSEMBLIES	34-1	34
AUXILIARY AIR SUPPLY VALVE AND RELATED PARTS	35-1	35
AIR RESERVOIR TANKS AND MOUNTING PARTS	36-1	36
BRAKE RELAY VALVE AND MOUNTING PARTS	37-1	37
AIR HOSES AND FITTINGS, EMERGENCY LINE TO AXLES AND RELAY VALVES (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	38-1	38
AIR HOSES AND FITTINGS, EMERGENCY LINE TO AXLES AND RELAY VALVES (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	39-1	39
BRAKE CHAMBER, AND BRAKE FAIL-SAFE LINES AND FITTINGS (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	40-1	40

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 13	WHEELS AND TRACKS	
1301 - SUSPENSION ASSEMBLY	41-1	
AIR SUSPENSION SYSTEM TUBE CLAMPS	41-1	41
AIR SUSPENSION TUBES (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	42-1	42
AIR SUSPENSION LINES (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	43-1	43
AIR SUSPENSION SYSTEM TUBE FITTINGS (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	44-1	44
AIR SUSPENSION SYSTEM TUBES, CLAMPS, AND FITTINGS (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	45-1	45
AIR SUSPENSION VALVES, CONNECTIONS, AND TUBE FITTINGS	46-1	46
AIR LIFT ASSEMBLY AND RELATED PARTS (AXLES 7 AND 8)	47-1	47
AIR SUSPENSION SPRING ASSEMBLIES (AXLES 7 AND 8)	48-1	48
1311 - WHEEL ASSEMBLY	49-1	
HUB AND DRUM INSTALLATION	49-1	49
WHEEL AND TIRE ASSEMBLY	50-1	50
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS	
1501 - FRAME ASSEMBLY	51-1	
LOADING RAMPS	51-1	51
MISCELLANEOUS FRAME COMPONENTS	52-1	52
1507- LANDING GEAR, LEVELING JACKS	53-1	
LANDING GEAR.	53-1	53
GROUP 16	SPRINGS AND SHOCK ABSORBERS	
1604- SHOCK ABSORBER EQUIPMENT	54-1	
AXLE STOPS (UPPER AND LOWER)	54-1	54
SHOCK ABSORBERS AND AXLE STOP CHAINS (USED ON VEHICLE SERIAL NUMBER 1 THROUGH 200)	55-1	55
SHOCK ABSORBERS AND AXLE STOP CHAINS (USED ON VEHICLE SERIAL NUMBER 201 AND SUBSEQUENT)	56-1	56
GROUP 18	BODY CAB, HOOD, AND HULL	
1808- STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.	57-1	
STOWAGE PROVISIONS	57-1	57
STOWAGE FACILITIES	56-1	58
ROTATING WARNING LIGHT STOWAGE.	59-1	59
GROUP 20	HOIST WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT, AND POWER TAKE-OFF	
2001 - HOIST CAPSTAN, WINDLASS, CRANE, OR WINCH ASSEMBLY	60-1	
SNATCH BLOCK ASSEMBLY	60-1	60
SWINGAWAY ROLLER ASSEMBLY AND MOUNTING PARTS.	61-1	61
GOOSENECK AND PLATFORM ROLLERS	62-1	62

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 22	BODY CHASSIS, AND HULL ACCESSORY ITEMS		
	2202- ACCESSORY ITEMS	63-1	
	CHASSIS ACCESSORY ITEMS	63-1	63
	2210- DATA PLATES AND INSTRUCTION HOLDERS	64-1	
	DATA PLATES	64-1	64
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS	KIT-1	
	REPAIR KITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS		
GROUP 26	TOOLS AND TEST EQUIPMENT		
	2604- SPECIAL TOOLS	65-1	
	SPECIAL TOOLS	65-1	65
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX	I-I	
	PART NUMBER INDEX	I-8	
	FIGURE AND ITEM NUMBER INDEX	I-27	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Lowbed Semitrailer. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts Lists.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance.

The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

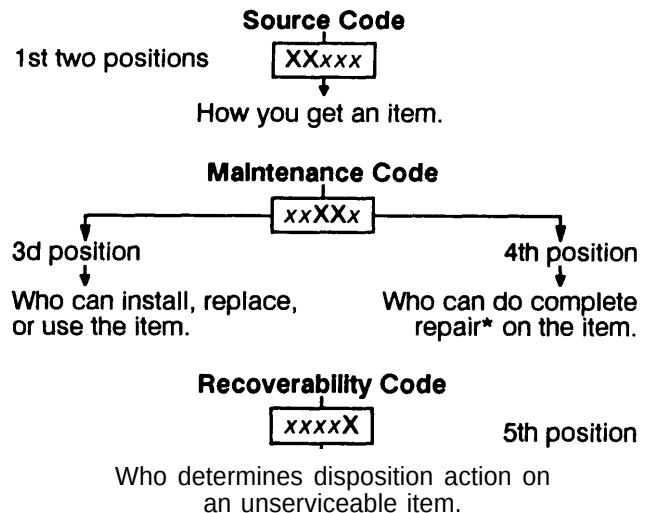

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: