

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL
SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
INCLUDING DEPOT MAINTENANCE REPAIR PARTS**

FOR

**HEATER, SPACE, MULTIFUEL, WITH BLOWER,
15,000 BTU/Hit, 28VDC
(HUNTER MODEL UH-48C, TYPE IV)
NSN 4520-01-010-4059**

**(HUNTER MODEL UH-48D, TYPE IV)
NSN 4520-01-069-6959**

This copy is a reprint which includes current
pages from Change 1.

TECHNICAL MANUAL

NO, 5-4520-240-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 9 December 1977

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
INCLUDING DEPOT MAINTENANCE REPAIR PARTS
FOR

HEATER, SPACE, MULTIFUEL, WITH BLOWER, 15,000
BTU/HR, 28 VDC (HUNTER MODEL UH-48C, TYPE IV)

NSN 4520-01-010-4059

(HUNTER MODEL UH-48D, TYPE IV) NSN 4520-01-069-6959

Current as of 11 October 1977

REPORTING ERROR AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedure, please let us know. Mail your letter. DA Form 2028 (Recommended Changes to Publication and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, U. S. Army Troop Support and Aviation Materiel Readiness Command, ATTN: DRSTS-MTPS, 4300 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished to you

TABLE OF CONTENTS

		Page	Illus Figure
SECTION	I. INTRODUCTION	iii	
	II REPAIR PARTS LIST	1	
Group	01. Heater Tags	1	
	Heater Tags	1	1
	02. Housing Assembly	2	
	Housing Assembly and Cover Panels	3	2
	Control Panel	5	3
	Data Plates and Louver	8	4
	03. Fuel System	7	
	Fuel Filter and Element	9	5
	Fuel Pump	11	6
	Fuel Lines and Fittings	12	7
	Carburetor Assembly and Solenoid Valve	14	8

	Page	Illus Figure
04. Electrical	16	
Electrical Components (Terminal Block and Control Relay	17	9
Ignition Power Supply	18	10
Wiring Harness	20	11
Fuses, Room Thermostat, Thermocouple, Thermocouple Relay ,	26	12
overheat and Preheat Thermostats.	26	
05. Burner Assembly	28	
Burner Assembly	28	13
06. Heat Exchanger	29	
Heat Exchanger.	30	14
07. Blower Assembly	31	
Blower Assembly	33	15
08. Bulk Materiel	34	
SECTION III. SPECIAL TOOLS LIST (NOT APPLICABLE)		
IV. NATIONAL STOCK NUMBER AND REFERENCE NUMBER INDEX	36	

Section I. INTRODUCTION

1. Scope.

This manual lists repair parts and other support equipment required for operation and performance of organizational, direct support, and general support maintenance of the Heater, Space, Multifuel, with Blower, 15,000 Btu/hr, 28 vdc (Hunter Model UH-48C, Type IV).

2. General.

a. Section II - Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed in NSN sequence, as the last group in Section II.

b. Section III - Special Tools List. This section is not applicable.

c. Section IV - National Stock Number and Part Number Index. A list, in ascending numerical sequence, of all National stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3 Explanation of Columns.

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration in which the item is shown.

(2) Item Number. The number used to identify each item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source Code. Source codes are assigned to support items to indicate the manner of

acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage,
PB	Item procured and stocked for insurance purpose because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities,
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KD	An item of a depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.

<u>Code</u>	<u>Definition</u>
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at the direct support maintenance level.
MH	Item to be manufactured or fabricated at the general support maintenance level.
MD	Item to be manufactured or fabricated at the depot maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE : Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA or XD.

(2) Maintenance Code, Maintenance codes are assigned to indicate the levels of maintenance authorized to use and repair support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<u>Code</u>	<u>Application/Explanation</u>
C	Crew or operator maintenance performed within organizational maintenance.

<u>Code</u>	<u>Application/Explanation</u>
O	Support item is removed, replaced, used at the organizational level.
I	Support item is removed, replaced, used by the direct support element of integrated direct support maintenance.
F	Support item is removed, replaced, used at the direct support level,
H	Support item is removed, replaced, used at the general support level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

NOTE : Codes "I" and "F" will be considered the same by direct support units.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<u>Code</u>	<u>Application/Explanation</u>
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	The lowest maintenance level capable of complete repair of the support item is the direct support level.
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
L	Repair restricted to designated specialized repair activity.
Z	Nonreparable. No repair is authorized.
B	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level, No parts or special tools are procured for the maintenance of this item.

(3) Recoverability Code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows :

<u>Recoverability Codes</u>	<u>Definition</u>
z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
0	Reparable item. When uneconomically reparable, condemn and dispose at organizational level.
F	Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.
H	Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
D	Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Reparable item. Repair, condemnation, and disposal not authorized below depot/specialized repair activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

NOTE: When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SM 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item. Items that are included in kits and sets are listed below the name of the kit or set with the quantity of each item in the kit or set indicated in the quantity incorporated in unit column. When the part to be used differs between serial numbers of the same model, the effective serial numbers are shown as the last line of the description. In the Special Tools List, the initial basis of issue (BOI) appears as the last line in the entry for each special tool, TMDE, and support equipment. When density of equipments supported exceeds density spread indicated in the basis of issue, the total authorization is increased accordingly.

g. Unit of Measure (U/M). Indicates the standard ~~the~~ basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e. g., ea, in., pr, etc.). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of ~~the~~ item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly, A "V" appearing in this column in lieu of a quantity indicates that no specific quantity is applicable, (e.g., shims, spacers, etc.).

4. Special Information

The following publication pertains to the space heater and its components:

TM 5-4520-240-14 Operator, Organizational, Direct and General Support Maintenance Manual

5. How to Locate Repair Parts.

a. When National Stock Number or Part Number is Unknown:

(1) First. Using the table of contents, determine the functional group within which the repair part belongs. This is necessary since illustrations are prepared for functional groups, and listings are divided into the same groups.

(2) **Second.** Find the illustration covering the functional group to which the repair part belongs.

(3) **Third.** Identify the repair part on the illustration and note the illustration figure and item number of the repair part.

(4) **Fourth.** Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b When National Stock Number or Part Number is Known.


(1) **First.** Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in ascending NSN sequence followed by a list of part numbers in ascending alphanumeric sequence, cross-referenced to the illustration figure number and item number,

(2) **Second.** After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations,

<u>Abbreviations</u>	<u>Explanation</u>
AMP	Ampere
BLK	Black
CD PL	Cadmium plated
CL	class
CSK	Countersunk
CTD	Coated
DC	Direct current
DEG	Degree
DIA	Diameter
EA	Each
EXT	External
FILH	Fillister head
FLH	Flat head
FT	Foot

<u>Abbreviations</u>	<u>Explanation</u>
GA	Gage
GR	Grade
HD	Head
ID	Inside diameter
IN.	Inch
INTL	Internal
INTL-EXT	Internal and external
LG	Long
MFD	Micro farad
NC	National coarse thread
NEF	National extra fine thread
NF	National fine thread
NO,	Number
NOM	Nominal
NPT	National taper pipe thread
NS	National special thread
NSN	National stock number
OD	Outside diameter
PIV	Peak inverse voltage
PL	Plated
PN	Part number
PNH	Pan head
PT	Point
RBR	Rubber
RDH	Round head
SAE	Society of Automotive Engineers
SCH	Socket head
SH	Sheet
SP	Single-pole
SPDT	Single -pole double -throw
SQ	Square
STL	Steel
TBG	Tubing
THD	Thread
THK	Thick
UNC	Unified coarse thread
UNEF	Unified extra fine thread
UNF	Unified fine thread
V	volt
VDC	Direct current volts
W	Watt
W	With
WHT/BLK	White with black tracer

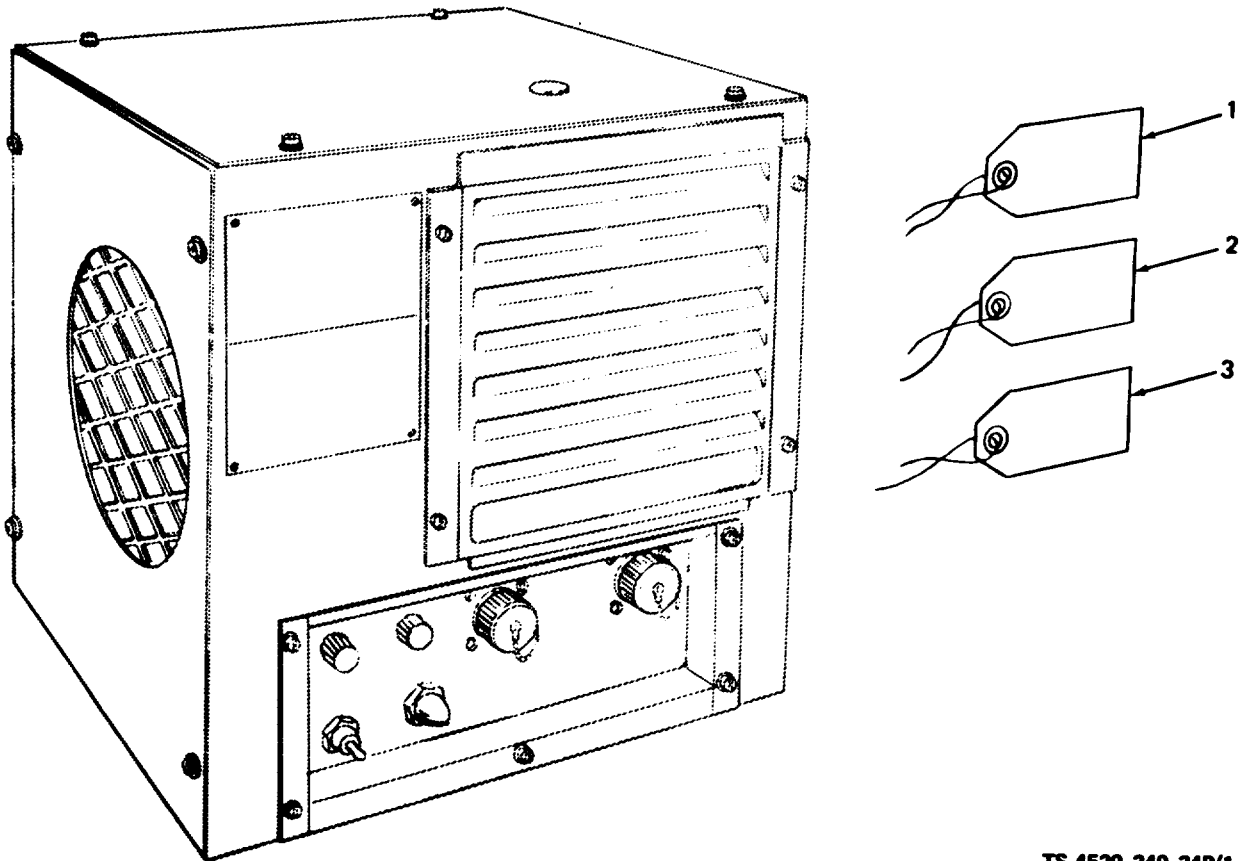

TS 4520-240-24P/1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	Section II. REPAIR PARTS LIST DESCRIPTION Usable On Code	U/M	QTY INC IN UNIT
						GROUP: 01 HEATER TAGS		
1	1	XD0ZZ		48709	92878	TAG, FUEL PUMP CAUTION	EA	1
1	2	XD0ZZ		48193	92878	TAG, WIRE SIZE	EA	1
1	3	XD0ZZ		48183	92878	TAG, GASOLINE	EA	1

Figure 1. Heater tags