

LUBRICATION ORDER

LO 55-1905-217-12-3

30 JULY 1971 (Supersedes L055-1905-217-12-3, Dated 18 OCTOBER 1968)

**LANDING CRAFT, MECHANIZED: STEEL: DIESEL POWER DRIVEN,
74 FT. LG. PROPULSION UNIT: (DETROIT DIESEL MODELS
12005A AND 12006A) HULL NOS. LCM 8500 THRU
LCM 8560 AND HULL NOS. 8580 THRU 8619**

Reference: TM55-1905-217-12, L055-1905-217-12-1 and -2. C9100-IL.

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions.

During inactive periods sufficient lubrication must be performed for adequate preservation.

Lubricate points indicated by dotted arrow shafts on both sides of propulsion unit.

Port propulsion unit shown-starboard propulsion unit opposite.

Clean fittings before lubricating.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Drain crankcase when hot. Fill and check level.

LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

