

TECHNICAL MANUAL
DIRECT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
LANDING CRAFT, MECHANIZED, STEEL; DED; OVERALL
LENGTH 74 FEET; MOD I MARK VIII, NAVY DESIGN
LCM-8
(GUNDERSON BROS ENGINEERING CORP, MARINETTE
MARINE CORP AND ROHR CORP
FSN 1905-935-6057

This copy is a reprint which includes current pages from Changes 1 through 3.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JUNE 1973

Technical Manual

No. 55-1905-217-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 8 June 1973

**DIRECT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)**

**LANDING CRAFT, MECHANIZED, STEEL; DED; OVERALL
LENGTH 74 FEET; MOD I MARK VIII, NAVY DESIGN
LCM-8
(GUNDERSON BROS ENGINEERING CORP, MARINETTE
MARINE CORP AND ROHR CORP)
FSN 1905-935-6057**

Current as of 30 March 1973

TABLE OF CONTENTS

	Page	Illus Figure
Section I. INTRODUCTION	v	
Section II. REPAIR PARTS LIST		
Group 01. Air Inlet Silencer	1	1
02. Exhaust Manifold	3	2
03. Filter Assembly Oil	4	3
04. Oil Filter, Dipstick and Breather	5	4
05. Oil Cooler (Engine)	6	5
06. Fuel Filter Assembly	9	6
07. Fuel Strainer (Engine Mtg)	10	7
08. Fuel Strainer (Line)	11	8,9
09. Fuel Piping	13	10,11,12
10. Fuel Pump	20	13
11. Rocker Arm Cover	22	14
12. Fuel Injectors	22	15
13. Injector Control Tube	24	16
14. Throttle Controls	25	17
15. Heat Exchanger (Engine)	27	18
16. Engine Cooling Piping	29	19,20
17. SEA Water Piping	35	21,22,23
18. Muffler and Exhaust Piping	44	24,25
19. Fresh Water Pump	47	26
20. Raw Water Pump	49	27,28
21. Water Manifold, Engine	53	29
22. SEA Water Strainer	54	30
23. Keel Cooler	54	31,32
24. Engine Speed Governor	56	33
25. Blower Assembly	64	
Blower assembly		34
Blower drive		35

*This manual supersedes TM 55-1905-217-34P, 27 October 1970, including all changes.

	Page	Illus Figure
26. Transmission Oil Filter.....	68	36
27. Transmission Oil Strainer.....	69	37
28. Transmission Oil Cooler Core and Plate Assembly.....	69	38
29. Transmission Control Valve and Tubes.....	70	39
Transmission Control Valve.....	40	
30. Tachometer Drive Cable, Adapter and Shaft.....	73	41
31. Transmission Oil Pump.....	74	42
Transmission Oil Pump and Lines.....	43	
32. Power Take-Off Assembly.....	78	44
Power Take-Off Cover and Control Lever.....	45	
33. Alternator, Regulator and Voltage Protector.....	81	46
34. Electric Cranking Motor.....	85	47, 48
35. Hydraulic Starting Piping Systems.....	92	49, 50, 51
36. Starting Engine Hydraulic.....	102	52
37. Solenoid Valve, Starting Motor.....	103	53, 54
38. Pump Hydraulic Starter.....	106	55, 56
39. Accumulator, Hydraulic: Starting.....	110	57
40. Pump, Hand, Hydraulic Starting.....	111	58
41. Filter, Oil, Hydraulic Starting.....	113	59, 60
42. Transfer Gear Assembly.....	114	61
43. Gear Assembly, Reverse.....	116	62
44. Flywheel Housing.....	119	63
Flywheel.....	64	
45. Power Take-Off Coupling and Vibration Damper.....	121	65
46. Rocker Arm.....	123	66
47. Cylinder Head.....	124	67
48. Cam and Balance Sheet Bearing, Gears and Weights.....	125	68
49. Idler Gears and Bearings.....	127	69
50. Engine Liftin g Brackets.....	128	70
51. Oil Pan.....	129	71
52. Oil Pump Assembly.....	130	72
53. Piston and Connecting Rod.....	134	73
54. Crankshaft.....	135	74
55. Cylinder Block.....	136	75
56. Engine Pilot House Controls.....	139	
Pilot house levers, sprockets and chain.....	76	
Pulley terminal block.....	77	
Engine control levers and brackets.....	78	
Engine control unit.....	79	
Pilot house engine controls.....	80	
Brake, Free Wheeling.....	81	
Marine Control Elbow.....	82	
Pilot House Controls.....	83	
Pilot House Engine Controls.....	84	
Control Unit, Engine Throttle.....	85	
Fuel and Air Shutdown Control.....	86	
Engine Controls.....	87	
57. Fan Engine Boom.....	158	88, 89
58. Engine Control and Distribution Panel.....	159	
Distribution panel.....	90, 91	
Cables, gages and lights.....	92	
Indicator and lights.....	93	
Ether starting aid.....	94	
Instruments and plate.....	95	
59. Navigational Lights and Horn.....	96	
Forward and Main Mast.....	97	
60. Helm Unit Steering.....	166	
Steering column.....	98	
Steering control.....	99	
61. Piping Steering.....	168	100, 101, 102 103, 104
62. Pump, Steering.....	179	105, 106
63. Pump Drive (Coupling).....	181	107
64. Filters, Hydraulic.....	182	108, 109

	Page	Illus Figure
65. Valves, Steering	183	
Valve, Check Steering		110
Valve, by-pass Steering		111
66. Valve, flow Divider	185	112
67. Cylinder, Hydraulic Steering	186	113
68. Tank Hydraulic	188	
Tank, hydraulic		114,115
Liquid level gage sightglass		116
Tank, hydraulic		117
69. Piping, Hydraulic Ramp Hoist	189	118,119,120, 121,122,123
70. Pump, Hydraulic (Ramp)	203	124,125
71. Winch Ramp Hoist (Marco)	206	
Winch Brake		126
Winch Gear Reduction		127
Winch Base		128
Ramp Brake Valve		129
Ramp Hydraulic Motor		130
72. Winch Ramp Hoist (Gearmatic)	211	
Drum and Winch Base		131
Hydraulic Motor		132
Final Planet		133
Final drive		134
Primary drive assembly		135
Primary planet		136
Brake hub assembly		137
73. Valve Ramp Control	216	138,139
74. Filters Strainers	220	
Filter hydraulic oil		140
Strainer hydraulic oil		141
75. Relief Valve	222	142
76. Check Valve	223	143
77. Counterbalance Valve	223	144
78. Hand Pump Hydraulic	225	145,146
79. Tanks, Hydraulic Oil Winch	226	147
80. Cylinders Hydraulic (Ramp Latch)	227	
Ramp Latches		148
Cylinders, ramp latches		149
81. Propeller Shaft	228	150
Stuffing box and brace		151
82. Indicator, Rudder Angle and Transmitter	230	152,153
83. Rudder	231	
Rudder and tiller		154,155
84. Hull	234	
Pilot house canopy		156
Life lines, bits, and ladders		157
Miscellaneous hull components		158
85. Piping, Bilge	252	159,160,161 162,163
86. Pump, Bilge	261	164,165, 166,167
87. Pump, Bilge Hand	268	168
88. Compass System	268	169
Section III. SPECIAL TOOLS LIST (Not applicable)		
IV. FEDERAL STOCK NUMBER AND REFERENCE		
NUMBER INDEX	455	

	Page	Illus Figure
65. Valves, Steering	183	
Valve, Check Steering		110
Valve, by-pass Steering		111
66. Valve, flow Divider	185	112
67. Cylinder, Hydraulic Steering	186	113
68. Tank Hydraulic	188	
Tank, hydraulic		114,115
Liquid level gage sightglass		116
Tank, hydraulic		117
69. Piping, Hydraulic Ramp Hoist	189	118,119,120, 121,122,123
70. Pump, Hydraulic (Ramp)	203	124,125
71. Winch Ramp Hoist (Marco)	206	
Winch Brake		126
Winch Gear Reduction		127
Winch Base		128
Ramp Brake Valve		129
Ramp Hydraulic Motor		130
72. Winch Ramp Hoist (Gearmatic)	211	
Drum and Winch Base		131
Hydraulic Motor		132
Final Planet		133
Final drive		134
Primary drive assembly		135
Primary planet		136
Brake hub assembly		1 37
73. Valve Ramp Control	216	138,139
74. Filters Strainers	220	
Filter hydraulic oil		140
Strainer hydraulic oil		141
75. Relief Valve	222	142
76. Check Valve	223	143
77. Counterbalance Valve	223	144
78. Hand Pump Hydraulic	225	145,146
79. Tanks, Hydraulic Oil Winch	226	147
80. Cylinders Hydraulic (Ramp Latch)	227	
Ramp Latches		148
Cylinders, ramp latches		149
81. Propeller Shaft	228	150
Stuffing box and brace		151
82. Indicator, Rudder Angle and Transmitter	230	152,153
83. Rudder	231	
Rudder and tiller		154,155
84. Hull	234	
Pilot house canopy		156
Life lines, bitts, and ladders		157
Miscellaneous hull components		158
85. Piping, Bilge	252	159,160,161 162,163
86. Pump, Bilge	261	164,165, 166,167
87. Pump, Bilge Hand	268	168
88. Compass System	268	169
Section III. SPECIAL TOOLS LIST (Not applicable)		
IV. FEDERAL STOCK NUMBER AND REFERENCE NUMBER INDEX		455

Section I.

INTRODUCTION

1. Scope.

a. This manual lists repair parts, special tools, test and support equipment required for the performance of direct support, general support, and depot maintenance of the landing craft.

b. Repair parts listed represent those authorized for use at indicated maintenance levels and will be requisitioned on an "as required" basis until stockage is justified by demand in accordance with AR 710-2.

2. General.

This repair parts and special tools list is divided into the following sections:

a. *Repair Parts List - Section II.* A list of repair parts authorized at the direct support, general support, and depot levels for the performance of maintenance. The list also includes parts which must be removed for the replacement of the authorized parts. Parts lists are composed of assembly groups in ascending numerical sequence, with parts in each group listed in figure and item number sequence.

b. *Special Tools, Test and Support Equipment - Section III.* A list of special tools, test and support equipment authorized for the performance of maintenance at the direct support, general support, and depot level. (Not applicable).

c. *Federal Stock Number and Reference Number Index - Section IV.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alpha-numeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and/or item number appearance.

3. Explanation of Columns.

The following provides an explanation of columns found in the tabulated listings in Section III.

a. *Source, Maintenance, and Recoverability Codes (SMR).* The SMR code is a five letter code composed of three parts consisting of a two (2) position source code, a two (2) position maintenance code, and a one (1) position recoverability code. Support items listed in this RPSTL assigned maintenance and recoverability codes and no source code can be requisitioned, with justification, through a normal supply channels by use of the manufacturers code and part number. Such support items are NOT normally stocked. (1) *Source Code.*

Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the *first* and *second* positions as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentially dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorain nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issue or outfittings. NOT subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfittings to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for life of the equipment. It is applied to an item peculiar to the equipment which, because of probably discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later date.
KD	An item of depot overhaul/repair kit and not purchased separately.
KF	An item of a maintenance kit and not purchased separately.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at direct support maintenance level.
MH	Item to be manufactured or fabricated at general maintenance support level.
MD	Item to be manufactured or fabricated at depot maintenance level.
AO	Item to be assembled at organizational level.

Code	Definition
AF	Item to be assembled at direct support maintenance level.
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
XA	Item is NOT procured or stocked because the requirements for the item will result in replacement of the next higher assembly.
XB	Item NOT procured or stocked. If not available through salvage, requisition.
XC	Installation drawing, diagram, instruction sheet, or field service drawing that is identified by manufacturer's part number.
XD	A low mortality item that is not stocked. When required, items will be requested and provided through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items coded above *except* those coded XA and support items restricted by AR 700-42.

(2) *Maintenance Codes.* The maintenance code entered in the *third* position indicates the lowest maintenance level authorized to remove, replace, and use the item. The maintenance code entered in the *fourth* position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used in the *fourth* position, a dash (-) will be entered.

Code	Application/Explanation
O	Item is removed, replaced, used (third position), or complete repair (fourth position) at the organizational level.
F	Item is removed, replaced, used (third position), or complete repair (fourth position) at the direct support maintenance level.
H	Item is removed, replaced, used (third position) or complete repair (fourth position) at the general support maintenance level.
D	Item is removed, replaced, used (third position) or complete repair (fourth position) at the depot maintenance level.
L	Repair restricted to designated specialized repair activity (fourth position).
Z	Non-repairable. No repairs authorized (fourth position).
B	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the <i>user</i> level. No parts or special tools are procured for maintenance of this item (fourth

position).

(3) *Recoverability Code.* The recoverability code entered in the *fifth* position indicates the disposition action on unserviceable items.

Code	Definition
Z	Non-repairable item. When unserviceable, condemn and dispose at the level indicated in position three (3).
C	Repairable item. When uneconomically repair-able, condemn and dispose at organizational level.
F	Repairable item. When uneconomically repairable, condemn and dispose at direct support level.
H	Repairable item. When uneconomically repair-able, condemn and disposal)se at general support level.
D	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Repairable item. Repair, condemnation, and disposal not authorized below depot/specialized repair activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material, or hazardous material).

b. *Federal Stock Number.* Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description.* Indicates the Federal item name. and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parenthesis. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42. Items that are included in kits and sets are listed below the name of the kit or set with quantity of each item in the kit or set indicated in front of the item name.

d. *Unit of Measure (U/M).* Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation, e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns.

e. *Quantity Furnished with Equipment (Basic Issue Items Only).* Indicates the quantity of the item furnished with the equipment.

f. *30-Day DS/GS Maintenance Allowances.*

(1) Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) The allowance columns are divided into three subcolumns. The quantitative