

**TECHNICAL MANUAL**

**UNIT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST**

**LANDING CRAFT UTILITY**

**LCU 1667 THROUGH 1670**

**NSN 1905-00-168-5764**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

\* TM 55-1905-219-20P-2 supersedes TM 55-1905-219-20P-2 dated 9 July 1984.

---

HEADQUARTERS, DEPARTMENT OF THE ARMY  
29 JANUARY 1993

TECHNICAL MANUAL  
NO. 55-1905-219-20P-2

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 29 January 1993

**TECHNICAL MANUAL**  
**Unit Maintenance**  
**Repair Parts and Special Tools List**  
**for**  
**LANDING CRAFT UTILITY**  
**LCU 1667 THROUGH 1670**  
**NSN 1905-00-168-5764**  
**Current as of 1 August 1992**

NOTE:  
This manual is printed in two volumes as follows:  
TM 55-1905-219-20P-1, consisting of Table of Contents, Section I and Section II Functional Groups 01 through 13).  
TM 55-1905-219-20P-2, consisting of Table of Contents, Section I and Section II Functional Groups 13 through 20), Section III, and Section IV.  
The Table of Contents, Section I and IV are applicable to the -1 and -2 volumes.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt/oavma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

|            |                                       | ILLUS/<br>PAGE | FIGURE |
|------------|---------------------------------------|----------------|--------|
| Section I  | INTRODUCTION .....                    | 1              |        |
| Section II | Repair Parts List .....               | 1-1            |        |
| Group 01   | Propulsion System                     |                |        |
|            | Marine Gear Installation .....        | 1-1            | 1      |
|            | Marine Gear .....                     | 2-1            | 2      |
|            | Marine Gear Selector Valve .....      | 3-1            | 3      |
|            | Control Station and Articulator ..... | 4-1            | 4      |
|            | Control Unit and Linkage.....         | 5-1            | 5      |
|            | Shutdown Head and Linkage.....        | 6-1            | 6      |
|            | Engine Throttle Linkage . .....       | 7-1            | 7      |
|            | Variable Speed Governor .....         | 8-1            | 8      |

\* This manual supersedes TM 55-1905-219-20P-2, dated 9 July 1984.

|                                                                    | Page | Illus./<br>Figure |
|--------------------------------------------------------------------|------|-------------------|
| Governor Housing Assembly .....                                    | 9-1  | 9                 |
| Air Intake .....                                                   | 10-1 | 10                |
| Ventilation .....                                                  | 11-1 | 11                |
| Blower Assembly.....                                               | 12-1 | 12                |
| Blower Coupling .....                                              | 13-1 | 13                |
| Fuel Pump . .....                                                  | 14-1 | 14                |
| Fuel Lines .....                                                   | 15-1 | 15                |
| Fuel Strainer .....                                                | 16-1 | 16                |
| Fuel Filter .....                                                  | 17-1 | 17                |
| Fuel Injectors .....                                               | 18-1 | 18                |
| Dual Oil Filter .....                                              | 19-1 | 19                |
| Marine Gear Oil Cooler Lines .....                                 | 20-1 | 20                |
| Oil Cooler .....                                                   | 21-1 | 21                |
| Raw Water Pump .....                                               | 22-1 | 22                |
| Expansion Tank . .....                                             | 23-1 | 23                |
| Water Connections .....                                            | 24-1 | 24                |
| Water Manifold . .....                                             | 25-1 | 25                |
| Thermostat and Housing .....                                       | 26-1 | 26                |
| Generator and Regulator Mounting .....                             | 27-1 | 27                |
| Generator .....                                                    | 28-1 | 28                |
| Tachometer Drive .....                                             | 29-1 | 29                |
| Instrument Panel .....                                             | 30-1 | 30                |
| Alarm System Switches.....                                         | 31-1 | 31                |
| Crankshaft Pulley .....                                            | 32-1 | 32                |
| Balance Weight Cover .....                                         | 33-1 | 33                |
| Engine Lift Brackets and Support .....                             | 34-1 | 34                |
| Exhaust Manifolds .....                                            | 35-1 | 35                |
| Rocker Arm Covers .....                                            | 36-1 | 36                |
| Injector Controls.....                                             | 37-1 | 37                |
| Flywheel and Housing .....                                         | 38-1 | 38                |
| Camshaft Assembly (Right and Left Bank) .....                      | 39-1 | 39                |
| Valve Operating Mechanism .....                                    | 42-1 | 42                |
| Exhaust Valve Arrangement .....                                    | 43-1 | 43                |
| Cylinder Head . .....                                              | 44-1 | 44                |
| Oil Pan and Dipstick .....                                         | 45-1 | 45                |
| Lube Oil Regulator and Relief Valve .....                          | 46-1 | 46                |
| Lube Oil Pump .....                                                | 47-1 | 47                |
| Oil Distribution System .....                                      | 48-1 | 48                |
| Pistons, Connecting Rods and Liners .....                          | 49-1 | 49                |
| Crankshaft and Bearing.....                                        | 50-1 | 50                |
| Cylinder Block.....                                                | 51-1 | 51                |
| Starting Aid .....                                                 | 52-1 | 52                |
| Hydrostarter - Propulsion Engine.....                              | 53-1 | 53                |
| Hydrostarter - Diesel Generator Engine .....                       | 54-1 | 54                |
| Hydrostarter - Anchor Winch Engine .....                           | 55-1 | 55                |
| Hydraulic Starting System Accumulator .....                        | 56-1 | 56                |
| Engine Driven Hydraulic Pump .....                                 | 57-1 | 57                |
| Starting System Hand Pump .....                                    | 58-1 | 58                |
| Hydraulic Reservoir - Anchor Winch Engine.....                     | 59-1 | 59                |
| Hydraulic Reservoir - Propulsion and Diesel Generator Engine ..... | 60-1 | 60                |
| Hydraulic Starting System Filter .....                             | 61-1 | 61                |
| Port and Starboard Propeller and Shafting .....                    | 63-1 | 63                |

|                                                          | Page  | Illus/<br>Figure |
|----------------------------------------------------------|-------|------------------|
| Line Shafting - Port Side Only .....                     | 64-1  | 64               |
| Propeller Split Shaft Seal .....                         | 65-1  | 65               |
| Propeller Shaft Lock .....                               | 66-1  | 66               |
| Group 02 Electric Power Generator and Distribution ..... |       |                  |
| Ships Service Main Switchboard .....                     | 67-1  | 67               |
| Power Distribution Circuit Breaker Panel P-400 .....     | 69-1  | 69               |
| Power Distribution Circuit Breaker Panel P-406 .....     | 70-1  | 70               |
| Power Distribution Circuit Breaker Panel P-408 .....     | 71-1  | 71               |
| Power Distribution Circuit Breaker Panel P-408-A .....   | 72-1  | 72               |
| Diesel Generator Engine Mounting .....                   | 73-1  | 73               |
| Main Generator Assembly .....                            | 74-1  | 74               |
| Emergency Shutdown Head and Linkage .....                | 76-1  | 76               |
| Synchronizing Motor .....                                | 77-1  | 77               |
| Hydraulic Governor .....                                 | 78-1  | 78               |
| Governor Oil Filter .....                                | 79-1  | 79               |
| Air Intake .....                                         | 80-1  | 80               |
| Blower .....                                             | 81-1  | 81               |
| Fuel Pump and Drain .....                                | 82-1  | 82               |
| Fuel Filter .....                                        | 83-1  | 83               |
| Fuel Strainer .....                                      | 84-1  | 84               |
| Fuel Injectors .....                                     | 85-1  | 85               |
| Fuel Lines .....                                         | 86-1  | 86               |
| Oil Filter .....                                         | 87-1  | 87               |
| Oil Cooler .....                                         | 88-1  | 88               |
| Fresh Water Pump .....                                   | 89-1  | 89               |
| Expansion Tank and Water Connections .....               | 90-1  | 90               |
| Water Manifold .....                                     | 91-1  | 91               |
| Thermostat and Housing .....                             | 92-1  | 92               |
| Relay, Shutdown and Switches .....                       | 93-1  | 93               |
| Overspeed Governor .....                                 | 94-1  | 94               |
| Tachometer and Drive .....                               | 95-1  | 95               |
| Air Cleaner .....                                        | 96-1  | 96               |
| Crankshaft Pulley .....                                  | 97-1  | 97               |
| Balance Weight and Cover .....                           | 98-1  | 98               |
| Engine Lift Brackets and Support .....                   | 99-1  | 99               |
| Exhaust Manifold .....                                   | 100-1 | 100              |
| Rocker Arm Cover .....                                   | 101-1 | 101              |
| Injector Controls .....                                  | 102-1 | 102              |
| Oil Pan, Dipstick and Fill .....                         | 103-1 | 103              |
| Cylinder Head .....                                      | 104-1 | 104              |
| Valve Operating Mechanism .....                          | 105-1 | 105              |
| Exhaust Valve Arrangement .....                          | 106-1 | 106              |
| Camshaft and Gear Train .....                            | 107-1 | 107              |
| Idle Gear Hole Spacer Assembly .....                     | 108-1 | 108              |
| Idle Gear .....                                          | 109-1 | 109              |
| Flywheel and Housing .....                               | 110-1 | 110              |
| Oil Pressure Regulator .....                             | 111-1 | 111              |
| Lube Oil Pump .....                                      | 112-1 | 112              |
| Oil Distribution System .....                            | 113-1 | 113              |
| Pistons, Connecting Rods and Liner .....                 | 114-1 | 114              |
| Crankshaft and Bearing .....                             | 115-1 | 115              |
| Cylinder Block .....                                     | 116-1 | 116              |
| Instrument Panel .....                                   | 117-1 | 117              |

|                                                        | Illus/<br>Page | Figure |
|--------------------------------------------------------|----------------|--------|
| Fuel Primer Pump.....                                  | 118-1          | 118    |
| Generator and Regulator Mounting .....                 | 119-1          | 119    |
| 12-Volt Generator .....                                | 120-1          | 120    |
| 24-VOC Rectifier.....                                  | 121-1          | 121    |
| Circuit Breaker Panel L-100 .....                      | 122-1          | 122    |
| Circuit Breaker Panel L-101 .....                      | 123-1          | 123    |
| Fuse Panel L-103.....                                  | 124-1          | 124    |
| Interior Communications Fuse Panel 2L-103.....         | 125-1          | 125    |
| Circuit Breaker Panels L-104, L-105 and L-110 .....    | 126-1          | 126    |
| Circuit Breaker Panels L-106 and L-107 .....           | 127-1          | 127    |
| Galley Fuse Panel L-108.....                           | 128-1          | 128    |
| Fuse Panel P-402 .....                                 | 129-1          | 129    |
| Fuse Panel P-409 .....                                 | 130-1          | 130    |
| Fuse Panel P-024 .....                                 | 131-1          | 131    |
| Alarm Distribution Panel .....                         | 132-1          | 132    |
| Terminal Box - Symbol 432.1.....                       | 133-1          | 133    |
| Toggle Switch .....                                    | 134-1          | 134    |
| Break Glass Control Station .....                      | 135-1          | 135    |
| Triple Receptacle.....                                 | 136-1          | 136    |
| Watertight Receptacle - Symbol 900.1 .....             | 137-1          | 137    |
| Watertight Receptacle - Symbol 735.1 .....             | 138-1          | 138    |
| Terminal Box and Duplex Receptacle .....               | 139-1          | 139    |
| Terminal Box - Symbol 433.1.....                       | 140-1          | 140    |
| Interlocking Door Operated Switch - Symbol 791.1 ..... | 141-1          | 141    |
| Disconnect Switch.....                                 | 142-1          | 142    |
| Safety Switch, Air Horn Compressor .....               | 143-1          | 143    |
| Floodlight - Symbol 300.2 .....                        | 144-1          | 144    |
| Incandescent Lighting Fixture - Symbol 98.1.....       | 145-1          | 145    |
| Incandescent Ceiling Fixture .....                     | 146-1          | 146    |
| Incandescent Bulkhead Fixture .....                    | 147-1          | 147    |
| Explosion-Proof Lighting Fixture .....                 | 148-1          | 148    |
| Incandescent Ceiling Fixture .....                     | 149-1          | 149    |
| Fluorescent Desk Light Fixture.....                    | 150-1          | 150    |
| Desk Light Fixture .....                               | 151-1          | 151    |
| General Purpose Fluorescent Light Fixture .....        | 152-1          | 152    |
| Mirror Light Fixture.....                              | 153-1          | 153    |
| Secretary Light Fixture.....                           | 154-1          | 154    |
| Berth Light .....                                      | 155-1          | 155    |
| Rotary Light, Red .....                                | 156-1          | 156    |
| Rotary Light, Amber.....                               | 157-1          | 157    |
| Fluorescent Light Fixture, Red and White .....         | 158-1          | 158    |
| Relay Operated Lantern .....                           | 159-1          | 159    |
| Portable Lantern .....                                 | 160-1          | 160    |
| Navigation Light Panel LCU 1667 Only .....             | 161-1          | 161    |
| Navigation Light Panel LCU 1668 through LCU 1670 ..... | 162-1          | 162    |
| Group 03 Bow Ramp and Winch                            |                |        |
| Bow Ramp and Fairlead.....                             | 163-1          | 163    |
| Wire Rope Guard.....                                   | 166-1          | 166    |
| Bow Ramp Winch .....                                   | 167-1          | 167    |
| Torque Coupling .....                                  | 168-1          | 168    |
| Speed Reducer .....                                    | 169-1          | 169    |
| Magnetic Brake .....                                   | 170-1          | 170    |
| Bow Ramp Winch Motor .....                             | 171-1          | 171    |

|                                                   | Page  | Illus/<br>Figure |
|---------------------------------------------------|-------|------------------|
| Motor Controller .....                            | 172-1 | 172              |
| Local Pushbutton Switches .....                   | 173-1 | 173              |
| Remote Pushbutton Switches.....                   | 174-1 | 174              |
| Hand Crank Interlock Limit Switch.....            | 175-1 | 175              |
| Slack Cable Limit Switch.....                     | 176-1 | 176              |
| Group 04 Stem Gate                                |       |                  |
| Stern Gate and Portable Davit .....               | 177-1 | 177              |
| Group 05 Anchor Handling                          |       |                  |
| Anchor Winch Universal Joint Assembly .....       | 178-1 | 178              |
| Anchor Winch Drive Brake .....                    | 179-1 | 179              |
| Anchor Winch Gear Drive .....                     | 180-1 | 180              |
| Level Wind Assembly and Guard .....               | 181-1 | 181              |
| Anchor Winch Gear Guards and Frame .....          | 182-1 | 182              |
| Anchor Winch Drum Assembly .....                  | 183-1 | 183              |
| Slack Puller Hydraulic Motor .....                | 185-1 | 185              |
| Disconnect Clutch .....                           | 187-1 | 187              |
| Clutch Cover Plate.....                           | 188-1 | 188              |
| Torque Converter - Fluid System .....             | 189-1 | 189              |
| Torque Converter - Input Group .....              | 190-1 | 190              |
| Torque Converter - Output Group .....             | 191-1 | 191              |
| Torque Converter - Basic Group .....              | 192-1 | 192              |
| Hydraulic Tank Assembly.....                      | 193-1 | 193              |
| Hydraulic Filter.....                             | 194-1 | 194              |
| Pilot Valve and Manifold .....                    | 195-1 | 195              |
| Pressure Control Valve .....                      | 196-1 | 196              |
| Check Valve .....                                 | 197-1 | 197              |
| Directional Valve - Pilot Operated .....          | 198-1 | 198              |
| Relief Valve .....                                | 199-1 | 199              |
| Check Valve .....                                 | 200-1 | 200              |
| Pressure Reducing Valve.....                      | 201-1 | 201              |
| Hydraulic Pump .....                              | 202-1 | 202              |
| Hydraulic Pump Couplings.....                     | 203-1 | 203              |
| Spring Centered Solenoid - Directional Valve..... | 204-1 | 204              |
| Anchor Winch Brake Control.....                   | 205-1 | 205              |
| Engine Clutch and Throttle Controls.....          | 206-1 | 206              |
| Throttle Cable and Linkage .....                  | 207-1 | 207              |
| Engine Stop Control.....                          | 208-1 | 208              |
| Engine Throttle Linkage .....                     | 210-1 | 210              |
| Governor Linkage and Mounting .....               | 211-1 | 211              |
| Governor Control Housing Assembly .....           | 213-1 | 213              |
| Governor Housing Assembly.....                    | 215-1 | 215              |
| Air Intake .....                                  | 216-1 | 216              |
| Blower.....                                       | 217-1 | 217              |
| Fuel Pump .....                                   | 218-1 | 218              |
| Fuel Lines .....                                  | 219-1 | 219              |
| Fuel Strainer .....                               | 220-1 | 220              |
| Fuel Filter .....                                 | 221-1 | 221              |
| Fuel Ejector .....                                | 222-1 | 222              |
| Oil Filter.....                                   | 223-1 | 223              |
| Oil Cooler .....                                  | 224-1 | 224              |
| Fresh Water Pump.....                             | 225-1 | 225              |
| Water Connections .....                           | 226-1 | 226              |
| Water Manifold .....                              | 227-1 | 227              |

|                                            | Page  | Illus/<br>Figure |
|--------------------------------------------|-------|------------------|
| Thermostat and Housing .....               | 228-1 | 228              |
| Overspeed and Governor.....                | 229-1 | 229              |
| Tachometer Drive .....                     | 230-1 | 230              |
| Crankshaft Pulley and Damper.....          | 231-1 | 231              |
| Balance Weight Cover .....                 | 232-1 | 232              |
| Engine Lift Brackets.....                  | 233-1 | 233              |
| Exhaust Manifold .....                     | 234-1 | 234              |
| Rocker Arm Cover .....                     | 235-1 | 235              |
| Injector Controls.....                     | 236-1 | 236              |
| Oil Pan and Dipstick.....                  | 237-1 | 237              |
| Cylinder Head .....                        | 238-1 | 238              |
| Valve Operating, Mechanism .....           | 239-1 | 239              |
| Exhaust Valve Arrangement .....            | 240-1 | 240              |
| Camshaft and Gear Train.....               | 241-1 | 241              |
| Idle Gear Hole Spacer Assembly .....       | 242-1 | 242              |
| Idle Gear.....                             | 243-1 | 243              |
| Flywheel and Housing .....                 | 244-1 | 244              |
| Oil Pressure Regulator.....                | 245-1 | 245              |
| Oil Pump.....                              | 246-1 | 246              |
| Breather Tube .....                        | 247-1 | 247              |
| Oil Distribution System.....               | 248-1 | 248              |
| Pistons, Connecting Rods and Liners .....  | 249-1 | 249              |
| Crankshaft and Bearings.....               | 250-1 | 250              |
| Cylinder Block.....                        | 251-1 | 251              |
| Anchor Winch Engine Pressure Switches..... | 252-1 | 252              |
| Instrument Panel and Tachometer .....      | 253-1 | 253              |
| Anchor A-Frame Fairleader.....             | 254-1 | 254              |
| Anchor A-Frame and Cables .....            | 255-1 | 255              |
| Wire Rope Cutter .....                     | 256-1 | 256              |
| Group 06 Mast                              |       |                  |
| Mast Installation.....                     | 257-1 | 257              |
| Group 07 Ships Hydraulic System            |       |                  |
| Central Hydraulic Piping.....              | 258-1 | 258              |
| Hydraulic Pump Motor .....                 | 260-1 | 260              |
| Hydraulic Pump .....                       | 261-1 | 261              |
| Motor Starter.....                         | 263-1 | 263              |
| Two Position Element Control Station ..... | 264-1 | 264              |
| Directional Control Valve .....            | 265-1 | 265              |
| Stern Gate Hydraulic Cylinder .....        | 266-1 | 266              |
| Mast Hydraulic Cylinder .....              | 267-1 | 267              |
| Directional Control Valve .....            | 268-1 | 268              |
| A-Frame Hydraulic Winch .....              | 269-1 | 269              |
| Group 08 Steering System                   |       |                  |
| Hydraulic Cub Pump Unit.....               | 270-1 | 270              |
| Brake Valve .....                          | 271-1 | 271              |
| Directional Control Valve .....            | 272-1 | 272              |
| Hydraulic Pump .....                       | 273-1 | 273              |
| Pump Motor and Coupling.....               | 274-1 | 274              |
| Motor Controller .....                     | 275-1 | 275              |
| Steering Hydraulic Cylinder.....           | 276-1 | 276              |
| Main Rudder Stock Arrangement .....        | 277-1 | 277              |
| Main Rudder Linkage .....                  | 278-1 | 278              |
| Flanking Rudder Stock Arrangement.....     | 279-1 | 279              |

|                                                                                 | Page  | Illus/<br>Figure |
|---------------------------------------------------------------------------------|-------|------------------|
| Flanking Rudder Linkage .....                                                   | 280-1 | 280              |
| Flanking Rudder Limit Switch.....                                               | 281-1 | 281              |
| Main Rudder Angle and Repeat Back Transmitter .....                             | 282-1 | 282              |
| Rudder Angle Indicator .....                                                    | 283-1 | 283              |
| Heading Selector .....                                                          | 284-1 | 284              |
| Steering Control Panel.....                                                     | 286-1 | 286              |
| Remote Magnetic Heading System .....                                            | 287-1 | 287              |
| Emergency Steering Arrangement .....                                            | 288-1 | 288              |
| Group 09 Pump Set                                                               |       |                  |
| Fire Pump .....                                                                 | 289-1 | 289              |
| Contactors .....                                                                | 290-1 | 290              |
| Bilge Pump .....                                                                | 291-1 | 291              |
| Bilge Pump Drive Arrangement.....                                               | 292-1 | 292              |
| Bilge Pump Clutch .....                                                         | 293-1 | 293              |
| Lube Oil Pump .....                                                             | 294-1 | 294              |
| Motor Controller .....                                                          | 295-1 | 295              |
| Starter.....                                                                    | 296-1 | 296              |
| Fresh Water Pump.....                                                           | 297-1 | 297              |
| Air Conditioning Water Circulation Pump .....                                   | 298-1 | 298              |
| Pump Motor .....                                                                | 299-1 | 299              |
| Diesel Oil Cooling Pump .....                                                   | 300-1 | 300              |
| Pump Motor .....                                                                | 301-1 | 301              |
| Sewage Pump .....                                                               | 302-1 | 302              |
| Pump Motor .....                                                                | 303-1 | 303              |
| Sewage Pump and Air Pump Controller .....                                       | 304-1 | 304              |
| Remote Pushbutton Station .....                                                 | 305-1 | 305              |
| Macerator/Transfer Pump .....                                                   | 306-1 | 306              |
| Sewage Air Pump .....                                                           | 307-1 | 307              |
| Lube Oil Transfer Pump.....                                                     | 308-1 | 308              |
| Portable Fire Pump .....                                                        | 309-1 | 309              |
| Portable Fire Pump - Starter Assembly .....                                     | 310-1 | 310              |
| Portable Fire Pump - Carburetor Assembly .....                                  | 311-1 | 311              |
| Portable Fire Pump - Carburetor of Linkage, Control<br>Panel and Manifold ..... | 312-1 | 312              |
| Portable Fire Pump - Fuel Tank Assembly .....                                   | 313-1 | 313              |
| Portable Fire Pump - Magneto Assembly .....                                     | 314-1 | 314              |
| Portable Fire Pump - Power Head and Receiver Assembly .....                     | 315-1 | 315              |
| Portable Fire Pump - Crankshaft and Piston Assembly .....                       | 316-1 | 316              |
| Portable Fire Pump - Frame and Comers Assembly.....                             | 317-1 | 317              |
| Portable Fire Pump - Foot Valve Assembly.....                                   | 318-1 | 318              |
| Portable Fire Pump - Pressure Regulator and Operating<br>Cylinder .....         | 319-1 | 319              |
| Portable Fire Pump - Pump and Water Outlet Valve .....                          | 320-1 | 320              |
| Portable Fire Pump - Priming Pump and Gear Housing .....                        | 321-1 | 321              |
| Group 010 Sewage System                                                         |       |                  |
| Urinal .....                                                                    | 322-1 | 322              |
| Commode.....                                                                    | 323-1 | 323              |
| Flush Valve.....                                                                | 324-1 | 324              |
| Group 011 Heating, Ventilation and Air Conditioning System                      |       |                  |
| Recirculating Fan.....                                                          | 325-1 | 325              |
| Exhaust Fan, (Galley/Washroom) .....                                            | 326-1 | 326              |
| Exhaust Fan (Air Conditioning Machinery and Spares Space) .....                 | 327-1 | 327              |
| Exhaust Fan (Anchor Winch and Bow Ramp Winches) .....                           | 328-1 | 328              |

|                                                                       | Page  | Illus/<br>Figure |
|-----------------------------------------------------------------------|-------|------------------|
| Centrifugal Fan and Motor .....                                       | 329-1 | 329              |
| Fan Motor (Engine Room Fan).....                                      | 330-1 | 330              |
| Fan Motor (Engine Room Fan).....                                      | 331-1 | 331              |
| Fan Motor (Machine Room) .....                                        | 332-1 | 332              |
| Fan Motor (Anchor Winch Room).....                                    | 333-1 | 333              |
| Starter.....                                                          | 334-1 | 334              |
| HVAC Ducting.....                                                     | 335-1 | 335              |
| Compressor Unit Assembly .....                                        | 336-1 | 336              |
| Freon Compressor .....                                                | 337-1 | 337              |
| Heat Interchanger and Liquid Indicator.....                           | 339-1 | 339              |
| Strainer.....                                                         | 340-1 | 340              |
| Drier Assembly .....                                                  | 341-1 | 341              |
| Gage Board .....                                                      | 342-1 | 342              |
| Thermostat .....                                                      | 343-1 | 343              |
| Thermometers .....                                                    | 344-1 | 344              |
| Thermal Valve .....                                                   | 345-1 | 345              |
| Group 012 Commissary Space Equipment                                  |       |                  |
| Sink Heater .....                                                     | 346-1 | 346              |
| Toaster .....                                                         | 347-1 | 347              |
| Drinking Fountain.....                                                | 348-1 | 348              |
| Milk Dispenser .....                                                  | 349-1 | 349              |
| Coffee Maker .....                                                    | 350-1 | 350              |
| Washer/Dryer Exterior .....                                           | 351-1 | 351              |
| Washer/Dryer Drum Heater.....                                         | 352-1 | 352              |
| Washer/Dryer Blower.....                                              | 353-1 | 353              |
| Washer/Dryer Tubs, Water Valve and Lid Switch.....                    | 354-1 | 354              |
| Washer/Dryer Drive System Pump .....                                  | 355-1 | 355              |
| Washer/Dryer Transmission, Water Seal and<br>Lubricating Bearing..... | 356-1 | 356              |
| Refrigerator.....                                                     | 357-1 | 357              |
| Electric Range .....                                                  | 358-1 | 358              |
| Group 013 Washroom and Water Closet Fixture                           |       |                  |
| Washroom Equipment .....                                              | 359-1 | 359              |
| Group 014 Firefighting System                                         |       |                  |
| Firefighting Components .....                                         | 360-1 | 360              |
| Halon Control Panel.....                                              | 361-1 | 361              |
| Pneumatic Heat Detector .....                                         | 362-1 | 362              |
| Cylinder Assembly .....                                               | 363-1 | 363              |
| Cylinder Assembly .....                                               | 364-1 | 364              |
| Halon System Piping and Wiring.....                                   | 365-1 | 365              |
| Group 015 Interior Communication                                      |       |                  |
| Alarm Switchboard.....                                                | 366-1 | 366              |
| Two Line Alarm Panel.....                                             | 367-1 | 367              |
| Call System Major Components .....                                    | 369-1 | 369              |
| Anchor Windlass Horn, Navigation Horn and Switch .....                | 370-1 | 370              |
| Entertainment Amplifier .....                                         | 371-1 | 371              |
| Amplified Speaker.....                                                | 372-1 | 372              |
| Sound Powered Telephone Handset .....                                 | 374-1 | 374              |
| Chest Headset, Hook and Locker .....                                  | 375-1 | 375              |
| Jackbox and Plug.....                                                 | 376-1 | 376              |
| Public Address with Battery.....                                      | 377-1 | 377              |
| External Battery Cable Assembly .....                                 | 378-1 | 378              |
| Loudhailer Assembly.....                                              | 379-1 | 379              |

|                                             | Page  | Illus/<br>Figure |
|---------------------------------------------|-------|------------------|
| Tachometer .....                            | 381-1 | 381              |
| Voice Tube .....                            | 382-1 | 382              |
| Group 016 Electronic and Navigation System  |       |                  |
| 24 Volt Distribution Panel.....             | 384-1 | 384              |
| Group 017 Oil-Water Separator               |       |                  |
| Oil-Water Separator.....                    | 385-1 | 385              |
| Solenoid Valve.....                         | 386-1 | 386              |
| Solenoid Valve.....                         | 387-1 | 387              |
| Manual Ball Valve .....                     | 388-1 | 388              |
| Separator Subassembly .....                 | 389-1 | 389              |
| Manual Ball Valve .....                     | 390-1 | 390              |
| Pump-Motor Assembly.....                    | 391-1 | 391              |
| Manual Ball Valve .....                     | 392-1 | 392              |
| Pump-Motor .....                            | 393-1 | 393              |
| Central Control Panel Assembly.....         | 394-1 | 394              |
| Group 018 Piping System                     |       |                  |
| Pipe Hangars .....                          | 395-1 | 395              |
| Fire, Ballast and Bilge Piping (Fire).....  | 396-1 | 396              |
| Gage Piping .....                           | 397-1 | 397              |
| Wye Strainer.....                           | 398-1 | 398              |
| Diesel Engine Cooling System .....          | 399-1 | 399              |
| Hull Coolers .....                          | 400-1 | 400              |
| Lube Oil Piping .....                       | 401-1 | 401              |
| Reach Rods - Diesel Oil Shutoff Valve.....  | 403-1 | 403              |
| Diesel Oil Piping .....                     | 404-1 | 404              |
| Air Conditioning Cooling Piping .....       | 405-1 | 405              |
| Diesel Oil Cooling Piping .....             | 406-1 | 406              |
| Shaft Seal Tank .....                       | 407-1 | 407              |
| Fuel Filter/Separator .....                 | 409-1 | 409              |
| NBC Washdown System.....                    | 410-1 | 410              |
| Exhaust System.....                         | 411-1 | 411              |
| Fresh and Flush Water Piping .....          | 414-1 | 414              |
| Group 019 Tanks and Voids                   |       |                  |
| Tank Level Indication Receiver .....        | 416-1 | 416              |
| Transmitter .....                           | 417-1 | 417              |
| Cable Assembly .....                        | 418-1 | 418              |
| Bracket Assembly .....                      | 419-1 | 419              |
| Penetration Assembly .....                  | 420-1 | 420              |
| Water Heater .....                          | 421-1 | 421              |
| Deck and Sanitary Drains.....               | 422-1 | 422              |
| Vents and Sounding Tubes .....              | 423-1 | 423              |
| Group 020 Hull and Outfit                   |       |                  |
| Furniture - Galley and Mess Room.....       | 424-1 | 424              |
| Furniture - Pilot House and Deck House..... | 425-1 | 425              |
| Furniture - Crew Berthing Space .....       | 426-1 | 426              |
| Furniture - Officer's Stateroom.....        | 427-1 | 427              |
| Stanchions and Railings.....                | 428-1 | 428              |
| Portable Air Compressor .....               | 429-1 | 429              |
| Portable Air Compressor .....               | 430-1 | 430              |
| Lashing Gear .....                          | 431-1 | 431              |
| Doors .....                                 | 432-1 | 432              |
| Manholes .....                              | 435-1 | 435              |
| Windows and Airport.....                    | 436-1 | 436              |

|                                              | Page  | Illus/<br>Figure |
|----------------------------------------------|-------|------------------|
| Hi-Intensity Portable Light .....            | 437-1 | 437              |
| Portable Light Battery Charger .....         | 438-1 | 438              |
| Window Wiper Assembly .....                  | 439-1 | 439              |
| Window Wiper Motor .....                     | 440-1 | 440              |
| Window Wiper Control .....                   | 441-1 | 441              |
| Window Wiper Assembly .....                  | 442-1 | 442              |
| Window Wiper Motor .....                     | 443-1 | 443              |
| Window Wiper Control .....                   | 444-1 | 444              |
| Navigation Light - Port .....                | 445-1 | 445              |
| Navigation Light - Starboard .....           | 446-1 | 446              |
| Navigation Light - Towing .....              | 447-1 | 447              |
| Navigation Light - Masthead .....            | 448-1 | 448              |
| Navigation Light - Stem Clear .....          | 449-1 | 449              |
| Signal Light - Task .....                    | 450-1 | 450              |
| Navigation Light - Anchor and Boom .....     | 451-1 | 451              |
| Signal Light - Man Overboard .....           | 452-1 | 452              |
| Navigation Light - Blinker .....             | 453-1 | 453              |
| Wake Light .....                             | 454-1 | 454              |
| Searchlight Mounting and Yoke Assembly ..... | 455-1 | 455              |
| Searchlight Hood Assembly .....              | 456-1 | 456              |
| Searchlight Shutter Assembly .....           | 457-1 | 457              |
| Searchlight Drum Assembly .....              | 458-1 | 458              |
| Air Horn Piping .....                        | 460-1 | 460              |
| Air Horn Assembly .....                      | 461-1 | 461              |
| Whistle Valve Assembly .....                 | 462-1 | 462              |
| Air Strainer Assembly .....                  | 463-1 | 463              |
| Air Compressor Unit .....                    | 464-1 | 464              |
| Air Compressor .....                         | 465-1 | 465              |
| Section III. SPECIAL TOOLS LIST              |       |                  |
| Special Tools List .....                     | 466-1 | 466              |
| Section IV. CROSS REFERENCE INDEXES          |       |                  |
| National Stock Number Index .....            | I-1   |                  |
| Part Number Index .....                      | I-31  |                  |
| Figure and Item Number Index .....           | I-196 |                  |

## UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

### Section I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Landing Craft Utility, LCU 1667 through 1670. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items are shown in the associated illustration(s)/figure(s).

b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-references Indexes.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

### 3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

- a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.
- b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

| Source Code                 | Maintenance Code                                        | Recoverability Code                                        |
|-----------------------------|---------------------------------------------------------|------------------------------------------------------------|
| <u>XX</u> 1st two positions | <u>XX</u>                                               | <u>XX</u>                                                  |
| How you get an item         | 3rd position<br>Who can install replace or use the item | 4th position<br>Who can do complete repair* on the item    |
|                             |                                                         | Who determines disposition action on an unserviceable item |

\*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

| Code                                                                                                                                                               | Explanation                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PA<br>PB<br>PC**<br>PD<br>PE<br>PF<br>PG                                                                                                                           | <p>Stocked items; use the applicable NSN to requested/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.</p> <p>NOTE: Items coded PC are subject to deterioration.</p>                                                                                                                                             |
| KD<br>KF<br>KB                                                                                                                                                     | <p>Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.</p>                                                                                                                                                       |
| MO - (Made at org/AVUM Level)<br>MP - (Made at DS/AVUM Level)<br>MH - (Made at GS Level)<br>ML - (Made at Specialized                                              | <p>Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR</p>                                               |
| Repair Activity (SRA))<br>MD - (Made at Depot)                                                                                                                     | <p>code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.</p>                                                                                                                                                                                                                                                                                     |
| AO - (Assembled by org/AVUM Level)<br>AF - (Assembled by DS/AVIM Level)<br>AH - (Assembled by GS Category)<br>AL - (Assembled by SRA)<br>AD - (Assembled by Depot) | <p>Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from</p> |
| the higher level of maintenance.<br>XA -                                                                                                                           | <p>Do not requisition "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)</p>                                                                                                                                                                                                                                                                                                       |
| XB - If an "XB" item is not available from salvage, order it using the CAGEC and part number given.                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                   |
| XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by Reciprocating Compressor manufacturer's part number.           |                                                                                                                                                                                                                                                                                                                                                                                                                   |
| XD - Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given if no NSN is available.                    |                                                                                                                                                                                                                                                                                                                                                                                                                   |

**NOTE**

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) Maintenance Code. Maintenance codes tell you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance.

| <b>Code</b> | <b>Application/Explanation</b>                                                       |
|-------------|--------------------------------------------------------------------------------------|
| C -         | Crew or operator maintenance done with unit or aviation unit maintenance.            |
| O -         | Unit or aviation unit category can remove, replace, and use the item.                |
| F -         | Direct support or aviation intermediate level can remove, replace, and use the item. |
| H -         | General support level can remove, replace, and use the item.                         |
| L -         | Specialized repair activity can remove, replace, and use the item.                   |
| D -         | Depot level can remove, replace, and use the item.                                   |

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions.) NOTE: Some limited repair may be done on the item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes. This position will contain one of the following maintenance codes.

| <b>Code</b> | <b>Application/Explanation</b>                                                                                                                                                                          |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| O -         | Unit or (aviation unit) is the lowest level that can do complete repair of the item.                                                                                                                    |
| F -         | Direct support or aviation intermediate is the lowest level that can do complete repair of the item.                                                                                                    |
| H -         | General Support is the lowest level that can do complete repair of the item.                                                                                                                            |
| L -         | Specialized repair activity is the lowest level that can do complete repair of the item.                                                                                                                |
| D -         | Depot is the lowest level that can do complete repair of the item.                                                                                                                                      |
| Z -         | Nonreparable. No repair is authorized.                                                                                                                                                                  |
| B -         | No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item). However, the item may be reconditioned by adjusting, lubricating, etc., at the user level. |

(3) Recoverability Code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

**Recoverability  
Codes**
**Application/Explanation**

- Z - Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in 3d position of SMR Code.
- O - Reparable item. When not economically reparable, condemn and dispose of the item unit or aviation unit level
- F - Reparable item. When uneconomically reparable, condemn and dispose of the item at the direct support or aviation intermediate level
- H - Reparable item. When uneconomically reparable, condemn and dispose of the item at the general support level.
- D - Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal of item not authorized below depot level.
- L - Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
- A - Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. CAGEC (Column (3)). The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

d. PART NUMBER (Column (4)). Indicates the primary number used by the manufacturer, (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

**NOTE**

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. DESCRIPTION AND USABLE ON CODE (UOC) (Column (5)). This column includes the following information:

(1) The Federal item name and, when required, a minimum description to identify the item.

(2) The physical security classification of the item is indicated by the parenthetical entry, e.g., PhySec C1 - Confidential, PhySec C1 (S) - Secret, PhySec C1 (T) - Top Secret.

(3) Items that are included in kits and sets are listed below the name of the kit or set.

(4) Spare/repair parts that make up an assembled item are listed immediately following the assembled item line entry.

(5) Part numbers for bulk materials are referenced in this column in the line item entry for the item to be manufactured/fabricated.

(6) When the item is not used with all serial numbers of the same model, the effective serial numbers are shown on the last line(s) of the description (before UOC).

(7) The usable on code, when applicable (see paragraph 5, Special Information).

(8) In the Special Tools List section, the basis of issue (BOI) appears as the last line(s) in the entry for each special tool, special TMDE, and other special support equipment. When density of equipments supported exceeds density spread indicated in the basis of issue, the total authorization is increased proportionately.

(9) The statement "END OF FIGURE" appears just below the last item description in Column 5 for a given figure in both Section II and Section III.

(10) The indenture, shown as dots appearing before the repair part, indicates that the item is a repair part of the next higher assembly.

f. QTY (Column (6)). The QTY (quantity per figure column) indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and may vary from application to application.

#### 4. EXPLANATION OF COLUMNS (SECTION IV).

##### a. NATIONAL STOCK NUMBER (NSN) INDEX.

(1) STOCK NUMBER column. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN, i.e.

|                         |
|-------------------------|
| NSN                     |
| <u>5305-01-574-1467</u> |
| NIIN                    |

When using this column to locate an item, ignore the first 4 digits of the NSN. However, the complete NSN should be used when ordering items by stock number.

(2) FIG. column. This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III.

(3) ITEM column. The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.

b. PART NUMBER INDEX. Part numbers in this index are listed by part number in ascending alpha-numeric sequence (i.e., vertical arrangement of letter and number combination which places the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9 and each following letter or digit in like order).

(1) CAGEC column. The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(2) PART NUMBER column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

(3) STOCK NUMBER column. This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and CAGEC columns to the left.

(4) FIG. column. This column lists the number of the figure where the item is identified/located in Sections II and III.

(5) ITEM column. The item number is that number assigned to the item as it appears in the figure referenced in adjacent figure number column.

c. FIGURE AND ITEM NUMBER INDEX.

(1) FIG. column. This column lists the number of the figure where the item is identified/located in Section II and III.

(2) ITEM column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) STOCK NUMBER column. This column lists the NSN for the item.

(4) CAGEC column. The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(5) PART NUMBER column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

5. SPECIAL INFORMATION.

a. USABLE ON CODE. The usable on code appears in the lower corner of the Description column heading. Usable on codes are shown as "UOC:.." in the Description Column justified left) on the last line applicable item description/nomenclature. Uncoded items are applicable to all models.

b. ASSOCIATED PUBLICATIONS. The publications listed below pertains to the Landing Craft Utility, LCU 1667 through 1670 and its components.

| <u>Publication</u>       | <u>Short Title</u>                                                                                |
|--------------------------|---------------------------------------------------------------------------------------------------|
| TM 55-1905-219-34P-1 & 2 | DS/GS Maintenance RPSTL, Landing Craft Utility, LCU 1667 through 1670                             |
| TM 55-1905-219-14        | Operator's, Organizational, DS/GS Maintenance Manual Landing Craft Utility, LCU 1667 through 1670 |

c. APPLICABILITY. Only illustrations containing unit level (crew and organizational) authorized items appear in this manual. Only those parts assigned the third position SMR maintenance code of "C" or "O" are shown in the tabular listing; therefore, there may be a break in the item number sequence. The illustrations in this manual are identical to those published in TM 55-1905-219-34P-2.

## 6. HOW TO LOCATE REPAIR PARTS.

### a. When National Stock Number or Part Number is NOT Known.

(1) First. Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) Third. Identify the item on the figure and note the item number.

(4) Fourth. Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) Fifth. Refer to the Part Number Index to find the NSN, if assigned.

### b. When National Stock Number or Part Number is Known.

(1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National Stock Number or Part Number. The NSN index is in National Item Identification Number (NIIN) sequence (see c-4a.(1)). The part numbers in the Part Number index are listed in ascending alphanumeric sequence (see paragraph c-4.b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.

(2) Second. After finding the figure and item number, verify that the item is the one you are looking for, then locate the item number in the repair parts list for the figure.

## 7. ABBREVIATIONS. Abbreviations used in this manual are listed in MIL-STD-12.

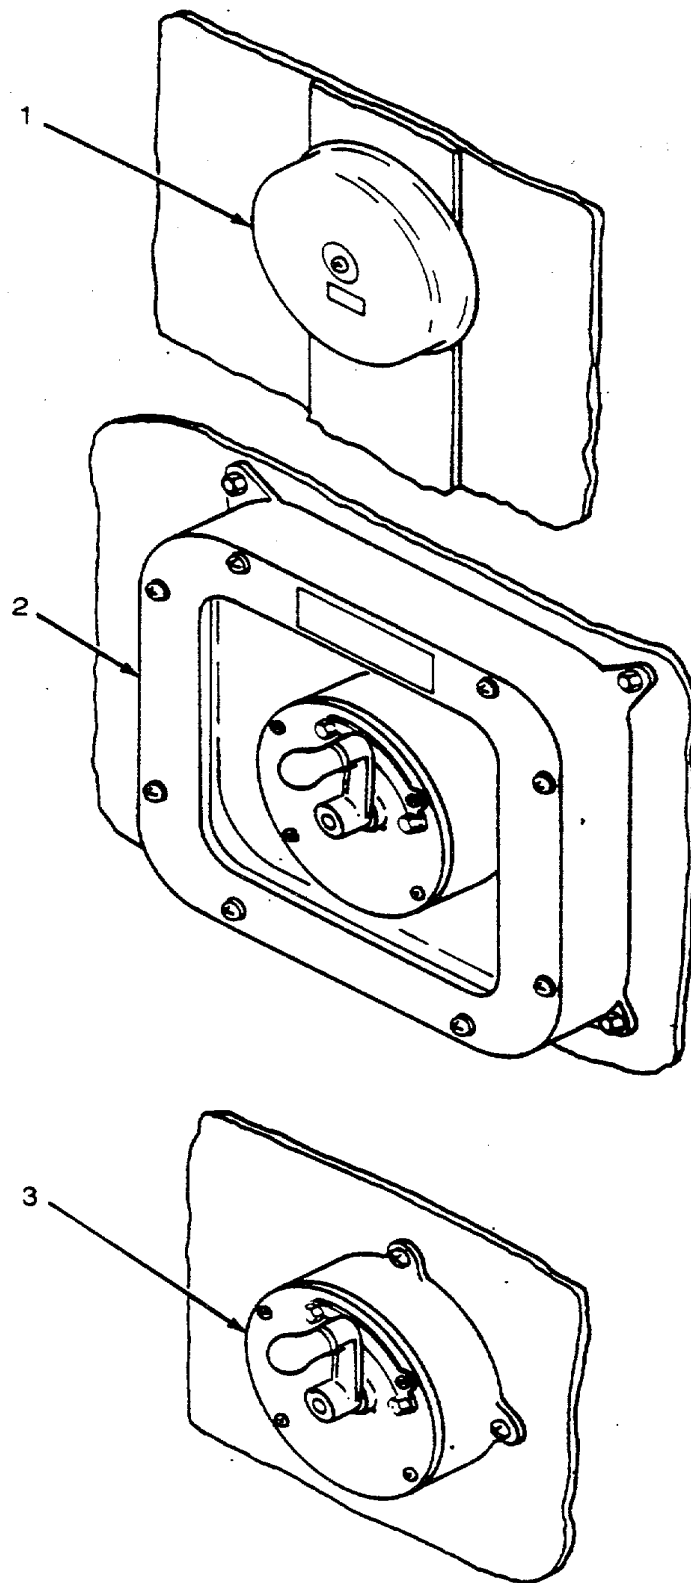 


Figure 360. Fire Fighting Components

| SECTION II |      |       | TM 55-1905-219-20P-2 |                                       |     |
|------------|------|-------|----------------------|---------------------------------------|-----|
| (1)        | (2)  | (3)   | (4)                  | (5)                                   | (6) |
| ITEM       | SMR  |       | PART                 |                                       |     |
| NO         | CODE | CAGEC | NUMBER               | DESCRIPTION AND USABLE ON CODES (UOC) | QTY |

GROUP 14 FIREFIGHTING SYSTEM

FIG. 360 FIREFIGHTING COMPONENTS

|   |       |       |               |                                        |    |
|---|-------|-------|---------------|----------------------------------------|----|
| 1 | XDCZZ | 06859 | KB-511-24V    | BELL,VIBRATING 10 INCH,W/KB-8016 ..... | 12 |
|   |       |       |               | WEATHER PROOF BACK BOX .....           |    |
| 2 | XDCZZ | 28199 | 60-226-TYPE B | CONTACT MAKER GENERAL ALARM, .....     | 1  |
|   |       |       |               | ENCLOSED .....                         |    |
| 3 | XDCZZ | 28199 | 60-017,TYPE B | CONTACT MAKER GENERAL,ALARM .....      | 1  |

END OF FIGURE

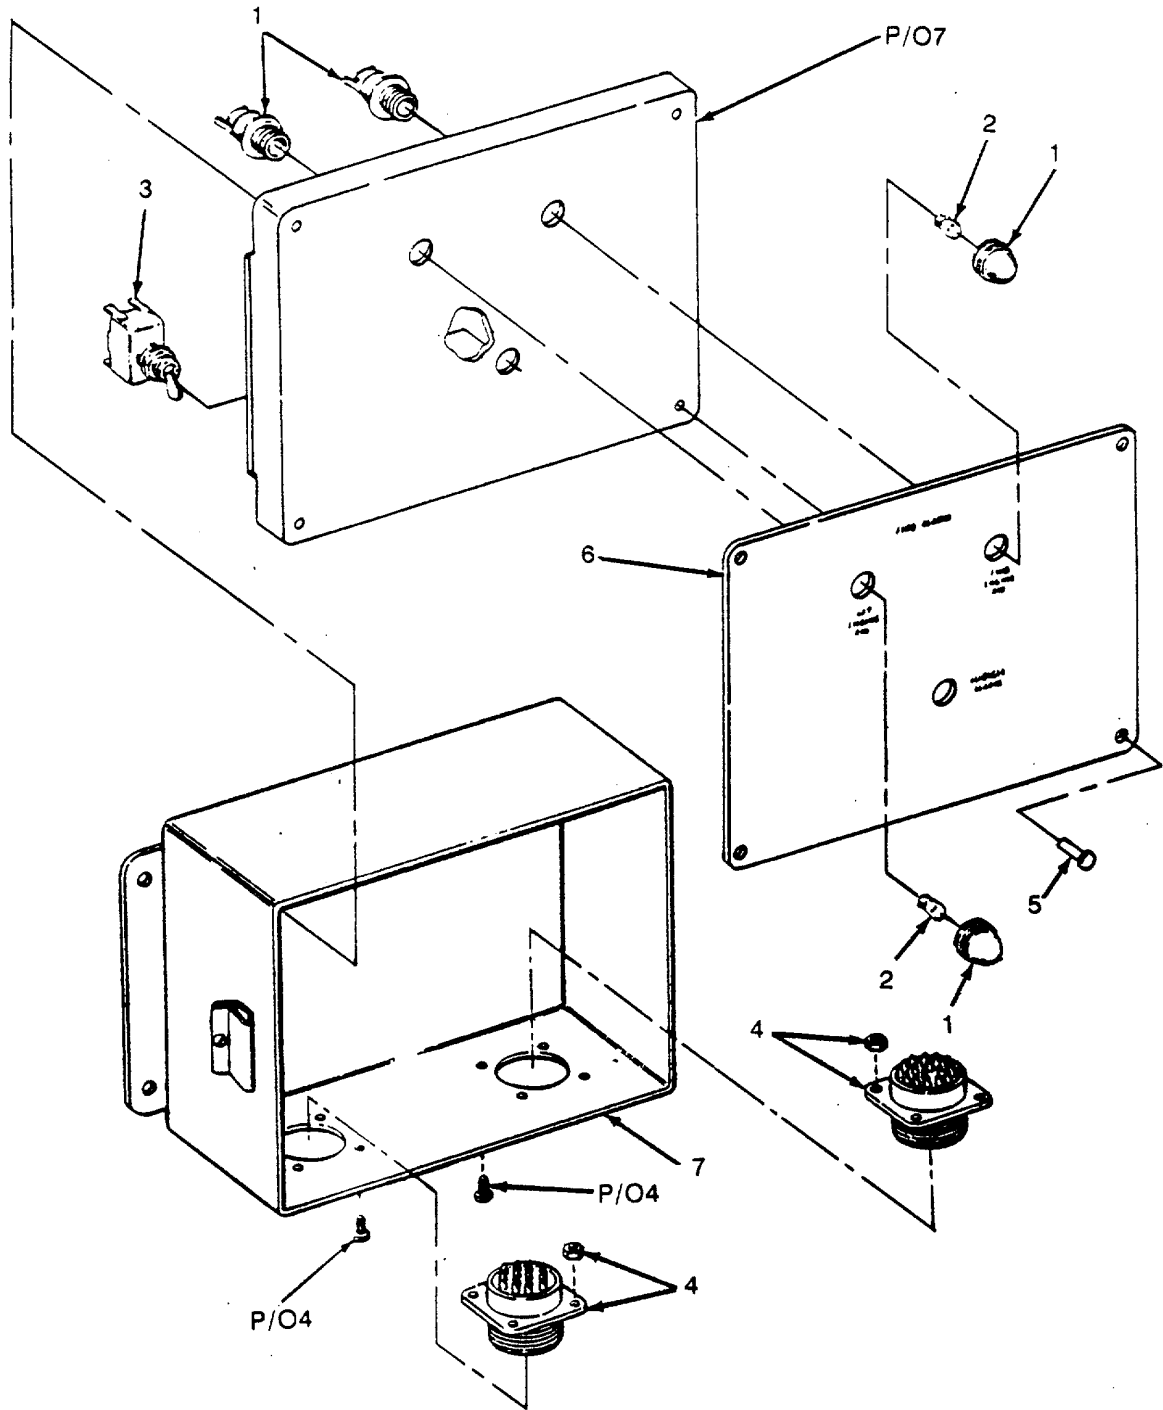 


Figure 361. Halon Control Panel

SECTION II

TM 55-1905-219-20P-2

|      |      |       |        |                                       |     |
|------|------|-------|--------|---------------------------------------|-----|
| (1)  | (2)  | (3)   | (4)    | (5)                                   | (6) |
| ITEM | SMR  |       | PART   |                                       |     |
| NO   | CODE | CAGEC | NUMBER | DESCRIPTION AND USABLE ON CODES (UOC) | QTY |

GROUP 14 FIREFIGHTING SYSTEM

FIG. 361 HALON CONTROL PANEL

|   |       |       |          |                                   |   |
|---|-------|-------|----------|-----------------------------------|---|
| 2 | PACZZ | 71744 | 376-AS15 | LAMP,INCANDESCENT INDICATOR ..... | 2 |
|---|-------|-------|----------|-----------------------------------|---|

END OF FIGURE

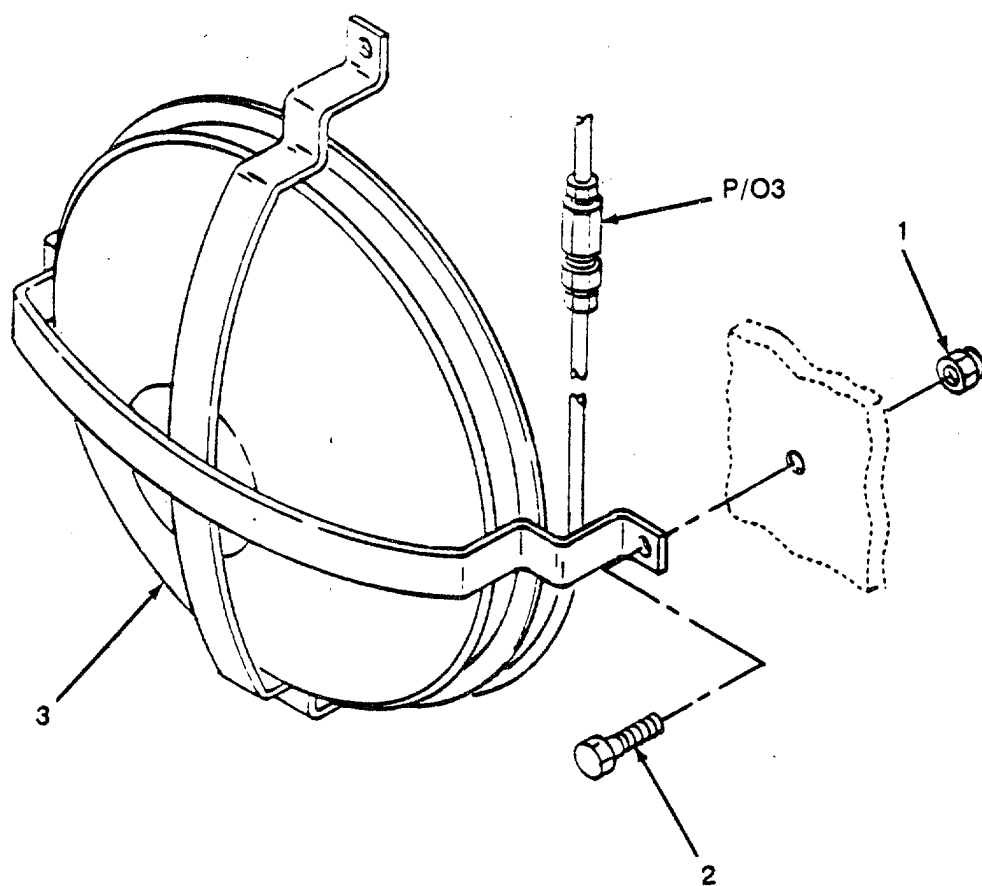 


Figure 362. Pneumatic Heat Detector

SECTION II

TM 55-1905-219-20P-2

|      |      |       |        |                                       |     |
|------|------|-------|--------|---------------------------------------|-----|
| (1)  | (2)  | (3)   | (4)    | (5)                                   | (6) |
| ITEM | SMR  |       | PART   |                                       |     |
| NO   | CODE | CAGEC | NUMBER | DESCRIPTION AND USABLE ON CODES (UOC) | QTY |

GROUP 14 FIREFIGHTING SYSTEM

FIG. 362 PNEUMATIC HEAT DETECTOR

|   |       |       |        |                                                          |   |
|---|-------|-------|--------|----------------------------------------------------------|---|
| 3 | PACZZ | 62142 | 841241 | ACTUATOR,AUTOMATIC PNEUMATIC HEAT.....<br>DETECTOR ..... | 5 |
|---|-------|-------|--------|----------------------------------------------------------|---|

END OF FIGURE

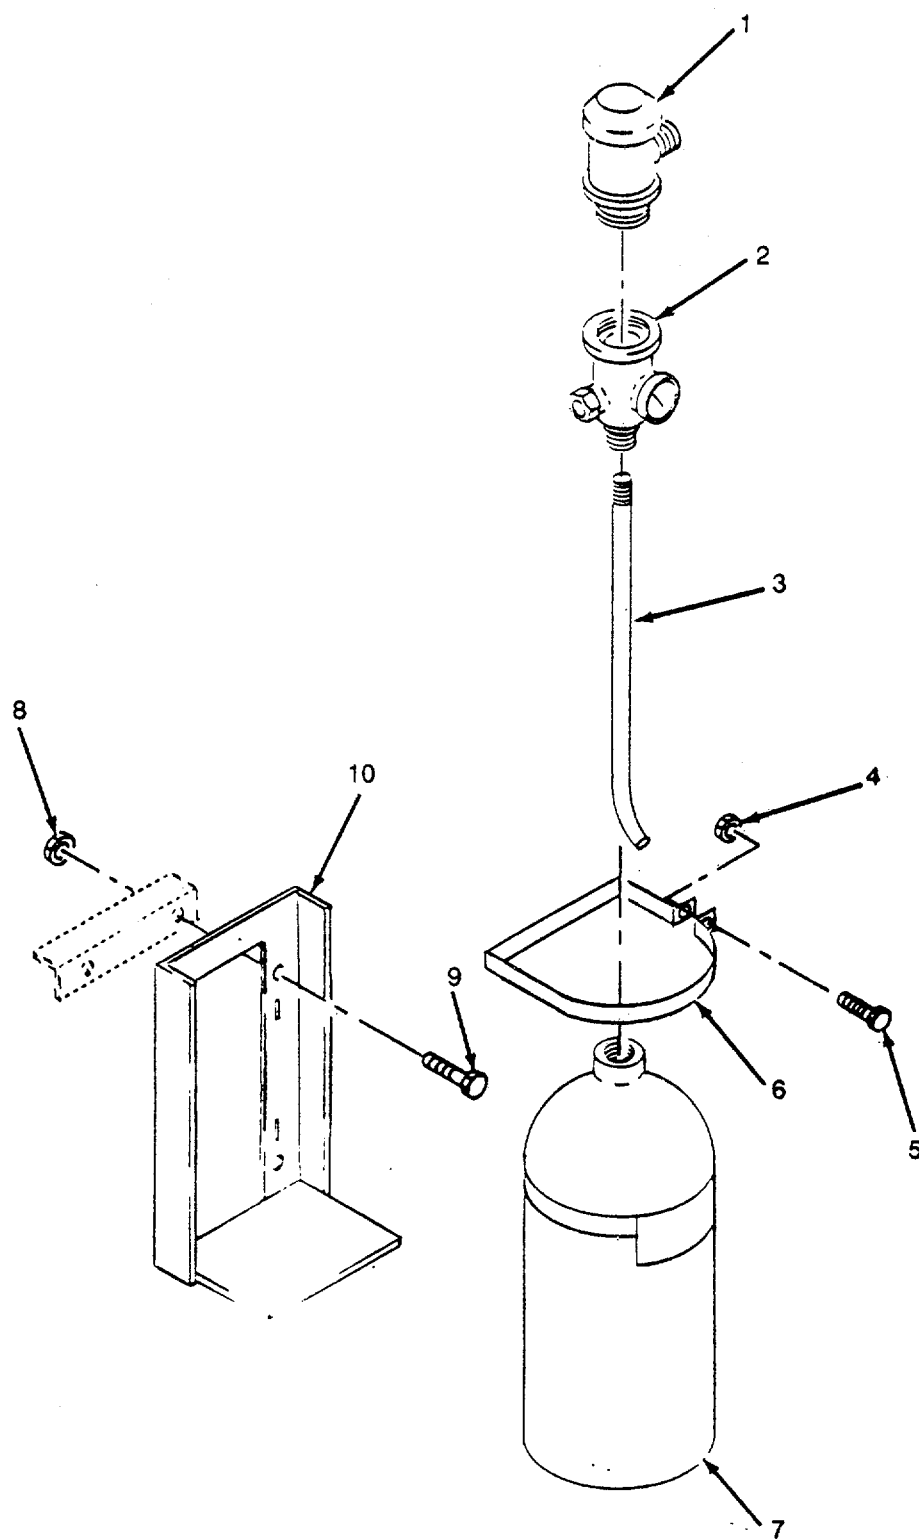 


Figure 363. Cylinder Assembly, 1301, 40 Pound