

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

**LANDING CRAFT UTILITY
LCU 1667 THROUGH 1670
NSN 1905-00-168-5764**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

* TM 55-1905-219-34P-2 supersedes TM 55-1905-219-34P-2 dated 9 July 1984.

HEADQUARTERS, DEPARTMENT OF THE ARMY

29 JANUARY 1993

TECHNICAL MANUAL

NO. 55-1905-219-34P-2

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 29 January 1993

Direct Support and General Support Maintenance
Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts and Special Tools)

LANDING CRAFT UTILITY
LCU 1667 THROUGH 1670
NSN 1905-00-168-5764
Current as of 1 August 1992

NOTE:

This manual is printed in two volumes as follows:

TM 55-1905-219-34P-1, consisting of Table of Contents, Section I and Section II Functional Groups 01 through 13).

TM 55-1905-219-34P-2, consisting of Table of Contents, Section I and Section II Functional Groups 13 through 20), Section III, and Section IV.

The Table of Contents, Section I and IV are applicable to the -1 and -2 volumes.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

		PAGE	ILLUS/ FIGURE
Section I	INTRODUCTION	1	
Section II	Repair Parts List	1-1	
Group 01	Propulsion System		
	Marine Gear Installation	1-1	1
	Marine Gear	2-1	2
	Marine Gear Selector Valve	3-1	3
	Control Station and Articulator	4-1	4
	Control Unit and Linkage	5-1	5
	Shutdown Head and Linkage	6-1	6
	Engine Throttle Linkage	7-1	7
	Variable Speed Governor	8-1	8

* This manual supersedes TM 55-1905-219-34P-2, dated 9 July 1984.

	PAGE	ILLUS/ FIGURE
Governor Housing Assembly	9-1	9
Air Intake	10-1	10
Ventilation	11-1	11
Blower Assembly	12-1	12
Blower Coupling	13-1	13
Fuel Pump	14-1	14
Fuel Lines	15-1	15
Fuel Strainer	16-1	16
Fuel Filter	17-1	17
Fuel Injectors	18-1	18
Dual Oil Filter	19-1	19
Marine Gear Oil Cooler Lines	20-1	20
Oil Cooler	21-1	21
Raw Water Pump	22-1	22
Expansion Tank	23-1	23
Water Connections	24-1	24
Water Manifold	25-1	25
Thermostat and Housing	26-1	26
Generator and Regulator Mounting	27-1	27
Generator	28-1	28
Tachometer Drive	29-1	29
Instrument Panel	30-1	30
Alarm System Switches	31-1	31
Crankshaft Pulley	32-1	32
Balance Weight Cover	33-1	33
Engine Lift Brackets and Support	34-1	34
Exhaust Manifolds	35-1	35
Rocker Arm Covers	36-1	36
Injector Controls	37-1	37
Flywheel and Housing	38-1	38
Camshaft Assembly (Right and Left Bank)	39-1	39
Idle Gear Hole Spacer Assembly	40-1	40
Idle Gear	41-1	41
Valve Operating Mechanism	42-1	42
Exhaust Valve Arrangement	43-1	43
Cylinder Head	44-1	44
Oil Pan and Dipstick	45-1	45
Lube Oil Regulator and Relief Valve	46-1	46
Lube Oil Pump	47-1	47
Oil Distribution System	48-1	48
Pistons, Connecting Rods and Liners	49-1	49
Crankshaft and Bearing	50-1	50
Cylinder Block	51-1	51
Starting Aid	52-1	52
Hydrostarter - Propulsion Engine	53-1	53
Hydrostarter - Diesel Generator Engine	54-1	54
Hydrostarter - Anchor Winch Engine	55-1	55
Hydraulic Starting System Accumulator	56-1	56
Engine Driven Hydraulic Pump	57-1	57
Starting System Hand Pump	58-1	58
Hydraulic Reservoir - Anchor Winch Engine	59-1	59
Hydraulic Reservoir - Propulsion and Diesel Generator Engine	60-1	60
Hydraulic Starting System Filter	61-1	61

	Page	Illus/ Figure
Hydraulic Starting System Piping	62-1	62
Port and Starboard Propeller and Shafting	63-1	63
Line Shafting - Port Side Only	64-1	64
Propeller Split Shaft Seal	65-1	65
Propeller Shaft Lock	66-1	66
Group 02 Electric Power Generator and Distribution		
Ships Service Main Switchboard	67-1	67
Distribution Transformers	68-1	68
Power Distribution Circuit Breaker Panel P-400	69-1	69
Power Distribution Circuit Breaker Panel P-406	70-1	70
Power Distribution Circuit Breaker Panel P-408	71-1	71
Power Distribution Circuit Breaker Panel P-408-A	72-1	72
Diesel Generator Engine Mounting	73-1	73
Main Generator Assembly	74-1	74
Rotating Rectifier Assembly	75-1	75
Emergency Shutdown Head and Linkage	76-1	76
Synchronizing Motor	77-1	77
Hydraulic Governor	78-1	78
Governor Oil Filter	79-1	79
Air Intake	80-1	80
Blower	81-1	81
Fuel Pump and Drain	82-1	82
Fuel Filter	83-1	83
Fuel Strainer	84-1	84
Fuel Injector	85-1	85
Fuel Lines	86-1	86
Oil Filter	87-1	87
Oil Cooler	88-1	88
Fresh Water Pump	89-1	89
Expansion Tank and Water Connections	90-1	90
Water Manifold	91-1	91
Thermostat and Housing	92-1	92
Relay, Shutdown and Switches	93-1	93
Overspeed Governor	94-1	94
Tachometer and Drive	95-1	95
Air Cleaner	96-1	96
Crankshaft Pulley	97-1	97
Balance Weight and Cover	98-1	98
Engine Lift Brackets and Support	99-1	99
Exhaust Manifold	100-1	100
Rocker Arm Cover	101-1	101
Injector Controls	102-1	102
Oil Pan, Dipstick and Fill	103-1	103
Cylinder Head	104-1	104
Valve Operating Mechanism	105-1	105
Exhaust Valve Arrangement	106-1	106
Camshaft and Gear Train	107-1	107
Idle Gear Hole Spacer Assembly	108-1	108
Idle Gear	109-1	109
Flywheel and Housing	110-1	110
Oil Pressure Regulator	111-1	111
Lube Oil Pump	112-1	112
Oil Distribution System	113-1	113

	Page	Illus/ Figure
Pistons, Connecting Rods and Liner	114-1	114
Crankshaft and Bearing	115-1	115
Cylinder Block	116-1	116
Instrument Panel	117-1	117
Fuel Primer Pump	118-1	118
Generator and Regulator Mounting	119-1	119
12-Volt Generator	120-1	120
24-VOC Rectifier	121-1	121
Circuit Breaker Panel L-100	122-1	122
Circuit Breaker Panel L-101	123-1	123
Fuse Panel L-103	124-1	124
Interior Communications Fuse Panel 2L-103	125-1	125
Circuit Breaker Panels L-104, L-105 and L-110	126-1	126
Circuit Breaker Panels L-106 and L-107	127-1	127
Galley Fuse Panel L-108	128-1	128
Fuse Panel P-401	129-1	129
Fuse Panel P-409	130-1	130
Fuse Panel P-024	131-1	131
Alarm Distribution Panel	132-1	132
Terminal Box - Symbol 432.1	133-1	133
Toggle Switch	134-1	134
Break Glass Control Station	135-1	135
Triple Receptacle	136-1	136
Watertight Receptacle - Symbol 900.1	137-1	137
Watertight Receptacle - Symbol 735.1	138-1	138
Terminal Box and Duplex Receptacle	139-1	139
Terminal Box - Symbol 433.1	140-1	140
Interlocking Door Operated Switch - Symbol 791.1	141-1	141
Disconnect Switch	142-1	142
Safety Switch, Air Horn Compressor	143-1	143
Floodlight - Symbol 300.2	144-1	144
Incandescent Lighting Fixture - Symbol 98.1	145-1	145
Incandescent Ceiling Fixture	146-1	146
Incandescent Bulkhead Fixture	147-1	147
Explosion-Proof Lighting Fixture	148-1	148
Incandescent Ceiling Fixture	149-1	149
Fluorescent Desk Light Fixture	150-1	150
Desk Light Fixture	151-1	151
General Purpose Fluorescent Light Fixture	152-1	152
Mirror Light Fixture	153-1	153
Secretary Light Fixture	154-1	154
Berth Light	155-1	155
Rotary Light, Red	156-1	156
Rotary Light, Amber	157-1	157
Fluorescent Light Fixture, Red and White	158-1	158
Relay Operated Lantern	159-1	159
Portable Lantern	160-1	160
Navigation Light Panel LCU 1667 Only	161-1	161
Navigation Light Panel LCU 1668 through LCU 1670	162-1	162
Group 03 Bow Ramp and Winch		
Bow Ramp and Fairlead	163-1	163
Lower Fairlead Sheave	164-1	164
Upper Fairlead Sheave	165-1	165

	Page	Illus/ Figure
Wire Rope Guard	166-1	166
Bow Ramp Winch	167-1	167
Torque Coupling	168-1	168
Speed Reducer	169-1	169
Magnetic Brake	170-1	170
Bow Ramp Winch Motor	171-1	171
Motor Controller	172-1	172
Local Pushbutton Switches	173-1	173
Remote Pushbutton Switches	174-1	174
Hand Crank Interlock Limit Switch	175-1	175
Slack Cable Limit Switch	176-1	176
Group 04 Stern Gate		
Stern Gate and Portable Davit	177-1	177
Group 05 Anchor Handling		
Anchor Winch Universal Joint Assembly	178-1	178
Anchor Winch Drive Brake	179-1	179
Anchor Winch Gear Drive	180-1	180
Level Wind Assembly and Guard	181-1	181
Anchor Winch Gear Guards and Frame	182-1	182
Anchor Winch Drum Assembly	183-1	183
Anchor Winch Slack Puller	184-1	184
Slack Puller Hydraulic Motor	185-1	185
Clutch Hydraulic Cylinder	186-1	186
Disconnect Clutch	187-1	187
Clutch Cover Plate	188-1	188
Torque Converter - Fluid System	189-1	189
Torque Converter - Input Group	190-1	190
Torque Converter - Output Group	191-1	191
Torque Converter- Basic Group	192-1	192
Hydraulic Tank Assembly	193-1	193
Hydraulic Filter	194-1	194
Pilot Valve and Manifold	195-1	195
Pressure Control Valve	196-1	196
Check Valve	197-1	197
Directional Valve - Pilot Operated	198-1	198
Relief Valve	199-1	199
Check Valve	200-1	200
Pressure Reducing Valve	201-1	201
Hydraulic Pump	202-1	202
Hydraulic Pump Couplings	203-1	203
Spring Centered Solenoid - Directional Valve	204-1	204
Anchor Winch Brake Control	205-1	205
Engine Clutch and Throttle Controls	206-1	206
Throttle Cable and Linkage	207-1	207
Engine Stop Control	208-1	208
Engine and Torque Converting Mounting	209-1	209
Engine Throttle Linkage	210-1	210
Governor Linkage and Mounting	211-1	211
Governor Cover Assembly	212-1	212
Governor Control Housing Assembly	213-1	213
Governor Housing and Weight Assembly	214-1	214
Governor Housing Assembly	215-1	215
Air Intake	216-1	216

	Page	Illus/ Figure
Blower	217-1	217
Fuel Pump	218-1	218
Fuel Lines	219-1	219
Fuel Strainer	220-1	220
Fuel Filter	221-1	221
Fuel Injectors	222-1	222
Oil Filter	223-1	223
Oil Cooler	224-1	224
Fresh Water Pump	225-1	225
Water Connections	226-1	226
Water Manifold	227-1	227
Thermostat and Housing	228-1	228
Overspeed and Governor	229-1	229
Tachometer Drive	230-1	230
Crankshaft Pulley and Damper	231-1	231
Weight Cover	232-1	232
Engine Lift Brackets	233-1	233
Exhaust Manifold	234-1	234
Rocker Arm Cover	235-1	235
Injector Controls	236-1	236
Oil Pan and Dipstick	237-1	237
Cylinder Head	238-1	238
Valve Operating, Mechanism	239-1	239
Exhaust Valve Arrangement	240-1	240
Camshaft and Gear Train	241-1	241
Idle Gear Hole Spacer Assembly	242-1	242
Idle Gear	243-1	243
Flywheel and Housing	244-1	244
Oil Pressure Regulator	245-1	245
Oil Pump	246-1	246
Breather Tube	247-1	247
Oil Distribution System	248-1	248
Pistons, Connecting Rods and Liners	249-1	249
Crankshaft and Bearings	250-1	250
Cylinder Block	251-1	251
Anchor Winch Engine Pressure Switches	252-1	252
Instrument Panel and Tachometer	253-1	253
Anchor A-Frame Fairleader	254-1	254
Anchor A-Frame and Cables	255-1	255
Wire Rope Cutter	256-1	256
Group 06 Mast		
Mast Installation	257-1	257
Group 07 Ships Hydraulic System		
Central Hydraulic Piping	258-1	258
Hydraulic Power Unit	259-1	259
Hydraulic Pump Motor	260-1	260
Hydraulic Pump	261-1	261
Motor Controller	262-1	262
Motor Starter	263-1	263
Two Position Element Control Station	264-1	264
Directional Control Valve	265-1	265
Stern Gate Hydraulic Cylinder	266-1	266
Mast Hydraulic Cylinder	267-1	267

	Page	Illus/ Figure
Directional Control Valve	268-1	268
A-Frame Hydraulic Winch	269-1	269
Group 08 Steering System		
Hydraulic Cub Pump Unit	270-1	270
Brake Valve	271-1	271
Directional Control Valve	272-1	272
Hydraulic Pump	273-1	273
Pump Motor and Coupling	274-1	274
Motor Controller	275-1	275
Steering Hydraulic Cylinder	276-1	276
Main Rudder Stock Arrangement	277-1	277
Main Rudder Linkage	278-1	278
Flanking Rudder Stock Arrangement	279-1	279
Flanking Rudder Linkage	280-1	280
Flanking Rudder Limit Switch	281-1	281
Main Rudder Angle and Repeat Back Transmitter	282-1	282
Rudder Angle Indicator	283-1	283
Heading Selector	284-1	284
Steering Control Gyropilot Computer	285-1	285
Steering Control Panel	286-1	286
Remote Magnetic Heading System	287-1	287
Emergency Steering Arrangement	288-1	288
Group 09 Pump Set		
Fire Pump	289-1	289
Contactors	290-1	290
Bilge Pump	291-1	291
Bilge Pump Drive Arrangement	292-1	292
Bilge Pump Clutch	293-1	293
Lube Oil Pump	294-1	294
Motor Controller	295-1	295
Starter	296-1	296
Fresh Water Pump	297-1	297
Air Conditioning Water Circulation Pump	298-1	298
Pump Motor	299-1	299
Diesel Oil Cooling Pump	300-1	300
Pump Motor	301-1	301
Sewage Pump	302-1	302
Pump Motor	303-1	303
Sewage Pump and Air Pump Controller	304-1	304
Remote Pushbutton Station	305-1	305
Macerator/Transfer Pump	306-1	306
Sewage Air Pump	307-1	307
Lube Oil Transfer Pump	308-1	308
Portable Fire Pump	309-1	309
Portable Fire Pump - Starter Assembly	310-1	310
Portable Fire Pump - Carburetor Assembly	311-1	311
Portable Fire Pump - Carburetor of Linkage, Control Panel and Manifold	312-1	312
Portable Fire Pump - Fuel Tank Assembly	313-1	313
Portable Fire Pump - Magneto Assembly	314-1	314
Portable Fire Pump - Power Head and Receiver Assembly	315-1315	
Portable Fire Pump - Crankshaft and Piston Assembly	316-1	316
Portable Fire Pump - Frame and Corners Assembly	317-1	317

	Page	Illus/ Figure
	Portable Fire Pump - Foot Valve Assembly 318-1	318
	Portable Fire Pump - Pressure Regulator and Operating Cylinder 319-1	319
	Portable Fire Pump - Pump and Water Outlet Valve 320-1	320
	Portable Fire Pump - Priming Pump and Gear Housing 321-1	321
Group 010	Sewage System	
	Urinal 322-1	322
	Commode 323-1	323
	Flush Valve 324-1	324
Group 011	Heating, Ventilation and Air Conditioning System	
	Recirculating Fan 325-1	325
	Exhaust Fan, Galley/Washroom Access Space 326-1	326
	Exhaust Fan, Air Conditioning Machinery and Spares 327-1	327
	Exhaust Fan, Anchor Winch and Bow Ramp Winch 328-1	328
	Centrifugal Fan Motor 329-1	329
	Fan Motor, Engine Room Fan 330-1	330
	Fan Motor, Engine Room Fan 331-1	331
	Fan Motor, Machine Room 332-1	332
	Fan Motor, Anchor Winch Room 333-1	333
	Starter 334-1	334
	HVAC Ducting 335-1	335
	Compressor Unit Assembly 336-1	336
	Freon Compressor 337-1	337
	Condenser and Receiver 338-1	338
	Heat Interchanger and Liquid Indicator 339-1	339
	Strainer 340-1	340
	Drier Assembly 341-1	341
	Gage Board 342-1	342
	Thermostat 343-1	343
	Thermometers 344-1	344
	Thermal Valve 345-1	345
Group 012	Commissary Space Equipment	
	Sink Heater 346-1	346
	Toaster 347-1	347
	Drinking Fountain 348-1	348
	Milk Dispenser 349-1	349
	Coffee Maker 350-1	350
	Washer/Dryer Exterior 351-1	351
	Washer/Dryer Drum Heater 352-1	352
	Washer/Dryer Blower 353-1	353
	Washer/Dryer Tubs, Water Valve and Lid Switch 354-1	354
	Washer/Dryer Drive System Pump 355-1	355
	Washer/Dryer Transmission, Water Seal and Lubricating Bearing 356-1	356
	Refrigerator- Freezer 357-1	357
	Electric Range 358-1	358
Group 013	Washroom and Water Closet Fixture	
	Washroom Equipment 359-1	359
Group 014	Firefighting System	
	Firefighting Components 360-1	360
	Halon Control Panel 361-1	361
	Pneumatic Heat Detector 362-1	362
	Cylinder Assembly, 1301, 40 Pound 363-1	363

	Page	Illus/ Figure
	Cylinder Assembly, 1301, 150 Pound	364-1 364
Group 015	Halon System Piping and Wiring (Flammable Liquids Store Room)	365-1 365
	Interior Communication	
	Alarm Switchboard	366-1 366
	Two Line Alarm Panel	367-1 367
	Thermostat Switch and Magazine Alarm	368-1 368
	Call System Major Components	369-1 369
	Anchor Windlass Horn, Navigation Horn and Switch	370-1 370
	Entertainment Amplifier	371-1 371
	Amplified Speaker	372-1 372
	Reproducer	373-1 373
	Sound Powered Telephone Handset	374-1 374
	Chest Headset, Hook and Locker	375-1 375
	Jackbox and Plug	376-1 376
	Public Address with Battery	377-1 377
	External Battery Cable Assembly	378-1 378
	Loudhailer Assembly	379-1 379
	Amplifier Assembly	380-1 380
	Tachometer	381-1 381
	Voice Tube	382-1 382
Group 016	Electronic and Navigation System	
	VHF Antenna	383-1 383
	24 Volt Distribution Panel	384-1 384
Group 017	Oil-Water Separator	
	Oil-Water Separator	385-1 385
	Solenoid Valve	386-1 386
	Solenoid Valve	387-1 387
	Manual Ball Valve	388-1 388
	Separator Subassembly	389-1 389
	Manual Bail Valve.....	390-1 390
	Pump-Motor Assembly	391-1 391
	Manual Ball Valve	392-1 392
	Pump-Motor	393-1 393
	Central Control Panel Assembly	394-1 394
Group 018	Piping System	
	Pipe Hangars	395-1 395
	Fire, Ballast and Bilge Piping (Fire)	396-1 396
	Gage Piping	397-1 397
	Wye Strainer	398-1 398
	Diesel Engine Cooling System	399-1 399
	Hull Coolers	400-1 400
	Lube Oil Piping	401-1 401
	Lube Oil Tank	402-1 402
	Reach Rods - Diesel Oil Shutoff Valve	403-1 403
	Diesel Oil Piping	404-1 404
	Air Conditioning Cooling Piping	405-1 405
	Diesel Oil Cooling Piping	406-1 406
	Shaft Seal Tank	407-1 407
	Fuel Filter/Separator Piping	408-1 408
	Fuel Filter/Separator	409-1 409
	NBC Washdown System	410-1 410
	Exhaust System	411-1 411

	Page	Illus/ Figure
	Sewage Tank and Fittings	412-1 412
	Sewage Tank Discharge Piping	413-1 413
	Fresh and Flush Water Piping	414-1 414
	Towing Bridle and Access Plate for Forward Ballast Tank	415-1 415
Group 019	Tanks and Voids	
	Tank Level Indication Receiver	416-1 416
	Transmitter	417-1 417
	Cable Assembly	418-1 418
	Bracket Assembly	419-1 419
	Penetration Assembly	420-1 420
	Water Heater	421-1 421
	Deck and Sanitary Drains	422-1 422
	Vents and Sounding Tubes	423-1 423
Group 020	Hull and Outfit	
	Furniture - Galley and Mess Room	424-1 424
	Furniture - Pilot House and Deck House	425-1 425
	Furniture - Crew Berthing Space	426-1 426
	Furniture - Officer's Stateroom	427-1 427
	Stanchions and Railings	428-1 428
	Portable Air Compressor	429-1 429
	Air Compressor Assembly	430-1 430
	Lashing Gear	431-1 431
	Doors	432-1 432
	Hatches	433-1 433
	Scuttles	434-1 434
	Manholes	435-1 435
	Windows and Airports	436-1 436
	Hi-Intensity Portable Light	437-1 437
	Portable Battery Charger	438-1 438
	Window Wiper Assembly	439-1 439
	Window Wiper Motor	440-1 440
	Window Wiper Control	441-1 441
	Window Wiper Assembly	442-1 442
	Window Wiper Motor	443-1 443
	Window Wiper Control	444-1 444
	Navigation Light - Port	445-1 445
	Navigation Light- Starboard	446-1 446
	Navigation Light - Towing	447-1 447
	Navigation Light- Masthead	448-1 448
	Navigation Light - Stern Clear	449-1 449
	Signal Light - Task	450-1 450
	Navigation Light - Anchor and Boom	451-1 451
	Signal Light- Man Overboard	452-1 452
	Navigation Light- Blinker	453-1 453
	Wake Light	454-1 454
	Searchlight Mounting and Yoke Assembly	455-1 455
	Searchlight Hood Assembly	456-1 456
	Searchlight Shutter Assembly	457-1 457
	Searchlight Drum Assembly	458-1 458
	Corrosion Prevention Anodes	459-1 459
	Air Horn Piping	460-1 460
	Air Horn Assembly	461-1 461
	Whistle Valve Assembly	462-1 462

	Page	Illus/ Figure
Air Strainer Assembly	463-1	463
Air Compressor Unit	464-1	464
Air Compressor	465-1	465
Section III. SPECIAL TOOLS LIST		
Special Tools List	466-1	466
Section IV. CROSS REFERENCE INDEXES		
National Stock Number Index	I-1	
Part Number index	I-38	
Figure and Item Number Index	I-257	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Landing Craft Utility, LCU 1667 through 1670. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items are shown in the associated illustration(s) /figure(s).

 
b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL(as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

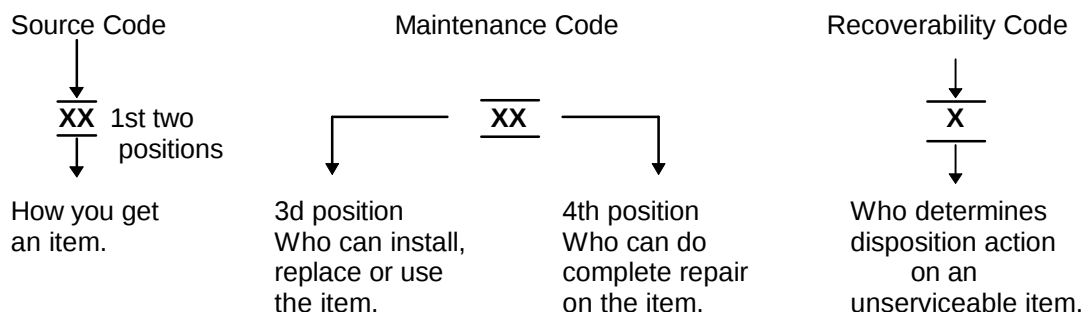

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NON to requested/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
MO - (Made at org/AVUM Level) MP - (Made at DS/IAVUM Level) MH - (Made at GS Level) ML - (Made at Specialized Repair Activity (SRA)) MD - (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO - (Assembled by org/AVUM Level) AF - (Assembled by DS/AVIM Level) AH - (Assembled by GS Category) AL - (Assembled by SRA) AD - (Assembled by Depot)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA - Do not requisition "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.).	
XB - If an "XB" item is not available from salvage, order it using the CAGEC and part number given.	
XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by Reciprocating Compressor manufacturer's part number.	
XD - Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given if no NSN is available.	

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) Maintenance Code. Maintenance codes tell you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance.

Code	Application/Explanation
C	Crew or operator maintenance done with unit or aviation unit maintenance.
O	Unit or aviation unit category can remove, replace, and use the item.
F	Direct support or aviation intermediate level can remove, replace, and use the item.
H	General support level can remove, replace, and use the item.
L	Specialized repair activity can remove, replace, and use the item.
D	Depot level can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions.) NOTE: Some limited repair may be done on the item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes. This position will contain one of the following maintenance codes.

Code	Application/Explanation
O	Unit or (aviation unit) is the lowest level that can do complete repair of the item.
F	Direct support or aviation intermediate is the lowest level that can do complete repair of the item.
H	General Support is the lowest level that can do complete repair of the item.
L	Specialized repair activity is the lowest level that can do complete repair of the item.
D	Depot is the lowest level that can do complete repair of the item.
Z	Nonreparable. No repair is authorized.
B	No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item). However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

(3) Recoverability Code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

**Recoverability
Codes**
Application/Explanation

- Z - Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in 3d position of SMR Code.
- O - Reparable item. When not economically reparable, condemn and dispose of the item unit or aviation unit level
- F - Reparable item. When uneconomically reparable, condemn and dispose of the item at the direct support or aviation intermediate level
- H - Reparable item. When uneconomically reparable, condemn and dispose of the item at the general support level.
- D - Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal of item not authorized below depot level.
- L - Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
- A - Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. CAGEC (Column (3)). The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

d. PART NUMBER (Column (4)). Indicates the primary number used by the manufacturer, (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NON to requisition an item, the item you receive may have a different part number from the part ordered.

e. DESCRIPTION AND USABLE ON CODE (UOC) (Column (5)). This column includes the following information:

- (1) The Federal item name and, when required, a minimum description to identify the item.
- (2) The physical security classification of the item is indicated by the parenthetical entry, e.g., PhySec C1-Confidential, PhySec C1 (S)-Secret, PhySec C1 (T)-Top Secret.
- (3) Items that are included in kits and sets are listed below the name of the kit or set.
- (4) Spare/repair parts that make up an assembled item are listed immediately following the assembled item line entry.
- (5) Part numbers for bulk materials are referenced in this column in the line item entry for the item to be manufactured/fabricated.
- (6) When the item is not used with all serial numbers of the same model, the effective serial numbers are shown on the last line(s) of the description (before UOC).
- (7) The usable on code, when applicable (see paragraph 5, Special Information).

(8) In the Special Tools List section, the basis of issue (BOI) appears as the last line(s) in the entry for each special tool, special TMDE, and other special support equipment. When density of equipments supported exceeds density spread indicated in the basis of issue, the total authorization is increased proportionately.

(9) The statement "END OF FIGURE" appears just below the last item description in Column 5 for a given figure in both Section II and Section III

(10) The indenture, shown as dots appearing before the repair part, indicates that the item is a repair part of the next higher assembly.

f. QTY (Column (6)). The QTY (quantity per figure column) indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and may vary from application to application.

4. EXPLANATION OF COLUMNS (Section IV).

a. NATIONAL STOCK NUMBER (NSN) INDEX.

(1) STOCK NUMBER column. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN, i.e.

NSN
5305-01-574-1467
NIIN

When using this column to locate an item, ignore the firsts digits of the NSN. However, the complete NSN should be used when ordering items by stock number.

(2) FIG. column. This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III

(3) ITEM column. The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.

b. PART NUMBER INDEX. Part numbers in this index are listed by part number in ascending alphanumeric sequence (i.e., vertical arrangement of letter and number combination which places the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9 and each following letter or digit in like order).

(1) CAGEC column. The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(2) PART NUMBER column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

(3) STOCK NUMBER column. This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and CAGEC columns to the left.

(4) FIG. column. This column lists the number of the figure where the item is identified/located in Sections II and III.

(5) ITEM column. The item number is that number assigned to the item as it appears in the figure referenced in adjacent figure number column.

c. FIGURE AND ITEM NUMBER INDEX.

(1) FIG. column. This column lists the number of the figure where the item is identified/located in Section II and III.

(2) ITEM column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) STOCK NUMBER column. This column lists the NSN for the item.

(4) CAGEC column. The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc. that supplies the item.

(5) PART NUMBER column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

5. SPECIAL INFORMATION.

a. USABLE ON CODE. The usable on code appears in the lower corner of the Description column heading. Usable on codes are shown as "UOC:.." in the Description Column justified left) on the last line applicable item description/nomenclature. Uncoded items are applicable to all models.

b. ASSOCIATED PUBLICATIONS. The publications listed below pertains to the Landing Craft Utility, LOU 1667 through 1670 and its components.

<u>Publication</u>	<u>Short Title</u>
TM 55-1905-219-34P	Landing Craft Utility
TM 55-1905-219-14/1	Landing Craft

NOTE

Associated publications shall not be listed here in combined narrative and RPSTL listings

6. HOW TO LOCATE REPAIR PARTS.

a. When National Stock Number or Part Number is NOT Known.

(1) First. Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) Third. Identify the item on the figure and note the item number.

(4) Fourth. Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) Fifth. Refer to the Part Number Index to find the NSN, if assigned.

b. When National Stock Number or Part Number is Known.

(1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National Stock Number or Part Number. The NSN index is in National Item Identification Number (NIIN) sequence (see c-4a.(1)). The part numbers in the Part Number index are listed in ascending alphanumeric sequence (see paragraph c-4.b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.

(2) Second. After finding the figure and item number, verify that the item is the one you are looking for, then locate the item number in the repair parts list for the figure.

7. ABBREVIATIONS. Abbreviations used in this manual are listed in MIL-STD-12.

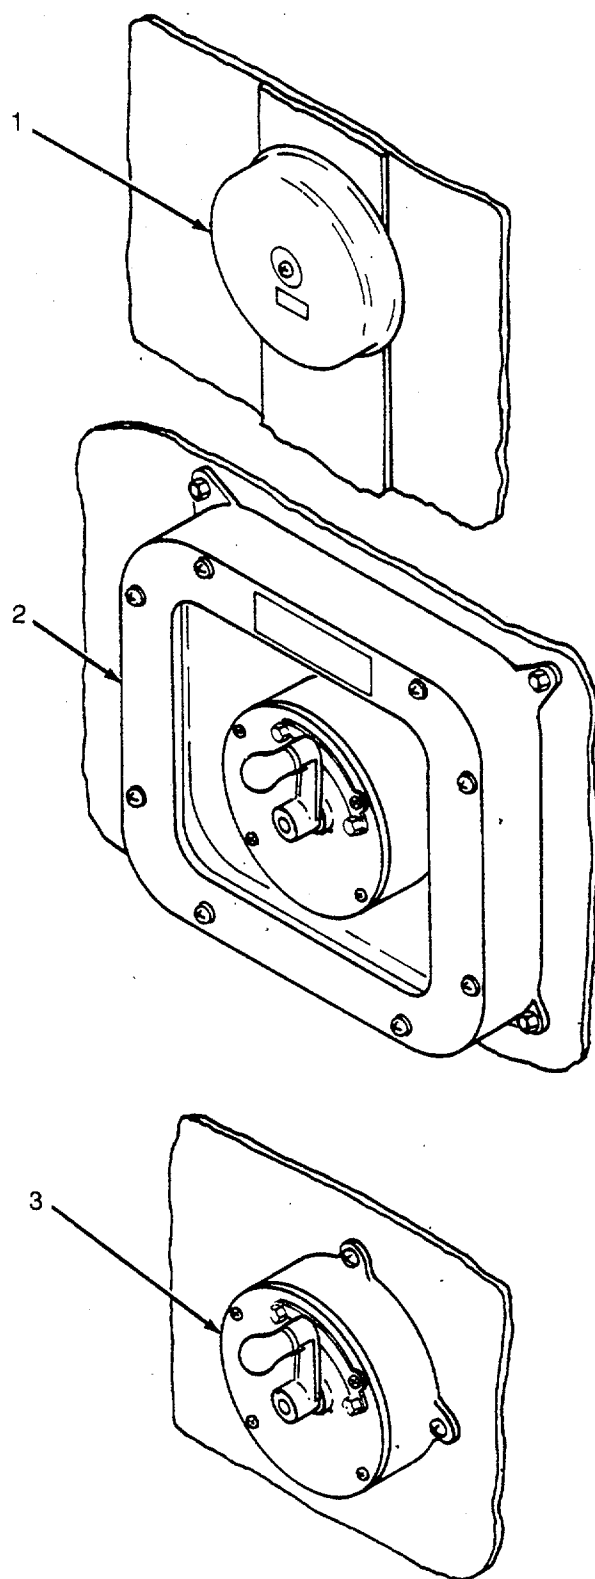 


Figure 360. Fire Fighting Components

SECTION II			TM 55-1905-219-34P-2		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY

GROUP 14 FIREFIGHTING SYSTEM

FIG. 360 FIREFIGHTING COMPONENTS

1	XDCZZ	06859	KB-511-24V	BELL, VIBRATING 10 INCH, W/KB-8016.....	12
2	XDCZZ	28199	60-226-TYPE B	WEATHER PROOF BACK BOX CONTACT MAKER GENERAL ALARM,	1
3	XDCZZ	28199	60-017, TYPE B	ENCLOSED CONTACT MAKER GENERAL, ALARM.....	1

END OF FIGURE

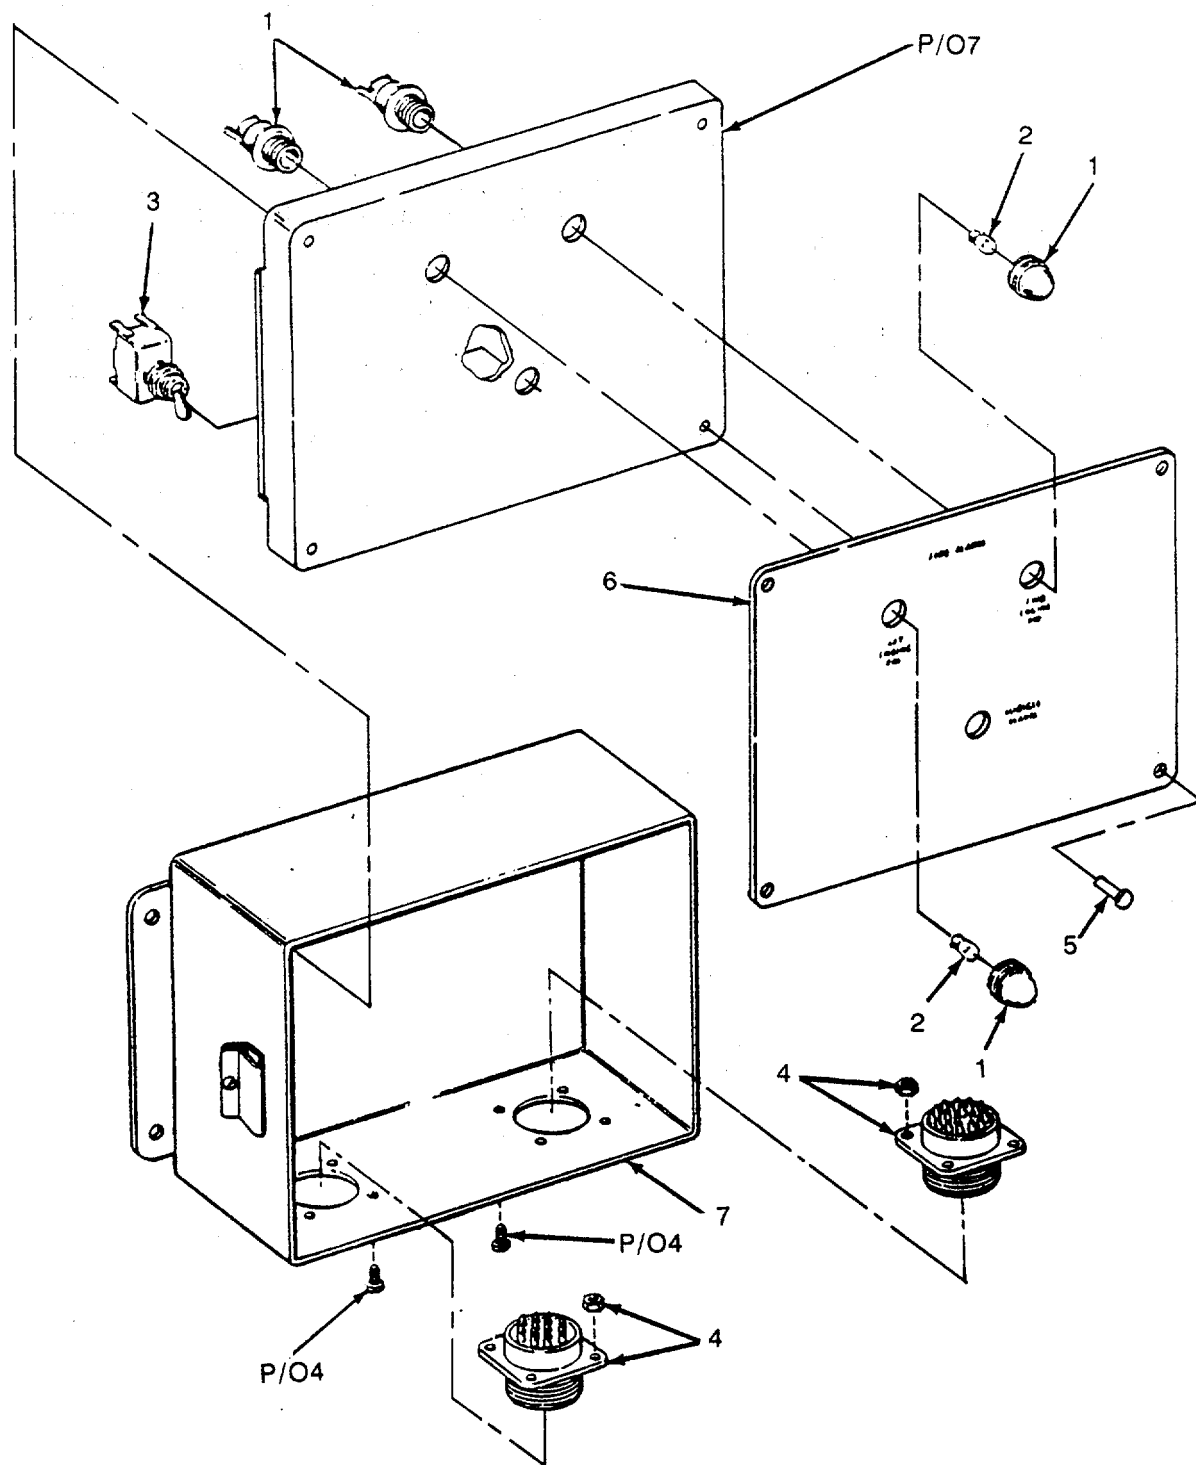 


Figure 361. Halon Control Panel

SECTION II			TM 55-1905-219-34P-2		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY

GROUP 14 FIREFIGHTING SYSTEM

FIG. 361 HALON CONTROL PANEL

1	PAFZZ	83330	177-8430-0933-50	BASE, INDICATOR LAMP	2
2	PACZZ	71744	376-AS15	LAMP, INCANDESCENT INDICATOR	2
3	PAFZZ	96906	MS3500-22	SWITCH, TOGGLE	1
4	PAFZA	96906	MS3452W20-29P	CONNECTOR, RECEPTACL 29 PIN,	2
				INCLUDES ATTACHING HARDWARE	
5	XDFZZ	96906	MS20600B4W2	RIVET, BLIND	4
6	XDFZZ	97403	13226E8058-58	PLATE, INSTRUCTION .032 THK X 5 7/.....	1
				8IN X 7 7/8IN.....	
7	XDFZZ	11941	11-1082	CONTROL BOX INCLUDES COVER	1

END OF FIGURE

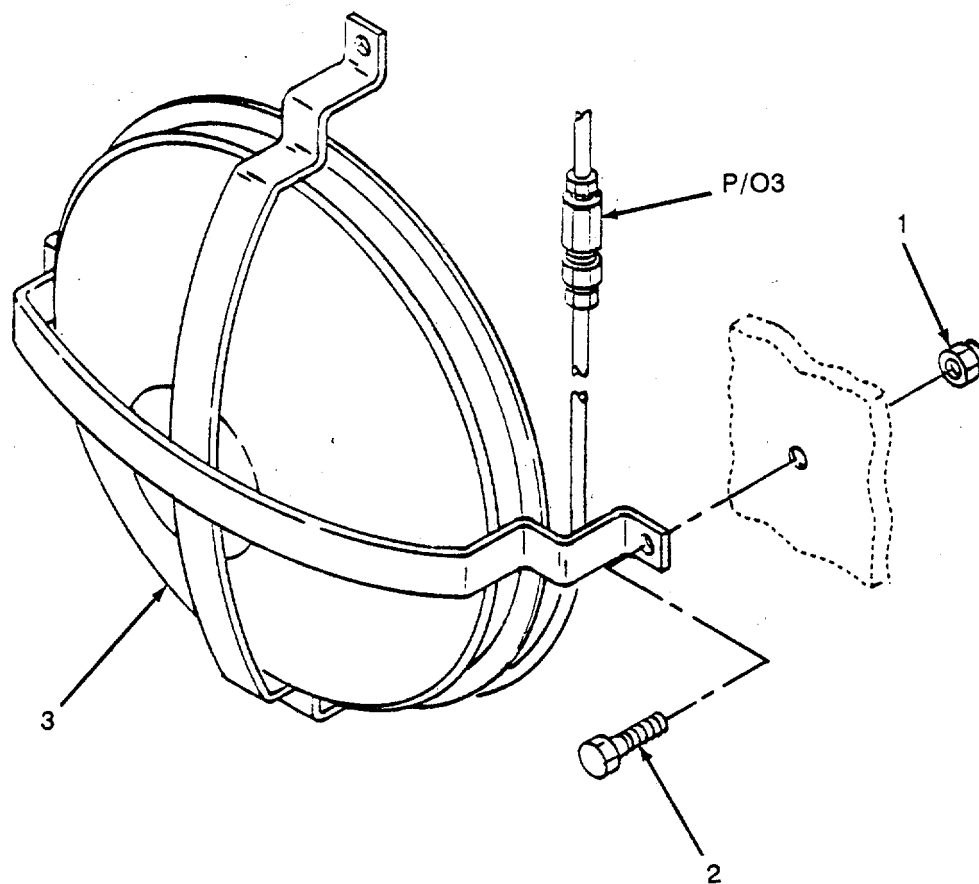 


Figure 362. Pneumatic Heat Detector

SECTION II			TM 55-1905-219-34P-2		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY

GROUP 14 FIREFIGHTING SYSTEM

FIG. 362 PNEUMATIC HEAT DETECTOR

1	XDFZZ	96906	MS51922-1	NUT, SELF-LOCKING, HE HEX, 1/4-20 UNC- 2B, STL, CD PL.....	20
2	XDFZZ	96906	MS90725-6	SCRE'-, CAP, HEXAGON H STL, CD PL, 1/4- 20 UNC-2A X 3/4IN L	20
3	PACZZ	62142	841241	ACTUATOR, AUTOMATIC PNEUMATIC HEAT..... DETECTOR	5

END OF FIGURE

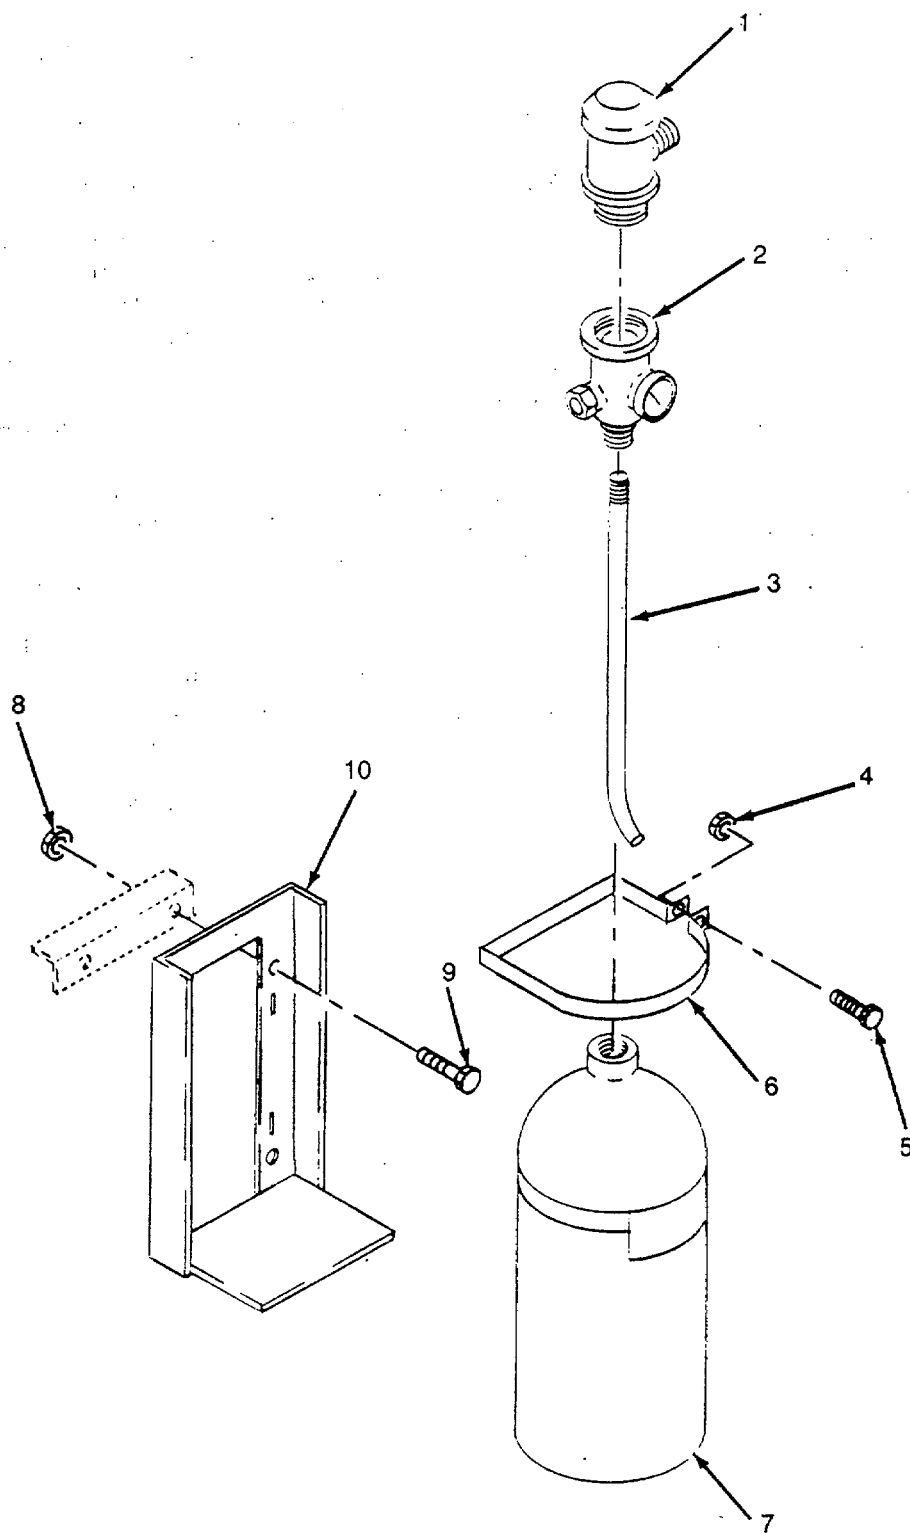 


Figure 363. Cylinder Assembly, 1301, 40 Pound