
**UNIT MAINTENANCE
DIRECT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST)
FOR**

CARRIER, PERSONNEL, FULL TRACKED, ARMORED
M113A2 (2350-01-068-4077)

CARRIER, COMMAND POST, LIGHT TRACKED
M577A2 (2350-01-068-4089)

CARRIER, MORTAR, 107-MM, M30; SELF PROPELLED
M106A2, (2350-01-069-6931)

CARRIER, MORTAR, 81-MM, M29A1; SELF PROPELLED
M125A2, (2350-01-068-4087)

CHASSIS, GUN, ANTI-AIRCRAFT, ARTILLERY
M741A1, (2350-01-099-8929)

CARRIER, SMOKE GENERATOR, FULL TRACKED
M1059, (2350-01-203-0188)

COMBAT VEHICLE, ANTI-TANK, IMPROVED TOW
VEHICLE M901A1 (2350-01-103-5641)

CARRIER, MORTAR, 120MM, M121; SELF PROPELLED
M1064 (2350-01-338-3116)

CARRIER. STANDARDIZED INTEGRATED COMMAND
POST SYSTEM M1068 (2350-01-354-5657)

DISTRIBUTION STATEMENT A: Approved for public release; Distribution is unlimited.

***This manual supersedes TM 9-2350-261-24P, dated 25 November 1995**

HEADQUARTERS, DEPARTMENT OF THE ARMY

15 APRIL 1998

***TM 9-2350-261-24P**
HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 15 April 1998

UNIT MAINTENANCE
DIRECT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST)
FOR
CARRIER, PERSONNEL, FULL TRACKED, ARMORED
M113A2 (2350-01-068 4077)
CARRIER, COMMAND POST, LIGHT TRACKED
M577A2 (2350-01-068-4089)
CARRIER, MORTAR, 107-MM, M30; SELF PROPELLED
M106A2, (2350-01-069-6931)
CARRIER, MORTAR, 81-MM, M29A1; SELF PROPELLED
M125A2, (2350-01-068-4087)
CHASSIS, GUN, ANTI-AIRCRAFT, ARTILLERY
M741A1, (2350-01-099-8929)
CARRIER, SMOKE GENERATOR, FULL TRACKED
M1059, (2350-01-203-0188)
COMBAT VEHICLE, ANTI-TANK, IMPROVED TOW VEHICLE
M901A1 (2350-01-103-5641)
CARRIER, MORTAR, 120MM, M121; SELF PROPELLED
M1064 (2350-01-338-3116)
CARRIER. STANDARDIZED INTEGRATED COMMAND POST
SYSTEM M1068 (2350-01-354-5657)

Current as of 25 January 1998

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Write a letter or complete and mail a DA2028, Recommended Changes to Publications and Blank Forms, and mail to Commander, US Army Tank-automotive and Armament Command, ATTN: AMSTA-AC-NML, Rock Island, IL 61299.7630. FAX: DSN 793.0726 or Commercial (309) 782-0726. E-Mail amsta-ac-nml@ria-emh2.army.mil. Soldier Support Network: <http://www.ssn.ria.army.mil/larsn.html>. A reply will be provided to you.

DISTRIBUTION STATEMENT A: Approved for public release; Distribution is unlimited.

***This manual supersedes TM 9-235-2350-261-24P, dated 25 November 1995**

TABLE OF CONTENTS

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
SECTION I. INTRODUCTION		
SECTION II. REPAIR PARTS LIST		
GROUP 01 ENGINE		
0100-ENGINE ASSEMBLY	1-1	
Engine and Shipping Container,	1-1	1
Engine Front Mount	2-1	2
0101-CRANKCASE, BLOCK, CYLINDER HEAD	3-1	
Air Box Drain and Related Parts	3-1	3
Cylinder Head Assembly and Lifting Brackets	4-1	4
0103-FLYWHEEL ASSEMBLY	5-1	
Drive Plate, Flywheel and Housing	5-1	5
0105-VALVES, CAMSHAFTS AND TIMING SYSTEM..	6-1	
Rocker Arm Covers..	6-1	6
0106-ENGINE LUBRICATION SYSTEM	7-1	
Engine Air Box Drain.....	7-1	7
Engine Air Box Drain.....	8-1	8
Oil Pan and Oil Gage Assembly	9-1	9
Engine Oil Fitter Mounting and Hoses	10-1	10
Oil Fitter Assembly and Adapter	11-1	11
Engine Oil Filler Neck	12-1	12
GROUP 03 FUEL SYSTEM		
0302-FUEL PUMPS	13-1	
Fuel Pumps	13-1	13
Fuel Pump Assembly and Drive	14-1	14
Fuel Lines and Fittings	15-1	15
0304-AIR CLEANER	16-1	
Air Cleaner Assembly	16-1	16
Air Filter Indicator, Hoses and Fittings	17-1	17
Air Inlet Valve Cover and Cable	18-1	18
Air Inlet Control Valve Assembly	19-1	19
Air Inlet Housing	20-1	20
0306-TANKS, LINES, FITTINGS, HEADERS..	21-1	
Bolt-In Fuel Tank, Filler and Level Gage	21-1	21
Filler Cap Cover Assembly	22-1	22
Bolt-In Fuel Tank Mounting Components	23-1	23
Bolt-In Tank Fuel Lines and Fittings	24-1	24
External Fuel Tanks	25-1	25

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
Forward Fuel Lines and Fittings	26-1	26
Rear Fuel Lines and Fittings	27-1	27
Fuel Tank Filler Neck and Level Gage	28-1	28
Internal Fuel Tank Lines and Fittings	29-1	29
External Fuel Tank Lines and Fittings	30-1	30
Fuel Lines, Guards and Fittings	31-1	31
Fittings, Fuel Lines	32-1	32
Left Tank Fuel Filler Neck and Lines	33-1	33
Right Tank Fuel Filler Neck and Lines	34-1	34
Dual Fuel Tanks and Mounting Hardware	35-1	35
Dual Tanks Cross Over Tubes and Hoses	36-1	36
Dual Tanks Fuel Lines and Fittings	37-1	37
Fuel Bladder Filler Neck and Covers.. ..	38-1	38
Bladder Assembly and Level Gage.. ..	39-1	39
Fuel Lines and Fittings	40-1	40
0309-FUEL FILTERS.. ..	41-1	
Fuel Filter and Strainer Assemblies	41-1	41
Fuel Filter Mounting and Hoses	42-1	42
0311-ENGINE STARTING AIDS	43-1	
Air Box Heater Assembly	43-1	43
Air Box Heater Assembly	44-1	44
Air Pump, Ignition Coil and Related Parts	45-1	45
0312-ACCELERATOR, THOTTLE OR CHOKE CONTROLS	46-1	
Throttle and Fuel Shutoff Control Cables	46-1	46
Accelerator Pedal and Linkage	47-1	47
Throttle Cross Shaft and Linkage	48-1	48
Vertical Cross Shaft and Linkage	49-1	49
 GROUP 04 EXHAUST SYSTEM		
0401-MUFFLER AND PIPES.. ..	50-1	
Muffler and Exhaust Pipes	50-1	50
 GROUP 05 COOLING SYSTEM		
0501-RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER.....	51-1	
Radiator and Expansion Tank	51-1	51
0503-WATER MANIFOLDS, HEADERS, THERMOSTATS AND HOUSING GASKET	52-1	
Radiator Hoses, Tubes and Elbows	52-1	52
Radiator Hoses, Tubes and Elbows	53-1	53
Thermostat, Housing, Lines and Fittings	54-1	54

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
0504-WATER PUMP	55-1	
Coolant Pump Assembly, Idler Pulley and Belt Set..	55-1	55
0505-FAN ASSEMBLY	56-1	
Fan Drive Pulleys and Idlers	56-1	56
Fan Drive Pulley and Belt Set	57-1	57
Vaneaxial Fan Assembly	58-1	58
Cooling Fan Angle Drive	59-1	59
 GROUP 06 ELECTRICAL SYSTEM		
0601-GENERATOR, ALTERNATOR	60-1	
Generator, Mounting and Belt Set(100 AMP)	60-1	60
Generator, Mounting and Belt Set (200 AMP).	61-1	61
0602-GENERATOR, REGULATOR (VOLTAGE)	62-1	
Generator Regulator and Mounting Hardware	62-1	62
0603-STARTING MOTOR	63-1	
Starter and Mounting Hardware	63-1	83
Starter Ground Lead and 200 AMP Generator Lead..	64-1	64
0606-ENGINE SAFETY CONTROLS	65-1	
Suspension Lockout Solenoid	65-1	65
0607-INSTRUMENT OR ENGINE CONTROL PANEL	66-1	
Instrument Panel Assembly..	66-1	66
Instrument Panel Lights and Switches	67-1	67
Instrument Panel Switches and Gages	68-1	68
Instrument Panel Wiring Harnesses	69-1	69
Master Switch Assembly	70-1	70
Master Switch Assembly	71-1	71
Master Switch Assembly	72-1	72
Master Switch Assembly	73-1	73
Warning Light Panel	74-1	74
0608-MISCELLANEOUS ITEMS	75-1	
Distribution Box Assembly for 100 AMP Generator	75-1	75
Distribution Box Components for 100 AMP Generator..	76-1	76
Distribution Box Assembly for 200 AMP Generator	77-1	77
Distribution Box Components for 200 AMP Generator..	78-1	78
Auxiliary Power Unit and Leads	79-1	79
Attaching Hardware for Electrical Components..	80-1	80
Headlight Beam Selector Switch	81-1	81
Stoplight Switch Mounting Hardware	82-1	82
Telepost Mounting Hardware	83-1	83
Power Supply and Mounting Hardware	84-1	84
Taillight Mounting Hardware..	85-1	85

TABLE OF CONTENTS (cont)

		ILLUS
	PAGE	FIGURE
0609-LIGHTS	86-1	
Service and Infrared Headlight Assembly	86-1	86
Stop and Taillight Assembly, Left Side	87-1	87
Stop and Taillight Assembly, Right Side	88-1	88
Blackout Headlight Assembly	89-1	89
Blackout Clearance Light	90-1	90
Dome Light	91-1	91
Dome Light	92-1	92
0610-SENDING UNITS AND WARNING SWITCHES..	93-1	
Engine Sending Units and Warning Switches	93-1	93
Interlock Sensitive Switch..	94-1	94
Ramp Warning Switches and Buzzer..	95-1	95
0611-HORN, SIREN	96-1	
Horn Assembly and Ground Lead	96-1	96
0612-BATTERIES, STORAGE (WET OR DRY)		
Batteries and Battery Box Cover	97-1	97
Batteries and Battery Tray Slides	98-1	98
Battery Tray Assembly	99-1	99
Batteries and Battery Box Cover	100-1	100
Electrical Leads, Battery	101-1	101
0613-HULL OR CHASSIS HARNESS	102-1	
Power Plant Wiring Harness	102-1	102
Power Plant Harness Attaching Parts	103-1	103
Headlight Wiring Harness..	104-1	104
Headlight Harness Attaching Parts	105-1	105
Main Wiring Harness, Forward Section	106-1	106
Main Wiring Harness, Forward Section	107-1	107
Main Wiring Harness, Forward Section	108-1	108
Main Harness Attaching Hardware, Forward Section	109-1	109
Main Vehicular Wiring Harness	110-1	110
Main Harness Attaching Hardware	111-1	111
Radio Harness and Main Harness Attaching Hardware	112-1	112
Main Harness Attaching Hardware..	113-1	113
Main Vehicular Wiring Harness Assembly	114-1	114
Wiring Harness, Branched	115-1	115
Main Harness Attaching Hardware, Left Side	116-1	116
Main Harness Attaching Hardware, Rear..	117-1	117
Main Vehicular Wiring Harness	118-1	118
Main Harness Attaching Hardware, Left Side	119-1	119
Main Harness Attaching Hardware, Left Rear..	120-1	120
Main Harness Attaching Hardware, Right Side	121-1	121
Main Harness and Radio Harness Attaching Hardware	122-1	122
Main Vehicular Wiring Harness	123-1	123
Main Harness Attaching Parts	124-1	124

TABLE OF CONTENTS (cont)

	PAGE	ILLUS FIGURE
Fuel Transmitter Lead	125-1	125
Differential Oil Temperature Lead	126-1	126
Infrared Power Supply Electrical Lead Assembly.....	127-1	127
Trailer Lights Wiring Harness Assembly	128-1	128
Radio Wiring Harness Assembly	129-1	129
Electrical Lead Assembly for CBR and Suspension..	130-1	130
Radiac Wiring Harness Assembly	131-1	131
Instrument Panel/Utility Outlet Electrical Lead Assembly.....	132-1	132
Utility Outlet Electrical Assembly..	133-1	133
Non-NATO Slave Receptacle Assembly	134-1	134
NATO Slave Receptacle Assembly	135-1	135
Master Switch/Dome Light Electrical Lead Assembly	136-1	136
Master Switch/Distribution Box Electrical Lead Assembly	137-1	137
Master Switch/Distribution Box Wiring Harness Assembly	138-1	138
Suspension Lockout Solenoid Wiring Harness Assembly	139-1	139
Suspension Lockout Wiring Harness Assembly	140-1	140
Dome Light Electrical Lead Assembly	141-1	141
Smoke Grenade Wiring Harness	142-1	142
Smoke Grenade Wiring Harness	143-1	143
Smoke Grenade Wiring Harness.....	144-1	144
Attaching Hardware for Smoke Grenade Wiring Harness	145-1	145
Attaching Hardware for Smoke Grenade Wiring Harness	146-1	146
Taillight Wiring Harness Assembly and Attaching Hardware	147-1	147
0616-VENTILATING EQUIPMENT.....	148-1	
Ventilation Fan Assembly and Mounting Hardware	148-1	148
0618-TURRET TERMINAL AND JUNCTION BOXES AND SWITCHES	149-1	
Turret Distribution Box Assembly	149-1	149
Turret Distribution Box Components	150-1	150
0620-TURRET WIRING HARNESS	151-1	
Slip Ring Power Supply Wiring Harness Assembly	151-1	151
GROUP 07 TRANSMISSION		
0705-TRANSMISSION SHIFTING COMPONENTS	152-1	
Transmission Selector and Linkage	152-1	152
Transmission Range Selector Assembly.....	153-1	153
0710-TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	154-1	
Transmission and Shipping Container	154-1	154
Transmission Oil Filler Neck	155-1	155
Oil Pan and Output Flange	156-1	156
0721-COOLERS, PUMPS, MOTORS.....	157-1	
Transmission Oil Cooler Hoses and Fittings	157-1	157
Oil Pumps and Filter..	158-1	158

TABLE OF CONTENTS (cont)

		ILLUS PAGE FIGURE
GROUP 08	TRANSFER AND FINAL DRIVE ASSEMBLIES	
0801-POWER TRANSFER, FINAL DRIVE, PLANETARY OR DROP GEAR BOX ASSEMBLIES	159-1	
Transfer Gearcase Assembly	159-1	159
Transfer Gearcase and Transfer Transmission..	160-1	160
Transfer Transmission..	161-1	161
Final Drive Assembly and Filler Tube	162-1	162
Output Drive Assembly and Final Drive Assembly	163-1	163
Output Drive Assembly and Final Drive Assembly	164-1	164
0802-CLUTCH AND CLUTCH CONTROLS	165-1	
Engine/Transfer Case Quick Disconnect	165-1	165
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY	
0900-PROPELLER SHAFTS	166-1	
Propeller Shafts and Component Parts	166-1	166
GROUP 11	REAR AXLE	
1124-STEERING BRAKES, DIFFERENTIAL AND PLANETARY DRIVE	167-1	
Planetary Drive and Differential Assembly	167-1	167
Differential and Drive	168-1	168
Differential and Drive	169-1	169
Differential Oil Cooler Hoses and Fittings	170-1	170
Differential Oil Filter Assembly and Mounting	171-1	171
Gear Box Assembly	172-1	172
GROUP 13	WHEELS AND TRACKS	
1301-SUSPENSION ASSEMBLY	173-1	
Torsion Bars and Anchors	173-1	173
Road Wheel Support Arm Components	174-1	174
Deleted	175-1	175
1303-TRACK IDLERS AND BRACKETS..	176-1	
Idler Arm Assembly	176-1	176
Deleted	177-1	177
Track Tension Adjuster	178-1	178
Track Tension Adjuster	179-1	179
1304-TRACK DRIVE SPROCKETS	180-1	
Track Drive Sprockets	180-1	180

TABLE OF CONTENTS (cont)

		ILLUS
	PAGE	FIGURE
1305-TRACK ASSEMBLY	181-1	
Track Shoe Assembly	181-1	181
1311-WHEEL ASSEMBLY.....	182-1	
idler Wheels	182-1	182
Road Wheels and Shock Guards	183-1	183
 GROUP 14 STEERING		
1403-STEERING BRAKES	184-1	
Right Hand Steering Control Lever	184-1	184
Left Hand Steering Control Lever..	185-1	185
Lower Steering Linkage..	186-1	186
Upper Steering Linkage..	187-1	187
Pivot Steering Linkage and Cylinders	186-1	188
Steering Brakes, Master Brake Cylinders	189-1	189
Pivot Steer Brake Assembly	190-1	190
Single Disk Brake	191-1	191
Pivot Steer Lines and Fittings	192-1	192
 GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1503-PINTLES AND TOWING ATTACHMENTS	193-1	
Towing Pintle	193-1	193
Towing Eyes	194-1	194
 GROUP 16 SPRINGS AND SHOCK ABSORBERS		
1604-SHOCK ABSORBER EQUIPMENT..	195-1	
Shock Absorber Assembly	195-1	195
 GROUP 18 BODY, CAB, HOOD AND HULL		
1801-BODY, CAB, HOOD AND HULL ASSEMBLIES		
Hull Screw Threaded Inserts	196-1	196
Screw Threaded Special Purpose Inserts	197-1	197
Screw Threaded Special Purpose Inserts	198-1	198
Compartment Heater Mounting Hardware	199-1	199
Engine Coolant Heater Mounting Hardware..	200-1	200
Engine Coolant and Electronic Equipment Mounting Hardware	201-1	201
Engine Access Panel and Mounting Hardware	202-1	202
Deleted	203-1	203
Engine Access Panel and Mounting Hardware	204-1	204
Vehicle Track Cover and Mounting Hardware..	205-1	205
Vehicle Floatation Pods	206-1	206

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
Lifting Eyes, Light Guard and Access Cover..	207-1	207
Hull Access Covers and Plugs	208-1	208
Trim Vane Assembly and Components	209-1	209
Trim Vane Assembly and Components	210-1	210
Trim Vane Extension Control	211-1	211
Trim Vane Release Assembly	212-1	212
External Engine Access Door Assembly	213-1	213
Engine Access Door Components	214-1	214
Air Grille Assembly	215-1	215
Air Grille Components	216-1	216
Deleted	217-1	217
Deleted	218-1	218
Armor Installation	219-1	219
Gun Shield Mounting	220-1	220
Ramp Assembly and Mounting Hardware	221-1	221
Ramp Door and Access Door Assembly	222-1	222
Ramp Door and Access Door Assembly	223-1	223
Rear Access Door Direct Vision Port	224-1	224
Ramp Lock Release Handle and Mounting Hardware	225-1	225
Ramp Lock Release Latch and Mounting Hardware	226-1	226
Ramp Lock Release Latch and Mounting Hardware	227-1	227
Ramp Lock Release Handle and Mounting Hardware	228-1	228
Ramp Lock Release Latch and Mounting Hardware..	229-1	229
Cargo Hatch Cover Assembly	230-1	230
Cargo Hatch Components	231-1	231
Cargo Hatch Cover Hinges and Latches	232-1	232
Cargo Hatch Covers and Hinges	233-1	233
Hatch Cover External Locking Hardware	234-1	234
Hatch Cover Internal Locking Hardware	235-1	235
Commander's Cupola Assembly	236-1	236
Commander's Cupola Hatch and Cover Assemblies	237-1	237
Commander's Cupola and Cover Latches	238-1	238
Commander's Hatch Machine Gun Mount	239-1	239
Commander's Cupola Handle	240-1	240
Commander's Hatch Cover Assembly	241-1	241
Commander's Hatch Cover Latches	242-1	242
Smoke Grenade Launcher Mounting Hardware	243-1	243
1803-DRIVER'S HATCHES, DRIVER'S PERISCOPES, ETC.....	244-1	
Driver's Hatch Cover Assembly	244-1	244
Driver's Hatch Assembly	245-1	245
Driver's Hatch Assembly	246-1	246
Driver's Hatch Cover Assembly	247-1	247
Driver's Hatch Yoke Support Assembly	248-1	246
Driver's Hatch Periscope Quick Release	249-1	249
Driver's Hatch Latch	250-1	250
Driver's Hatch and Periscope Latches	251-1	251
M26 Periscope Mounting Hardware	252-1	252

TABLE OF CONTENTS (cont)

		ILLUS
	PAGE	FIGURE
1805-FLOORS, SUBFLOORS, AND RELATED COMPONENTS.....	253-1	
Floor Plates and Cushions	253-1	253
Vehicle Interior Floor	254-1	254
Floor Plate Pads	255-1	255
External Vehicle Components	256-1	256
Floor Plates and Cushions	257-1	257
Floor Plates and Cushions	258-1	258
Floor Plates and Cushions	259-1	259
1806-UPHOLSTERY SEATS AND CARPETS	260-1	
Commander's Seat and Post Assembly	260-1	260
Commander's Seat Post Assembly and Mounting Hardware	261-1	261
Commander's Seat	262-1	262
Commander's Jump Seat	263-1	263
Commander's Platform and Footrest	264-1	264
Commander's Platform Assembly	265-1	265
Commander's Platform Components	266-1	266
Commander's Seat	267-1	267
Driver's Seat Installations	268-1	268
Driver's Seat Assembly	269-1	269
Driver's Seat Mount Assembly	270-1	270
Smoke Generator Operator's Seat Assembly and Seat Belt	271-1	271
Smoke Generator Operator's Seat	272-1	272
Personnel Seats and Straps.....	273-1	273
Personnel Seats and Straps.....	274-1	274
Radio Operator's Seat	275-1	275
Personnel Seats and Tables Installation	276-1	276
Personnel Seats and Tables Installation, Right.....	277-1	277
Personnel Seats and Tables Installation, Left	278-1	278
Seat/AMMO Container Assembly	279-1	279
1807-AMMUNITION LOADING DEVICES.....	280-1	
AMMO Feed and Chute Assembly	280-1	280
AMMO Container Assembly	281-1	281
AMMO Container Mounting Hardware	282-1	282
1808-STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES,		
CABLE REELS, HOSE REELS, ETC.....	283-1	
Periscope Stowage Box Assembly.....	283-1	283
Stowage Straps and Mounting Hardware	284-1	284
Stowage Straps and Mounting Hardware	285-1	285
Stowage Straps and Related Hardware	286-1	286
Fire Extinguisher Mount and Related Hardware	287-1	287
External Stowage Straps and Related Hardware.....	288-1	288
Stowage Mortar Cover Assembly	289-1	289
Right Side Stowage Straps and Mounting Hardware	290-1	290
Right Side Stowage Straps and Mounting Hardware	291-1	291
Right Side Stowage AMMO Racks and Mounting Hardware	292-1	292
Racks Ammunition	293-1	293

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
Rack, Ammunition	294-1	294
Rack Assembly, Rifle	295-1	295
Left Side Stowage Straps and Mounting Hardware	296-1	296
External Stowage Straps, Pads and Mounting Hardware	297-1	297
External Stowage Mortar Base..	298-1	298
Stowage Straps and Mounting Hardware..	299-1	299
Left Side, Internal Stowage, Racks and Hardware..	300-1	300
Left Side, Internal Stowage, Racks and Hardware..	301-1	301
Right Side, Internal Stowage, Racks and Hardware	302-1	302
Right Side, Internal Stowage, Racks and Hardware	303-1	303
Bracket Mounting, Fire Extinguisher	304-1	304
Internal Stowage Straps, Racks and Hardware	305-1	305
External Stowage Straps, Covers and Mounting Hardware	306-1	306
Internal Stowage Straps, Covers An Mounting Hardware	307-1	307
External Stowage Straps, Guards and Mounting Hardware.	308-1	308
Left Side Stowage Straps and Mounting Hardware	309-1	309
Right Side Stowage Straps and Mounting Hardware..	310-1	310
Stowage Straps, Antenna Guards and Covers	311-1	311
Internal Vehicle Components	312-1	312
Internal Vehicle Brackets and Mounting Hardware	313-1	313
Vehicle Straps and Components	314-1	314
Internal Vehicle Stowage Straps	315-1	315
Internal Vehicle Components	316-1	316
Missile Stowage Racks	317-1	317
Missile Stowage Racks	318-1	318
Launch Tube Components	319-1	319
Tow Tripod Stowage Components	320-1	320
Intervehicle Power Cable	321-1	321
Antenna Mast Mounting Hardware	322-1	322
 GROUP 22 BODY, RUBBER OR PLASTIC ITEMS		
2201--CANVAS, CHASSIS OR HULL AND ACCESSORY ITEMS	323-1	
Grille Curtain Installation	323-1	323
Extension Cover Tent	324-1	324
Extension Cover Mounting Hardware	325-1	325
Extension Cover Mounting Hardware	326-1	326
Extension Cover and Boot Wall Mounting	327-1	327
Blackout Curtain Assembly	328-1	328
2202-ACCESSORY ITEMS	329-1	
Driver's Level Indicator	329-1	329
2205-BILGE PUMPS	330-1	
Forward Bilge Pump, Hoses and Tubes.	330-1	330
Rear Bilge Pump, Hoses and Tubes	331-1	331
Deleted	332-1	332

TABLE OF CONTENTS (cont)

		ILLUS
	PAGE	FIGURE
2207-WINTERIZATION EQUIPMENT	333-1	
Personnel Compartment Heating Unit	333-1	333
Personnel Heater Duct	334-1	334
Personnel Heater Fuel Lines and Fittings	335-1	335
Personnel Heater Kit Wiring Harness..	336-1	336
Heater Control Box Assembly	337-1	337
Personnel Heater Fuel Lines and Fittings	338-1	338
2210-DATA PLATES	339-1	
Data Plates and Markers..	339-1	339
Data Plates and Markers	339A-1	339A
Data Plates and Decals	340-1	340
Data Plates and Decals	341-1	341
Data Plates and Decals	341A-1	341A
Data Plates and Decals	342-1	342
Data Plates and Decals	343-1	343
Data Plates and Decals	344-1	344
Data Plates and Decals	344A-1	344A
Data Plates and Decals	345-1	345
 GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2404-TILT CYLINDERS AND TILT CRANK	346-1	
Ramp Actuator Hydraulic Lines and Fittings	346-1	346
Ramp Actuator Hydraulic Lines and Fittings	347-1	347
2406-STRAINERS, FILTERS, LINES AND FITTINGS	348-1	
Ramp Hydraulic Lines and Fittings..	348-1	348
Ramp Hydraulic Line and Fittings	349-1	349
Ramp Lockout Hydraulic Tank Lines and Fittings	350-1	350
Return Valve, Hydraulic Lines and Fittings	351-1	351
Ramp Control Valve, Lines and Fittings	352-1	352
Suspension Lockout Valve, Lines and Fittings	353-1	353
Suspension Lockout Lines and Fittings	354-1	354
2407-HYDRAULIC CYLINDERS	355-1	
Suspension Lockout Cylinder Assembly	355-1	355
2408-LIQUID TANKS OR RESERVOIRS	356-1	
Hydraulic Tank Assembly	356-1	356
Hydraulic Tank Assembly	357-1	357
Hydraulic Tank Components	356-1	358
 GROUP 26 TOOLS AND TEST EQUIPMENT		
2604-SPECIAL TOOLS	358A-1	
Alternator Accessory Kit..	358A-1	358A

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
Wiring Harness, Accessory Kit	358B-1	358B
Rheostat, Portable	358C-1	358C
 GROUP 29 AUXILIARY GENERATOR, ENGINE AND CONTROLS		
2901-GENERATOR AND ENGINE ASSEMBLY	359-1	
Auxiliary Generator Assembly and Enclosure	359-1	359
Auxiliary Generator Cover Assembly	380-1	360
Auxiliary Generator Fuel Lines and Fittings	361-1	361
 GROUP 33 SPECIAL PURPOSE KITS		
3303-WINTERIZATION KITS	362-1	
Personnel Compartment Heater Kit	362-1	362
Heater Kit Fuel Lines and Fittings	363-1	363
Personnel Compartment Heater Kit	364-1	364
Heater Kit Fuel Lines and Fittings	365-1	365
Personnel Compartment Heater Kit	366-1	366
Heater Kit Ducts	367-1	387
Electronic Equipment Heater Kit	368-1	368
Electronic Heater Kit, Heater Assembly, Pipes and Mounting Hardware	369-1	369
Electronic Heater Kit Control Box and Leads	370-1	370
Electronic Heater Kit Wiring Harness	371-1	371
Electronic and Engine Coolant Fuel Adapter Fit	372-1	372
Engine Coolant Heater Kits	373-1	373
Engine Coolant Heater, Pump, Tubes and Fittings	374-1	374
Engine Coolant Heater Assembly	375-1	375
Engine Coolant Heater Wiring Harness and Attaching Hardware	376-1	376
Engine Coolant Wiring Harness Assembly	377-1	377
Engine Coolant Heater Hoses and Fitting	376-1	378
Engine Coolant Heater Fuel Lines and Fittings	379-1	379
Engine Coolant Heater Battery Box Insulation	380-1	380
Engine Coolant Heater Hoses and Fittings	381-1	381
Engine Coolant Heater Fuel Lines and Fittings	382-1	382
Engine Coolant Heater Battery Box Insulation	383-1	383
Engine Coolant Heater Hoses and Fittings	384-1	384
Engine Coolant Heater Fuel Lines and Fittings	385-1	385
Engine Coolant Heater Battery Box Insulation	386-1	388
Covered Extension Liner	387-1	387
Ramp Non-Skid Winterization Kit	388-1	388
 3307-SPECIAL PURPOSE KITS	389-1	
Capstan Drum and Adapter Kit	389-1	389
Vehicle Anchor Kit	390-1	390
Driver's Windshield Kit	391-1	391
Litter Mount Kit and Litter Kit	392-1	392

TABLE OF CONTENTS (cont)

		ILLUS
	PAGE	FIGURE
Artillery Communication Cable Kit	393-1	393
Cupola Armor Shield Kit	394-1	394
Cargo Hatch Armor Shield Kit	395-1	395
Cargo Weapon Mount, Armor Shield Kit	396-1	396
Directional Signal Light Kit	397-1	397
Directional Signal Light Kit	398-1	398
M8A3 NBC Kit.....	398A-1	398A
M3 Heater Accessory Kit	398B-1	398B
M14 AMB NBC Kit	398C-1	398C
M14 AMB NBC Kit	398D-1	398D
M3 AMB Heater Kit	398E-1	398E
M3 AMB Heater Kit	398F-1	398F
NBC Kit	398G-1	398G
NBC Kit	398H-1	398H
NBC Kit.....	398I-1	398I
M8A3 NBC Kit	398J-1	398J
M3 Heater Accessory Kit	398K-1	398K
M8A3 NBC Kit	398L-1	398L
M3 Heater Accessory Kit	398M-1	398M
M3 Heater Accessory Kit	398N-1	398N
M3 Heater Accessory Kit	398O-1	398O
M8A3 NBC Kit	398P-1	398P
NBC Power Cable Assembly	398Q-1	398Q
M13 NBC Kit	398R-1	398R
M13 NBC Kit	398S-1	398S
M13 NBC Kit	398T-1	398T
Air Purifier/Precleaner D5-19-1772/D5-19-2353	398U-1	398U
Turn Signal Control Wiring Harness	399-1	399
Rear Lead Assembly to Turn Signal Control	400-1	400
Right and Left Taillight Wiring Harness Assembly	401-1	401
Trailer Light Wiring Harness Assembly	402-1	402
Front Turn Signal Assembly	403-1	403
Stoplight/Taillight Assembly	404-1	404
Smoke Generator, Supports and Covers	405-1	405
Smoke Generator Cap Assembly, Hoses and Attaching Hardware	406-1	406
Smoke Generator Wiring Harnesses and Attaching Hardware	407-1	407
Smoke Generator Wiring Harness, Hoses and Attaching Hardware	408-1	408
Smoke Generator Cans and Straps	409-1	409
Ammunition Stowage Rack Adapter Kit	410-1	410
ODS Straps and Covers	410A-1	410A

GROUP 34 ARMAMENT, SIGHTING AND FIRE CONTROL

3401-PRIMARY ARMAMENT.....	411-1	
Ammunition Disposal Cover Components.....	411-1	411

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
GROUP 42 ELECTRICAL EQUIPMENT		
4202-ELECTRICAL CONTROLS (MAIN AND AUXILARY)	412-1	
Patch Panel Box, Roadside Data Box and		
Double V2 Printer Mount Installation	412-1	412
Double V2 Printer Mount Assembly	413-1	413
Roadside Data Box Assembly	414-1	414
Patch Panel Box Assembly	415-1	415
Power Control Enclosure and Power Supply Stowage	416-1	416
Power Control Enclosure, Front Internal View	417-1	417
Power Control Enclosure, Right Side Internal/External Views	418-1	418
Power Control Enclosure Left Side Internal/External Views.. ..	419-1	419
Power Control Enclosure, Faceplate Assembly	420-1	420
Inverter Housing, Tent Interface Panel, Power Entry Box and		
Cable Assembly	421-1	421
Electrical Power and Communication System Attaching Hardware	422-1	422
Power Entry Box Assembly	423-1	423
Tent Interface Box and Panel Assembly	424-1	424
Inverter Housing Assembly	425-1	425
External Communication Box Facsimile Machine Mount, Cable and		
Attaching Hardware	426-1	428
Facsimile Machine Mount Assembly	427-1	427
External Communication Box Assembly	428-1	428
Curbside Data Box, LAN Cable, Blackout Light Adapter Cables and		
Attaching Hardware	429-1	429
Power Distribution Box, AC Light Cord Cable and Attaching Hardware	430-1	430
Power Extension Box, Power Extension Cables and Attaching Hardware	431-1	431
AC/DC Power Boxes and Attaching Hardware	432-1	432
Power Supply Storage Box Assembly	433-1	433
AC/DC Power Boxes Single Point LAN Ground Box and Cable Assembly.....	434-1	434
Single Point LAN Ground Box Assembly	435-1	435
Flourescent Lights and Mounting Hardware.. ..	436-1	436
GROUP 47 GAGES, WEIGHING AND MEASURING DEVICES		
4701-INSTRUMENTS (SPEED AND DISTANCE)	437-1	
Speedometer and Shaft Assembly	437-1	437
Tachometer and Shaft Assembly	438-1	438
Arming/Firing Unit.. ..	439-1	439
GROUP 68 WARNING, SCANNING AND SIGNALING DEVICES AND NAVIGATIONAL INSTRUMENTS		
6809-RADIOTELEPHONE SYSTEM	440-1	
Communication System and Mounting Hardware	440-1	440

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
GROUP 76 FIRE FIGHTING EQUIPMENT COMPONENTS		
7638-PORTABLE FIRE FIGHTING EQUIPMENT (INCLUDE FIRE EXTINGUISHERS).	441-1	
Portable Fire Extinguisher	441-1	441
7639-FIXED FIRE FIGHTING EQUIPMENT (VEHICULAR)	442-1	
Internal Fixed Fire Extinguisher and Tubes	442-1	442
External Fixed Fire Extinguisher Release	443-1	443
GROUP 91 CHEMICAL, BIOLOGICAL AND RADIOLOGICAL (CBR) EQUIPMENT		
9116-CBR ASSOCIATED KITS	444-1	
Deleted	444-1	444
9131-CHEMICAL AGENT ALARMS	445-1	
Chemical Agent Alarm Modification Kit	445-1	445
Chemical Agent Automatic Alarm Kit	446-1	446
Junction Box Assembly	447-1	447
GROUP 94 REPAIR KITS		
9401-REPAIR KITS	KIT-1	
Kit	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501-BULK MATERIAL	BULK-1	
Bulk	BULK-1	BULK
SECTION III. SPECIAL TOOLS LIST		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604-SPECIAL TOOLS	448-1	
Unit Maintenance Tool Kit, Full Tracked	448-1	448
Unit Maintenance Tool Kit, Full Tracked	449-1	449
Direct Support Special Tools	449A-1	449A
General Support Special Tools	450-1	450
Special Tools	450A-1	450A
Deleted	451-1	451

TABLE OF CONTENTS (cont)

		<u>PAGE</u>	<u>ILLUS FIGURE</u>
2606-TEST EQUIPMENT		452-1	
Deleted		452-1	452
Deleted		453-1	453
Deleted		454-1	454
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX.....	I-1	
	PART NUMBER INDEX	I-79	
	FIGURE AND ITEM NUMBER INDEX..	I-243	

**UNIT MAINTENANCE,
DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST)**

Section I. INTRODUCTION

1. SCOPE

This RPSTL lists and authorizes spares and repair parts; special tools; special Test, Measurement and Diagnostic Equipment (TMDE); and other special support equipment required for performance of Unit Maintenance, Direct Support and General Support Maintenance of the M113A2, M577A2, M106A2, M125A2, M741A1, M1059, M901A1, M1064, and M1068 vehicles. It authorizes the requisitioning, issue and disposition of spares, repair parts and special tools as indicated by the Source, Maintenance and Recoverability (SMR) codes.

2. General.

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE and part numbers.

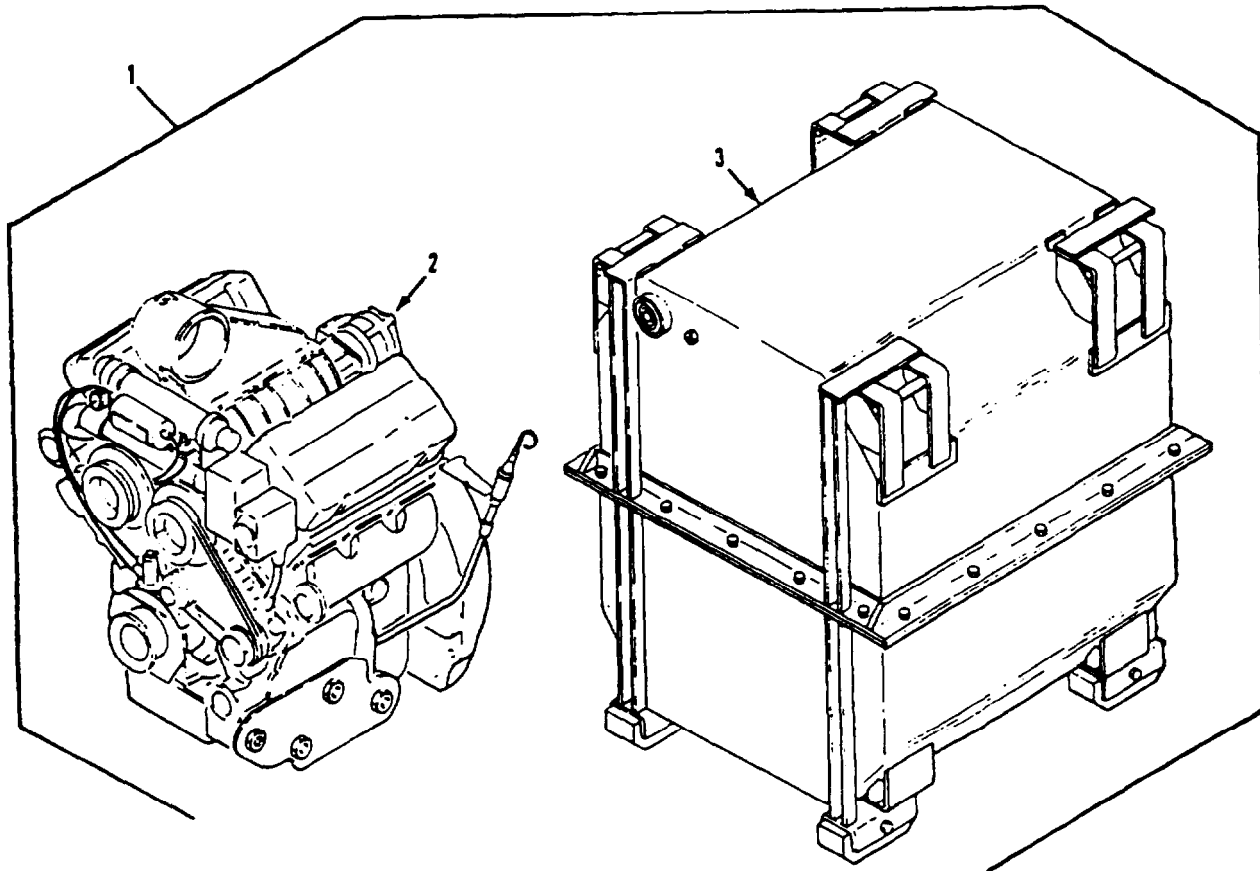 


Figure 1. Engine and Shipping Container

(1) ITEM NUMBER	(2) SMR CODE	(3) CAGE	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 01 ENGINE	
				GROUP 0100 ENGINE ASSEMBLY	
				FIG. 1 ENGINE AND SHIPPING CONTAINER	
1	PAFHD	19207	57K1000	ENGINE, DIESEL	1
2	XAFHZ	19207	8738127	. ENGINE, DIESEL REFER TO TM9-2815-205-34P FOR COMPONENTS	1
3	PAFHH	19207	11678210	. SHIPPING AND STORAG REFER TO TM9-2815-205-34P FOR COMPONENT	1
				END OF FIGURE	

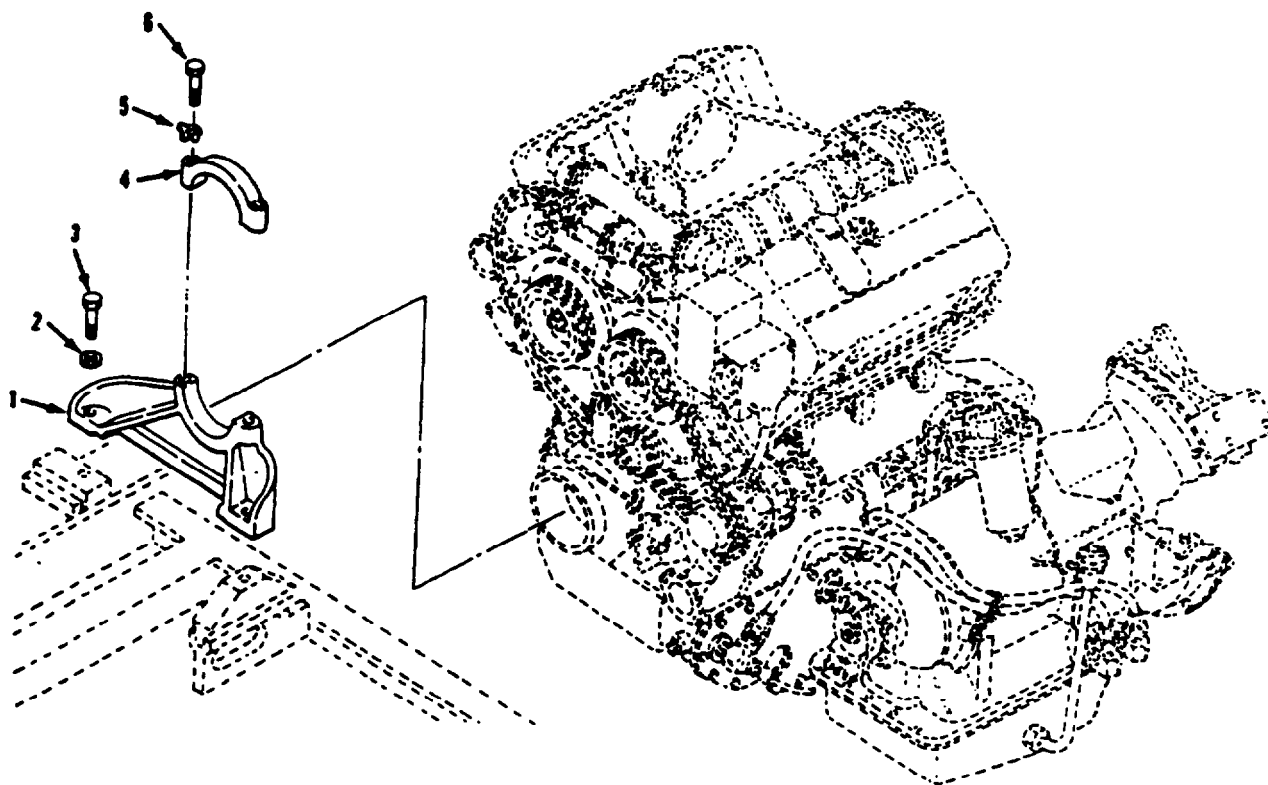 


Figure 2. Engine Front Mount

(1) ITEM NUMBER	(2) SMR CODE	(3) CAGE	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
GROUP 0100 ENGINE ASSEMBLY FIG. 2 ENGINE FRONT MOUNT					
1	PAOZZ	19207	10932827	BASE, ENGINE MOUNTI.	1
2	PAOZZ	19200	10910174-7	WASHER, FLAT	2
3	PAOZZ	96906	MS35763-907	BOLT, SELF-LOCKING..	2
4	PAOZZ	19207	10932826	CAP, ENGINE SUPPORT.	1
5	PAOZZ	19207	10861663	WASHER, KEY	2
6	PAOZZ	96906	MS90725-94	SCREW, CAP, HEXAGON H	2
END OF FIGURE					

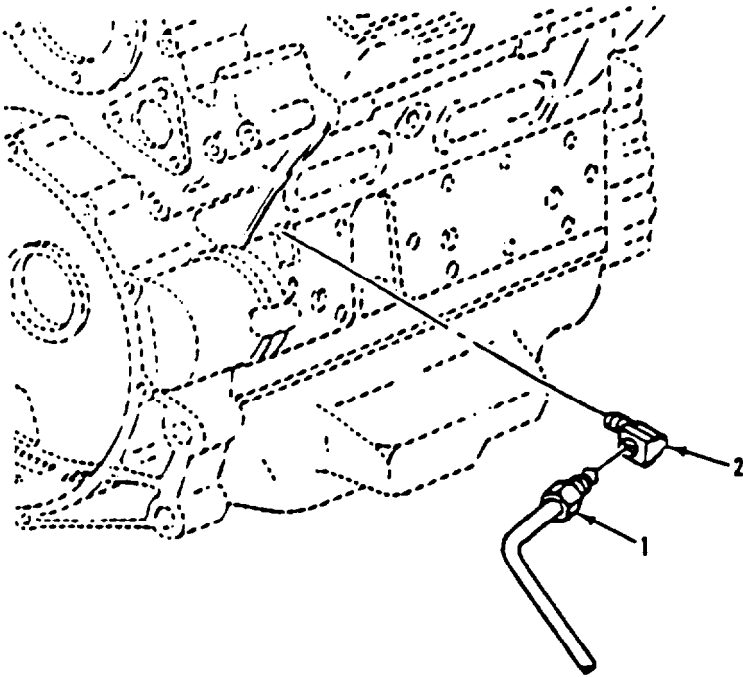 


Figure 3. Air Box Drain and Related Parts

(1) ITEM NUMBER	(2) SMR CODE	(3) CAGE	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD FIG. 3 AIR BOX DRAIN AND RELATED PARTS	
1	PAOZZ	72582	5134195	TUBE ASSEMBLY, METAL	
2	PAOZZ	72582	8925032	ELBOW, PIPE TO TUBE	
END OF FIGURE					

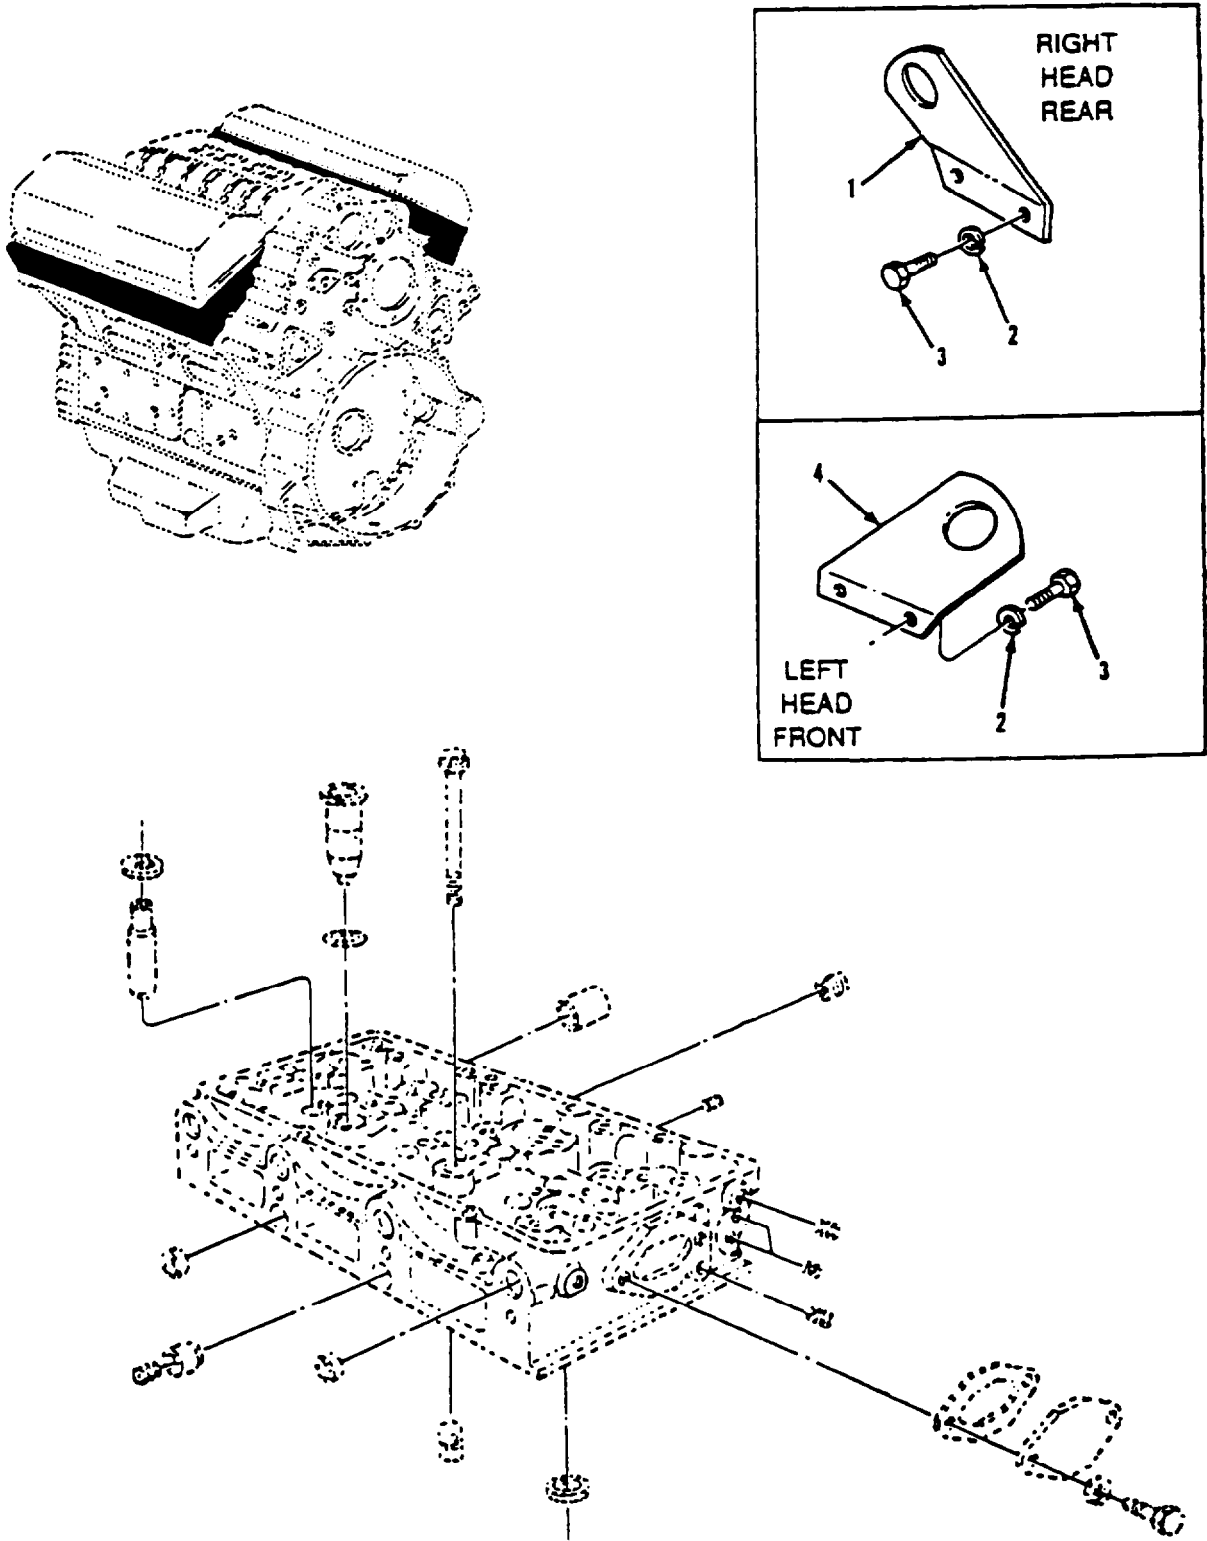 


Figure 4. Cylinder Head Assembly and Lifting Brackets

(1) ITEM NUMBER	(2) SMR CODE	(3) CAGE	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC) GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD FIG. 4 CYLINDER HEAD ASSEMBLY AND LIFTING BRACKETS	(6) QTY
1	PAOZZ	72582	5127949	BRACKET	1
2	PAOZZ	96906	MS35338-46	WASHER, LOCK	8
3	PAOZZ	80204	B1821BH038C100N	SCREW, CAP, HEXAGON H	8
4	PAOZZ	72582	5125488	BRACKET, EYE NONROTA	1

END OF FIGURE