 
 


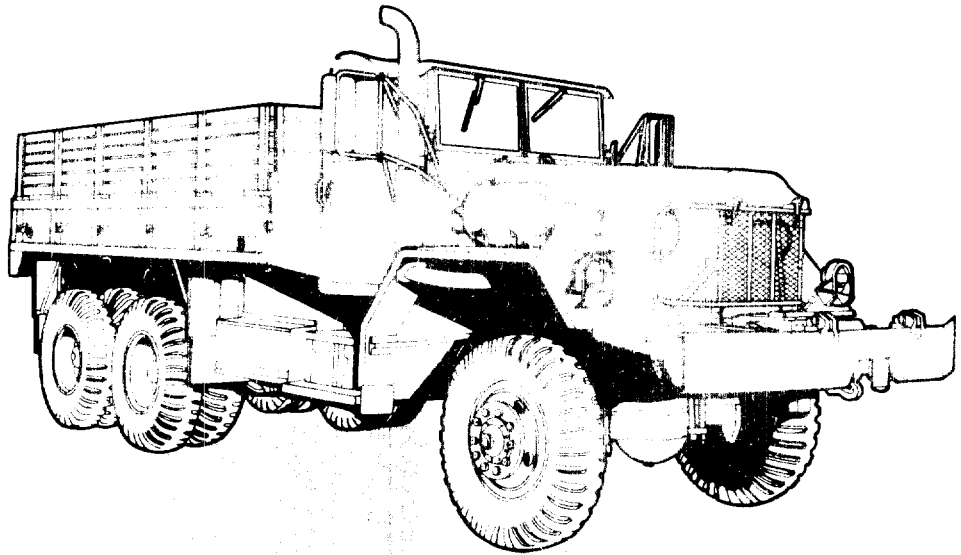


HEADQUARTERS, DEPARTMENT OF THE ARMY
"NOVEMBER 1977"


TA 066958

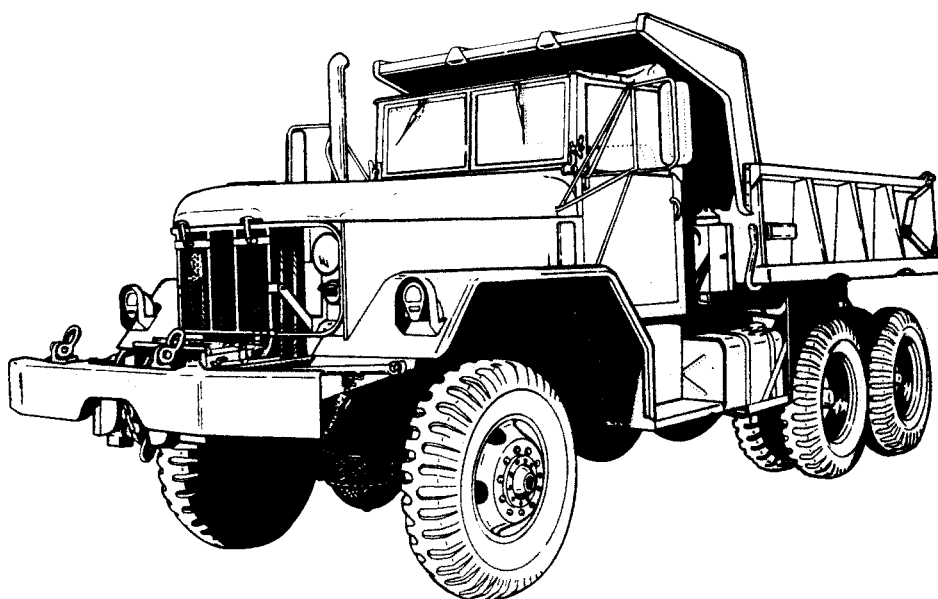

 
Typical 5-Ton, 6x6, Dump Truck.

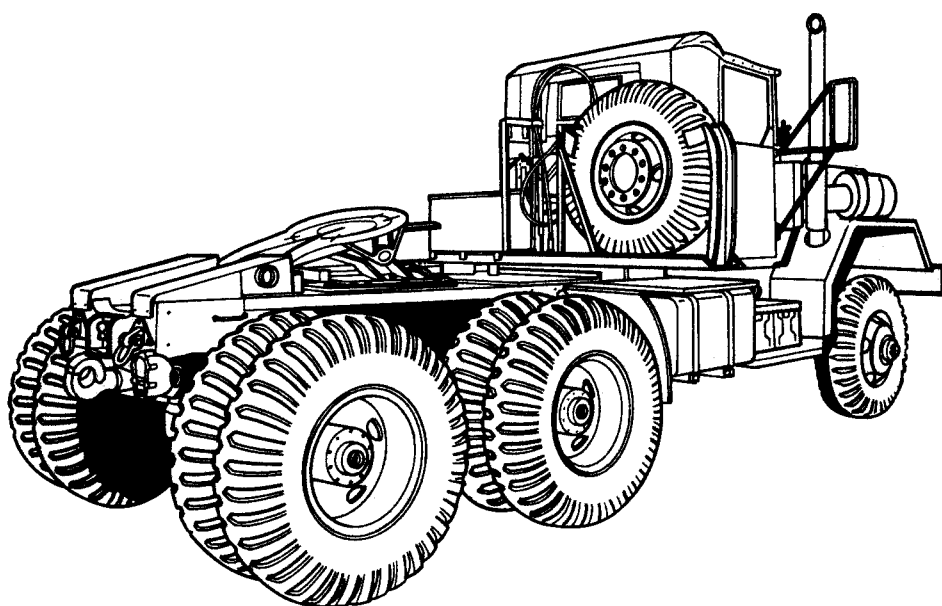


Typical 5-Ton, 6x6, Tractor Truck.

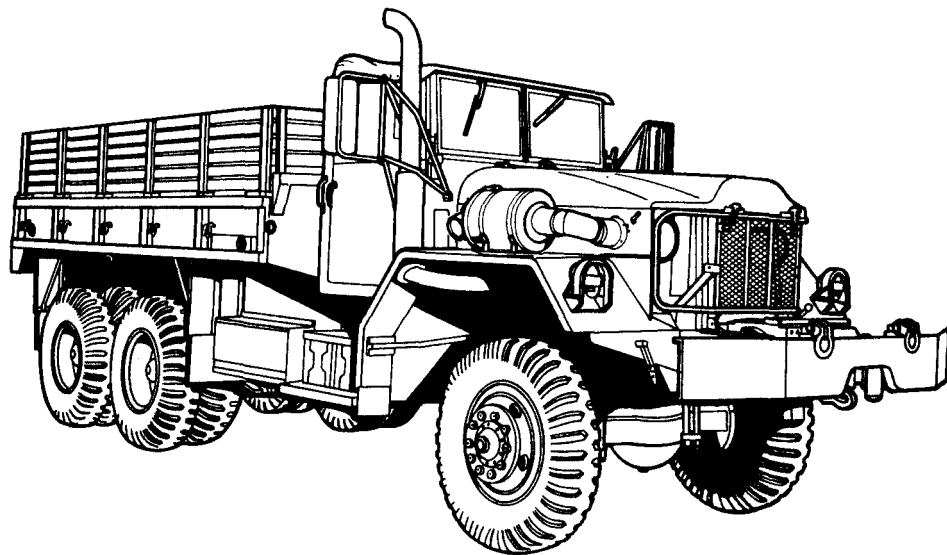 


Typical 5-Ton, 6x6, Cargo Truck.

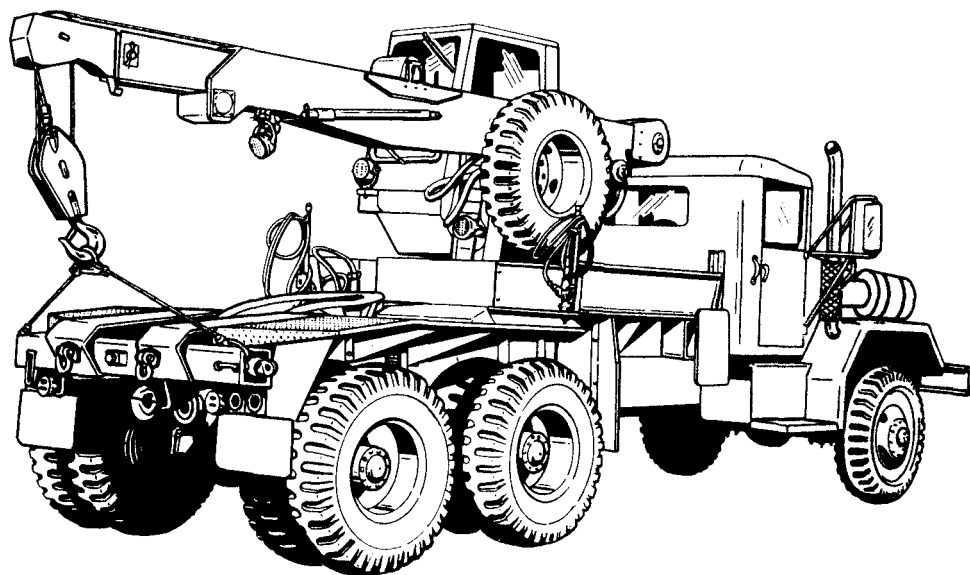 


Typical 5-Ton, 6x6, Tractor Wrecker Truck.

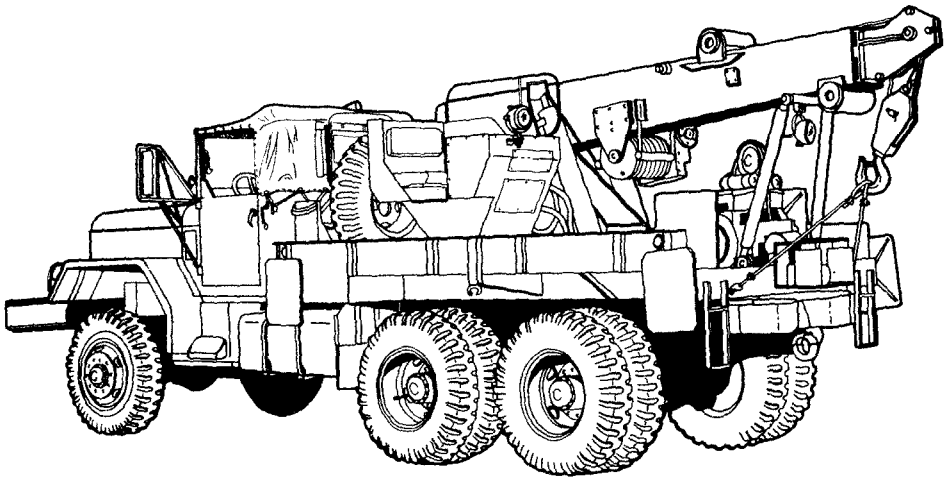 


Typical 5-Ton, 6x6, Medium Wrecker Truck.

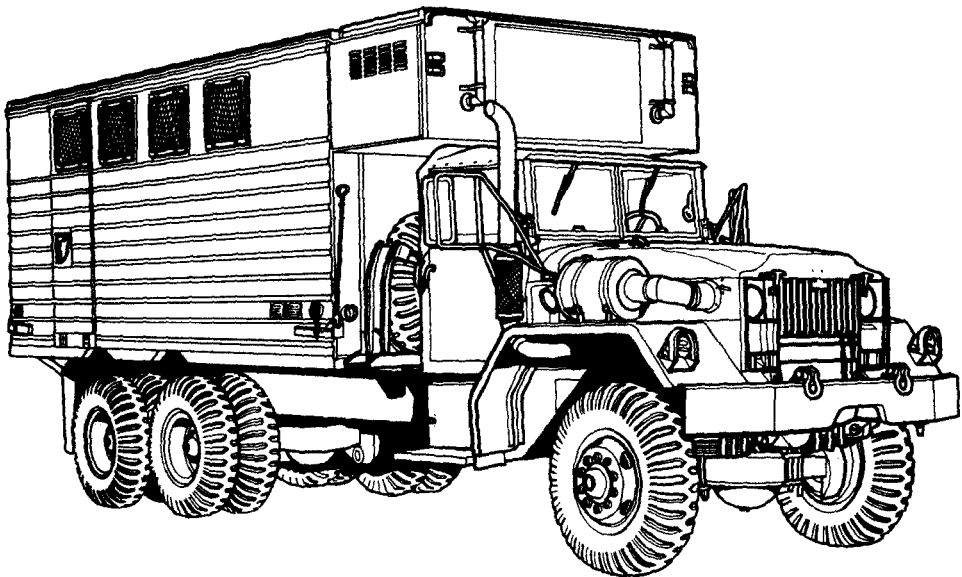 

Typical 5-Ton, 6x6, Expansible Van Truck.

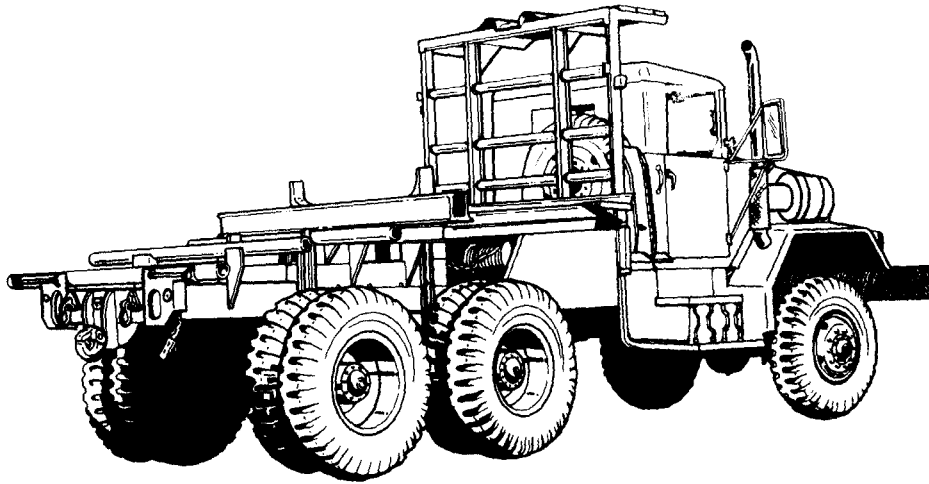 

Typical 5- Ton , 6x6, Bolster Truck.

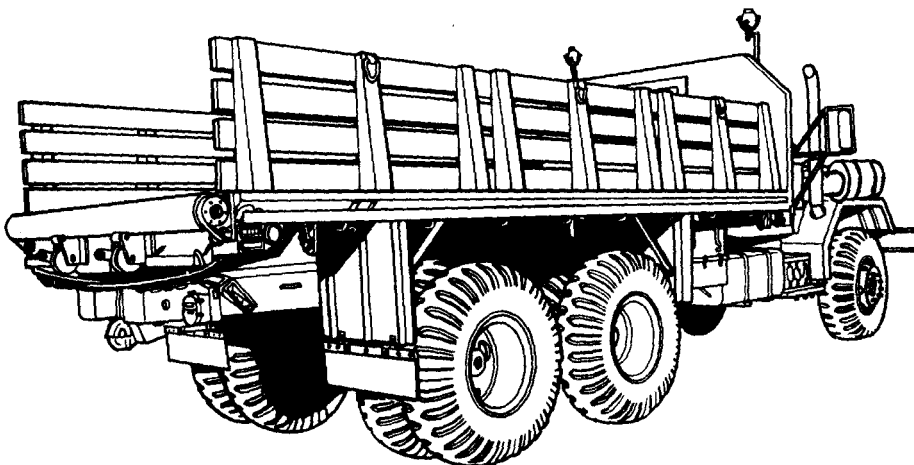 

Typical 5-Ton, 6x6, Bridge Transporting Truck.

TA 096198

TECHNICAL MANUAL

OPERATOR'S MANUAL FOR TRUCK, 5-TON, 6X6, M39 SERIES

		Para	Page
CHAPTER 1.	INTRODUCTION		
Section I.	General		
	Scope	1-1	1-1
	Maintenance Forms and Records	1-2	1-1
	Metric System	1-3	1-1
	Security of Tactical Wheeled Vehicles	1-4	1-1
Section II.	Description		
	Description	1-5	1-2
	Differences Between Models	1-6	1-2
	Detailed Description	1-7	1-3
	Specifications	1-8	1-3
CHAPTER 2.	OPERATING INSTRUCTIONS		
Section I.	Controls and Indicators	2-1	2-1
	Know Your Controls and Indicators	2-1	2-1
	Chassis Controls and Indicators	2-2	2-2
	Instrument Panel (Gasoline Engine)	2-2a	2-2
	Instrument Panel (Diesel and Multifuel Engines)	2-2b	2-4
	Cab Controls	2-2c	2-6
	Chassis Controls	2-2d	2-8
	Body Equipment, Controls and Indicators	2-3	2-12
	Dump Trucks	2-3a	2-12
	Tractor Trucks	2-3b	2-13
	Tractor Wrecker Trucks	2-3c	2-14
	Medium Wrecker Trucks	2-3d	2-17
	Expansible Van Trucks	2-3e	2-20
	Bridge Transporting Truck	2-3f	2-26
	Bolster Trucks	2-3g	2-28
	Auxiliary Equipment Controls and Indicators (Special Kits)	2-4	2-30
	Bow and Tarp Kits	2-4a	2-30
	Hot Water Personnel Heater Kit	2-4b	2-31
	Arctic Winterization Kit	2-4c	2-32
	Deep Water Fording Kit	2-4d	2-35
	Electric Brake Kit	2-4e	2-35
	A-Frame Kit	2-4f	2-36
	Windshield Washer Kit	2-4g	2-37
Section II.	Operation Under Usual Conditions		
	General	2-5	2-38
	Assembly and Preparation for Use	2-6	2-38
	Starting the Engine	2-7	2-38
	General	2-7a	2-38
	Starting the Gasoline Engine	2-7b	2-39
	Starting the Diesel Engine (Above +32°F.)	2-7c	2-41
	Starting the Diesel Engine (Below +32°F.)	2-7d	2-43
	Starting the Multifuel Engine (+20°F. to +115°F.)	2-7e	2-44
	Starting the Multifuel Engine (-25°F. to +30° F.)	2-7f	2-46
	Placing the Truck in Motion	2-8	2-49
	Stopping the Truck and Engine	2-9	2-53
	Operating Fuel Selector Valve (Gasoline and Diesel Trucks with Dual Tanks)	2-10	2-54
	Operating Fuel Transfer Pump (Multifuel Trucks with Dual Tanks)	2-11	2-54
	Using Jumper Cables to Start the Engine	2-12	2-55

Table of Contents (cont.)

	Para	Page
Towing the Truck	2-13	2-56
General	2-13a	2-56
Towing the Truck to Start Engine	2-13b	2-56
Preparing Disabled Truck for Towing	2-13c	2-58
Towing Disabled Truck on Highway with Towbar.	2-13d	2-61
Removing Cab Top and Lowering the Windshield	2-14	2-62
Operation of Front Winch	2-15	2-63
General	2-15a	2-63
Unwinding Winch Cable Manually	2-15b	2-63
Lowering Load or Unwinding Winch Cable with Power	2-15c	2-64
Lifting or Pulling a load.	2-15d	2-65
Winding Winch Cable on Drum	2-15e	2-67
Locking Winch for Travel.	2-15f	2-68
Shear Pin Replacement	2-15g	2-69
Operation of Cargo Trucks	2-16	2-70
General	2-16a	2-70
Removing the Front and Side Racks	2-16b	2-70
Installing the Front and Side Racks	2-16c	2-70
Removing Side Racks from Dropside Cargo Trucks	2-16d	2-71
Lowering the Dropside	2-16e	2-71
Removing the Dropsides and Tailgate	2-16f	2-72
Installing the Dropside, Tailgate and Side Racks	2-16g	2-72
Operation of Dump Trucks.	2-17	2-73
General	2-17a	2-73
Rigging the Tailgate for Rocker Type Operation	2-17b	2-73
Rigging the Tailgate for Spreader Operations	2-17c	2-74
Operation as a Regular Dump Truck	2-17d	2-75
Operation as a Rocker Type Dump Truck	2-17e	2-76
Operation as a Spreader Type Dump Truck	2-17f	2-77
Operation of Tractor Trucks	2-18	2-79
General	2-18a	2-79
Coupling	2-18b	2-79
Uncoupling	2-18c	2-82
Operation of Tractor Wrecker Trucks	2-19	2-83
General	2-19a	2-83
Positioning Wrecker	2-19b	2-83
Crane Operation	2-19c	2-84
Positioning Crane Supports	2-19d	2-86
Rigging Crane Lines	2-19e	2-87
Extending and Retracting Boom Extension	2-19f	2-88
Securing Crane for Travel	2-19g	2-89
Operation of Expansive Van Trucks	2-20	2-91
General	2-20a	2-91
Leveling Van Body	2-20b	2-91
Expanding Van Body	2-20c	2-92
Outside Power Source Connection	2-20d	2-96
Ceiling Lights and Service Receptacle	2-20e	2-97
Heater Operation	2-20f	2-98
Air Conditioner Operation	2-20g	2-99
Lift Gate Operation with Van Expanded	2-20h	2-100
Retracting Van Body.	2-20i	2-101
Operation of Medium Wrecker Trucks	2-21	2-105
General	2-21a	2-105
Positioning Wrecker	2-21b	2-105
Crane Operation	2-21c	2-105
Positioning Crane Supports	2-21d	2-108
Rigging Crane Lines	2-21e	2-109
Securing Crane for Travel	2-21f	2-110
Operation of Rear Winch	2-22	2-112
General	2-22a	2-112
Positioning Wrecker	2-22b	2-112
Unwinding Winch Cable	2-22c	2-112
Pulling Load	2-22d	2-114

Table of Contents (cont.)

Para

	Pulling Heavy Load	2-22e	2-114
	Securing Winch for Travel	2-22f	2-115
	Operation of Bridge Transporting Trucks	2-23	2-116
	General	2-23a	2-116
	Stake Rack Removal	2-23b	2-116
	Loading	2-23c	2-116
	Securing Load	2-23d	2-117
	Unloading	2-23e	2-118
	Operation of Bolster Trucks	2-24	2-119
	General	2-24a	2-119
	Unloading P-14 Trailer from Truck	2-24b	2-119
	Preparing Bolster Truck and Trailer for Loading Cargo	2-24c	2-122
	Loading or Unloading Cargo	2-24d	2-123
	Operation of Bolster Fifth Wheel	2-24e	2-124
	Loading P-14 Trailer onto Truck	2-24f	2-125
	Operation of Auxiliary Equipment (Special Purpose Kits)	2-25	2-129
	General	2-25a	2-129
	Installation and Removal of Bow and Tarp Kits	2-25b	2-130
	Operation of Hot Water Personnel Heater Kit	2-25c	2-135
	Operation of Arctic Winterization Kit	2-25d	2-136
	Operation of Deep Water Fording Kit	2-25e	2-143
	Operation of Electric Brake Kit	2-25f	2-145
	Operation of A-Frame Kit	2-25g	2-146
	Operation of Windshield Washer Kit	2-25h	2-147
Section III.	Operation Under Unusual Conditions		
	General	2-26	2-148
	Extreme Cold Weather Operations	2-27	2-148
	General	2-27a	2-148
	Winterization Kits	2-27b	2-149
	Moving the Truck	2-27c	2-149
	Parking the Truck	2-27d	2-149
	Extreme Hot Weather Operations	2-28	2-152
	General	2-28a	2-152
	Cooling System	2-28b	2-152
	Batteries	2-28c	2-152
	Body and Chassis	2-28d	2-153
	Parking the Truck	2-28e	2-153
	Operation on Unusual Terrain	2-29	2-153
	Deep Snow, Mud, or Sand.	2-29a	2-153
	Hard Baked Sand	2-29b	2-154
	Icy Roads	2-29c	2-154
	Dusty or Sandy Roads	2-29d	2-154
	Rocks and Boulders	2-29e	2-154
	High Altitude	2-29f	2-155
	Fording Operation	2-30	2-155
	General	2-30a	2-155
	Fording	2-30b	2-155
	After Fording Operations	2-30c	2-156
	Accidental Submersion	2-30d	2-156
CHAPTER 3.	MAINTENANCE INSTRUCTIONS		
Section I.	Tools and Equipment		
	Special Tools and Equipment	3-1	3-1
	Basic Issue Items	3-2	3-1
	Expendable Supplies and Materials	3-3	3-1
Section II.	Preventive Maintenance Checks and Services (PMCS)		
	General	3-3.1	3-1
	Preventive Maintenance Checks and Services (Table 3-1)	3-4	3-1
	Designated Intervals	3-4a	3-1
	Procedures	3-4b	3-1
	Troublespots	3-4c	3-2

TA 096200

Table of Contents (cont.)

	Para	Page
Not Ready Condition	3-4d	3-2
Correct Assembly or Stowage	3-5e	3-2
Oil Sealand Gasket Leakage	3-5	3-2
Class I	3-5a	3-2
Class II	3-5b	3-2
Class III	3-5c	3-2
Section III. Lubrication		
Lubrication Order	3-6	3-17
General Lubrication Instructions Under		
Usual Conditions	3-7	3-17
General	3-7a	3-17
Service Intervals	3-7b	3-17
Points of Application	3-7c	3-17
Reports and Records	3-7d	3-17
General Lubrication Instructions Under Unusual		
Conditions	3-8	3-17
Service Intervals	3-8a	3-17
Changing Grade of Lubricants	3-8b	3-17
Maintaining Proper Lubricant Levels	3-8c	3-17
After Fording Any Depth of Water	3-8d	3-17
Lubrication for Continued Operation Below 0°F	3-9	3-18
Section IV. Troubleshooting		
Traubleshooting Procedures (Table 3-2)	3-10	3-18
Engine		3-19
Exhaust System		3-22
Cooling System		3-22
Transmission		3-23
Transmission Power Takeoff		3-24
Transfer Case		3-24
Transfer Case Power Takeoff		3-24
Controls and Instruments		3-25
Service Brakes		3-25
Parking Beake		3-25
Wheels, Tires, and Hubs.		3-26
Steering Gear		3-27
Front or Midship Winch.		3-27
Rear Winch		3-28
Charging System		3-28
Batteries and Battery Cables		3-28
Lighting System		3-28
Hydraulic Crane		3-29
Dump Body Hoist Assembly		3-30
Fifth Wheel Assembly		3-30
Expansible Van Auxiliary Equipment		3-31
Hot Water Personnel Heater		3-33
Fuel Burning Personnel and Engine Coolant Heaters		3-35
Slave Receptacle		3-37
A-Frame Kit		3-37
Deep Water Fording Kit.		3-37
Windshield Washer Kit		3-38
Section V. Servicing and Replacement		
Fuel Tank Service	3-11	3-39
Air Cleaner Service (Gasoline)	3-12	3-39
General	3-12a	3-39
Air Cleaner Service	3-12b	3-39
Air Cleaner Service (Diesel and Multifuel)	3-13	3-39
General	3-13a	3-39
Air Cleaner Service	3-13b	3-40
Emergency Air Cleaner Service	3-13c	3-40
Wheel and Tire Replacement	3-14	3-41
Removing Wheel and Tire Assembly	3-14a	3-41
Installing Single Wheel	3-14b	3-42

TA 096201

Table of Contents (cont.)

		Para	Page
	Installing Dual Wheels	3-14c	3-43
	Removing Jack	3-14d	3-43
	Shear Pin Replacement	3-15	3-43
	Front Winch	3-15a	3-43
	Rear Winch	3-15b	3-43
APPENDIX A.	REFERENCES		
	Scope	A-1	A-1
	Forms	A-2	A-1
	Field Manuals	A-3	A-1
	Technical Manuals	A-4	A-1
	Technical Bulletins	A-5	A-2
	Miscellaneous Publications	A-6	A-2
APPENDIX B.	COMPONENTS OF END ITEM LIST		
Section I.	Introduction		
	Scope	B-1	B-1
	General	B-2	B-1
	Explanation of Columns	B-3	B-1
	Abbreviations	B-4	B-3
	Federal Supply Codes for Manufacturer	B-5	B-3
Section II.	Integral Components of End Item List		B-4
Section III.	Basic Issue Items List		B-6
APPENDIX C.	ADDITIONAL AUTHORIZATION LIST		
Section I.	Introduction		
	Scope	C-1	C-1
	General	C-2	C-1
	Explanation of Listing	C-3	C-1
Section II.	Additional Authorization List		C-3
APPENDIX D.	EXPENDABLE SUPPLIES AND MATERIALS LIST		
Section I.	Introduction		
	Scope	D-1	D-1
	Explanation of Columns	D-2	D-1
Section II.	Expendable Supplies and Materials List		D-2
	ALPHABETICAL INDEX.	Index-1	

CHAPTER 1 INTRODUCTION

Section I. GENERAL.

1-1. Scope.

a. This manual is for your use in operating and maintaining the 5-ton, 6x6, M39 Series trucks. The model numbers and equipment names are listed on pages i and ii. Operation and maintenance instructions for special purpose kits are also included.

b. Your manual:

(1) Contains information for safe and efficient operation of your equipment. These instructions provide you with a general knowledge of the equipment, its characteristics, and usual and unusual operation procedures.

(2) Provides you with troubleshooting procedures and authorized repair procedures, so that you can keep your equipment properly operating.

(3) Provides best possible operating instructions under most circumstances. Multiple emergencies, adverse weather, terrain, etc. may require modification of these procedures.

(4) Takes a "positive approach" and normally states only what you can do. Unusual operations or configurations are prohibited unless specifically included. Before attempting any questionable operation, which is not specifically permitted in this manual, clearance must be obtained from your supervisor.

1-2. **Maintenance Forms and Records.** Department of the Army forms and procedures used for equipment maintenance will be those prescribed by TM 38-750.

1-3. **Metric System.** The equipment/system described herein is nonmetric and does not require metric common or special tools. Therefore, metric units are not supplied. Tactical instructions, for sake of clarity, will also remain nonmetric.

1-4. **Security of Tactical Wheeled Vehicles.** Refer to TB 9-2300422-20 for requirements and material applications needed to achieve the necessary degree of protection required for tactical wheeled vehicles in all classes.