

TECHNICAL MANUAL

PART 4 OF 4

VOLUME 2 OF 2

MAINTENANCE

DIRECT SUPPORT AND GENERAL SUPPORT LEVEL

**5-TON, 6X6, M39 SERIES TRUCKS
(MULTIFUEL)**

**TRUCK, CHASSIS: M40A2C,
M61A2, M63A2; TRUCK, CARGO:
M54A2, M54A2C, M55A2; TRUCK,
DUMP: M51A2; TRUCK, TRACTOR:
M52A2; TRUCK, WRECKER, MEDIUM: M543A2**

Chapter 18

**Body Accessory
Items**

Chapter 19

**Material Used In
Conjunction With
Major Items**

Appendix A

References

NOTE:

**THE STYLE OF THIS TM IS
EXPERIMENTAL. IT IS BEING TRIED
BY THE ARMY ONLY ON
A LIMITED BASIS**

DEPARTMENTS OF THE ARMY AND THE AIR FORCE

FEBRUARY 1981

***TM 9-2320-211-34-2-4**
T.O. 36A12-1C-422-2-2

TECHNICAL MANUAL
NO. 9-2320-211-34-2-4
TECHNICAL ORDER
NO. 36A12-1C-422-2-2

DEPARTMENTS OF THE ARMY
AND
THE AIR FORCE
WASHINGTON, DC, 25 February 1981

TECHNICAL MANUAL
VOLUME 2 OF 2
PART 4 OF 4
MAINTENANCE
DIRECT SUPPORT AND GENERAL SUPPORT LEVEL

5-TON, 6X6, M39 SERIES TRUCKS
(MULTIFUEL)

Model		NSN without Winch	NSN with Winch
Truck, Chassis	M40A2C	2320-00-969-4114	
	M61A2	2320-00-055-9264	2320-00-965-0321
	M63A2	2320-00-226-6251	2320-00-285-3757
Truck, Cargo	M54A2	2320-00-055-9266	2320-00-055-9265
	M54A2C	2320-00-926-0874	2320-00-926-0874
	M55A2	2320-00-073-8476	2320-00-055-9259
Truck, Dump	M51A2	2320-00-055-9262	2320-00-055-9263
Truck, Tractor	M52A2	2320-00-055-9260	2320-00-055-9261
Truck, Wrecker, Medium	M543A2		2320-00-055-9258

Current as of 25 Jul 80.

*This manual together with TM 9-2320-211-34-1, 25 February 1981; TM 9-2320-211-34-2-1, 25 February 1981; TM 9-2320-211-34-2-2, 25 February 1981 and TM 9-2320-211-34-2-3, 25 February 1981 supersedes so much of TM 9-2320-211-35, 13 September 1964 as pertains to multifuel vehicles including all changes.

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedure, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Tank-Automotive Command, ATTN: DRSTA-MB, Warren, Michigan 48090. A reply will be furnished to you.

TABLE OF CONTENTS

	Paragraph	Page
CHAPTER 18. BODY ACCESSORY ITEMS GROUP MAINTENANCE		
Section 1. Scope		18-1
Equipment Items Covered	18-1	18-1
Equipment Items Not Covered	18-2	18-1
Equipment Items Not Covered	18-2	18-1
Section II. Canvas Accessory Items		18-1
Cab Top Cover Assembly Repair (Trucks M54A2, M54A2C, and M55A2)	18-3	18-1
Cargo Body Curtain Repair (Trucks M54A2, M54A2C, and M55A2)	18-4	18-1
Cargo Body Cover Repair (Trucks M54A2, M54A2C, and M55A2)	18-5	18-1
CHAPTER 19. MAINTENANCE OF MATERIAL USED IN CONJUNCTION WITH MAJOR ITEMS		
Section I. Scope		19-1
Equipment Items Covered	19-1	19-1
Equipment Items Not Covered	19-2	19-1
Section II. Winterization Kits		19-1
Hot Water Personnel Heater Kit Installation, Test, and Adjustment	19-3	19-1
Preliminary Procedures	19-3a	19-1
Installation	19-3b	19-1
Test and Adjustment	19-3c	19-1
Hot Water Personnel Heater Functional Test	19-4	19-2
Hot Water Personnel Heater Assembly, Removal, Repair and Replacement	19-5	19-3
Preliminary Procedures	19-5a	19-3
Removal	19-5b	19-4
Cleaning	19-5c	19-6
Repair	19-5d	19-6
Replacement	19-5e	19-7
Hot Water Personnel Heater Electrical Harness Removal, Repair and Replacement	19-6	19-9
Preliminary Procedures	19-6a	19-9
Removal	19-6b	19-9
Inspection and Repair	19-6c	19-13
Replacement	19-6d	19-14

TABLE OF CONTENTS - CONT

	Paragraph	Page
Hot Water Personnel Heater		
Diverter Removal and Replacement	19-7	19-18
Hot Water Personnel Heater Ducting		
Removal and Replacement	19-8	19-18
Fuel Burning Personnel Heater Kit		
Installation	19-9	19-18
Fuel Burning Personnel Heater Air		
Diverter Removal and Replacement	19-10	19-19
Preliminary Procedure	19-10a	19-19
Removal	19-10b	19-19
Replacement	19-10c	19-20
Fuel Burning Personnel Heater		
Ducting Removal and Replacement	19-11	19-21
Preliminary Procedure	19-11a	19-21
Removal	19-11b	19-21
Replacement	19-11c	19-22
Fuel Burning Personnel Heater Control		
Cables Removal, Replacement, and		
Adjustment	19-12	19-24
Removal	19-12a	19-24
Replacement	19-12b	19-26
Adjustment	19-12c	19-28
Vehicular Coolant Heater Kit Installation	19-13	19-29
Vehicular Coolant Heater Hoses and		
Tubes Removal and Replacement	19-14	19-29
Preliminary Procedures	19-14a	19-29
Removal	19-14b	19-30
Replacement	19-14c	19-33
Vehicular Coolant Heater Exhaust		
Tube Removal and Replacement	19-15	19-37
Removal	19-15a	19-37
Replacement	19-15b	19-40
Vehicular Coolant Heater Oil Pan Shroud		
Assembly Removal, Repair and		
Replacement	19-16	19-43
Removal	19-16a	19-43
Replacement	19-16b	19-44
Vehicular Coolant Heater Hood Cover		
Assembly Repair	19-17	19-45
Removal	19-17a	19-45
Repair	19-17b	19-45
Replacement	19-17c	19-45
Vehicular Coolant Heater Radiator		
Cover Assembly	19-18	19-45
Removal	19-18a	19-45
Repair	19-18b	19-45
Replacement	19-18c	19-45

TABLE OF CONTENTS - CONT

	Paragraph	Page
Vehicular Coolant Heater Removal,		
Repair, Test, and Replacement	19-19	19-46
Preliminary Procedures	19-19a	19-46
Removal \ \ \ \ \	19-19b	19-47
Disassembly into Subassemblies	19-19c	19-48
Cleaning and Inspection of		
Subassemblies	19-19d	18-59
Assembly	19-19e	19-81
Testing	19-19f	19-93
Replacement	19-19g	19-107
Thermal Barrier Kit Installation	19-20	19-108
Preliminary Procedures	19-20a	19-108
Installation	19-20b	19-109
Thermal Barrier Panels, Floor mats and		
Covers Removal, Repair and		
Replacement	19-21	19-123
Preliminary Procedures	19-21a	19-123
Inspection and Repair	19-21b	19-123
Removal	19-21c	19-124
Cleaning	19-21d	19-125
Replacement	19-21e	19-125
Hard Top Closure Top Assembly		
Removal, Repair and Replacement	19-22	19-126
Removal	19-22a	19-127
Disassembly \ \ \ \ \	19-22b	19-130
Cleaning	19-22c	19-136
Inspection and Repair	19-22d	19-137
Assembly	19-22e	19-140
Replacement	19-22f	19-146
Hood Cover Assembly Installation	19-23	19-150
Preliminary Procedure	19-23a	19-150
Installation	19-23b	19-150
Radiator Cover Assembly Installation	18-24	19-155
Radiator Cover Assembly Repair	19-25	19-160
Removal	19-25a	19-160
Repair	19-25b	19-160
Replacement	19-25c	19-160
Slave Receptacle Kit Installation	19-26	19-160
Preliminary Procedures	19-26a	19-160
Installation	19-26b	19-161
Slave Receptacle Kit (Trucks Without		
Winterization Kit)	19-27	19-165
Preliminary Procedures	19-27a	19-165
Installation	19-27b	19-165
Section III. Special Purpose Kits		19-169
Electric Brake Kit Installation,		
Test, and Adjustment	19-28	19-169
Preliminary Procedures	19-28a	19-169
Installation	19-28b	19-170

TABLE OF CONTENTS - CONT

	Paragraph	Page
Electric Brake Controller Removal, Repair, and Replacement	19-29	19-186
Preliminary Procedure	19-29a	19-186
Removal	19-29b	19-186
Disassembly	19-29c	19-187
Inspection and Repair	19-29d	19-191
Assembly	19-29e	19-192
Replacement	19-29f	19-196
A-Frame Kit Installation (Trucks M54A2 with Winch, M54A2C with Winch, and M55A2 with Winch)	19-30	19-197
Preliminary Procedures	19-30a	19-197
Installation	19-30b	19-198
Decontamination Apparatus Stowage Bracket Installation	19-31	19-208
Engine Shipping and Storage Container Repair	19-32	19-211
Cleaning	19-32a	19-211
Disassembly	19-32b	19-211
Inspection and Repair	19-32c	19-213
Assembly	19-32d	19-215
Pressure Check	19-32e	19-217
Deep Water Fording Kit Installation	19-33	19-219
Deep Water Fording Kit Pressurization Valve Hand Control Assembly		
Removal and Replacement	19-34	19-219
Preliminary Procedure	19-34a	19-219
Removal	19-34b	19-219
Replacement	19-34c	19-221
Deep Water Fording Kit Control Valve Assembly Removal and Replacement	19-35	19-223
Preliminary Procedures	19-35a	19-223
Removal	19-35b	19-223
Replacement	19-35c	19-224
Deep Water Fording Kit Hoses and Tubes Removal and Replacement	19-36	19-225
Deep Water Fording Kit Snorkle Assembly Removal and Replacement	19-37	19-225
Removal	19-37a	19-225
Replacement	19-37b	19-226
Deep Water Fording Kit Air Pressurization System Regulator Valve Removal and Replacement	19-38	19-227
Preliminary Procedure	19-38a	19-227
Removal	18-38b	19-227
Replacement	19-38c	19-229
APPENDIX A. REFERENCES		A-1
INDEX		Index 1

CHAPTER 18

BODY ACCESSORY ITEMS GROUP MAINTENANCE

Section I. SCOPE

18-1. EQUIPMENT ITEMS COVERED. This chapter gives equipment maintenance procedures for canvas accessory items for which there are authorized corrective maintenance tasks at the direct and general support maintenance levels.

18-2. EQUIPMENT ITEMS NOT COVERED. All equipment items for which corrective maintenance is authorized at the direct and general support maintenance levels are covered in this chapter.

Section II. CANVAS ACCESSORY ITEMS

18-3. CAB TOP COVER ASSEMBLY REPAIR (TRUCKS M54A2, M54A2C, AND M55A2). Refer to FM 43-3 for repair of cab cover assembly.

18-4. CARGO BODY CURTAIN REPAIR (TRUCKS M54A2, M54A2C AND M55A2). Refer to FM 43-3 for repair of cargo body curtain.

18-5. CARGO BODY COVER REPAIR (TRUCKS M54A2, M54A2C, AND M55A2). Refer to FM 43-3 for repair of cargo body cover.